

To get tech support, please contact:
Email: rukobrandstore@gmail.com
Phone: +1 (626) 215-4337
Website: www.rukotoy.com

Should you have any questions
please feel free to contact us so
that we can help you better!

 


MADE IN CHINA



To get tech support, please contact:
Email: rukobrandstore@gmail.com

1. CAUTIONS AND ADVICES

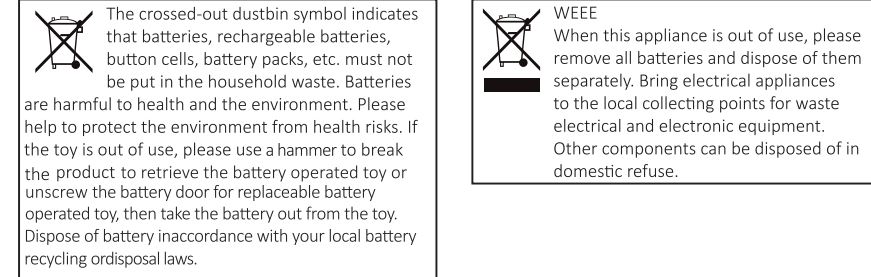

Care and Maintenance:
- Always remove batteries from the transmitter when it is not being used for a long period of time.
- To clean, Wipe the toy gently with a clean cloth.
- Keep the toy away from direct heat.
- Do not submerge the toy into water, This can damage the elect.

Special notes to adults:
- Before first use, Read the user's information, and review with your child.
- This toy intended to be used in domestic areas (house and garden) only.

- Assembly should be performed under adult supervision (changing batteries/ spare parts, trimming etc.).
- Parental guidance is recommended when installing or replacing batteries.
- Do not change or modify anything on the toy.

Battery warnings:
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed before being charged. (Transmitter only)
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed. (Transmitter only)
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with correct polarity.
- Exhausted batteries are to be removed from the toy, and recycled. (Transmitter only)
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries. (Transmitter only)
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. (Transmitter only)

This toy is equipped with a LiPo rechargeable battery, please pay attention to the following cautions for safety use:

- Do not dispose the battery in fire or heat.
- Do not use or leave the battery near a heat source such as fire or heater.
- Do not strike or throw the battery against hard surface.
- Do not immerse the battery in water, and keep the battery in a cool dry environment.
- When recharging, only use the battery charger specifically for that purpose.
- Do not over-discharge the battery.
- Do not connect the battery to an electrical outlet.
- Do not directly solder the battery or pierce the battery with a nail or other sharp object.
- Do not transport or store the battery together with metal objects such as necklaces, hairpins etc.
- Do not disassemble or alter the battery.
- Charge the battery every 6 months.
- The battery inside the toy can't be replaced by the user.

 
Notes:

- The toy may malfunction under electrostatic discharge interference. If the toy does not respond, reset it.
- Use new alkaline batteries in this toy to obtain best performance.
- This toy must only be used with the recommended charger.

Batteries requirements (Transmitter):
Power supply:
Characteristics: DC 3V
Quality and type: 2 x 1.5V "AA"/LR6 (not included)

Battery requirements (Robot):
Power supply:
Characteristics: DC 5V
Quality and type: 1x3.7V Li-Po rechargeable battery (included)
Capacity: 600 mAh

2.CONTENT

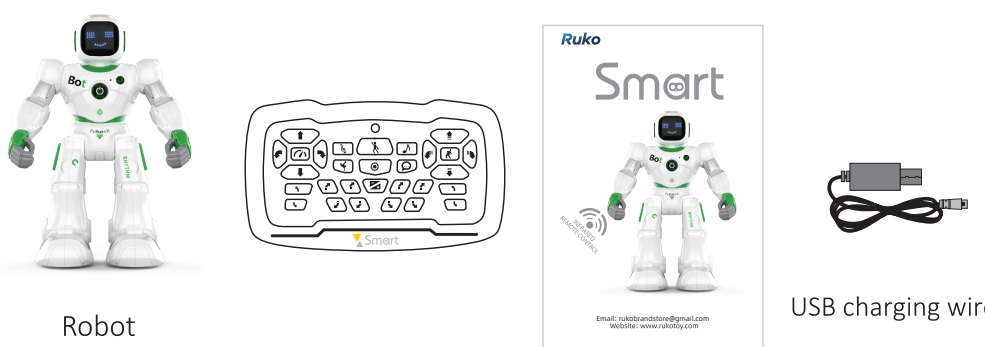


3.BATTERY INSTALLATION

IN THE TRANSMITTER



1. Use a philips head screw to open the battery compartment lid of controller.
2. Put 2X1.5V AA batteries inside the battery compartment.
3. Put the lid back and use a screwdriver to tighten it.
4. Switch on the on/off button on the back of the transmitter before using.

IN THE ROBOT

 Robot battery is located in the back of Robot.
To charge battery, please insert the robot battery is contained and is not replaceable the provided USB charging cable to the robot with any USB port of a powerbank, mobile charger, car charger, or computer. Switch Off the robot before charging. A light in the robot will be turned on during the charging process; when the robot is fully charged the light will turn off. The charging time is about 2 hours and the playing time is about 2 hours.

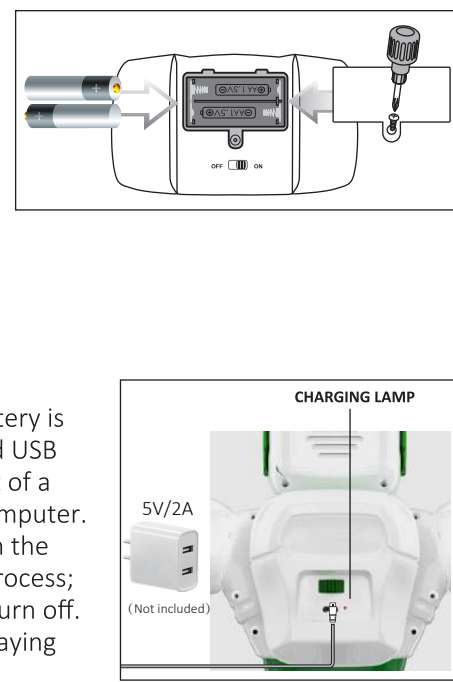

  4.REMOTE CONTROLS AND ROBOT

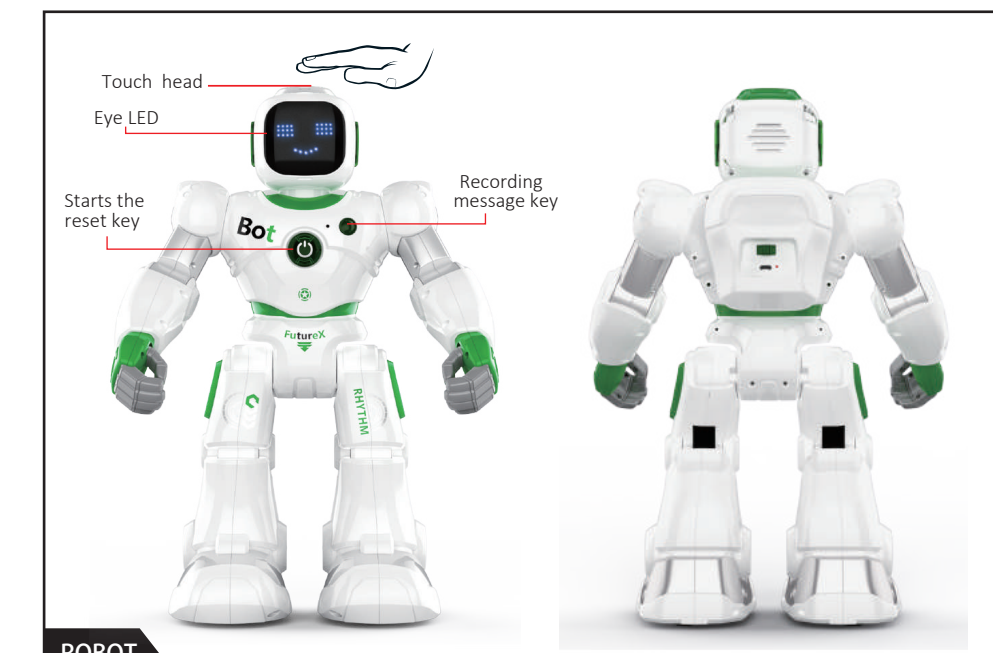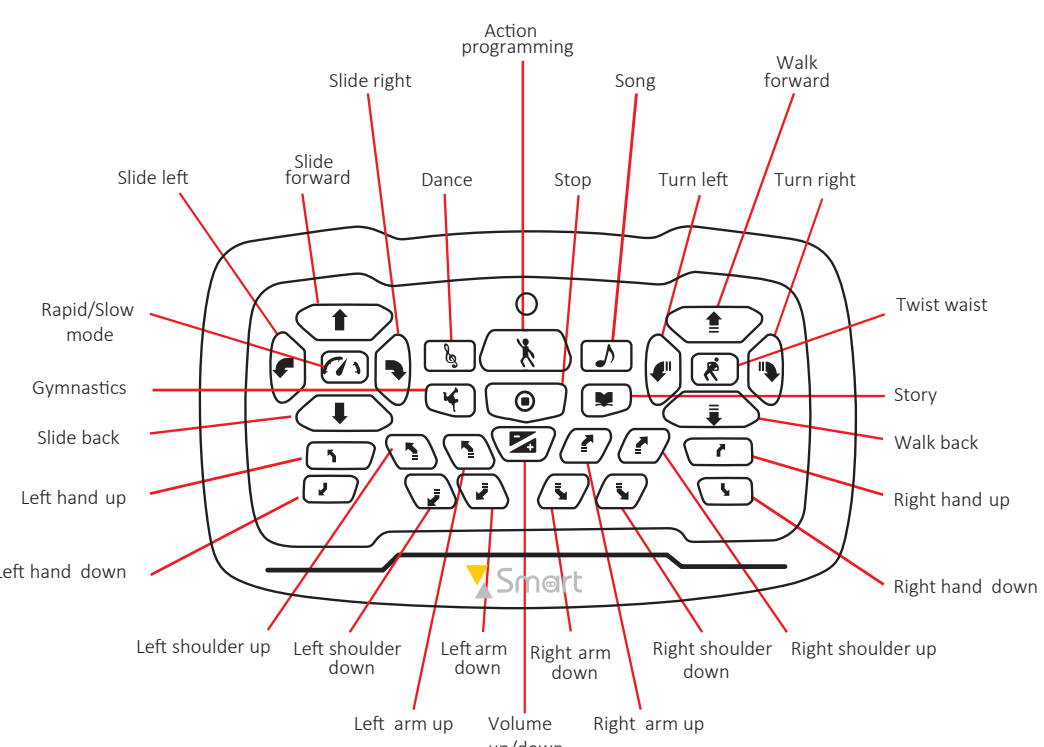


5.TURN ON/OFF

Switch on the ON/OFF button on the back of the robot to start the robot.
The robot introduces himself while performing some movements and sounds.
Note: The robot should remain on the floor.



6.STANDBY

 The Standby button wakes up the robot or to places it into Standby mode.

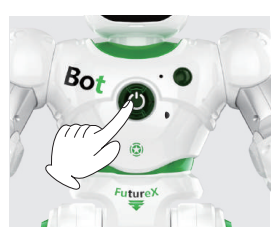

7.RECORDING/MESSAGE

- 1) Long press the Recording button on the robot and the robot will start recording after "beep".
- 2) You can record whatever you want to say, short press the recording button to end the recording, is the maximum 55 seconds is the maximum recording length.
- 3) Press the Message button to play the message recorded.



 
8.TOUCH SENSITIVE

When you touch the head of the robot, the robot will play for several sound effects for a total of five sounds effects.



9.Bluetooth Playback


Open the Bluetooth settings and connect you, phone to the device, "JT.Speaker." The robot will then function as a Bluetooth speaker.

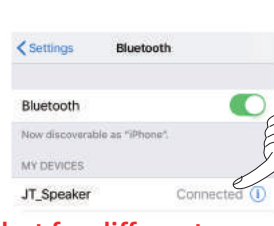

5

REMOTE CONTROL FUNCTION

 1.BASIC FUNCTIONS

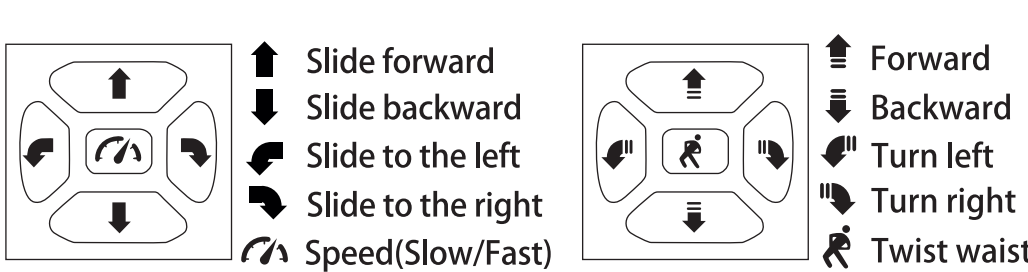

2.MUSIC

Press the "music" button and the robot will perform a dance with music.
There are 8 dances in total.



3.GYMNASTICS

By pressing the "Gymnastics" button, the robot move around while making sounds.
There are two different gymnastics routines.
To switch between them, press the "gymnastics" button again.



4.ACTION PROGRAMMING

- 1) Press the "Action programming" button until hear a "beep" sound.
- 2) Up to 50 functions can be programmed. You can move forward/backward, turn left/right, twist waist, hand up/down, music, gymnastics, song, story.
- 3) Press the "Action programming" button to perform programmed functions again.



 
5.SONG

Press the "song" button and the robot will sing a song while moving.



6.STORY

Press the "story" button, the robot tells a story, There are four stories in all.

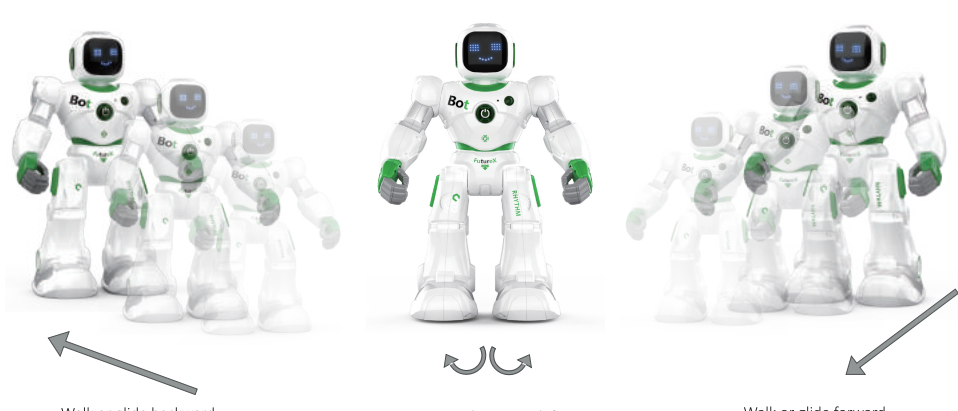

SMART DIALOGUE

When the robot is in standby mode, the Voice Dialogue function will be turned on a automatically. (Voice commands are available only in standby mode.)
The robot will automatically respond to the following commands.

7

VOICE COMMAND	ROBOT RESPONSE
1.Hello	Hello guys+ Left hand up Mikaila+ Spread out its arms You are so cute+ Turn around Makasil+ Twist waist Thank you+turn around
2.You are so cool!	It's a secret.+walking Yenus Pologulu+walking A distant Planet.+walking
3.Where are you from	Abubabu, lalalala~ I love you, too Abubu OK
4.I love you	Abubabu, lalalala +do sports with music Come on! Walk forward Yes, sir +Slide forward Walk backward Yes, sir +Slide backward Slide to the left Got it+ Turn left Slide to the right Got it+ Turn right
5.Let's do sports!	Twist waist with music 1 Twist waist with music 2 Moving shoulders Moving shoulders No problem+song 1 Ah, it's show time+song 2 Bulubabulugu+song 3 Great! Here we go+dance 1 Music+dance 2 Hah, Good idea+dance 3 Bye-bye + Go into sleep mode OK, See you + Go into sleep mode Salala+ Go into sleep mode Hu~Go into sleep mode
6.Go forward	
7.Go backward	
8.Turn left	
9.Turn right	
10.Twist your waist	
11.Move your shoulders	
12.Sing a song	
13.Dance for me	
14.Goodbye	

8

PLAY WITH THE APP

 
1.DOWNLOAD

Scan the applicable QR code for your operating system, download and install the application.
NOTE: APP is compatible from Android 4.3 or iOS 8.0 and up.



2.BASIC ICONS

SETTING: Open Carle APP, click the Settings button at the top right of the screen to select the languages.
CONNECT: Turn on Bluetooth in your mobile phone, then switch on the robot.
Click CONNECT and connect a Bluetooth device named "JT.XXXX".

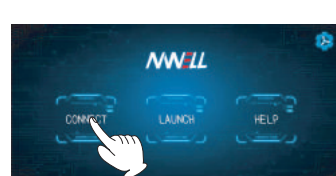

Note: there are two Bluetooth names of the robot for different function, please choose the one you need.

LAUNCH: Click LAUNCH, there has three modes: CONTROL, PROGRAM and CONTENT, you can use your mobile phone as if were a controller.

HELP: Below you may find a quick guide for the main functions



 
 
3.CONTROL

JIS Sensor Mode:
You can steer the robot by tilting the device in the desired direction.
On both sides of the sliding direction as shown in the robot, the robot will make the corresponding action.




9

2)HAND-CONTROL MODE:

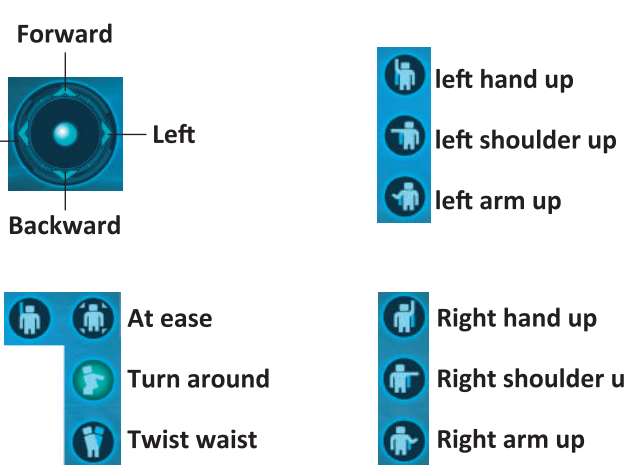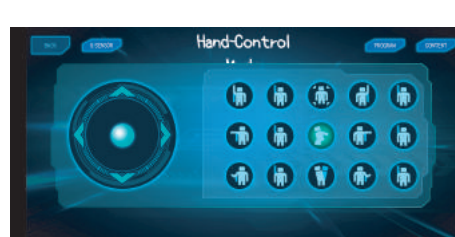







3)PROGRAM:

 There are 58 actions to choose from.
When you choose the actions in blue background, the robot will perform them one by one.
When you choose the actions in red background, the robot will perform them at the same time.
Click one of the selected actions on the right, and then select the new actions to insert on the left.

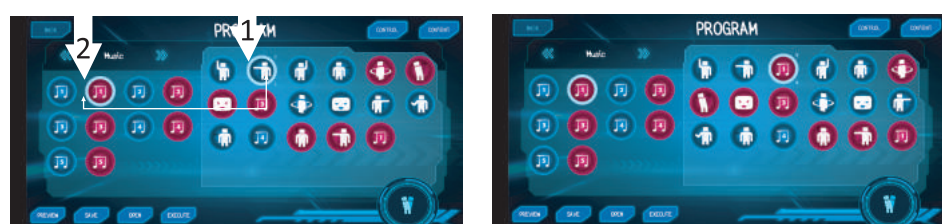

10

 
By pressing a selected action on the right for a few seconds, you can delete the actions you don't need.

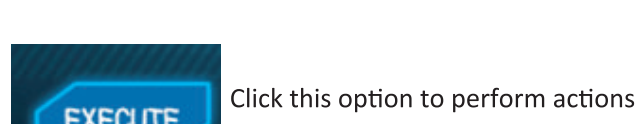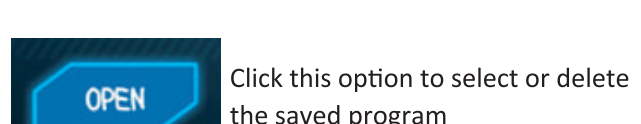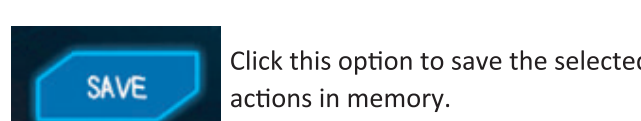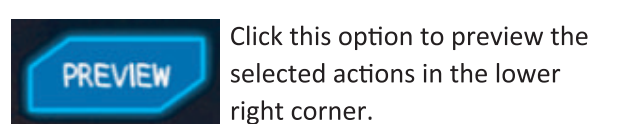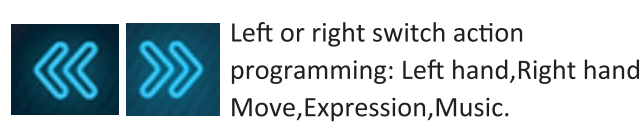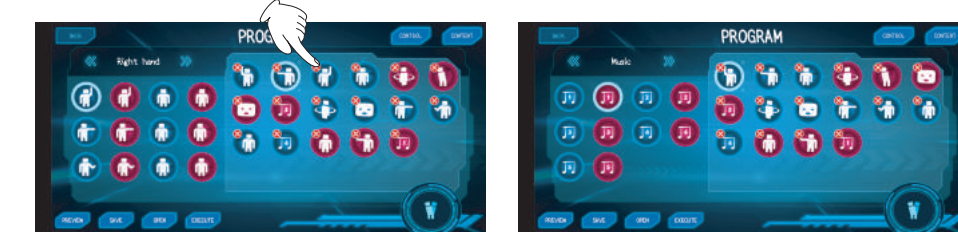

11

4)CONTENT:

 - ①GYMNASTICS: There are two different gymnastics.
- ②STORY: There are 4 different stories in total.
- ③VOLUME: There are three levels of volume
- ④DANCE: MUSIC: There are 8 different dances.
- ⑤MUSIC: There are 10 different music.

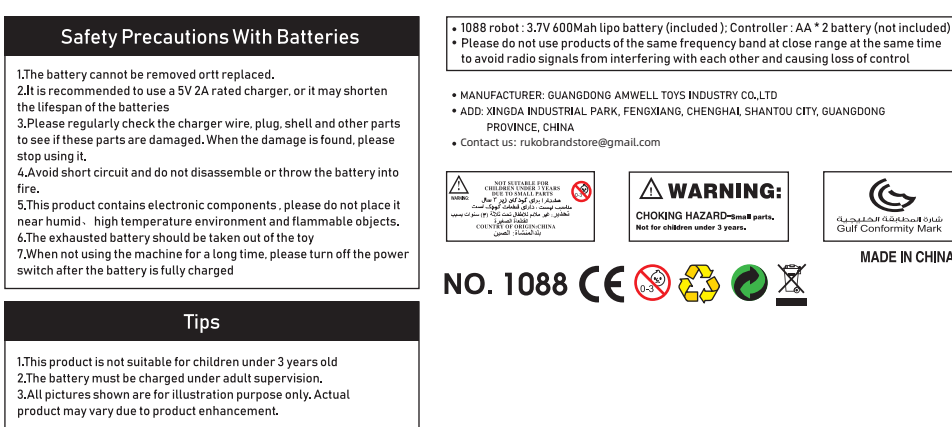

12