



K10 Wireless Mechanical Keyboard

Version 2

IN THE BOX:

K10 Wireless Mechanical Keyboard (Version 2) x 1

Type-A to Type-C Cable x 1

Switch & Keycap Puller x 1

Screwdriver x 1

Manual x 1

Quick Start Guide x 1

 
Extra Keycaps Set x 1

Hex Key (Aluminum-Frame Version only) x 1

QUICK START GUIDE

If you are a Windows user, please find the appropriate keycaps in the box, then follow the instructions below to find and replace the following keycaps.


Mac / Windows

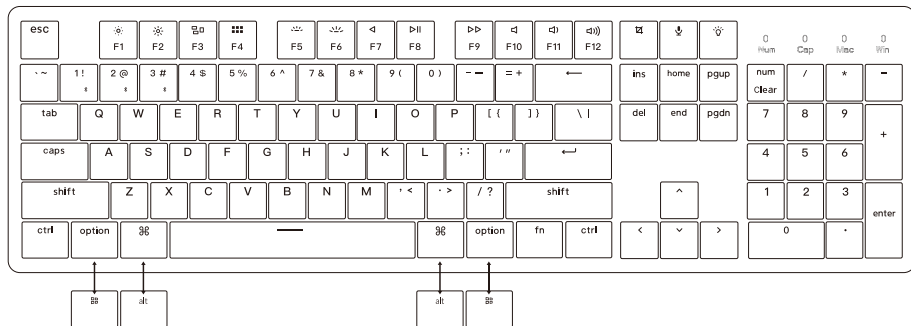


1 Connect Bluetooth



 Switch toggle to Bluetooth



 
Press fn + 1 (for 4 seconds) and pair with device named Keychron K10 Version 2

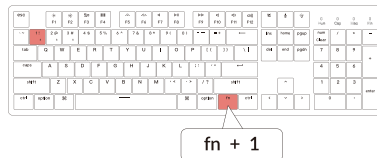

2 Connect Cable




 Switch toggle to Cable




3 Switch To The Right System

 Please make sure the system toggle on the top left corner has been switched to the same system as your computer's operating system.




4 The Backlight

 Press fn + Q to change the lighting effect

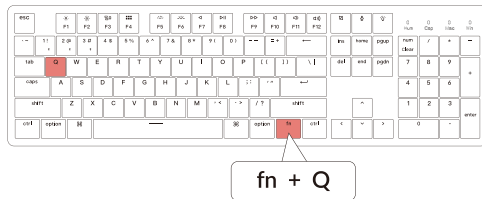

 Press fn + tab to turn the backlight on/off

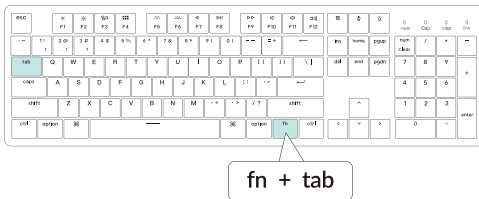

5 Adjust The Backlight Brightness

Press fn + W to increase the backlight brightness



fn + W

Press fn + S to decrease the backlight brightness



fn + S

6 Adjust The Backlight Speed

Press fn + T to increase the light effect speed



fn + T

 
Press fn + G to decrease the light effect speed




fn + G

7 The Layers

There are four layers of key settings on the keyboard. The layer 0 and layer 1 are for the Mac system. The layer 2 and layer 3 are for the Windows system.



 If your system toggle is switched to Mac, then the layer 0 will be activated.



If your system toggle is switched to Windows, then the layer 2 will be activated. Remember that if you are using it in Windows mode, please make changes to the layer 2 instead of the top layer (the layer 0). This is a common mistake people are making.



8 The Keychron Launcher App

 
Please visit launcher.keychron.com to use the online Launcher web app to remap the keys, create macro commands, or flash the firmware. If the Launcher cannot recognize your keyboard, please reach our support to get the instructions.



*The online Launcher can only run on the latest version of Chrome, Edge, and Opera browsers.

*The Launcher only works when the keyboard is connected by wire to the computer.

9 Factory Reset & Firmware Update

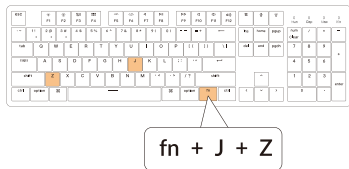

Troubleshooting? Don't know what's going on with the keyboard?

Factory reset your keyboard

1. Power on your keyboard.
2. Press and hold **fn + J + Z** (for 4 seconds). The keyboard backlight will flash in red quickly for 3 seconds, indicating that the keyboard has been reset.

Flash your keyboard firmware

1. Visit launcher.keychron.com to open the online Launcher web app.
2. Ensure the keyboard is in Cable or Wired mode and plug in the power cable.
3. Find the 'Firmware Update' tab on the left side of the Launcher and connect your keyboard with it.
4. Follow the instructions on the Launcher and complete the firmware update.

*Step-by-step guide, search the keyword "firmware" on keychron.com.

10 Warranty

The keyboard is highly customizable and easy to be rebuilt. If anything goes wrong with any of the keyboard components of keyboard during the warranty period, we will only replace the defective parts of the keyboard, not the whole keyboard.



K10 WIRELESS MECHANICAL KEYBOARD (VERSION 2) SPECIFICATIONS

Number of keys: 104

Switch type: Mechanical

Battery: 4000mAh

Charging time: Around 5 hours

Charging port: Type-C

Mode: Bluetooth / Wired




Bluetooth operating distance: Within 10 meters (open space)

Name of Bluetooth device: Keychron K10 Version 2

LED STATUS OVERVIEW

Function	LED Location	Status
Charging	Power Indicator	Low Power - Red Light Blinking Charging - Static Red Fully charged - Static Green
Bluetooth	Bluetooth Channel Indicator	Switching - Fast Blinking Paired - Light Off Pairing - Slow Blinking
Caps Lock	Caps Lock Indicator	Enable Caps Lock - Static White Disable Caps Lock - Light Off

   
K10 WIRELESS MECHANICAL KEYBOARD (VERSION 2) OVERVIEW

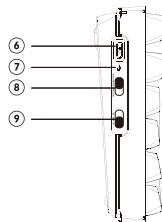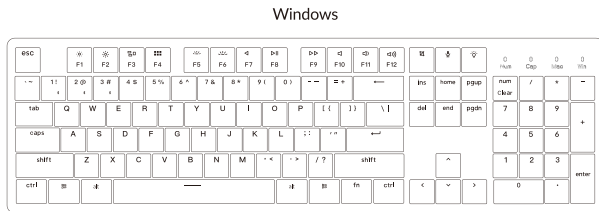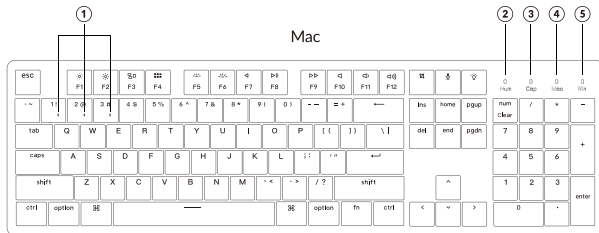


- ① Bluetooth Channel Indicator
- ② Num Lock Indicator
- ③ Caps Lock Indicator
- ④ Mac Layout
- ⑤ Windows Layout
- ⑥ Type-C Port
- ⑦ Power Indicator
- ⑧ Win/Android Mac/iOS (OS Toggle)
- ⑨ Bluetooth / OFF / Cable (Connection Mode Toggle)

DEFAULT KEY LAYOUT:

 
LAYER 0: This layer will be activated when your keyboard's system toggle is switched to Mac.

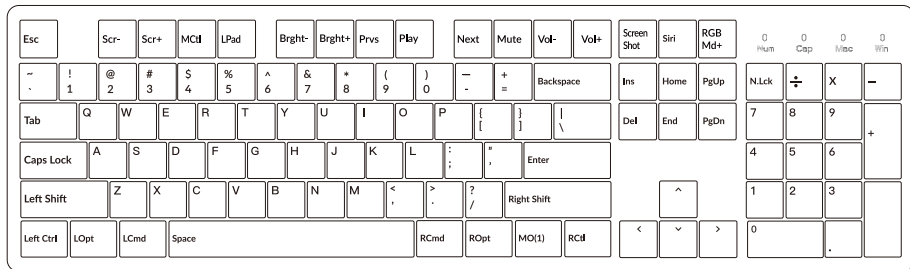

LAYER 1: This layer will be activated when your keyboard's system toggle is switched to Mac and press the fn/MO(1) key.

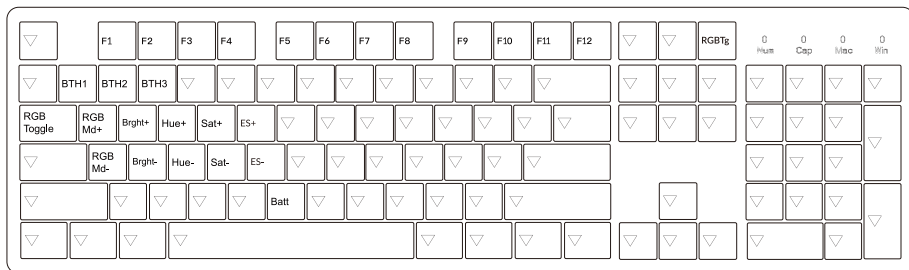 

LAYER 2: This layer will be activated when your keyboard's system toggle is switched to Windows.

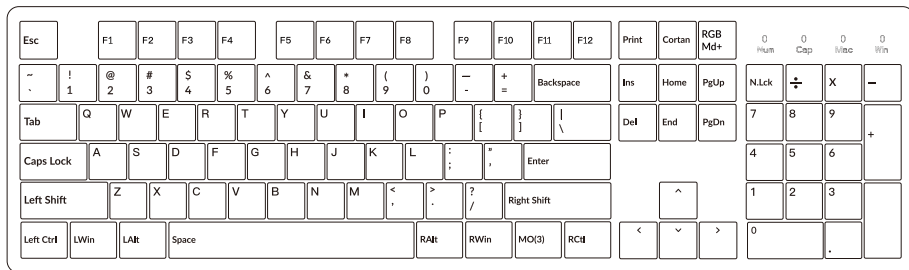 

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RCtrl = Right Ctrl RWin = Right Windows

KEY DESCRIPTION

Key Description		Key Description		Key Description	
Scr-	Screen Brightness Decrease	RGB Md-	RGB Mode Previous	Batt	Battery Life
Scr+	Screen Brightness Increase	Hue+	Hue Increase		
Bright-	Backlight Decrease	Hue-	Hue Decrease		
Bright+	Backlight Increase	ES +	Effect Speed Increase		
Prvs	Previous	ES -	Effect Speed Decrease		
Play	Play/Pause	MO(1)	Layer 1 will be activated when holding this key		
Next	Next	MO(3)	Layer 3 will be activated when holding this key		
Mute	Mute	BTH1	Bluetooth Host 1		
Vol-	Volume Decrease	BTH2	Bluetooth Host 2		
Vol+	Volume Increase	BTH3	Bluetooth Host 3		
RGB Toggle	Turn Backlight on/off	Sat+	Saturation Increase		
RGB Md+	RGB Mode Next	Sat-	Saturation Decrease		

FUNCTION DESCRIPTION: CHARGING

Plug the cable into a USB port and plug the other end into the keyboard port. Power indicator: A red light will stay on while charging; Fully charged in around 5 hours, a green power indicator will appear.

*The keyboard is compatible with all USB ports. Please use a 5V 1A adapter or USB 3.0 for the best performance. The keyboard can be charged in Cable/Bluetooth mode.

**This product supports up to 5V charging voltage and 1A charging current. We are not responsible for any problems caused by improper charging.

BLUETOOTH/WIRED MODE (MODE TOGGLE)

WIRED MODE

1. Switch the toggle to the “” option.
2. Connect our cable with your PC and keyboard.
3. Backlighting will be turned on.

*Under Wired Mode, keyboard will not enter into Battery Saver Mode.

BLUETOOTH MODE

1. Switch the toggle to the “BT” option.
2. Backlighting will be turned on.
3. Hold “fn+1” key for 4 seconds to activate Bluetooth pairing (the Bluetooth channel indicator fast flashes for 3 minutes to detect pairing).
4. Search for the Bluetooth device “Keychron K10 Version 2” on your device and connect it (the Bluetooth channel indicator goes off after successful pairing).

Note: This keyboard supports pairing up to 3 devices simultaneously via key combination “fn” + “1” / “fn” + “2” / “fn” + “3”.

**The Bluetooth channel indicator will continue to flash for 3 minutes.*

***Slow or failed connections may exist due to different Bluetooth versions, please make sure all the settings are correct.*

SWITCH BLUETOOTH DEVICES

Short press key combination “fn” + “1” / “fn” + “2” / “fn” + “3” to switch to other device.

RECONNECT:

1. Switch the keyboard to the “BT” option to activate the keyboard.
2. The Bluetooth channel indicator flashes for 3 seconds and automatically pairs with the last paired device.
3. If the Bluetooth channel indicator is off, press any button to enter the connection again.

**The keyboard must have been paired with the device to perform this function.*

TURN OFF THE KEYBOARD

Switch the keyboard to the OFF option.

AUTO SLEEP MODE:

- Under Wired Mode, the keyboard will not enter into Auto Sleep Mode.
- Under Bluetooth Mode, after 10 minutes of inactivity, the keyboard backlight turns off.
After 2 hours of inactivity, the keyboard will enter deep sleep mode and disconnect the wireless connection.

BACKLIGHT SETTING

- Short press key combination “fn”+  or “fn” +“tab” turn the backlight on/off.
- Short press key combination “fn”+“Q” or “fn”+“A” to switch between types of lighting effects.

OS TOGGLE SWITCH

1 – MAC/iOS

Switch the toggle to Mac/iOS when the keyboard is connected to a Mac or iOS operating system.

2 – WINDOWS/ANDROID

Switch the toggle to Windows/Android when the keyboard is connected to a Windows or Android operating system.

**When using the Windows/Android mode,   keys are used for “Windows” and “Alt” functions.*

3 – INPUT METHOD SWITCH

For iOS:

Input method switch: Ctrl + Space

Caps Lock: Caps (Enable General>Keyboards>Hardware Keyboard>Caps Lock Language Switch)

For Android:

Input method switch: Shift + Space

NOTE: Functions of certain multimedia key may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS. We also recommend not to switch OS frequently as it may impact keyboard operations.

TROUBLESHOOTING

If unable to pair keyboard to device, confirm that the device you're trying to pair with is Bluetooth-capable. If so, restart the device and try pairing it with the keyboard again.

Note: On a Windows computer, a new Bluetooth connection will sometimes require additional software updates—a process that may still be ongoing after a message appears indicating a successful completion. Wait at least 20 minutes after pairing to make sure all updates are completed before restarting the computer.

Confirm that the device is configured to accept Bluetooth connections (Windows) and supports an external keyboard (HID profile).

Go to Bluetooth Devices > Open Settings and select the following:

Allow Bluetooth devices to find this computer

Allow Bluetooth devices to connect to this computer

Alert me when a Bluetooth device wants to connect

My keyboard isn't working in Bluetooth mode.

For the computer/smartphone:

Go to your device Bluetooth settings>Select the keyboard and remove/delete/unpair it.

Then restart your device.

For the keyboard:

Turn the keyboard off and back on. Then reconnect it to your device.

Bluetooth connection is interrupted even within 10 meters.

Check if the keyboard is resting on a metal surface that can interfere with the Bluetooth signal.

Third-party input tools are not compatible with the keyboard.

 
Due to compatibility, versions, brands and drivers of Windows/Android OS, functions of third-party input tools may be affected while using the keyboard. Please make sure your operating system and drivers are up to date.

Certain fn keys or multimedia keys does not work under Windows/Android mode.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands and drivers of Windows/Android OS.

Certain multimedia keys or function keys do not work.

Functions of certain multimedia keys may be disabled due to compatibility, versions, brands, and drivers of devices.

*Multimedia keys: 

Function keys: 

Safety Precaution:

Keep the product, accessories and packaging parts out of the reach of children to prevent any accidents and choking hazards.

Always keep the product dry to avoid corrosion.

Do not expose the product to extreme temperatures below -10°C (14°F) or above 50°C (122°F) to preserve the lifespan of the keyboard and battery.

Keychron, Inc.
Dover, DE 19901, United States

Find us at:

<https://www.keychron.com>

support@keychron.com

 @keychron

 @keychron

 @keychronMK

Designed by Keychron

Made in China



K10 无线机械键盘

Version 2

内容清单

Keychron K10 无线机械键盘(Version 2) x 1

Type-A to Type-C接口线材 x 1

二合一拔轴键器 x 1

十字螺丝刀 x 1

说明书 x 1

快速上手指南 x 1

 
赠送键帽套装 x 1

内六角螺丝刀(仅限金属边框版本) x 1


快速上手指南

如果你是Windows用户，请在包装盒里找到如下的键帽，用拔键器拔下键盘上的对应键帽并且更换。

Mac / Windows

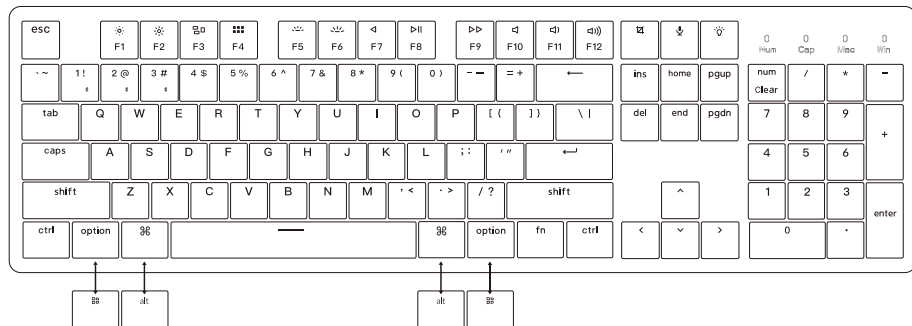

1 连接蓝牙

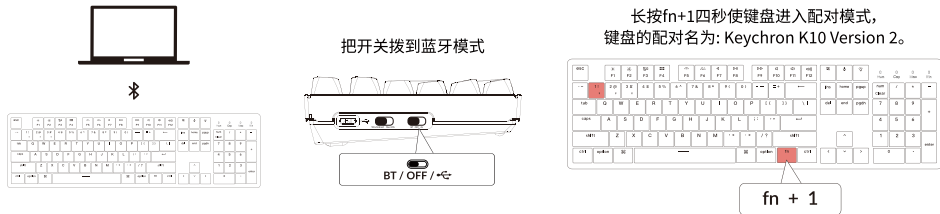 


2 连接有线




3 系统切换

 请确保键盘左上角的系统拨片切换到对应系统，
如果没有选择正确，
部分功能将无法使用。




4 更改键盘背光模式以及快速关闭/开启键盘背光

 组合fn+Q键，更改键盘背光模式。

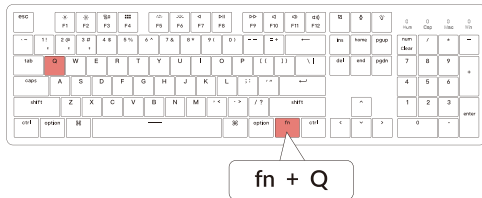

组合fn+tab键，可快速关闭/开启键盘背光。

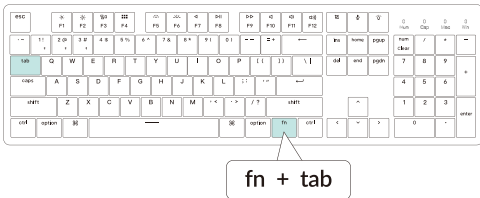 

5 调整键盘背光亮度的

组合fn+W键, 提高键盘背光亮度。



fn + W

组合fn+S键, 减少键盘背光亮度。



fn + S

6 调整背光速度

组合fn+T键, 增加光效速度。



fn + T

 
组合fn+G键, 降低光效速度。




fn + G

7 关于键盘键层说明

键盘有四层按键设置。
层0和层1是用于Mac系统。
层2和层3用于Windows系统。



如果您的系统拨片切换到Mac档位，
层0将被激活。

 

如果您的系统拨片切换到Windows，
那么层2将被激活。
如果您在Windows系统模式下使用，
请对层2进行更改，而不是层0。
否则无法进行按键映射操作。



8 关于Keychron Launcher App

 
可以访问launcher.keychron.com 使用在线
Launcher app。该软件可以映射按键，创建宏
命令，或者刷新固件。如果Launcher app不能
识别你的键盘，请联系我们以获得技术支持。



*在线Launcher app只能在最新版本的Chrome, Edge和Opera浏览器中运行。

*Launcher app仅在键盘通过线连接到计算机时有效。

9 恢复出厂模式&更新固件

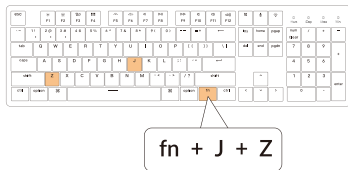

如果键盘出现了故障，不知道怎么办？

恢复出厂设置

1. 打开键盘 (任意模式均可)。
2. 按住 fn + J + Z (持续 4 秒)。键盘背光灯会呈红色快速闪烁 3 秒，表示键盘已重置。

刷新键盘固件

1. 访问 launcher.keychron.com 打开在线 Launcher web app。
2. 确保键盘处于 Cable 或者有线模式，并插入电源线。
3. 在 Launcher 上找到“固件更新”选项，并将键盘与其连接。
4. 按照 Launcher 提示，完成固件更新。

 
 
 
*在 keychron.com 上搜索关键字“Firmware”可以找到步骤指南。

10 保修

由于K10 (Version 2) 客制化键盘是可高度定制且易于组装的，
所以键盘的任何一个部件出了问题，
我们只会更换键盘有问题的部件而不是整个键盘。



K10 VERSION 2 键盘概述

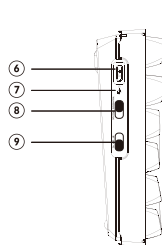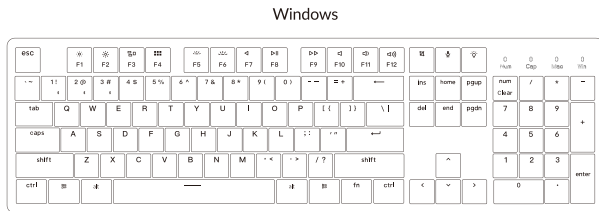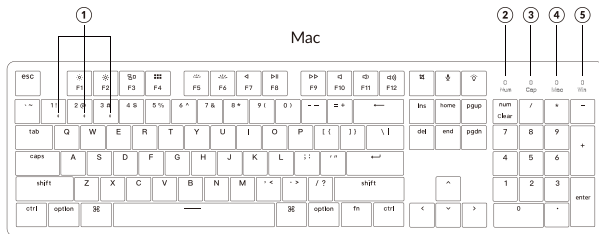

- ① 蓝牙通道指示灯
- ② 数字键盘指示灯
- ③ 大小写指示灯
- ④ Mac布局
- ⑤ Windows布局
- ⑥ Type-C充电口
- ⑦ 充电指示灯
- ⑧ Win/Android Mac/iOS (OS切换开关)
- ⑨ Bluetooth / OFF/ Cable (连接模式切换开关)

K10 Version 2 键盘规格

按键：104键

轴：机械轴

电池：4000mAh

充电时间：5小时

充电端口：Type-C

模式：蓝牙 / 有线

蓝牙工作距离：最长10米（开放空间）

蓝牙设备名称：Keychron K10 Version 2


功能说明

LED状态显示如下：


功能	LED位置	状态
充电	电源指示灯	低电量—红灯闪烁 充电—红灯常亮 满电—绿灯
蓝牙	蓝牙通道指示灯	快闪—切换 熄灭—连接成功 慢闪—配对
大小写	大小写状态指示灯	白灯—大写 熄灭—小写

按键布局

 
层0: 当您的系统拨片切换到Mac档位的时候,层0将被激活使用。

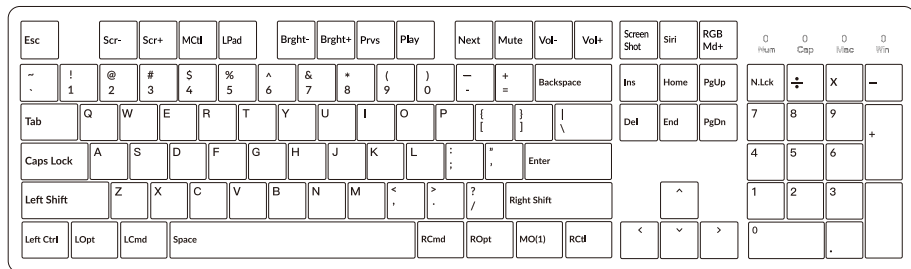

 层1：当您的系统拨片切换到Mac档位并组合fn/MO(1)键的时候，层1将被激活使用。

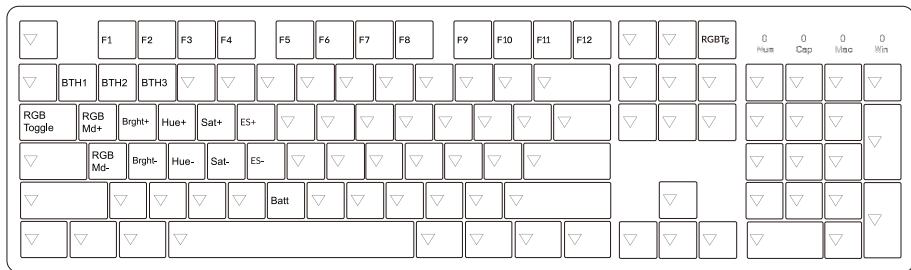


层2：当您的系统拨片切换到Windows档位的时候，层2将被激活使用。

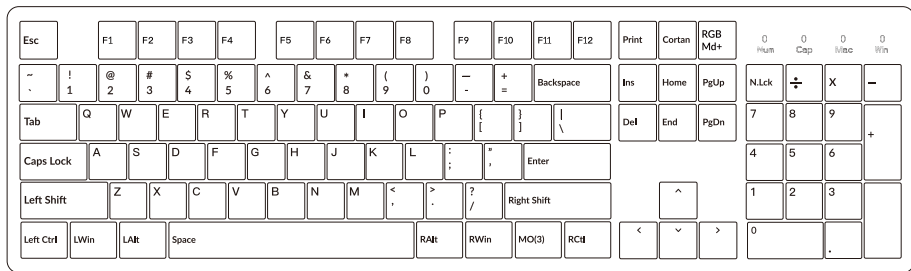 

LWin = Left Windows LAlt = Left Alt RAlt = Right Alt RCtrl = Right Ctrl RWin = Right Windows

 层3: 当您的系统拨片切换到Windows档位并组合fn/MO(3)键的时候, 层3将被激活使用。

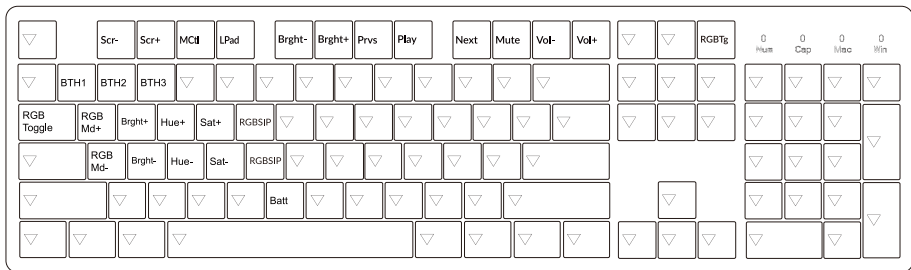

K10 Version 2 客制化键盘多媒体按键说明

按键说明		按键说明		按键说明	
Scr-	屏幕亮度-	RGBMD-	上一个RGB灯光模式	Batt	电池电量
Scr+	屏幕亮度+	Hue+	下一个灯光颜色		
Bright-	键盘背光亮度-	Hue-	上一个灯光颜色		
Bright+	键盘背光亮度+	ES +	灯光速度 +		
Prvs	上一曲	ES -	灯光速度 -		
Play	播放/暂停	MO(1)	按住MO(1),层1将被激活		
Next	下一曲	MO(3)	按住MO(3),层3将被激活		
Mute	静音	BTH1	蓝牙连接设备 1		
Vol-	音量-	BTH2	蓝牙连接设备 2		
Vol+	音量+	BTH3	蓝牙连接设备 3		
RGB Toggle	关闭/开启键盘背光	Sat+	饱和度+		
RGBMD+	下一个RGB灯光模式	Sat-	饱和度-		

充电

将电线插入USB端口，将另一端插入键盘的端口。

充电指示灯：电池电量低于15%，红色电池指示灯慢闪；充电时，红色电池指示灯长亮；在约5小时内完全充电，指示灯绿色长亮。

*键盘与所有USB端口兼容。要获得最佳信号和最快充电时间，建议采用USB3.0端口或5V-1A电源适配器。

*键盘可在有线 / 蓝牙模式下充电。

*有线模式下，充电指示灯不会熄灭。

*本产品最高支持5V充电电压，和1A充电电流。因不当充电而产生的问题，我们概不负责。

背光灯

-短按组合键"fn+"或"fn+tab"可关闭/开启键盘背光。

-短按组合键"fn+Q"/"fn+A"可切换背光效果。

蓝牙 / 有线模式

蓝牙模式

1. 将键盘“模式切换”拨动到“BT”位置。
 2. 键盘背光灯将打开。
 3. 长按“fn+1”键4秒激活蓝牙配对（蓝牙指示灯闪烁3分钟）。
 4. 在你的装置上搜索蓝牙装置“Keychron K10 Version2”并连接它（配对成功后蓝牙通道指示灯熄灭）。
- 注意：此键盘支持通过组合键“fn+1”/“fn+2”/“fn+3”依次配对最多3台设备。

*因蓝牙版本较多等原因，初次连接可能出现连接缓慢或连接失败等问题，请耐心检查设备设置是否正确。

切换至蓝牙装置

短按组合键“fn+1”/“fn+2”/“fn+3”切换到其他装置。

*切换过程可能会因切换频繁或切换速度过快，导致延迟，此时请耐心等待或重新切换。

回连

1. 将键盘切换到“BT”位置启动键盘。
2. 蓝牙通道指示灯快闪3秒，自动配对上一次配对的设备。
3. 如蓝牙通道指示灯熄灭，可按任何按键再次进入回连状态。

*键盘必须曾经配对该装置才能实现此功能。

有线模式

1. 将键盘“模式切换”拨动到“”位置（没插USB线的时候键盘无任何反应）。
2. 使用本产品USB Type-C线连接电脑即可使用。
3. 键盘背光灯将打开。

*在有线模式下，键盘不会自动进入省电模式。

关闭键盘

将“模式切换”拨至OFF，此时本产品关闭所有模式，但可以进行正常充电。

自动休眠模式

在有线模式下，键盘不会进入自动休眠状态。

在蓝牙模式下，键盘无动作后10分钟背光关闭。无动作2小时后蓝牙连接断开，进入深度休眠状态。

系统切换

1 — MacOS / iOS

连接到Mac或iOS操作系统时，请将键盘上方系统开关拨至Mac/iOS。

2 — WINDOWS / 安卓

当键盘连接到Windows或Android操作系统时，请将键盘上方系统开关拨至Win/Android。

3 — 输入法切换

对于iOS:

输入法切换: Ctrl + Space

大写锁定: Caps (启用常规>键盘>硬件键盘>大写锁定拉丁开关)

对于安卓:

输入法切换: Shift + Space

注: 由于Windows / 安卓OS的兼容性、版本、品牌和驱动程序, 某些多媒体键的功能可能不能被使用。我们还建议不要频繁切换操作系统, 因为它可能会影响键盘的操作。

疑难排解

我无法将键盘与我的装置配对。

答: 确认您要配对的装置可使用蓝牙。

重新启动装置并尝试再次与键盘配对。

注意: 在Windows计算机上, 新的蓝牙连接有时需要额外的软件更新 - 在出现表示成功完成的消息后, 该过程可能仍在进行中。配对后至少等待20分钟, 以确保在重新启动计算机之前完成所有更新。

确认装置配置可接受蓝牙连接 (Windows) 并支持外部键盘 (HID配置文件)。

转到蓝牙装置>打开设置, 然后选择以下复选框:

允许蓝牙装置找到这台电脑

允许蓝牙装置连接到这台电脑

当蓝牙装置想要连接时提醒我

我的键盘无法使用。

答: 请打开您的电脑/智能手机上的蓝牙设置>选择键盘并删除此设备/取消配对, 然后重启您的设备; 关闭并重新打开键盘, 然后重新连接到您的装置。

蓝牙连接或在10米内受干扰。

答: 检查键盘是否放在可能干扰蓝牙信号的金属表面上。

第三方输入工具与键盘不兼容

答: 由于Windows / Android 系统的兼容性、版本、品牌和驱动程序, 第三方输入工具在使用键盘时或被影响。请确保你的作业系统和驱动程序为最新版本。

某些多媒体键或功能键在设备上不起作用。

答: 由于设备的兼容性, 系统版本, 驱动程序等原因, 某些多媒体键或者功能键可能无法使用。

*多媒体键: 

功能键: 

注意事项:

请勿将本产品, 其配件和包装部件放在儿童接触到的地方, 以防发生意外引致窒息。

请保持产品干燥, 以免腐蚀。

请勿将产品暴露在低于-10°C (14°F) 或高于50°C (122°F) 的极端温度下, 以维持键盘或电池的使用寿命。

Keychron, Inc.

Dover, DE 19901, United States

<https://www.keychron.com>

通过以下方式与我们联系

support@keychron.com

 @keychron

 @keychron

 @keychronMK

Keychron设计

中国制造

中国区总代: 渴创技术(深圳)有限公司

执行标准: GB/T 14081-2010

售后热线: 400-0766268

地址: 深圳市龙岗区坂田街道大发埔社区
大发路24号文坑工业区2栋201