

Date: 20 05 2025

Product: SP-0766 STITCH ELVIS IM

SP-0766 STITCH ELVIS DANCING WATER SPEAKER IM

Size: 325(w) x 100(h) mm

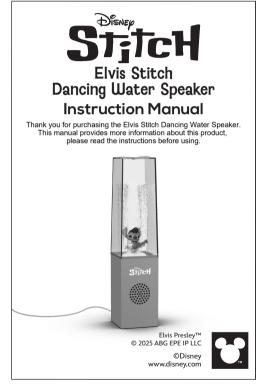

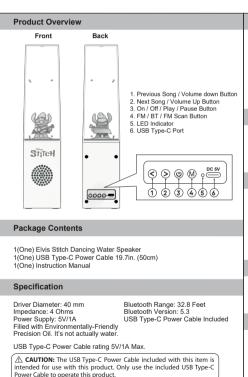

Connect the Dancing Water Speaker to a 5V/1A USB Adapter (not included) with supplied USB Type-C Power Cable. Slide the ON/OFF switch to the "ON" nosition

Power On: Press and hold the Power Button for 3 seconds. Power Off: Press and hold the Power Button for 3 seconds.

Note: Always power off the speaker when not in use

Power On/Off

LED & Water Fountain Function On/Off

Function Turn On: Press the Power Button twice.

Function Turn Off: Press the Power Button twice

Pair Wireless Speaker With Your Mobile Device

- 1. Keep the distance between your wireless speaker and mobile phone (or other Bluetooth devices) within 32.8 Feet.
- 2 Power on the wireless speaker
- 3. Activate the Bluetooth function on your phone within range and select "SP-0766 SPK" from the list shown
- 4. You will hear a beep sound when pairing is successful.

Reconnect Wireless Speaker to Your Mobile Device

When powered on, the wireless speaker will automatically connect with the last successfully paired device

Bluetooth Speaker Mode

Play/Pause: Short press the Power Button once. Next Track: Short press the ">" Button Previous Track: Short press the "<" Button Volume Up: Long press the ">" Button Volume Down: Long press the "<" Button

FM Radio Mode

Note: Please plug in USB Type-C cable as FM antenna before switch to FM Radio Mode.

Switch to FM Radio Mode: Short press the "M" Button. Short press "M" Button again will back to Bluetooth Speaker mode. Auto Scan: Long press the "M" Button Next Channel: Short press the ">" Button Previous Channel: Short press the "<" Button

Volume Up: Long press the ">" Button Volume Down: Long press the "<" Button

Mute/Unmute: Short press the Power Button

FAQ

◆ If the Wireless speaker cannot be paired with your device please try the following:

Ensure that your speaker is in pairing mode or reconnection mode. Ensure that Bluetooth search function of your mobile device is activated.

. If the Wireless speaker cannot be powered on:

Ensure that the power adapter is connected securely and the outlet works

⚠ Safety Instructions

-The input voltage to the product is DC 5V 1A.

-In order to operate the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for operating the product.

-Switch off the product after use.

-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.

FCC STATEMENT

- 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.
- 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



FCC ID: 2ADM5-SP-0766V2

Item# SP-0766-STITCH Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200

Philadelphia, PA 19106

Keep All Relevant Information for Future Reference

Approval: Date: