

Cobra® HH38 WX ST

**Operating Instructions
for your Cobra HH 38 WX ST**

Citizens Band 2-Way Handheld CB Radio



"Ingenious Products for Easier Communication."

The CB Story

The Citizens Band lies between the shortwave broadcast and 10-meter Amateur radio bands, and was established by law in 1949. The Class D two-way communications service was opened in 1959. (CB also includes a Class A citizens band and Class C remote control frequencies.)

FCC Regulations

FCC regulations permit only "transmissions" (one party to another) rather than "broadcasts" (to a wide audience). Thus, advertising is not allowed on CB Channels because that is "broadcasting."

FCC Warnings

 
All transmitter adjustments other than those supplied by the manufacturer as front panel operating controls, must be made by, or under the supervision of, the holder of an FCC-issued general Radio-Telephone Operator's License.

Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Cobra, may cause violation of the technical regulations of Part 95 of the FCC Rules, or violation of Type Acceptance requirements of Part 2 of the Rules.

You should read and understand Part 95 (included with this unit) of the FCC Rules and Regulations, before operating your Cobra radio, even though the FCC no longer requires you to obtain an operator's license.


What's Included with Your HH 38 WX ST

1. High Efficiency Antenna
2. Removable Belt Clip
3. Wrist Strap
4. 12 Volt Cigarette Lighter Plug
5. Operating Manual

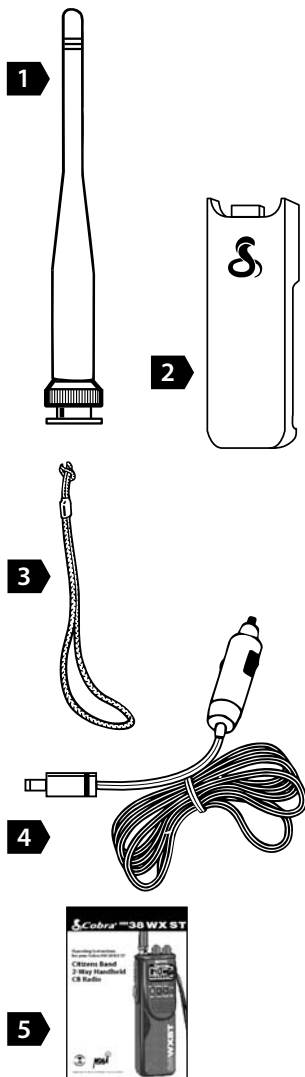

Controls and Indicators

 1. BNC Antenna Connector
2. Squelch Control
3. On/Off Volume Control
4. Removable Belt Clip
5. External Speaker Jack
6. External Microphone Jack
7. Charge LED
8. NiCD Battery Charge Jack
9. DC Power Jack
10. Light Key
11. Channel Up/Down Keys
12. PTT (Push To Talk) Key
13. Battery Chamber
14. LCD Display Panel
15. Lock Key
16. SoundTracker® Key
17. CB/WX Weather Key and HI/LO Power Key
18. Instant Channel 9 & 19 and Dual Watch Key
19. Function Key
20. Channel Scan
21. Microphone

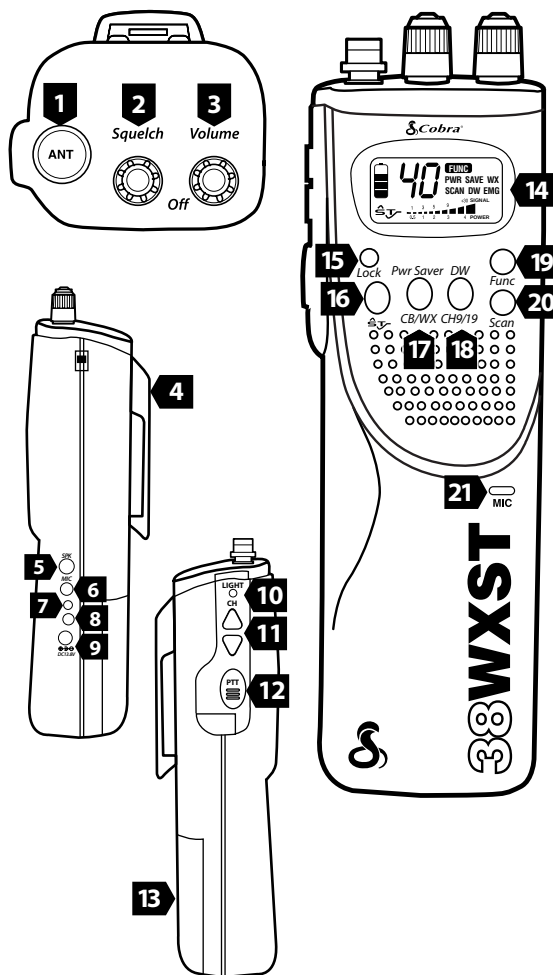

Thank you for purchasing the Cobra HH 38 WX ST handheld CB. Properly used, this Cobra product will give you many years of reliable service.

SoundTracker®

"Cuts noise coming in...strengthens signals going out."

This Patent pending technology dramatically improves transmission and reception of CB signals.

The revolutionary SoundTracker® System reconfigures the transmission signal which allows it to be transferred more efficiently through cluttered airwaves.

At the same time, it significantly reduces the amount of static on all incoming CB signals.

The end result is a cleaner, clearer sounding reception of signals and a more powerful transmission which dramatically improves CB communications.

Customer Support

Should you encounter any problems with the product or not understand its many features, please refer to this owner's manual. If, after referring to the manual, you still need help, call Cobra Customer Service at 773.889.3087.

Cobra Customer Service

Live operators are available
M-F 8:00 am - 6:00 pm CST at:
773.889.3087

Automated Technical Assistance
available 24 hours a day, seven
days a week. E-mail questions
to: productinfo@cobra.com

Cobra on the World Wide Web:
Frequently Asked Questions
(FAQ) can be found on-line at:
www.cobra.com

How to Use Your Cobra^{HH} 38 WX ST

Contents

Features	1
The CB Story	A1
FCC Regulations	
Included Accessories	
Controls & Indicators	A2
Our Thanks to You	A3
SoundTracker® System	
Customer Support	
Operating Your HH 38 WX ST	
Antenna	2
Battery Installation	3
Belt Clip	3
Turning on Your CB	4
Setting Squelch	4
Selecting a Channel	6
LCD Display	7
Transmit/Receive	8
One Touch Channel 9 & 19	10
All Channel Scan	11
Dual Watch	12
Weather Channels	14
Power High/Low	16
Battery Capacity Level	18
SoundTracker® System	19
Lighted Display	23
Lock Key	24
In Vehicle Use	25
How Your CB Can Serve You	26
A Few Rules You Should Know	26
Weather Channel Messages	27
Channel 9 Emergency Messages	28
CB 10 Codes	30
Frequency Ranges	32
HH 38 WX ST Specifications	33
Warranty Information	34
Optional Accessories	35
Order Form	36
If You Think You Need Service	Back Cover

Features of This Product

- 40 CB Channels
- 10 Weather Channels
- Full Feature LCD Display
- Dual Channel Watch
- Full Channel Scan
- Battery Level Meter
- External Speaker/
Microphone Jack
- Instant Channel 9 & 19
- High/Low Power Saver Switch
- BNC Antenna Connector
- Lock Key

Operation

 
Attach Antenna

Note


To increase range as a portable, use CA41 telescopic loaded long range antenna. (See Accessory Page 35).

Attach Antenna


1 Insert.

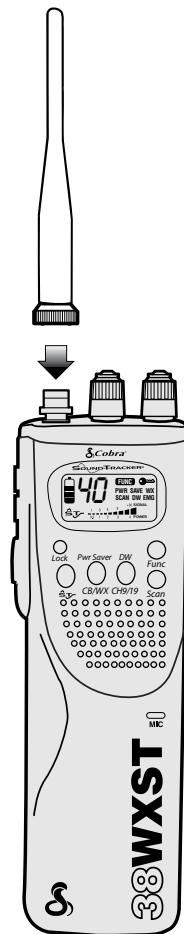

2 Turn clockwise. 1/4 turn.

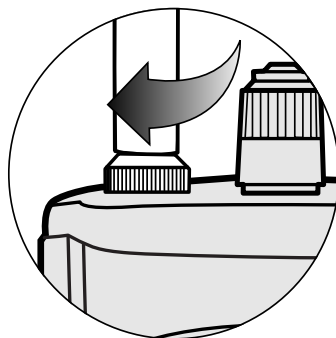 

Install Batteries

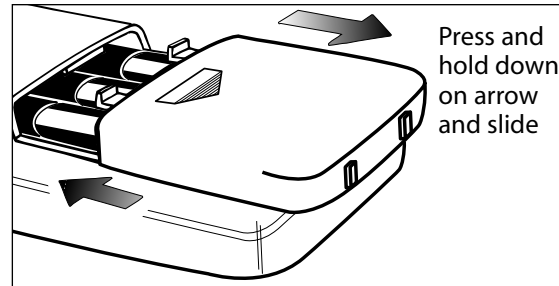 


1 Remove battery chamber cover. Press down on arrow and slide.

2 Install batteries by polarity markings.


3 Replace cover.

NiCD rechargeable batteries should be charged a minimum of 12 hours with a CA-45C charger.

 Attach Belt Clip

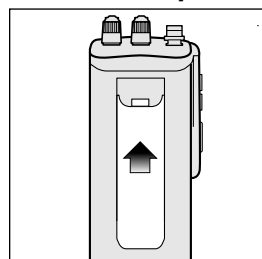

 1 Slide belt clip up on rails of base until tab locks.

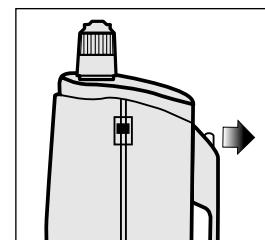

2 To remove belt clip, lift tab out and slide belt clip down.

Operation

Battery Installation

Note

Ignoring polarity markings (+/-) can cause damage to both the unit and the batteries.

The HH 38 WX ST requires 9 "AA" alkaline or NiCD batteries (not included with the unit).

When batteries are low or need charging the  BATTERY icon will flash on the LCD display. Replace alkaline batteries or recharge NiCD batteries.

NiCD rechargeable batteries should be charged a minimum of 12 hours with a CA-45C charger.

NiCD rechargeables should have a rating of 1.2 vdc, 750 Mah.

Attach Belt Clip

Note

Clip slides up to attach and slides down to remove.

 
 
Operation

Turning On


Note
When you turn on the HH 38 WX ST, a series of tones will be heard and the icons will briefly appear on the LCD display.
LCD lights on for 5 seconds.

Turning On

Rotate ON - OFF Volume Control  clockwise.

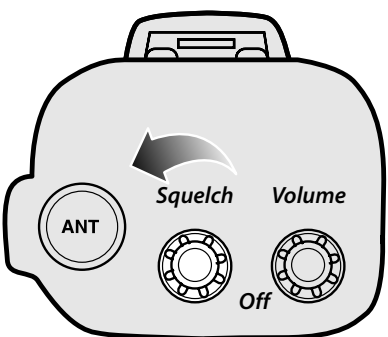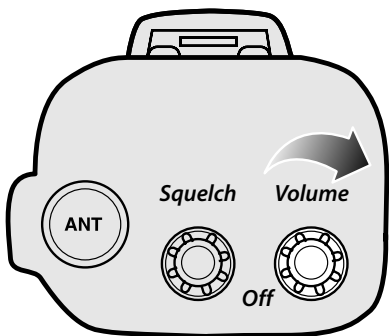


 
2 Fully  opens the "gate" and all signals enter.

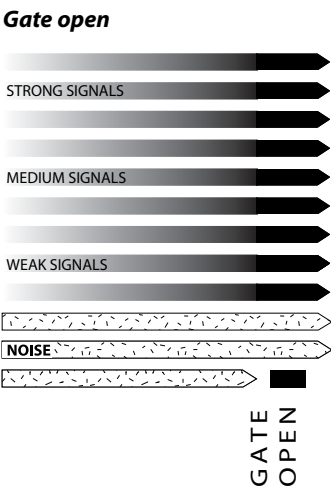

Setting Squelch


Setting Squelch

  Squelch is the "control gate" for incoming signals.

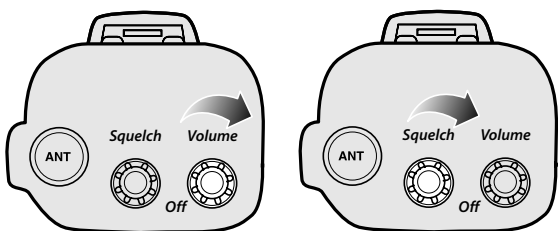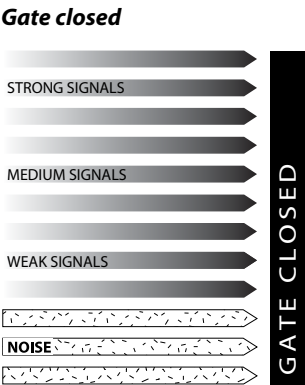


1 Turn volume up louder than normal.

 2 Fully  closes the "gate", allowing no incoming signals.

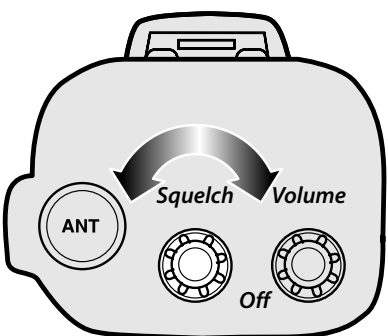


 3 To achieve the Desired Squelch Setting (DSS), turn the Squelch control  until you hear noise. Now turn the control clockwise just until the noise stops. This is the DSS setting.

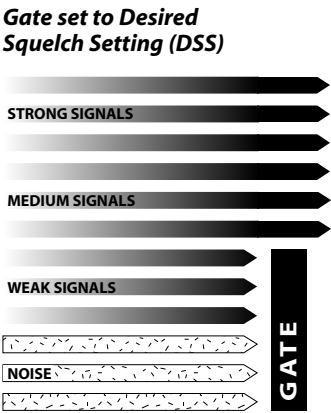

Select Channel

 
Note
For quick advance, push and hold arrow key(s).

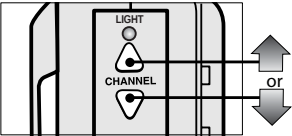

Note
When switching from one channel to another, squelch will need to be reset. See Setting Squelch on pages 4 and 5.


Select Channel

 - 1 Turn power ON.
- 2 For higher channel, push UP arrow key.
- 3 For lower Channel, push DOWN arrow key.

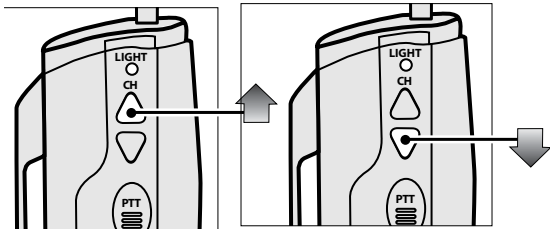

LCD Display

 LCD Display
All needed information is displayed on LCD display panel.

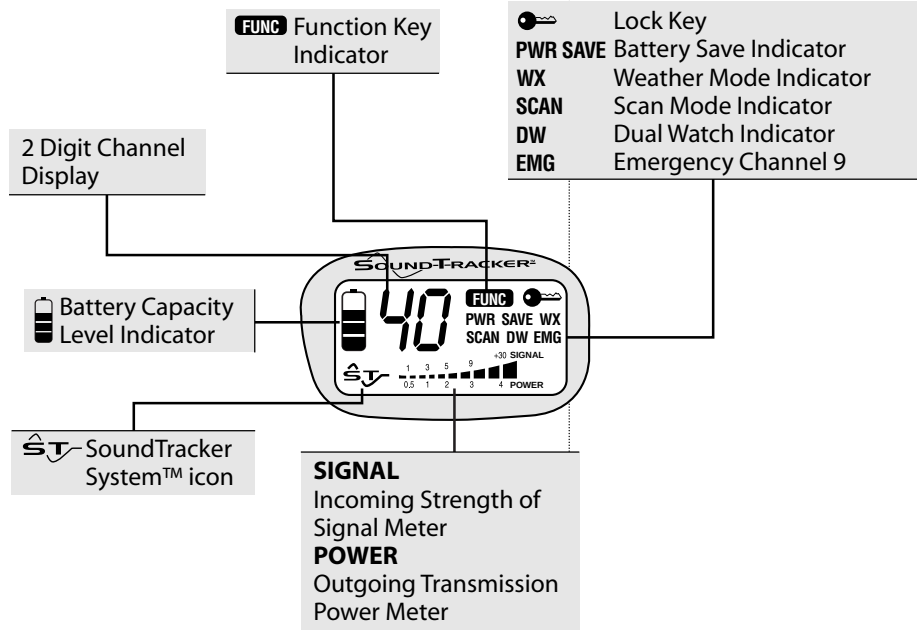


Transmit/Receive

Stop
Antenna must be installed before TX

Note
While PTT button is depressed you cannot receive transmissions.


Note
During transmit, your outgoing transmission power is measured in watts and displayed on the bar graph.

 Transmit / Receive

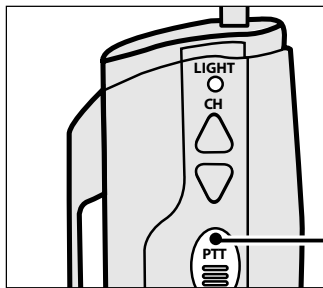


PUSH & HOLD

 
1 To transmit, push and hold PTT button.

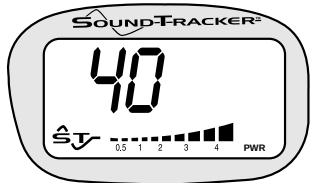

 2 The TRANSMISSION POWER METER will be displayed when transmitting.

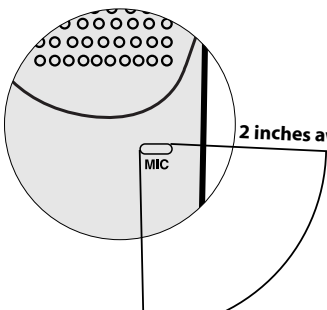


 3 Hold mic about 2 inches from mouth. Speak in a normal voice.

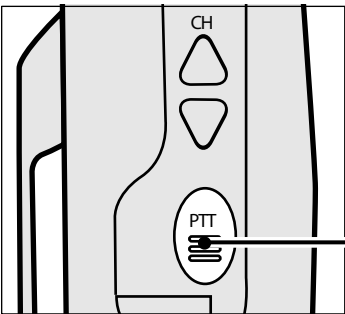

RELEASE

 3 Release PTT button to receive incoming transmissions.

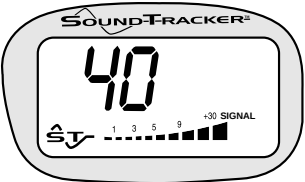

The INCOMING SIGNAL STRENGTH METER will be displayed when a signal is received.

 
Note
Your HH38 WX ST is always ready to receive incoming signals when the PTT button is released.

When you are receiving an incoming signal, the strength of that signal will be displayed on the bar graph.


One Touch for Channel 9 and Channel 19

Note
Pressing CHANNEL UP/DOWN key will exit you from this mode.


One Touch For Channel 9 and Channel 19
To gain instant access to Channels 9 (emergency) and 19 (information) from other channels:

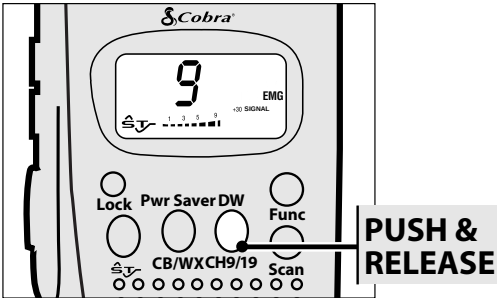

1 Push  CH 9/19 once for channel 9.

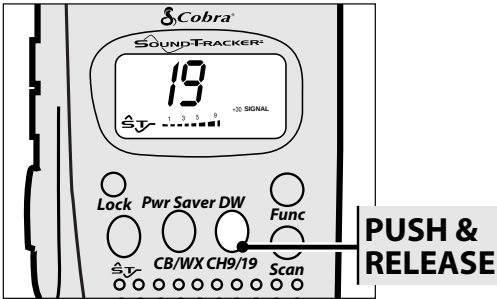 

2 Push  CH 9/19 twice for Channel 19.

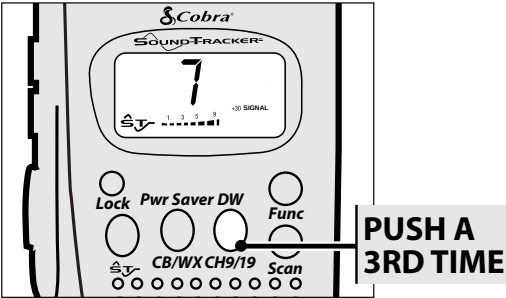 


3 To return to original channel, push  CH 9/19 a third time.

All Channel Scan

To scan all 40 channels:

 1 Set Desired Squelch Setting (DSS).

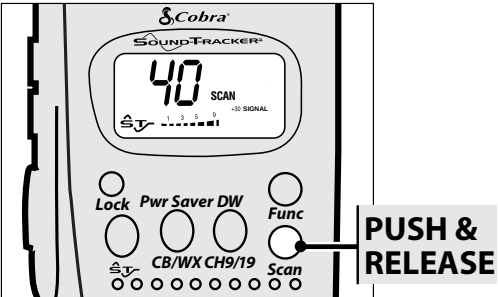

2 Push  SCAN key. The channels will index.

3 To stop scanning, push  SCAN key again.

All Channel Scan

Note

When an incoming transmission is received the HH 38 WX ST will stop scanning. 10 seconds after scan stops, scanning will resume.

Note

To set Desired Squelch Setting (DSS) see Setting Squelch on pages 4 and 5.

Pressing PTT key or scan key will terminate scan mode.

Operation

Dual Watch

Note

To set Desired Squelch Setting (DSS) see Setting Squelch on pages 4 and 5.

 
Note

At a later time you can recall your preset DW channels by pushing and releasing the FUNCTION key and quickly pushing and releasing the DW key.


Dual Watch

Dual Watch allows simultaneous monitoring of two preselected channels. To monitor Channel 11 and 17 for incoming transmissions:

- 1 Set Desired Squelch Setting (DSS).
- 2 Select Channel 11 with CHANNEL UP/DOWN key.

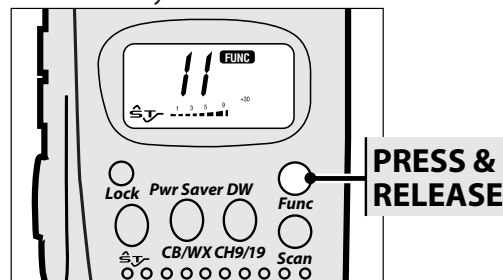


 - 3 Push and release FUNCTION key. **FUNC** FUNCTION icon will be displayed.

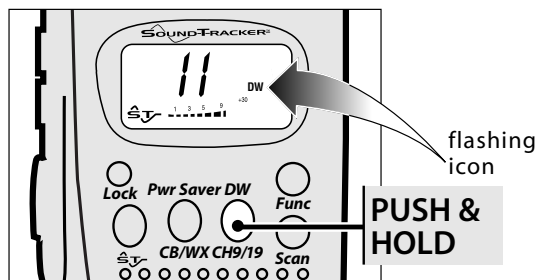


- 4 Push and hold DW key until "beep" is heard. The DW icon will flash and the **FUNC** FUNCTION icon will disappear.

 - 5 Select Channel 17 with CHANNEL UP/DOWN key.

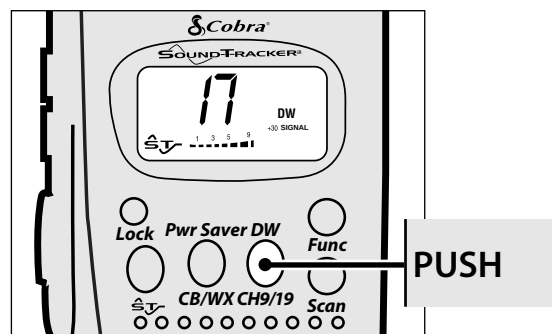

- 6 Push DW key until "beep" is heard.

 The DW icon will stay on.

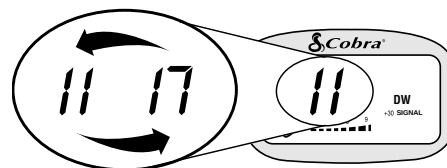

- 7 The HH 38 WX ST display will switch between the selected channels.
- 8 To stop dual watch, push CHANNEL UP/DOWN key on the HH 38 WX ST.

Operation

Note

When a transmission is received the HH 38 WX ST will stop monitoring. 10 seconds after the DW stops, monitoring will continue between the two channels.

Operation

Weather Channels

Note

The 10 National Weather Channels include 7 NOAA and 3 Canadian channels. These channels provide full coverage to keep you informed of weather conditions, 24 hours a day, 7 days a week.

 
For a list of weather frequencies see specifications in the Frequency Ranges section on page 36.

Note


Your HH 38 WX ST has a special auto squelch circuit for weather transmission which disables your squelch control.

Weather Channels


10 National Weather Channels provide weather transmission reception.

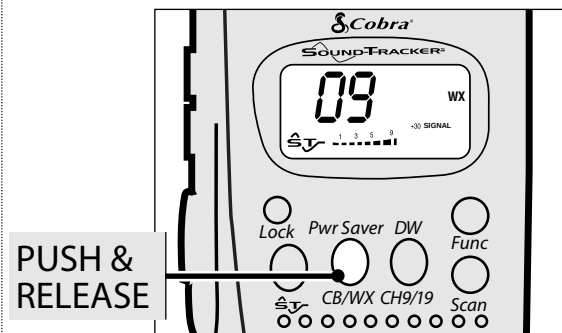

 - 1 Push and release the  CB/WX key and the current weather channel will appear.

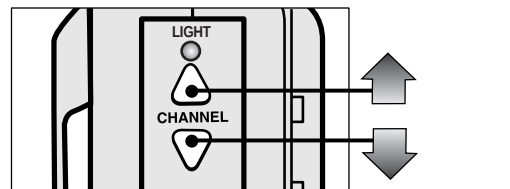- 
- 2 To change weather channels *push* the CHANNEL UP/DOWN arrow keys.

 At times, different channels can be received. Select the one with the clearest audio quality.

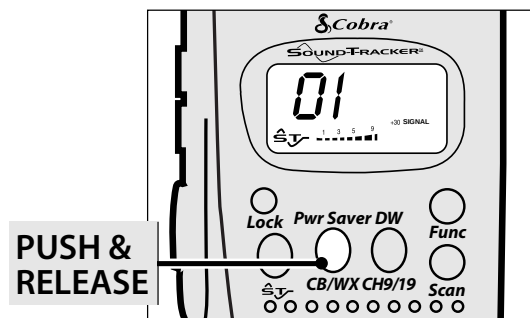

- 3 To return to normal CB operation, *push and release* the  CB/WX key again.

The WX icon will disappear.

Operation

Note

An agency of the U.S. Department of Commerce, NOAA operates 380 stations which reach about 90% of the U.S. population. If you cannot receive a weather station, you may not have one in your area.

If you wish to receive a listing of NOAA Weather Radio Transmitter locations, contact your nearest National Weather Service Office, or write to:

National Weather Service
(Attn: W/OM11), NOAA
Silver Spring, MD 20910

Operation

 
Power Saver (HI/LOW)

Note

The low power setting cuts the transmitting range in half, but the receiving range is not affected.

Power Saver (HI/LOW)

Reduces transmit power output to 1 watt to extend battery life.

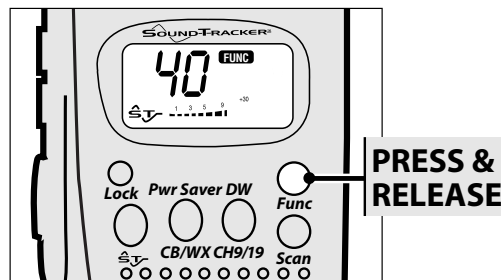


- 1 Push and release the  FUNCTION key.  FUNCTION icon will be displayed.

Operation

Note

 Battery life is increased approximately 50% while in Battery Power Save Mode is activated. This reduces transmit power output to 1 watt.

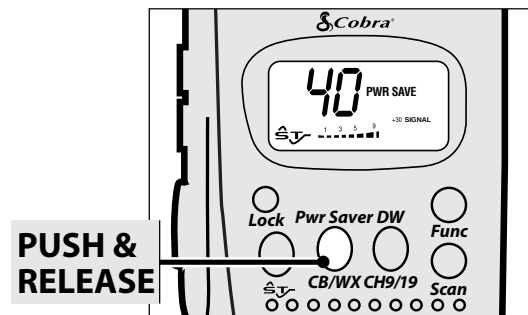

- 2 Push and release the  key.

The **PWR Save** icon will appear and the  FUNCTION icon will disappear.

1 To exit Power Saver (HI/LOW) mode:

Push and release  FUNCTION key.

 FUNCTION icon will be displayed.

- 2 Push and release the  key.

- 3 FUNCTION and PWR Save icon will disappear

Operation

 
Battery Capacity Level

Note

Battery life is approximately 20 hours under normal use conditions.

Battery Capacity Level

To monitor the remaining power level of the HH 38 WX ST battery: check battery icon bands.

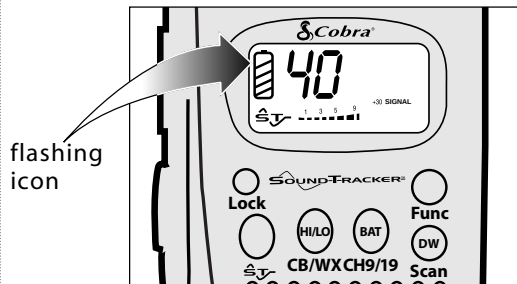

 BATTERY icon will flash if batteries are low. Replace batteries as soon as possible.

Operation

The SoundTracker® System

While previous systems only “blanket out” or limit noise in higher sound frequencies, the revolutionary new SoundTracker® System actually reduces noise while leaving the signal intact in the reception mode. In the transmission mode, it actually strengthens the signal, providing you with a significant reduction in noise on reception and transmission.

Sound clarity is measured by the ratio of the signal level to the noise level. The higher the signal-to-noise ratio, the better the sound.

How SoundTracker® Works

On Reception - “Cuts noise coming in”

With a normal CB, distant signals fall below the squelch level and are unintelligible. With a SoundTracker® CB, the noise level is cut up to 90%, which increases the signal-to-noise ratio and dramatically improves signal clarity. This also allows you to significantly reduce the squelch level, which greatly expands your listening range.

 
 
On Transmission - “Strengthens signals going out”

A SoundTracker® CB strengthens the transmit signal by more effectively using the available RF power output of the CB. The result is improved transmission signal clarity and an expanded transmission range.



Note

SoundTracker® gives you clearer, cleaner reception to improve CB communications while on the air.

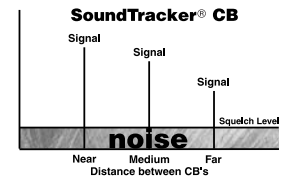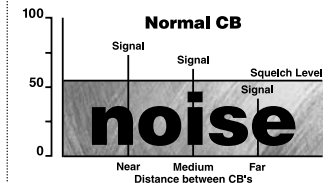


Operation

Activating SoundTracker®


Note

This engages the SoundTracker® system and reduces the noise level.

 Activating SoundTracker®

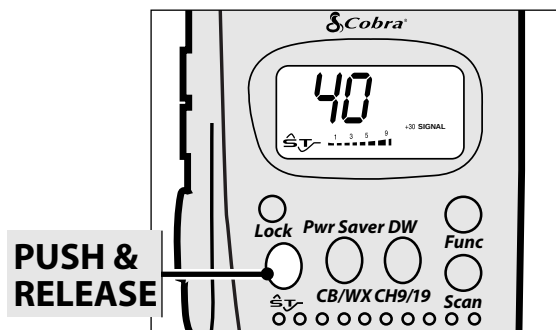

- 1 Push and release the  ST key.

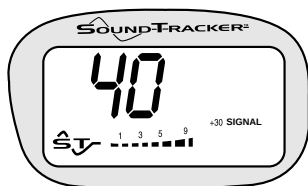 


The  SOUNDTRACKER icon will appear.


Operation

Testing SoundTracker®

 Testing SoundTracker®

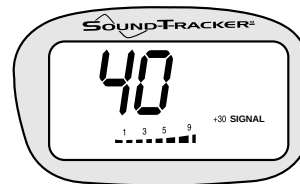


 - 1 Select any unused channel on your CB.

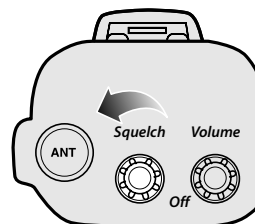

- 2 Fully  counterclockwise opens the "gate" and all signals enter. Turn the knob until it stops.
- 3 Deactivate soundtrack mode by pressing  key if the  icon is displayed

 
continued

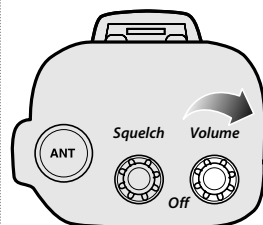

- 3 Turn the volume up louder than your normal listening level.


Note

 At times you may experience different levels of noise reduction. Different terrains and environments will effect the SoundTracker® System's performance.

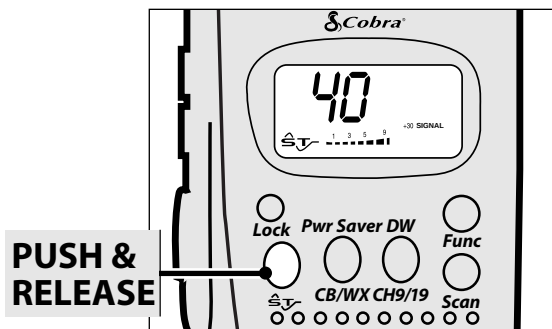


- 4 Push and release the ST key.

 The ST SOUNDTRACKER icon will appear.
*Notice the significant reduction in noise.

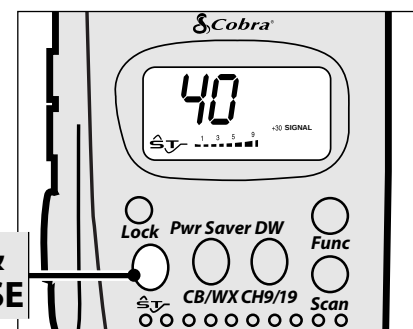

- 5 To disengage SoundTracker® push and release ST key again.
- 6 ST icon will disappear.

 Lighted Display

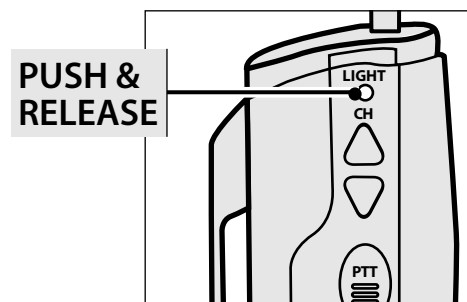

- 1 To illuminate display, push and release light key.
Light will remain on for 10 seconds.

Lighted Display

Operation

 
Lock Key

Note

PTT, LIGHT, VOLUME, SQUELCH and LOCK functions are still operational while the LOCK function is activated.

Lock Key

Purpose is to lock most functions to avoid accidental actuation.

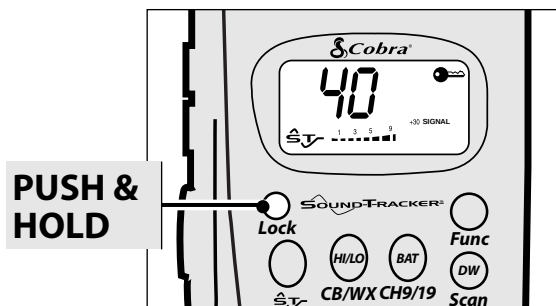


- 1 To lock, push and hold the  LOCK key for two seconds. The  LOCK icon will appear.

To unlock, push and hold  LOCK key for 2 seconds again.

Operation

In Vehicle Use

 The HH 38 WX ST can be connected to your cigarette lighter with the provided adapter. **This power connection does NOT charge the batteries.**

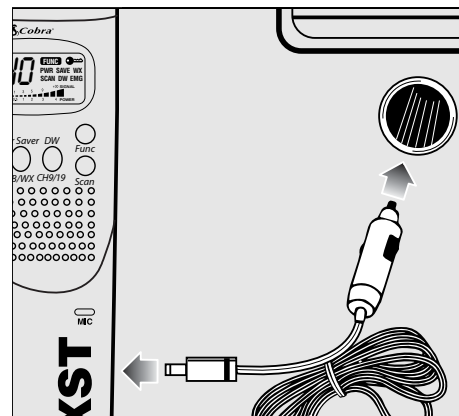

In Vehicle Use

Note

Due to the characteristics of CB transmissions, it is necessary to use an external car roof/truck magnet mounted antenna (item # ATW-400) and a BNC adapter (item # CA-43) to receive optimal performance while in your vehicle. See Accessories section on page 39.

Note

DC/Power Cord is provided.

To increase range as a portable, use CA41 telescopic loaded long range antenna.

How Your CB Can Serve You

- Warn of traffic problems
- Provide weather and road data
- Provide help in event of an emergency
- Provide direct contact with home or office
- Assist police by reporting erratic drivers
- Get “local information” to find destination
- Communicate with family and friends
- Suggest spots to eat and sleep
- Keep you alert while traveling

A Few Rules You Should Know

- A. Conversations cannot last more than 5 minutes with another station. A one minute break is required to let others use the channel.
- B. You cannot blast others off the air by use of illegally amplified transmitters or illegally high antennas.
- C. You cannot use CB to promote illegal activities.
- D. Profanity is not allowed.
- E. You may not transmit music with a CB.
- F. Selling of merchandise and/or services is prohibited.

How Your CB Can Serve You

Weather Channel Messages

Local weather reports are provided by NOAA (National Oceanic Atmospheric Administration) 24 hours a day, 7 days a week. An agency of the U. S. Department of Commerce, NOAA operates 380 stations which reach about 90% of the U. S. population. If you cannot receive a weather station, you may not have one in your area. A similar network of 15 stations broadcasts continuous weather information across much of southern Canada.

Weather Channel Messages

Note

If you wish to receive a listing of NOAA Weather Radio Transmitter locations, contact your nearest National Weather Service Office, or write to:

*National Weather Service
(Attn: W/OM11), NOAA
Silver Spring, MD 20910*

For a list of weather frequencies see specifications in the Frequency Ranges section on page 36.

How Your CB Can Serve You

How Your CB Can Serve You

Channel 9
Emergency
Messages

Note
If no response on channel 9,
try channels 19 or 14.

1. Set to channel 9 for emergencies

Be sure antenna is properly connected.
2. CB Distress Data

When transmitting an emergency, you should request a "REACT BASE" and provide the CB distress data (called **CLIP**):

C all Sign

L ocation

I njuries

P roblem

Identify yourself.

Be exact.

Number. Type. Trapped?

Give details and help needed.

Transmit **CLIP** repeatedly so any monitor can assist.

The FCC gives these examples of permitted and prohibited messages for channel 9. These are only guidelines and not all-inclusive:

Permitted	Example Message
Yes	"Tornado sighted six miles north of town."
No	"Post number 10. No tornado sighted."
Yes	"Out of gas on I-95 at mile marker 211."
No	"Out of gas in my driveway."
Yes	"Four car accident on I-94 at Exit 11. Send police and ambulance."
No	"Traffic moving smoothly on I-94."
Yes	"Weather Bureau has issued thunderstorm warning. Bring sailboat into port."
No	"Attention motorists. Weather Bureau advises snow tomorrow will accumulate 4 to 6 inches."
Yes	"Fire in building at 539 Main, Evanston."
No	"Halloween patrol number 3. All quiet."

How Your CB Can Serve You

CB 10-Codes

CB 10-Codes

Citizen Bands have adopted the "10-CODES" for standard questions and answers. These codes provide quick and easy communication, especially in noisy areas. Following are some of the more common codes and meanings:

Code	Meaning
------	---------

10-1	Receiving poorly
10-2	Receiving well
10-3	Stop transmitting
10-4	OK, message received
10-5	Relay message
10-6	Busy, stand by
10-7	Out of service, leaving
10-8	In service, subject to call
10-9	Repeat message
10-10	Transmission completed standing by
10-11	Talking too rapidly
10-12	Visitors present
10-13	Advise weather/roads
10-16	Make pick up at
10-17	Urgent business
10-18	Anything for us?
10-19	Return to base
10-20	My location is
10-21	Call by phone
10-22	Report in person to
10-23	Stand by
10-24	Completed last assignment
10-25	Can you contact
10-26	Disregard last info
10-27	Moving to channel
10-28	Identify your station

How Your CB Can Serve You

Code	Meaning
------	---------

10-29	Time is up for contact
10-30	Does not conform to FCC rules
10-33	Emergency traffic
10-34	Trouble at this station
10-35	Confidential information
10-36	Correct time is
10-37	Wrecker needed at
10-38	Ambulance needed
10-39	Message delivered
10-41	Turn to channel
10-42	Traffic accident at
10-43	Traffic tie up at
10-44	Have a message for
10-45	All units within range please report
10-50	Break channel
10-60	What is next message number?
10-62	Unable to copy. Use phone
10-63	Net directed to
10-64	Net clear
10-65	Awaiting your next message/assignment
10-67	All units comply
10-70	Fire at
10-71	Proceed, transmission in sequence
10-77	Negative contact
10-81	Reserve hotel room for
10-82	Reserve room for
10-85	My address is
10-91	Talk closer to mic
10-93	Check my frequency on this channel
10-94	Give me a long count
10-99	Mission completed, all units secure
10-200	Police needed at

Frequency Ranges

HH 38 WX ST Specifications

The COBRA HH 38 WX ST transceiver represents one of the most advanced AM two-way radios used as a Class D station in the Citizens Radio Service. This unit features advanced Phase Lock Loop (PLL) circuitry providing complete coverage of all 40 CB channels and 10 weather channels as shown below.

CB Channel	Channel Freq. In MHz	CB Channel	Channel Freq. In MHz	Weather Channel	Weather Freq. In MHz
1	26.965	21	27.215	1	162.550
2	26.975	22	27.225	2	162.400
3	26.985	23	27.255	3	162.475
4	27.005	24	27.235	4	162.425
				5	162.450
5	27.015	25	27.245	6	162.500
6	27.025	26	27.265	7	162.525
7	27.035	27	27.275	8	161.650
8	27.055	28	27.285	9	161.775
9	27.065	29	27.295	0	163.275
10	27.075	30	27.305		
				*Canadian weather channels are 8, 9 and 10.	
11	27.085	31	27.315		
12	27.105	32	27.325		
13	27.115	33	27.335		
14	27.125	34	27.345		
15	27.135	35	27.355		
16	27.155	36	27.365		
17	27.165	37	27.375		
18	27.175	38	27.385		
19	27.185	39	27.395		
20	27.205	40	27.405		

GENERAL

CHANNELS	CB - 40 CH WEATHER - 10 CH
FREQUENCY RANGE	CB - 26.965 TO 27.405 MHZ WEATHER - 161.650 TO 163.275 MHZ
FREQUENCY TOLERANCE	0.005 %
FREQUENCY CONTROL	PLL (PHASE LOCK LOOP) SYNTHESIZER
OPERATING TEMPERATURE RANGE	-30° C TO + 65° C
MICROPHONE	ELECTRET, PUSH-TO-TALK
INPUT VOLTAGE	9V VDC 12 VDC, EXTERNAL
ANTENNA CONNECTOR	TYPE BNC
METER	LCD DISPLAY, ICONS
WEIGHT	9 oz.

TRANSMITTER

POWER OUTPUT	4.0 W AT 13.8 VDC - HIGH, 1.0 IN LOW
MODULATION	AM
FREQUENCY RESPONSE	300 - 3000 HZ AT -6 DB
OUTPUT IMPEDANCE	50 OHMS, UNBALANCED

RECEIVER

CB	
SENSITIVITY	LESS THAN 1 μ V FOR 10 DB S/N
IF FREQUENCY	DUAL CONVERSION 1 ST - 10.690 MHZ, 2ND - 455 KHZ
AUDIO OUTPUT	500 mW MAXIMUM AT 10 % DISTORTION
FREQUENCY RESPONSE	300 - 3000 HZ AT -6 DB
2ND IF IMAGE REJECTION	GREATER THAN 60 DB
ADJACENT CH. REJECTION	50 DB MIN.
AUTOMATIC NOISE LIMITER	BUILT- IN
FREQUENCY CONTROL	PLL (PHASE LOCK LOOP)

WEATHER

SENSITIVITY	LESS THAN 1 μ V FOR 12 DB SINAD
IF FREQUENCY	DUAL CONVERSION 1st: -10.690 MHZ 2nd: -455 KHZ
AUDIO OUTPUT	MAXIMUM 500 mW AT 10 % DISTORTION
FREQUENCY RESPONSE	300 - 3000 HZ AT -6 DB

Limited Two Year Warranty



Cobra Electronics Corporation

6500 West Cortland Street
Chicago, Illinois 60707
www.cobra.com

COBRA ELECTRONICS CORPORATION warrants that its COBRA CB Radios, and the component parts thereof, will be free of defects in workmanship and materials for period of two (2) years from the date of first consumer purchase. This warranty may be enforced by the first consumer purchaser, provided that the product is utilized within the U.S.A.

COBRA will, without charge, repair or replace, at its option, defective CB radios, products or component parts upon delivery to the COBRA factory Service Department, accompanied by proof of the date of first consumer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges will be at Cobra's expense, if the product is repaired or replaced under warranty.

Exclusions: This limited warranty does not apply; 1) to any product damaged by accident; 2) in the event of misuse or abuse of the product or as a result of unauthorized alterations or repairs; 3) if the serial number has been altered, defaced or removed; 4) if the owner of the product resides outside the U.S.A.

All implied warranties, including warranties of merchantability and fitness for a particular purpose are limited in duration to the length of this warranty. COBRA shall not be liable for any incidental, consequential or other damages; including, without limitation, damages resulting from loss of use or cost of installation.

Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

Optional Accessories



Ear Bud Mic with PTT

Integrated speaker/mic adapter that fits in your ear. Includes shirt clip.
MA-EBM



Vox Mic

VOX (Voice Operated Transmitter) adapter allows you hands-free operation.
MA-VOX



(1) High Performance Ni-CD Rechargeable Battery Cell
212-001-N-001



 
Replacement Belt Clip

HA-BC



120 Volt A/C Wall Charger with Plug

Charges 9 Ni-CD battery cells in 24 hours right in the unit.
CA-45C

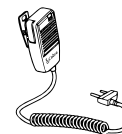


Lapel Microphone

Remote microphone/speaker connection.
CA-40



Long Range Antenna

 Doubles the range of your HH 38 WX ST.
CA-41

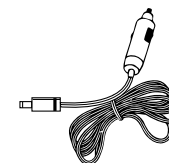

Replacement DC Power Cord

For in vehicle use
420-017-N-001

Magnetic Mount Weather Antenna

Allows greater transmission range while in a moving vehicle.
ATW-400



BNC/SO239 Antenna Adapter

Allows connection of the HH 38 WX ST to standard antennas.
CA-43

You Can Find These Fine Accessories At Your Local Cobra CB Dealer

If you wish, you can order directly from Cobra.

For pricing information
Call 773.889.3087 or visit
www.cobra.com.

Order by phone

Call 773.889.3087

(Press 1 from the main menu)
8 a.m.-6 p.m. M-F CST.

Order by mail or fax

Please fill out order form on next page, and mail/fax directly to Cobra.

Accessory Order Form

Call 773.889.3087 for pricing or visit
www.cobra.com

For credit card orders fill out order form
and fax to: 773.622.2269 or call
773.889.3087 (Press 1 from the main
menu) 8:00 am - 6:00 pm, M-F, CST.

Make check or money order (no stamps)
payable to:
Cobra Accessories Dept.
6500 West Cortland St. Chicago, IL 60707

Shipping & Handling

Amount of Order	Shipping/ Handling
\$25.00 and under	\$4.75 minimum
\$25.01-\$40.00	\$6.95
\$40.01-\$80.00	\$9.00
\$80.01-\$120.00	\$10.00
\$120.01-\$160.00	\$11.50
\$160.01 and up	\$14.25

**For AK, HI and PR please add
an additional \$15.00 for UPS
shipments.**

Item #	Description	Cost Ea.	Qty.	Amount
MA-EBM	Ear Bud Mic			
MA-VOX	Vox Mic			
212-001-N-001	(1) Ni-CD Rechargeable Battery Cell			
HA-BC	Replacement Belt Clip			
CA-45C	120 V A/C Wall Charger with Plug			
CA-40	Lapel Microphone			
CA-41	Long Range Antenna			
ATW-400	Magnetic Mount Weather Antenna			
CA-43	BNC/S0239 Antenna Adapter			
420-017-N-001	Replacement DC Power Cord			

Prices subject to change without notice. Subtotal _____
 Tax Table (Tax if applicable) _____
 Shipping/handling _____
Total _____

Tax Table
 Illinois residents add 8.75%
 Indiana residents add 5%
 Michigan residents add 6%
 Ohio residents add 5%
 Wisconsin residents add 5%

To order online, please visit our website:

www.cobra.com

Click "shop Cobra®"

Please print clearly

Name _____

Address (No P.O. Box) _____

City _____ State _____

Zip _____

Telephone (____) _____

Credit Card No. _____ Exp. Date _____

Customer Signature _____

Circle One: Visa MasterCard Discover

Allow 2 to 3 weeks for delivery. Offer valid in Continental U.S. only.



Cobra Electronics Corporation
6500 West Cortland Street
Chicago, IL 60707 USA

If You Think You Need Service

For technical assistance, please call our Automated Help Desk which can assist you by answering the most frequently asked questions about Cobra products.

(773) 889-3087

24 hours a day, 7 days a week.

**A Consumer Service Representative can be reached through this same number
8:00 am - 6:00 pm, Monday through Friday, CST.**

**Technical assistance is also available on-line in the Frequently Asked Questions (FAQ) section at
www.cobra.com or by e-mail to productinfo@cobra.com**

If you think you need service call 773.889.3087

"If your product should require factory service please call Cobra first before sending your unit in. This will ensure the fastest turn-around time on your repair."

You may be asked to send your unit to the Cobra factory. It will be necessary to furnish the following in order to have the product serviced and returned.

1. For Warranty Repair include some form of proof-of-purchase, such as a mechanical reproduction or carbon or a sales receipt. If you send the original receipt it cannot be returned.
2. Send the entire product.
3. Enclose a description of what is happening with the unit. Include a typed or clearly print name and address of where the unit is to be returned.
4. Pack unit securely to prevent damage in transit. If possible, use the original packing material.
5. Ship prepaid and insured by way of a traceable carrier such as United Parcel Service (UPS) or First Class Mail: to avoid loss in transit to: Cobra Factory Service, Cobra Electronics Corporation, 6500 W. Cortland St., Chicago, IL 60707.
6. If the unit is in warranty, upon receipt of your unit it will either be repaired or exchanged depending on the model. Please allow approximately 3 to 4 weeks before contacting us for status. If the unit is out of warranty a letter will automatically be sent informing you of the repair charge or replacement charge. If you have any questions, please call 773.889.3087 for assistance.