




1. Package Contents

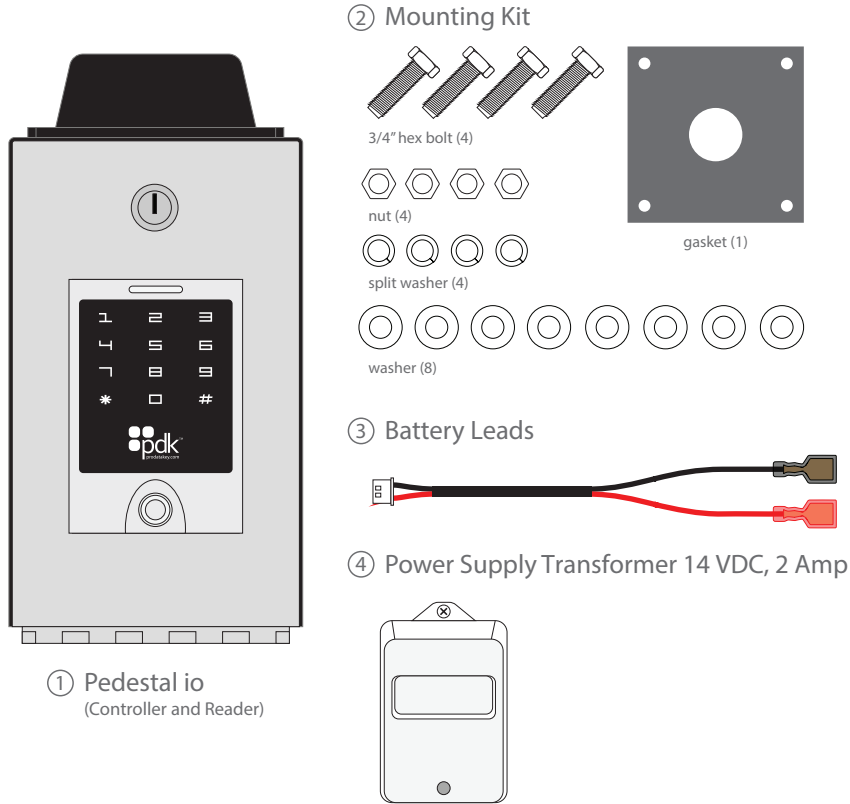


2. Mounting

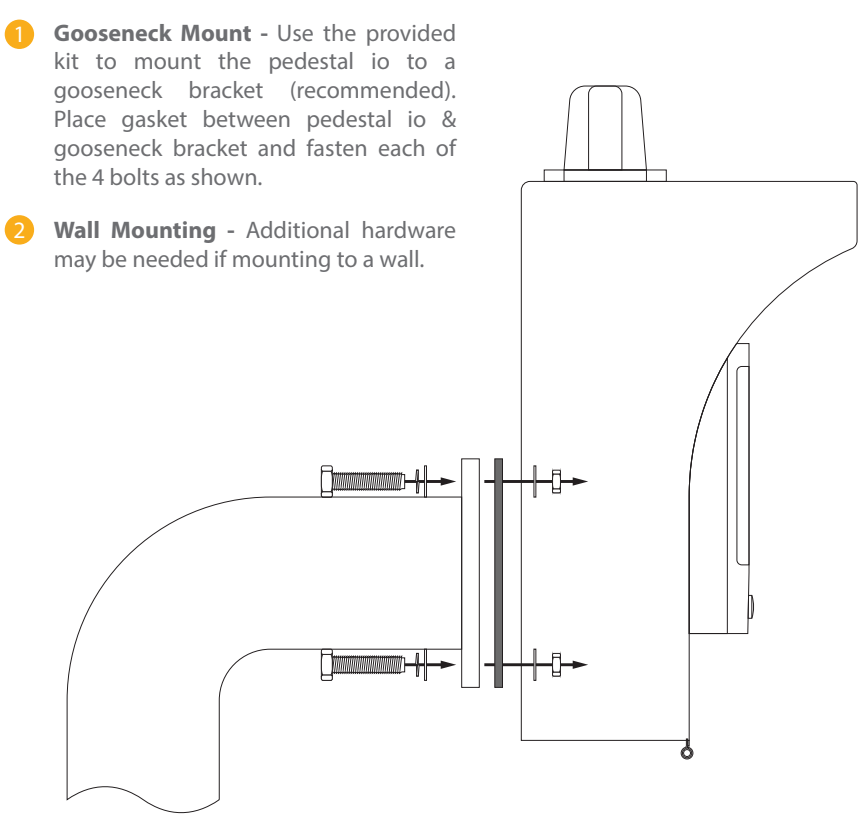


3. Reader

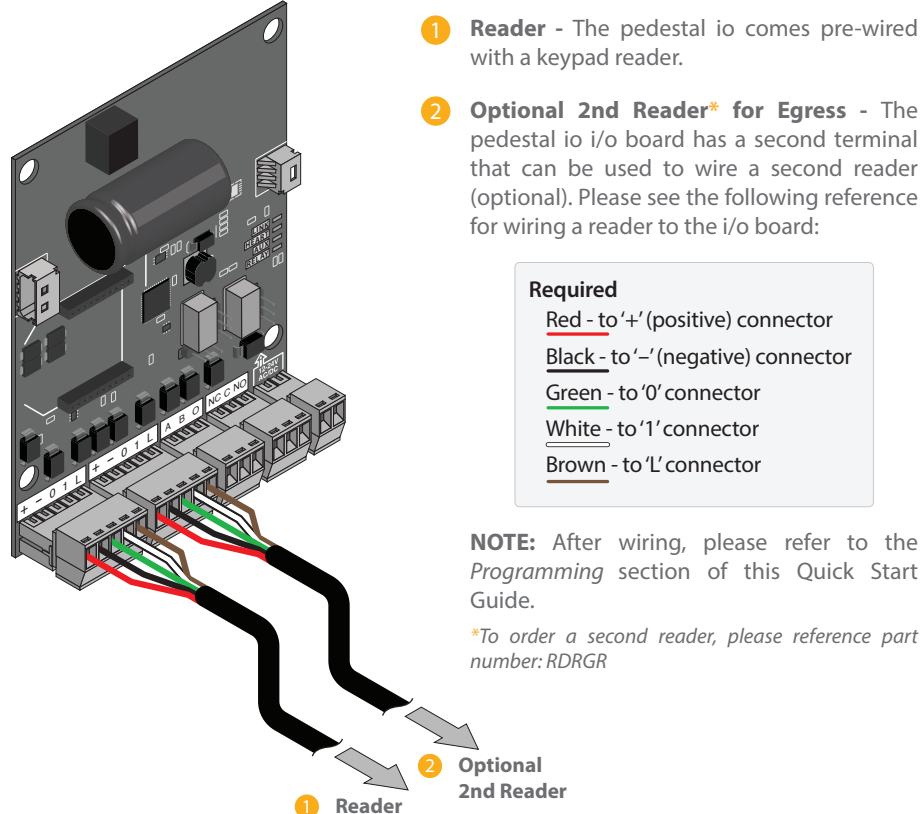


4. Input A / DPS

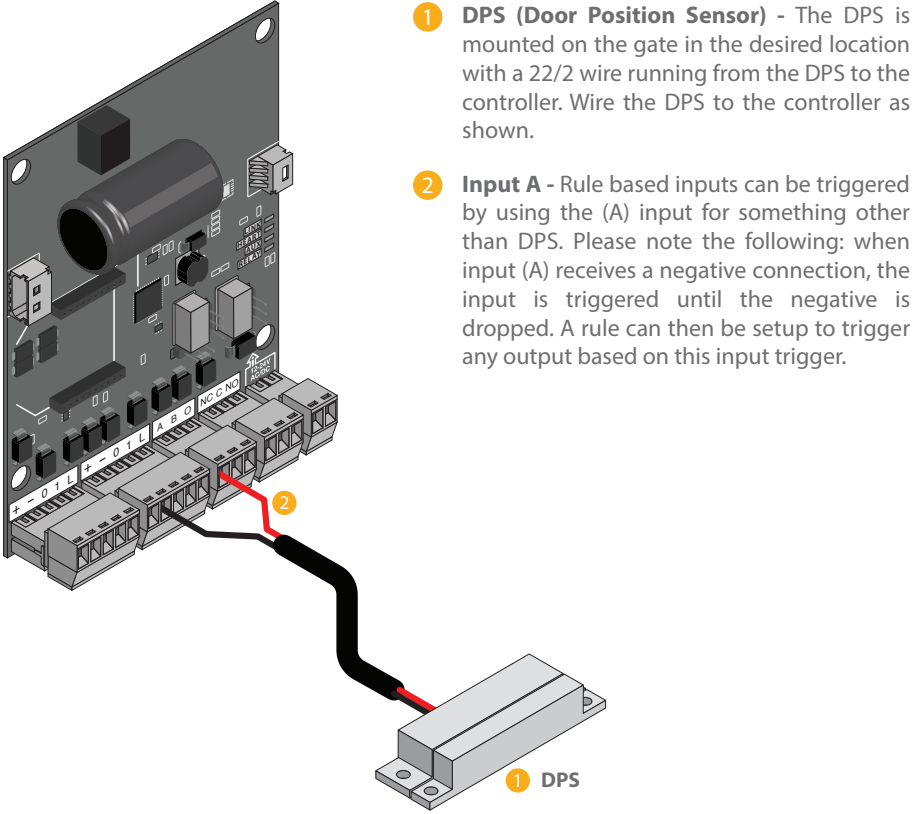


5. Input B/Gate Operator

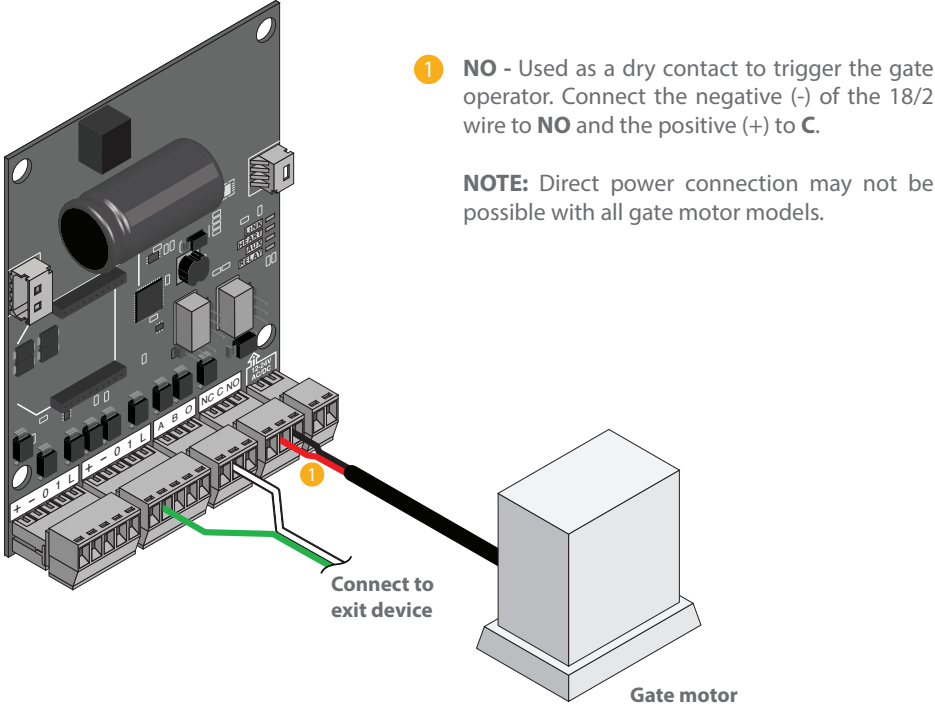


6. Output

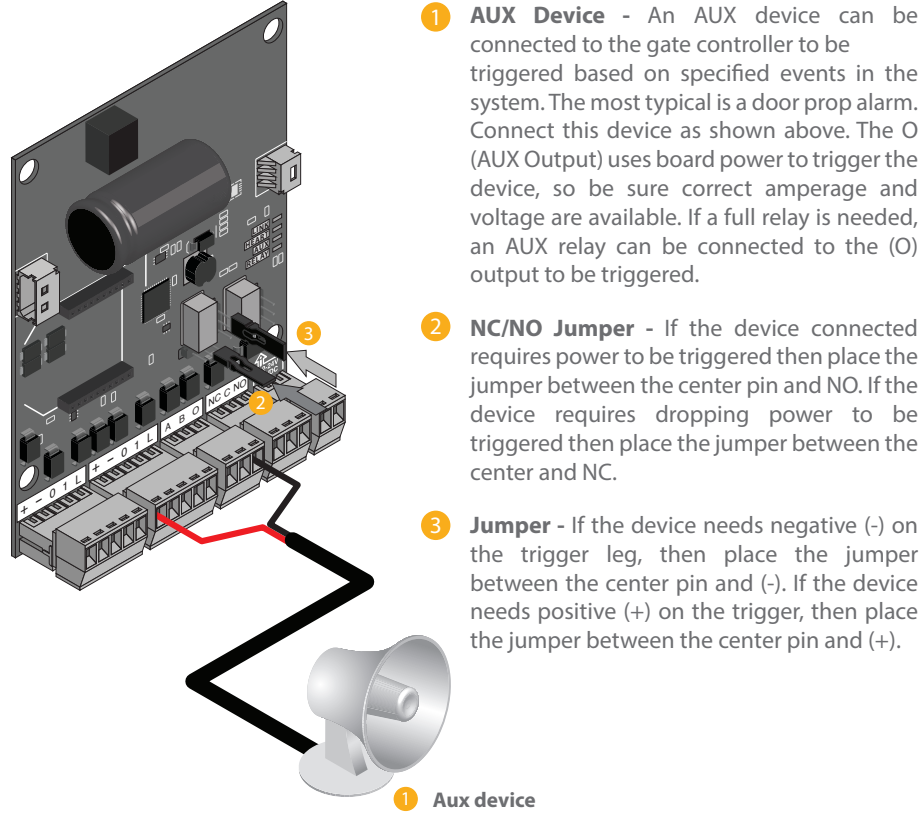


## 7. Maglock/ Exit Device

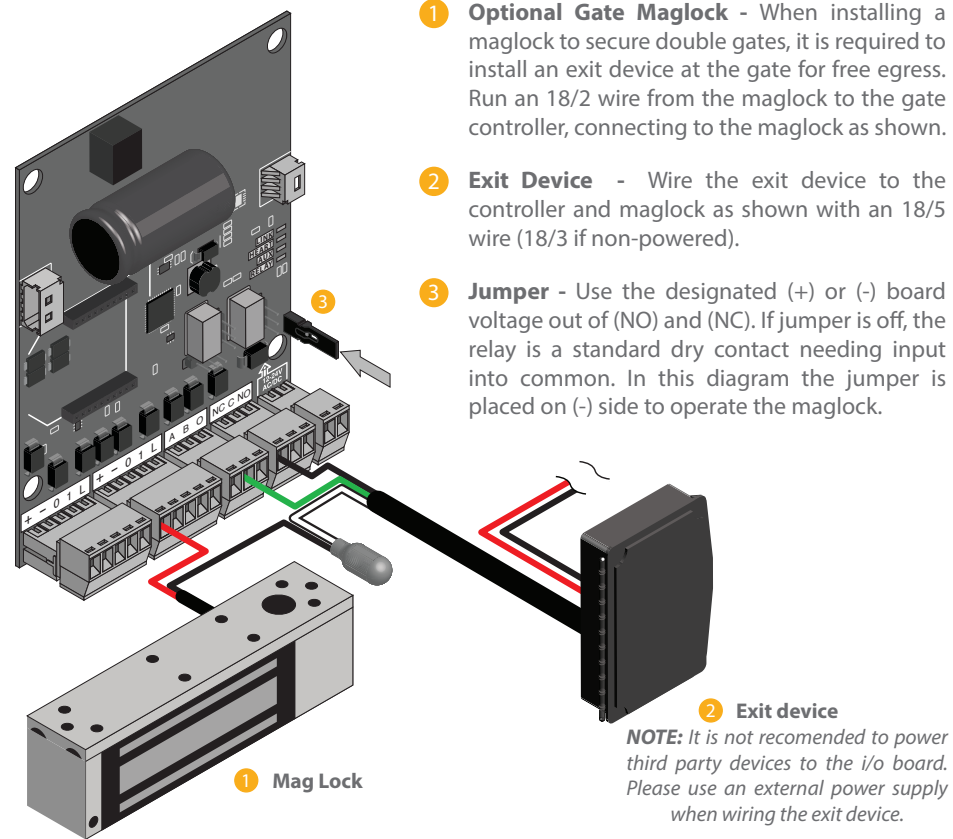

## 8. Communication Connection

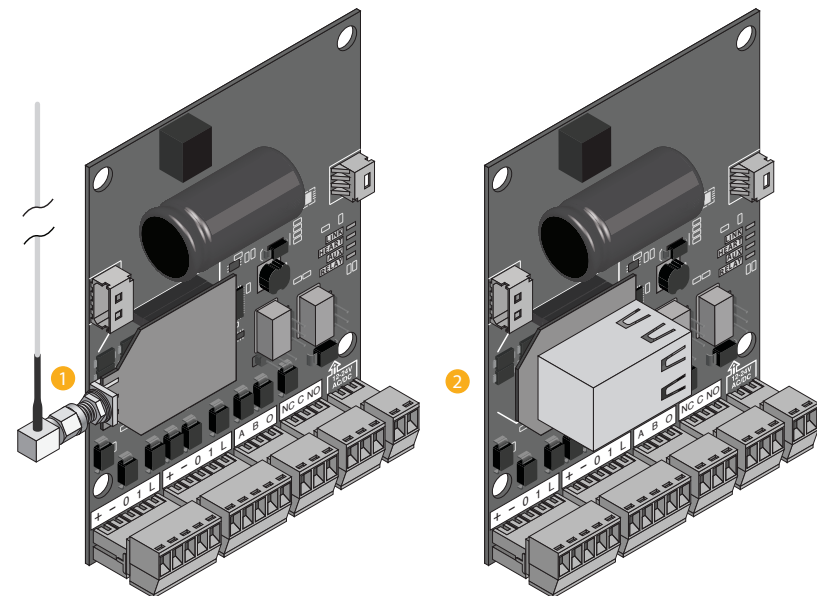

## 9. Power Connection

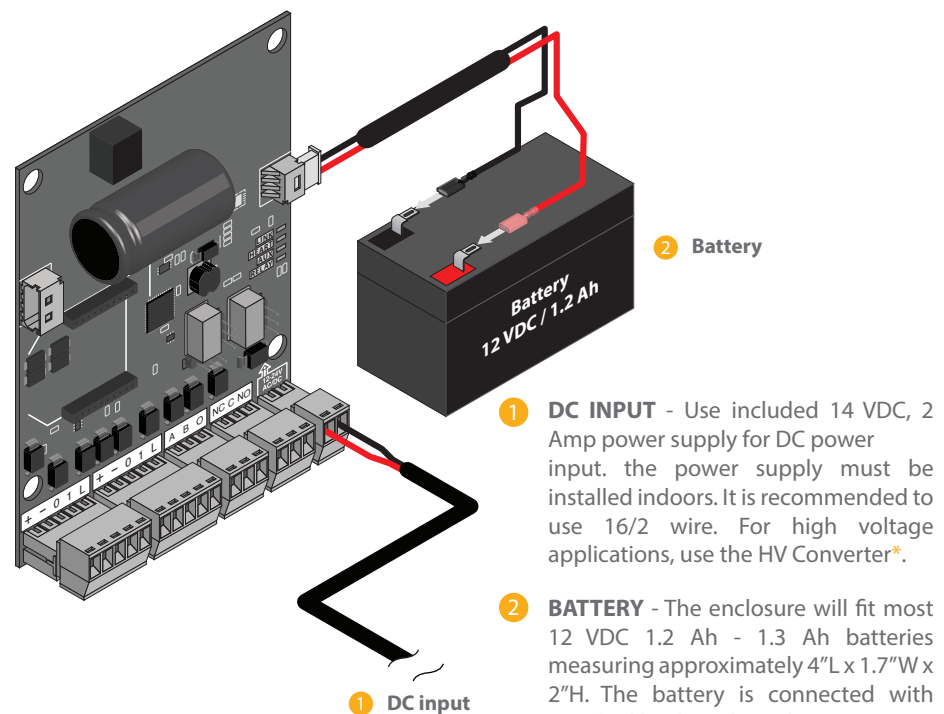

\*To order a High Voltage Converter, please reference part number: HVC

## Reference

**24 VDC Option** - For using the pedestal io gate controller in a 24 VDC application refer to wiring diagrams in the Dealer Portal at [www.prodatakey.com/resources](http://www.prodatakey.com/resources)

**Programming** - After the pedestal io gate controller has been connected back to the cloud node, access the configuration software as instructed in the programming manual. This manual is available for download through the Dealer Portal at [www.prodatakey.com/resources](http://www.prodatakey.com/resources)

**Pedestal io Part Number** - Wireless with Reader: PCW, Ethernet with Reader: PCE, Wireless without Reader: PCWB, Ethernet without Reader: PCEB

**Single-Gang Ruggedized Reader Part Number** - RDRGR

**High Voltage (HV) Converter Part Number** - HVC



**pedestalio**  
Gate Controller and Reader  
Quick Start Guide



**View the user manual here:**  
[prodatakey.zendesk.com](http://prodatakey.zendesk.com)

### Part Numbers:

Wireless with Reader: PCW  
Ethernet with Reader: PCE  
Wireless without Reader: PCWB  
Ethernet without Reader: PCEB

[www.prodatakey.com](http://www.prodatakey.com)  
801.317.8802

Copyright © 2021 ProdataKey Inc. All rights reserved. Pdk, pdk.io, and the ProdataKey logos are trademarks of ProdataKey Inc.

REV 12072021