




Husqvarna®



	Operator's manual دليل المشغل	Ръководство за експлоатация			
EN	Operator's manual	2-10	LV	Lietošanas pamācība	162-170
AR	دليل المشغل	11-18	MS	Panduan Pengguna	171-179
BG	Ръководство за експлоатация	19-29	NL	Gebruiksaanwijzing	180-188
CS	Návod k použití	30-38	NO	Bruksanvisning	189-197
DA	Bruksanvisning	39-47	PL	Instrukcja obsługi	198-208
DE	Bedienungsanweisung	48-59	PT	Manual do utilizador	209-218
EL	Οδηγίες χρήσης	60-70	RO	Instrucțiuni de utilizare	219-228
ES	Manual de usuario	71-79	UK	Посібник користувача	229-239
ET	Kasutusjuhend	80-88	RU	Руководство по эксплуатации	240-251
FI	Käyttöohje	89-97	SK	Navod na obsluhu	252-260
FR	Manuel d'utilisation	98-108	SL	Navodila za uporabo	261-269
HR	Priručnik za korištenje	109-117	SR	Priručnik za rukovaoca	270-278
HU	Használati utasítás	118-126	SV	Bruksanvisning	279-287
IT	Manuale dell'operatore	127-135	TR	Kullanım kılavuzu	288-296
JA	取扱説明書	136-144	VI	Sách hướng dẫn sử dụng	297-304
KO	사용자 설명서	145-152	ZH	操作手册	305-312
LT	Operatoriaus vadovas	153-161			



PRODUCT OVERVIEW

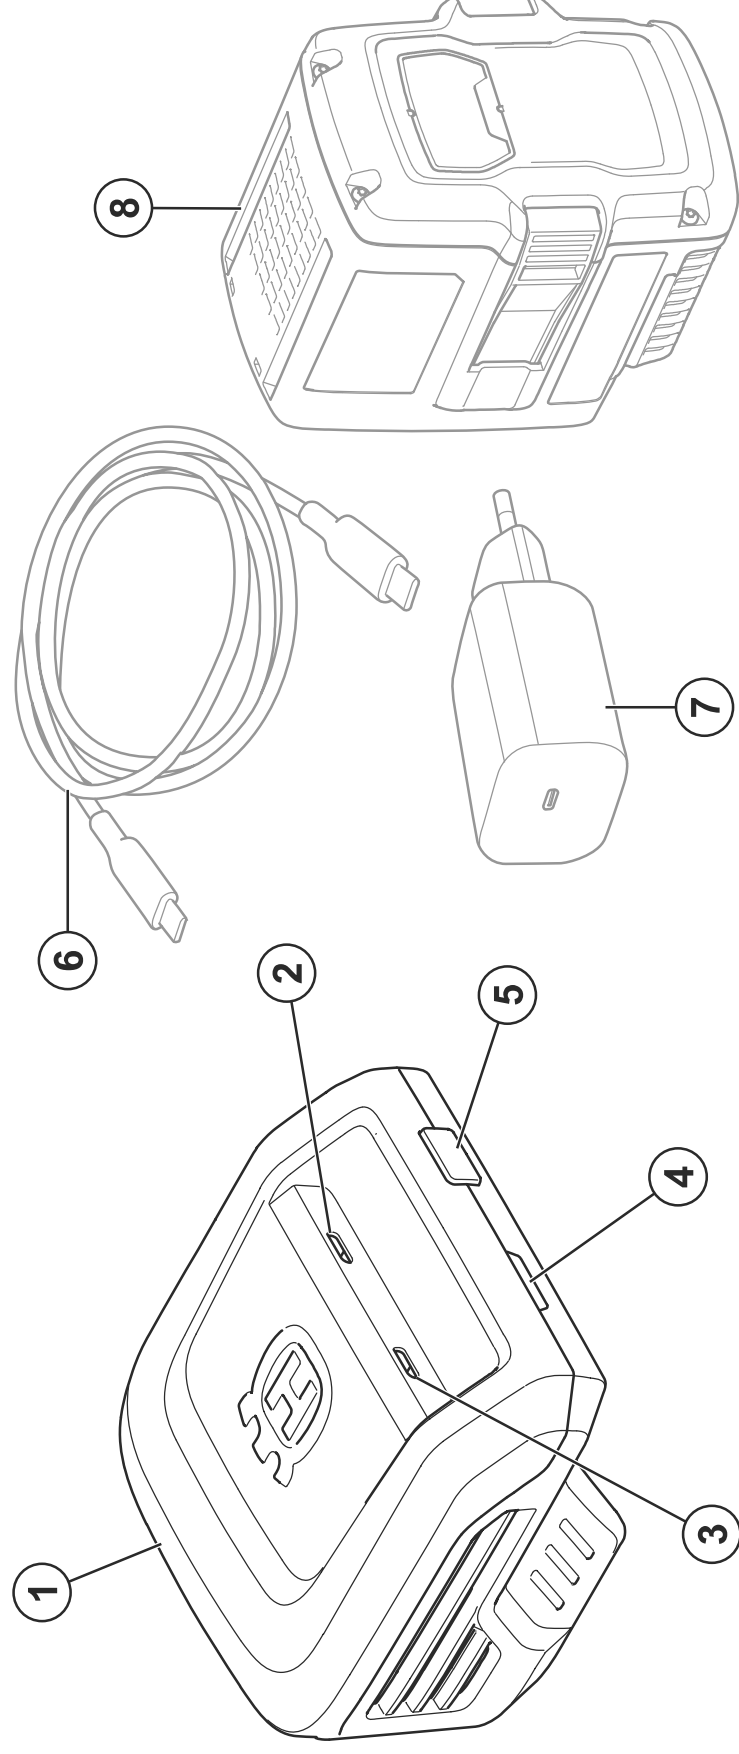

- 1. USB charger
- 2. Bi-directional USB-C PD port, input/output 100W
- 3. Single directional USB-C PD port, output 45W
- 4. Charging and error indicator on the USB charger

- 5. Discharge mode button on the USB charger
- 6. USB cable
- 7. USB power adapter
- 8. Battery

SYMBOLS ON THE PRODUCT



Be careful and use the product correctly. This product can cause serious injury or death to the operator or others.




Read the operator's manual carefully and make sure that you understand the instructions before use.




The product agrees with the applicable EC directives.

This product conforms to the applicable UK regulations.

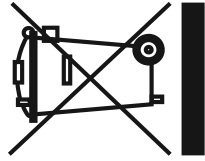

The product or package of the product is not domestic waste. Recycle it at an applicable disposal location for electrical and electronic equipment.

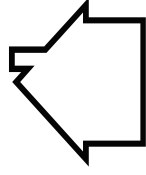

Use and keep the product indoors only.

Note: Other symbols/decals on the product refer to certification requirements for some commercial areas.

SAFETY DEFINITIONS

Warnings, cautions and notes are used to point out specially important parts of the manual.



WARNING: Used if there is a risk of injury or death for the operator or bystanders if the instructions in the manual are not obeyed.



CAUTION: Used if there is a risk of damage to the product, other materials or the adjacent area if the instructions in the manual are not obeyed.

Note: Used to give more information that is necessary in a given situation.

IMPORTANT SAFETY INSTRUCTIONS



WARNING: Read all safety warnings and all instructions. Failure to obey the warnings and instructions may result in electrical shock, fire and/or serious injury.

Note: Save all warnings and instructions.

- Only use the USB charger 40-USB150X with Husqvarna

original batteries. Refer to *TECHNICAL DATA on page 10* for specific batteries.

The batteries are software encrypted.

- Do not use non-rechargeable batteries.
- Do not try to disassemble or repair the USB charger.
- Do not connect the USB charger terminals to metal objects.
- Use an approved USB power adapter that is not damaged.
- Regularly examine that the USB cable is not damaged.

Immediately disconnect the USB charger if the USB cable is damaged.

- If the USB cable is damaged, replace the USB cable.
- Do not lift the USB charger by the USB cable. To disconnect the USB charger from a power outlet, pull out the power plug.
- Keep all cables and extension leads away from water, oil and sharp edges. Make sure that the USB cable is not caught between doors, fences or equivalent.

- Do not clean the battery or the USB charger with water.
- Do not use a damaged USB charger or battery.
- Do not use the USB charger when there is a risk of lightning.
- Only use the USB charger indoors, such as in a residential location, with an environment of good airflow and correct temperature.
- Keep the USB charger away from sunlight. Do not use the USB charger outdoors or in wet conditions.
- Do not operate the USB charger with wet hands.
- Do not use the USB charger near flammable materials or materials that can cause corrosion. Remove the battery from the USB charger, and disconnect the USB cable from the USB charger if there is smoke or fire.
- Do not put a cover on the USB charger during operation.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack

of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

OPERATION

- Use the USB charger only when the ambient temperature is between -10 °C (14 °F) and 40 °C (104 °F).
- The battery does not charge if the battery temperature is more than 50 °C (122 °F).
- The battery does not charge if the battery temperature is less than 0 °C (32 °F).

To charge a Husqvarna BLi-X 36V battery



CAUTION: Make sure that the battery, the USB charger and the terminals on the battery are clean and dry. Do not connect the battery to the USB charger if it is dirty or wet.

1. Connect the USB charger to a USB power adapter with a USB cable. Make sure that the USB cable is connected to the bi-directional port on the USB charger.
2. Connect the power adapter to a power outlet. The charging indicator on the USB charger flashes red 1 time, green 1 time and yellow 1 time.



CAUTION: Only connect the power adapter to a power outlet with the voltage and frequency specified on the rating plate.

3. Connect a battery to the USB charger. When the battery is correctly connected, the charging indicator on the USB charger shows a green light.

Note: The default mode is to charge a Husqvarna BLi-X 36V battery. As a result, it is not necessary to push the discharge mode button on the USB charger to start charging.

4. Push the battery indicator button on the battery for battery charging status. When all charging indicators on the battery are on, the battery is fully charged.

Note: The charging indicator on the charger stays green during the full charging process.

5. Remove the battery from the USB charger and remove the power adapter from the power outlet.

To charge a USB device

1. Use a USB cable to connect your USB device to a port on the USB charger. Output power is available from both USB ports. Choose the power level that is optimal for your device.

2. Connect a battery to the USB charger. Make sure that the battery is fully seated.
3. Push the discharge mode button on the USB charger. The charging indicator on the USB charger shows a green light and the charging of the USB device starts.

Note: The default mode is to charge a Husqvarna BLi-X 36V battery. As a result, it is necessary to push the discharge mode button on the USB charger to start charging your USB device.

When the charging is completed, long press the discharge mode button until the indicator on the USB charger comes off, or remove the battery from the USB charger. This prevents a loss of battery charging level.

TROUBLESHOOTING

Symptoms	Possible faults	Possible procedure
The charging indicator on the USB charger is yellow. The temperature indicator on the battery is on, or the error indicator on the battery flashes.	The battery is too hot or too cold to use or charge.	If the battery is too hot, let the temperature of the battery decrease. If the battery is too cold, move it indoors. When the battery has the correct temperature, it can be used or charged again. Obey the temperature range for operation, refer to <i>OPERATION on page 7</i>. Keep the USB charger away from sunlight. If the problem continues, speak to your dealer.
The charging indicator on the USB charger is yellow. The battery error indicator on the battery is on.	The battery has a critical error.	Speak to your dealer.
The charging indicator on the USB charger is red.	The USB charger has a critical error.	Speak to your dealer.

TRANSPORTATION AND STORAGE

- Safely attach the product during transportation to prevent damage and accidents.
- Disconnect the power plug and remove the battery from the charger.
- Keep the product in a locked area to prevent access for children or persons that are not approved.

- Put the product in a dry, frost-free and clean space with correct temperature.
- Put the product in storage where the temperature is between 5 °C (41 °F) and 25 °C (77 °F). Keep the product away from sunlight.
- Keep the battery away from the USB charger during storage.

DISPOSAL

Husqvarna products are not domestic waste and must only be discarded as given in this manual.

- Obey the local disposal requirements and applicable regulations.
- Recycle the USB charger and package at an applicable disposal location.
- Speak to your local Husqvarna dealer for more information on how to recycle and discard the battery.

TECHNICAL DATA

For technical data, refer to the rating plate of the USB charger.

Approved batteries for the USB charger:

	40-B140X	40-B220X	40-B330X	40-B540X
Capacity, Ah	4	6	9	15