




Logitech Harmony Smart Control Remote Buttons Replacement

This guide will show an easy way to replace the buttons on your harmony remote.

Written By: Josh Hendricks

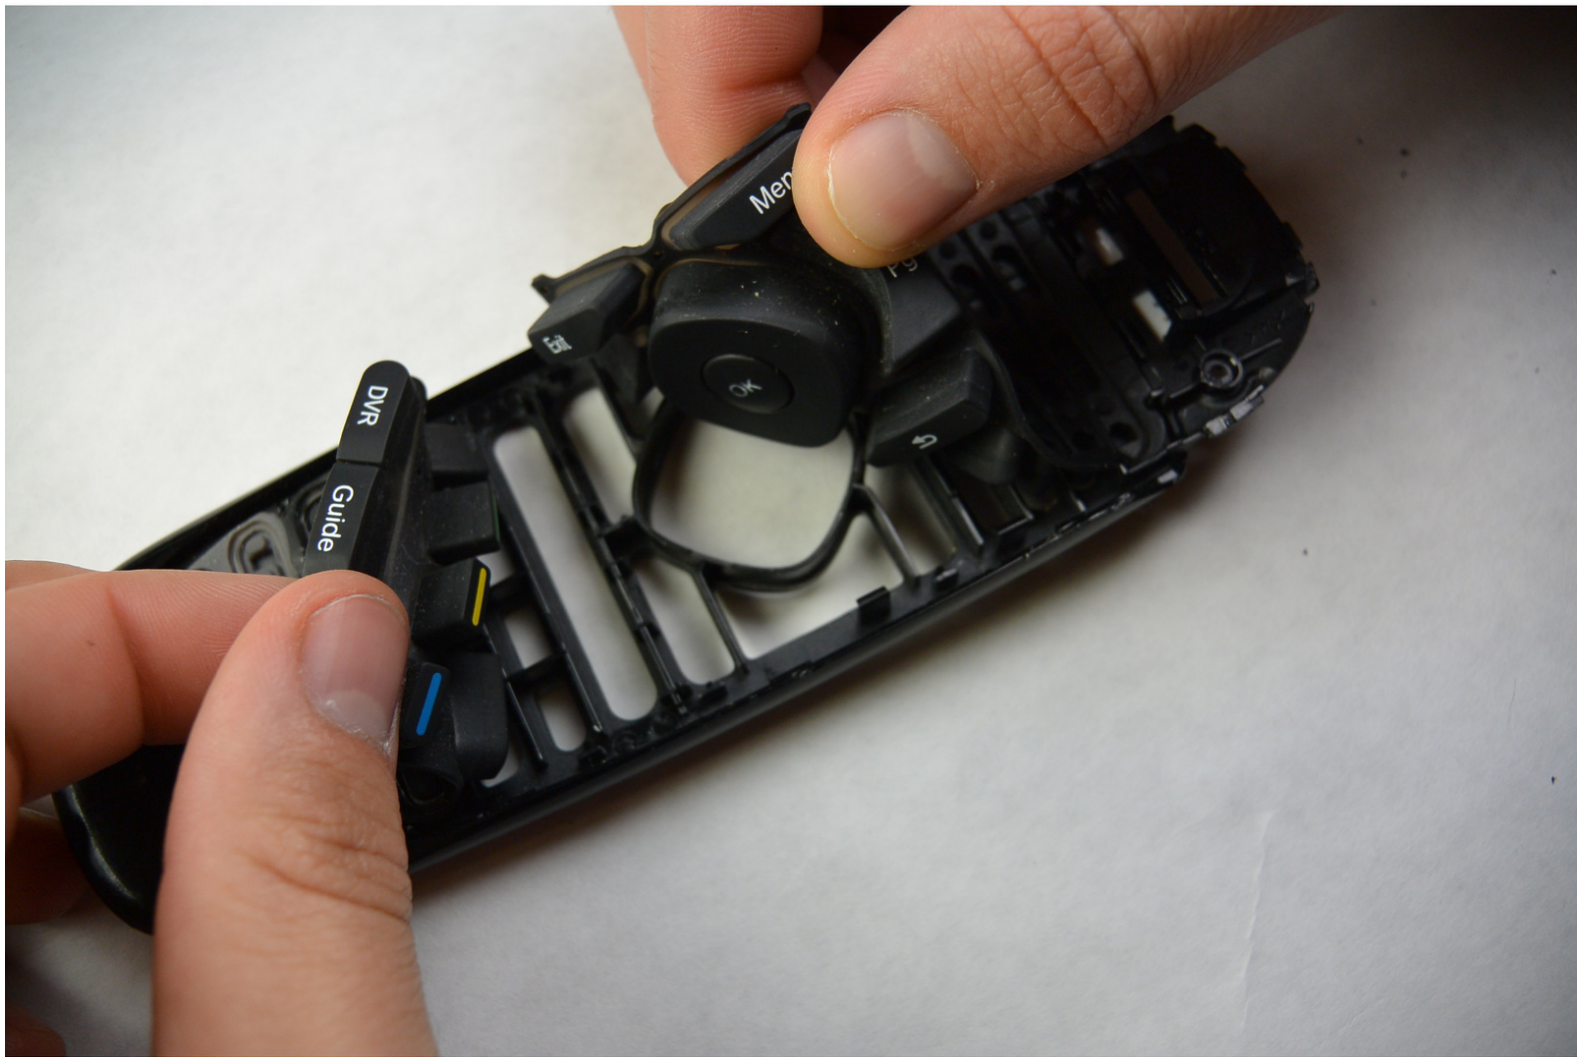



TOOLS:


- [Metal Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Remote Buttons




- With both thumbs, slide the grooved cover off the end of the remote.
- Remove the battery once cover is removed.

Step 2

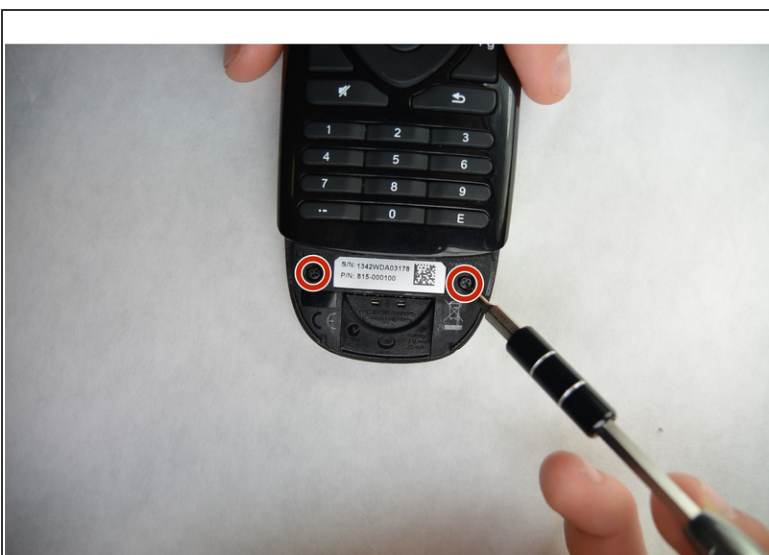




- With the PH00 bit, remove both of the 4mm Phillip screws on the remote.

Step 3

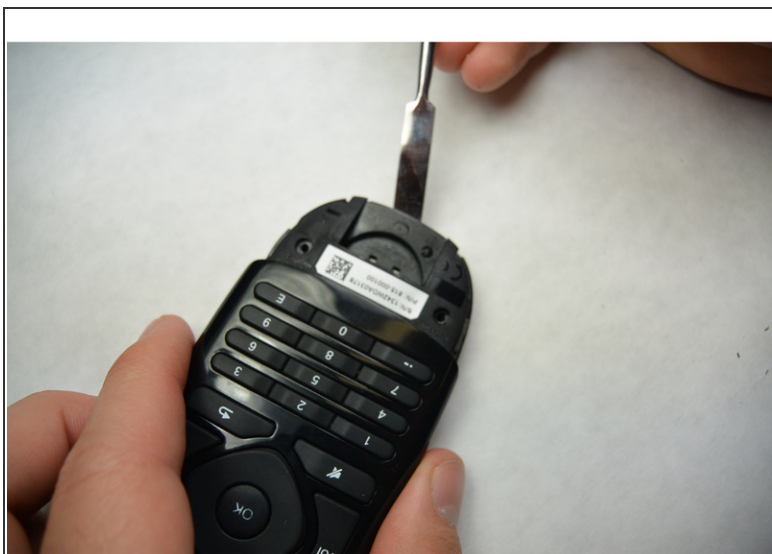


- Using a metal spudger, pry the remote. Maneuver around to separate both sides.

Step 4

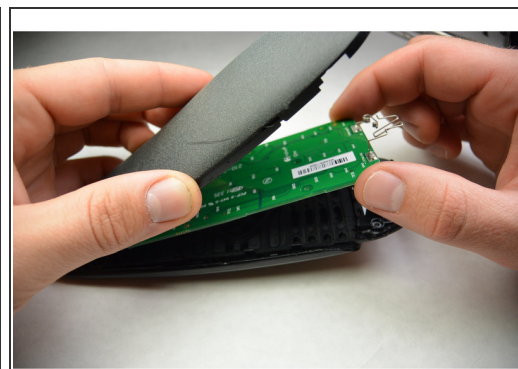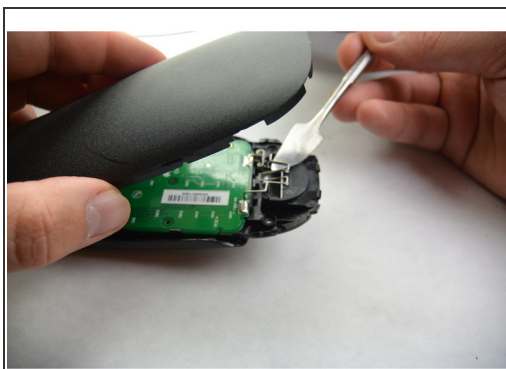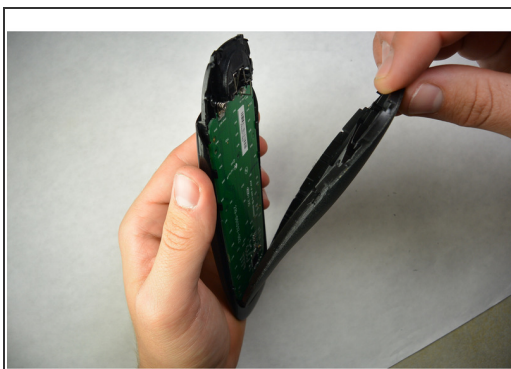

- Manually separate the two pieces of plastic.
- Using the metal piece from the housing, pry up the circuit board. Do not disconnect anything.
- When the circuit board is pried, slide the circuit board out of the housing.

Step 5

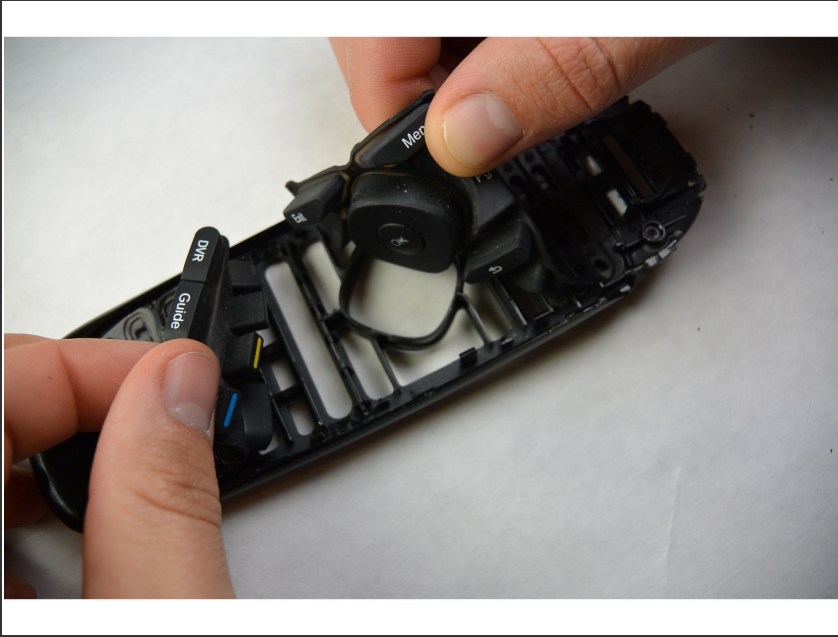

- From the front of the remote, remove the buttons. Clean or replace the necessary buttons.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-08 04:28:47 AM.