

MEGA CASA
by WHALL

4 Slice Stainless Steel Toaster



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

1. READ AND SAVE ALL INSTRUCTIONS.

2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cords or plugs in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or after it has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments is not recommended by the appliance manufacturer and may cause injuries.
8. Do not use outdoors.
9. Do not let the cord touch hot surfaces or allow it to hang over the edge of a table or counter.
10. Do not place on or near a heated oven or a hot gas or electric burner.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to OFF, then remove the plug from the wall outlet.
13. Do not use appliance for any use other than its intended use.
14. Oversize foods, metal foil packages, or utensils must not be inserted into the toaster as they may involve a risk of fire or electric shock.
15. A fire may occur if toaster slots are covered or are touching flammable material, including curtains, draperies, and walls when in operation.
16. Do not attempt to dislodge food when toaster is plugged in.
17. The appliance is exclusive for the use which has been expressed by the manufacturer. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper, or irresponsible use or for repairs made to the product by unauthorized personnel.
18. After having removed the appliance from the packaging, make sure that the product is complete and in perfect condition.
19. The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard. In order to remove the dust that may have accumulated on the appliance, simply dust it off with a soft cloth.
20. Before inserting the plug into the electrical outlet, make certain that the voltage of the outlet corresponds to the value indicated on the information label that is attached to the appliance.
21. The use of an extension cord is not recommended, as overheating of the extension cord may occur during operation of the toaster.
22. When the appliance is plugged into the electrical outlet or while it is turned on, never place hands in the bread toasting slots. Do not touch the appliance with wet or damp hands.
23. The metal sides of the toaster and the areas surrounding the bread slots become very hot during use. Operating the appliance should be carried out using only the plastic dials and handles.
24. Bread is a food which may catch fire. Do not use this appliance under or next to curtains or other combustible material.
25. Never re-toast the same piece of bread at the same setting. If you wish to re-toast the bread, set the toasting control dial to a lower setting and do not leave the toaster

- unattended. Failure to do so may result in a fire hazard.
26. Do not cover the appliance while it is in use.
 27. Unplug the appliance from the electrical outlet when it is not in use.
 28. Do not unplug the appliance from the outlet by pulling on the cord.
 29. Do not leave the appliance exposed to the elements (rain, direct sunlight, frost, etc.).
 30. Before doing any cleaning or operation, unplug the appliance from the electrical outlet.
 31. Do not immerse the appliance, the plug, or the electrical cord in water.

SAVE THESE INSTRUCTION

List of Main Parts

1. Self-Adjusting Bread Carriage	6. Cancel Function
2. Wide Bread Slot	7. Bagel Function
3. Pull out Crumb Tray	8. Defrost Function
4. Bread Carriage Lever	
5. Light / Dark Selector (1-6)	

Technical Specifications

Model Number	KST023GU
Rating Voltage	120V~ 60Hz
Nominal power	1500W

Contents of Packaging

1. Toaster
2. Instruction Manual

Toasting Time

! This product is designed to bake multiple slices of bread at the same time, if you only bake a piece of bread, please use first level to avoid burned

Toasting Time (±10S) Toasting Mode	Setting 1	Setting 2	Setting 3	Setting 4	Setting 5	Setting 6
Regular Toasting	90S	150S	190S	230S	280S	320S
Bagel	90S	150S	190S	230S	280S	320S
Defrost	99S	165S	209S	253S	308S	352S

Before First Use

The first time you use the toaster, you should do so without bread. This will pre-heat the new element and burn off any dust collected during the storage process. If your toaster is not plugged in and switched on, the control lever will not lock in the down position.

1. Make sure the crumb tray is in place and the bread carriage is in the up position.
2. Set up toaster on a flat, firm countertop surface away from the edge and at least 3 inches away from the wall or rear of counter.
3. Unwind power cord and plug power cord into nearby outlet.
4. Insert slices of bread. Be sure the bread carriage lever is in the UP position.
5. Press the bread carriage lever down until it locks into position.
6. When the toasting cycle is completed, the toast is automatically ejected up. To terminate the toasting cycle before it is completed, simply press the cancel button.
7. After use, unplug the toaster from the electrical outlet.

WARNING: NEVER IMMERSE THE TOASTER IN WATER OR ANY OTHER LIQUIDS.

HOW TO USE

1. Plug into suitable power outlet and turn power on.
2. To set the toasting level, turn the selector clockwise from the lightest level (1) to the darkest (6). If you are not sure, start with a lower level.
3. Insert one slice of bread per toasting slot and lower the slot with the lever until it snaps into place.
4. The toaster will start to toast and will switch automatically at the end. The slide pops up automatically.
5. Allow the unit to cool down before you put it away.

To use the special functions, press the relevant button (DEFROST, BAGEL) after lowering the lever. The corresponding LED signals its activation.

DEFROST: To defrost and to complete the toasting of deep-frozen bread.

BAGEL: For toasting one side of a bagel or hamburger bun half. In this case, only the toaster's outer heating coils are active. The inner coils remain cold. The side of the bagel or hamburger bun to be toasted must face the outer part of the toaster.

CANCEL: To stop the toasting procedure.

TOASTING NOTES

Toasting is a combination of cooking and drying the bread. Moisture levels differ between one bread and another, which can result in varying toasting times.

- Thickly cut pieces of bread will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur.
- Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins from the surface of the bread before placing into the toaster. This will help prevent pieces from falling into the toaster or sticking on the guard wire in the slot.
- Before toasting bagels, slice each bagel into two equal halves.
- Single slice toasting: When you are toasting as a single slice of bread, set the light/dark selector lighter than normal. The toaster is designed to heat the whole toasting chamber for two slices. By lowering the heat for a single slice, you will not over toast.
- Pastries: Exercise caution when toasting pastries. The filling can become quite hot long before the surface of the pastry becomes brown.
- When the cycle is complete, the bread carriage will raise the toast up. To terminate the toasting cycle before it is completed, simply press the cancel button.

Crumb Tray

The crumb tray should be emptied regularly as a build-up of crumbs could be a potential fire hazard. After toasting, let the toaster cool down thoroughly, then slide out the crumb tray and empty.

Note:

The toasting slots allow you to use a variety of different bread widths, as well as muffins, tea cakes, crumpets, and bagels. However, you should not force items into the slots if they are clearly too large. If an item does become jammed, switch toaster off and unplug from outlet immediately. Once cooled, turn toaster upside down and gently shake to remove the lodged item. Do not insert sharp objects such as knives, as this may damage the heating element.

Maintenance

CAUTION:

Always be sure that the appliance is switched OFF before cleaning or attempting to store the item.

Never immerse the appliance in water or running water.

CLEANING

1. Always unplug the toaster from the electrical outlet and allow to cool before cleaning.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleaning agent to cloth, not directly onto the toaster.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and shake gently. Never insert any hard or sharp instrument into the slots, as this could damage the toaster and cause a safety hazard.

Never wrap the cord around the sides of the toaster. Use the cord storage cleats on the underside of the toaster.

DO NOT use metal polish.

DO NOT use abrasive powders, hard abrasive scourer, or wire wool.

DO NOT immerse the toaster in water or any other liquid.

DO NOT use any sharp or pointed articles for cleaning the inside as this will damage the heating element.

NEVER put metal objects or your fingers into the toasting slots. If an item does become jammed, switch toaster off and unplug from outlet immediately. Once cooled, turn the toaster upside down and gently shake to remove the lodged item

CAUTION:

1. Do not touch hot surfaces. Use handles or knobs. **Surfaces on the top of the toaster become extremely hot.**
2. To prevent against electrical hazards, do not immerse cord, plug or toaster in water or any other liquid. See instructions for cleaning.
3. Close supervision is necessary when any appliance is used by or near children.
4. Always unplug appliance from outlet when not in use and before cleaning. Allow to cool before cleaning and handling.

STORING

Allow the appliance to cool completely before storing. Store the appliance in a dry location. Do not place any heavy items on top of appliance during storage as this may result in possible damage of appliance.

Troubleshooting

- To remove smaller items such as muffins, crumpets, and bagels, the control lever (1) can be lifted approximately 1/2 inch above the starting position.
- To achieve even browning, we suggest a minimum of 10 seconds between each toasting to allow the control to automatically reset.
- For best results, use bread slices of even thickness, size, and freshness. Select a lower setting:
 - a. If using stale bread (toasts more quickly than fresh bread)
 - b. If using thin bread (toasts more quickly than thick bread)

Disposal Information



Electrical waste products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice

Email :home_aftersale@outlook.com