


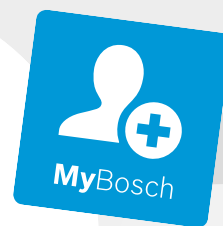

Register your
new device on
MyBosch now and
get free benefits:
**[bosch-home.com/
welcome](https://bosch-home.com/welcome)**



Extractor hood

DWK68IJ60I
DWB98IJ60I

DWK98IJ60I

DWA68IJ60I

DWA98IJ60I

DWB68IJ60I

[en] User manual and installation instructions

Table of contents

INFORMATION FOR USE

1	Safety	2
2	Avoiding material damage.....	4
3	Environmental protection and saving energy	4
4	Operating modes	4
5	Familiarising yourself with your appliance	6
6	Before using for the first time	6
7	Basic operation	6
8	Cleaning and servicing	7
9	Troubleshooting	9
10	Disposal.....	9
11	Accessories.....	10
12	Customer Service.....	11
13	Technical specifications.....	11
14	INSTALLATION INSTRUCTIONS	12
14.4	Secure installation	15
15	WARRANTY TERMS AND CONDITIONS.....	19

1 Safety

Observe the following safety instructions.

1.1 General information

- Read this instruction manual carefully.
- Keep the instruction manual and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

1.2 Intended use

This appliance is designed only to be built into kitchen units. Read the special installation instructions.

The appliance can only be used safely if it is correctly installed according to the safety instructions. The installer is responsible for ensuring that the appliance works perfectly at its installation location.

Only use this appliance:

- For extracting cooking vapour.
- in private households and in enclosed spaces in a domestic environment.

- up to an altitude of max. 2000 m above sea level.

Do not use the appliance:

- With an external timer.

1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance.

Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised.

Keep children under the age of 8 years away from the appliance and power cable.

1.4 Safe use

WARNING – Risk of fire!

Fatty deposits may catch fire.

- ▶ Do not flambé under the extractor hood.
- ▶ Do not install the appliance near a solid fuel heating appliance (e.g. wood- or coal-burning) unless the heating appliance has a sealed, non-removable cover. There must be no flying sparks.

Hot oil and fat ignites very quickly.

- ▶ Always supervise hot oil and fat.
- ▶ Never extinguish burning oil or fat with water. Switch off the hotplate. Extinguish flames carefully using a lid, fire blanket or something similar and leave to cool down.

WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.


- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

⚠ WARNING – Risk of poisoning!

Risk of poisoning from flue gases being drawn back in. Room-air-dependent heat-producing appliances (e.g. gas, oil, wood or coal-operated heaters, continuous flow heaters or water heaters) obtain combustion air from the room in which they are installed and discharge the exhaust gases into the open through an exhaust gas system (e.g. a chimney). With the extractor hood switched on, air is extracted from the kitchen and the adjacent rooms. Without an adequate supply of air, the air pressure falls below atmospheric pressure. Toxic gases from the chimney or the extraction shaft are sucked back into the living space.

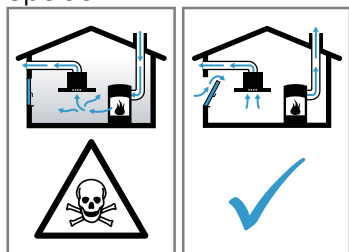

- ▶ Always ensure adequate fresh air in the room if the appliance is being operated in exhaust air mode at the same time as a room-air-dependent heat-producing appliance is being operated.
- ▶ It is only possible to safely operate the appliance if the pressure in the room in which the heating appliance is installed does not fall below 4 Pa (0.04 mbar). This can be achieved whenever the air needed for combustion is able to enter through openings that cannot be sealed, for example in doors, windows, incoming/exhaust air wall boxes or by other technical means. An incoming/exhaust air wall box alone is not sufficient to ensure compliance with the limit.
- ▶ In any case, consult your responsible chimney sweep. They are able to assess the house's entire ventilation setup and will suggest the suitable ventilation measures to you.
- ▶ Unrestricted operation is possible if the appliance is operated exclusively in circulating-air mode.

Using a gas cooking appliance leads to a build-up of heat, moisture and combustion products in the room where the appliance is installed.

- ▶ Switch on the extractor hood when using a gas cooking appliance.

⚠ WARNING – Risk of burns!

The accessible parts of the appliance become hot during operation.

- ▶ Never touch these hot parts.
 - ▶ Keep children at a safe distance.
- The appliance becomes hot during operation.
- ▶ Allow the appliance to cool down before cleaning.

⚠ WARNING – Risk of injury!

Components inside the appliance may have sharp edges.

- ▶ Carefully clean the appliance interior. Items placed on the appliance may fall off. Changes to the electrical or mechanical assembly are dangerous and may lead to malfunctions.

- ▶ Do not make any changes to the electrical or mechanical assembly.

The light emitted by LED lights is very dazzling, and can damage the eyes (risk group 1).

- ▶ Do not look directly into the switched-on LED lights for longer than 100 seconds. Improper repairs are dangerous.
- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use original parts supplied by the manufacturer for repairs to the appliance.
- ▶ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

⚠ WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

Penetrating moisture may cause an electric shock.

- ▶ Do not use wet sponge cloths.

⚠ WARNING – Risk of explosion!

Highly caustic alkaline or highly acidic cleaning agents in conjunction with aluminium parts in the interior of the appliance may cause explosions.

- ▶ Never use highly caustic alkaline or highly acidic cleaning agents. In particular, do not use commercial or industrial cleaning agents in conjunction with aluminium parts.

2 Avoiding material damage

ATTENTION!

Condensate may cause corrosion damage.

- ▶ To prevent condensation from building up, switch on the appliance during cooking.

If moisture gets into the controls, this may result in damage.

- ▶ Never clean controls with a wet cloth.

Incorrect cleaning damages the surfaces.

- ▶ Follow the cleaning instructions.
- ▶ Do not use harsh or abrasive detergents.
- ▶ Never clean controls with stainless steel cleaners.

Condensation that flows back in may damage the appliance.

- ▶ To prevent condensate from returning, fit the exhaust air pipe with a 1° gradient from the appliance.

If you put incorrect stress on the design elements, they may break off.

- ▶ Do not pull design elements.
- ▶ Do not place objects on the design elements or

If one lamp is defective, this may overload the remaining lamps.

- ▶ Replace any defective lamps.

Painted surfaces may get damaged due to improper cleaning.

- ▶ Follow the cleaning instructions.
→ "Cleaning the appliance", Page 8
- ▶ Ensure that the painted surfaces are not scratched.

3 Environmental protection and saving energy

3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

3.2 Saving energy

If you follow these instructions, your appliance will use less power.

Adjust the fan speed to the amount of steam produced during cooking.

- The lower the fan speed, the less energy is consumed.

If cooking produces large amounts of steam or fumes, select a higher fan speed in good time.

- The odours are distributed around the room less.

Switch off the lighting if it is no longer required.

- When the lighting is switched off, it does not consume any energy.

If  **Auto Clean** glows continuously, carry out self-cleaning. The auto clean function is retained.

Put the cooking lid on.

- The cooking vapours and condensation are reduced.

Only use the additional functions if required.

- Switching off additional functions reduces power consumption.

4 Operating modes

4.1 Air extraction mode

The air which is drawn in is conveyed to the exterior by a pipe system.




The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.

- If the exhaust air is to be conveyed into a non-functioning smoke or exhaust gas flue, you must obtain the consent of the heating engineer responsible.
 - If the exhaust air is conveyed through the external wall, a telescopic duct should be used.
-

5 Familiarising yourself with your appliance

5.1 Control elements

You can use the controls to configure all functions of your appliance and to obtain information about the operating status.

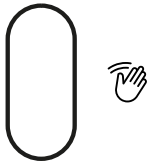						
Boil	Cook	Fry	Light	Auto Clean	Power	

 Boil	Switches on fan setting 1
 Cook	Switches on fan setting 2
 Fry	Switches on fan setting 3

 Light	Switching the lighting on or off
 Auto Clean	Self-cleaning required Start self-cleaning
 Power	Switches the appliance on or off

6 Before using for the first time

Clean the appliance and individual parts.

6.1 Note the following

Before first use:

- Make sure the grid and oil collector of the extractor hood are already correctly installed.

In use:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and

knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Do not drag the wire to remove the electric plug.
- Never insert or remove the electric plug with wet hands.
- Cleaning and user maintenance shall not be made by children without supervision.
- Caution: Accessible parts may become hot when used with cooking appliances.

After use:

- If the extractor hood is put aside for a long time, remove the electric plug.

7 Basic operation

7.1 Switching on the appliance

- Press  **Power**.

Note: When using an inclined model with flap: The flap opens when the appliance is switched on. Keep a safe distance from the flap while opening.

7.2 Switching off the appliance

- Press  **Power**.

- If a fan stage is active, the delayed fan run-on is activated.
- During fan run-on, the  symbol flashes and the appliance switches off automatically after approx. 3 minutes.
- The light switches off at the same time as the appliance.

- To switch off the appliance immediately, press  **Power** again during the fan run-on period.

Note: When using an inclined model with flap: The flap closes when the appliance is switched off. Keep a safe distance from the flap while closing.


7.3 Selecting a fan setting

- Press  **Boil**,  **Cook** or  **Fry** to set a fan setting. The fan switches off when you press the same button again. The appliance remains switched on.

7.4 Gesture control

The appliance features gesture control, which enables touch-free operation.

1. To switch on the appliance, move your hand from left to right at a distance of 100–150 mm in front of the control panel.

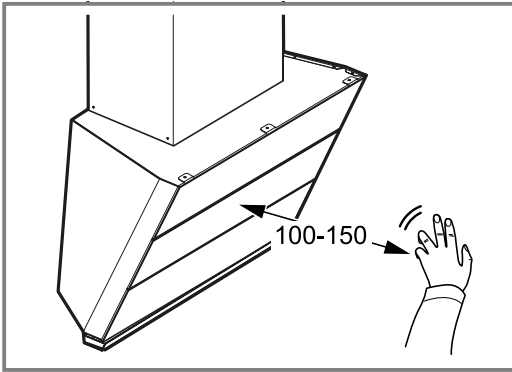

- ✓ The appliance starts at fan setting 1 and the lighting switches on.
- 2. To increase the fan setting, move your hand in front of the control panel again from left to right. At fan setting 3, the appliance switches back to fan setting 1.
- 3. Move your hand in front of the control panel from right to left to activate the delayed fan run-on.

- ✓ During fan run-on, the ① symbol flashes and the appliance switches off automatically after approx. 3 minutes.
- ✓ The light switches off at the same time as the appliance.
- 4. Move your hand in front of the control panel from right to left again during fan run-on to switch off the appliance immediately.

7.5 Lighting

Switching the lighting on and off

The lighting can be switched on and off independently of the ventilation system.

1. Press **Light**: The lighting is switched on.
2. Press **Light** a second time: The lighting switches to dimming mode.
3. Press **Light** a third time: The lighting is switched off.

Switching off the lighting

- ▶ Press **Light**.

8 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

8.1 Cleaning interval

Oily or greasy deposits may catch fire.

1. Clean the inlet grid and oil collector once in 2 weeks.
2. Perform the self-cleaning function on regular interval when **Auto Clean** glows continuously.

8.2 Emptying the oil collection container

Note: The oil collection container must be emptied when it is two-thirds full.

WARNING – Risk of burns!

The accessible parts may become hot when used with cooking appliances.


- ▶ Never touch these hot parts.
- ▶ Keep children at a safe distance.

The appliance becomes hot during operation.

- ▶ Allow the appliance to cool down before cleaning.

1. Remove the oil collection container from underneath the appliance.

2. After emptying, push the oil collection container completely back onto the holders on the left and right of the appliance.

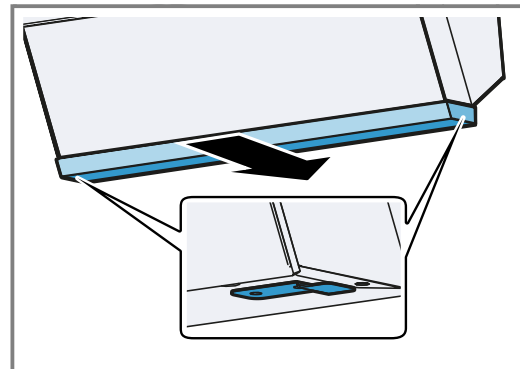

8.3 Auto Clean

Note: If **Auto Clean** glows continuously, it is necessary to run the appliance's self-cleaning function.

1. Switch off all appliance functions except for the lighting.
 2. Before carrying out self-cleaning, empty the oil collecting container and remove any dirt from the appliance.
 3. Press and hold **Auto Clean** for approx. 3 seconds to start self-cleaning.
- ✓ The appliance heats up and the grease residues dry in the oil collecting container.
 - ✓ During self-cleaning, the auto clean icon in the appliance display will blink throughout the cycle. Appliance functions other than lighting cannot be used during self-cleaning.
 - ✓ Do not leave the appliance unattended during self-cleaning.
 - ✓ Self-cleaning lasts approx. 9 minutes and ends automatically.

4. To interrupt self-cleaning, press and hold  **Auto Clean** again for approx. 3 seconds.
5. After self-cleaning, allow the appliance to cool down and empty the oil collecting container.

8.4 Cleaning the appliance

Clean the appliance as specified. This will ensure that the different parts and surfaces of the appliance are not damaged by incorrect cleaning or unsuitable cleaning products.

WARNING – Risk of explosion!

Highly caustic alkaline or highly acidic cleaning agents in conjunction with aluminium parts in the interior of the appliance may cause explosions.

- ▶ Never use highly caustic alkaline or highly acidic cleaning agents. In particular, do not use commercial or industrial cleaning agents in conjunction with aluminium parts.

WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

WARNING – Risk of burns!

The appliance becomes hot during operation.

- ▶ Allow the appliance to cool down before cleaning.

WARNING – Risk of injury!

Components inside the appliance may have sharp edges.

- ▶ Carefully clean the appliance interior.
1. Observe the information regarding the cleaning agents.
→ "Cleaning products", Page 8
 2. Clean as follows, depending on the surface:
 - Clean stainless steel surfaces in the direction of the finish using a sponge cloth and hot soapy water.
 - Clean painted surfaces using a damp sponge cloth and hot soapy water.
 - Clean aluminium using a soft cloth and glass cleaner.
 - Clean plastic using a soft cloth and glass cleaner.
 - Clean glass using a soft cloth and glass cleaner.
 3. Dry with a soft cloth.
 4. Apply a thin layer of the stainless steel cleaning product to stainless steel surfaces using a soft cloth.
You can obtain stainless steel cleaning products from the after-sales service or the online shop.

8.5 Cleaning products

You can obtain suitable cleaning products from after-sales service or the online shop.

WARNING – Risk of electric shock!

An ingress of moisture can cause an electric shock.

- ▶ Before cleaning, pull out the mains plug or switch off the fuse in the fuse box.
- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

WARNING – Risk of burns!

The appliance becomes hot during operation.

- ▶ Allow the appliance to cool down before cleaning.

ATTENTION!

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Do not use harsh or abrasive detergents.
- ▶ Do not use cleaning products with a high alcohol content.
- ▶ Do not use hard scouring pads or cleaning sponges.
- ▶ Only use glass cleaners, glass scrapers or stainless steel care products if recommended in the cleaning instructions for the relevant part.
- ▶ Wash sponge cloths thoroughly before use.

Painted and powder-coated surfaces	Hot soapy water Clean with a damp cloth and dry with a soft cloth or towel. Do not use cleaning agents for stainless steel products. Removable grilles are not suitable for dishwashers.
Aluminium and plastic	Glass cleaner Clean with a soft cloth.
Glass	Glass cleaner Clean with a soft cloth.
Control elements	Hot soapy water Clean with a damp cloth and dry with a soft cloth or towel. Do not use cleaning agents for stainless steel products.

8.6 Cleaning controls

WARNING – Risk of electric shock!


Penetrating moisture may cause an electric shock.

- ▶ Do not use wet sponge cloths.
1. Observe the information regarding the cleaning agents.
→ "Cleaning products", Page 8
 2. Clean using a damp sponge cloth and hot soapy water.
 3. Dry with a soft cloth.

8.7 Removing and reinstalling the grille

Depending on the version, the appliance is equipped with a grille that can be removed for cleaning.

1. Use a screwdriver to undo the screws.

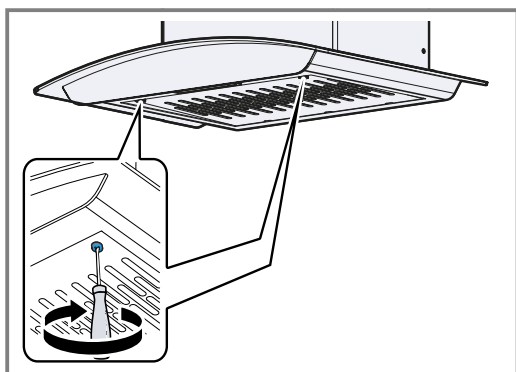

2. To install, insert the grille in the correct position and tighten the screw again.

Notes

- The inlet grid is not dishwasher safe.
- Ensure that the grille is correctly installed before you operate the extractor hood.

9 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

⚠ WARNING – Risk of injury!

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use original parts supplied by the manufacturer for repairs to the appliance.
- ▶ If the power cord is damaged, it must be replaced by trained specialist staff.

9.1 Malfunctions

Fault	Cause and troubleshooting
The appliance is not working.	The mains plug of the power cord is not plugged in.
	▶ Connect the appliance to the power supply.
	The circuit breaker in the fuse box has tripped.
The LED lighting does not work.	▶ Check the circuit breaker in the fuse box.
	There has been a power cut.
	▶ Check whether the lighting in your room or other appliances are working.
Gesture control is not working.	Different causes are possible.
	▶ Defective LED lights may be replaced by the manufacturer, their customer service or a qualified technician (electrician) only.
	▶ Call → "Customer Service", Page 11.
Gesture control is not working.	Gesture control may be interrupted if there is oil or dust on the control panel.
	▶ Clean the control panel.
	✓ If the problem cannot be eliminated, call → "Customer Service", Page 11.

10 Disposal

10.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

- ▶ Dispose of the appliance in an environmentally friendly manner.
Information about current disposal methods are available from your specialist dealer or local authority.



Dispose of packaging in an environmentally-responsible manner. This appliance is certified in accordance with the guidelines on E-waste (Management) Rules 2022 which govern waste electrical and electronic equipment.

The guideline provide a framework for the return and recycling of used appliances.

Note: This product doesn't contain any of hazardous substances as specified in the e-waste Management and Handling Rules 2022.

Dos

- Please visit our website <https://www.bosch-home.in/metapages/e-waste-management> to find out more details regarding e-waste disposal.
- Keep the product in isolated area, after it becomes non-functional/un-repairable so as to prevent its accidental breakage.
- Consult the authorized service center as to whether the Electronic Equipment can be repaired or not, before discarding.
- Consult the retailer about appliance take back schemes.

Don'ts

- The product should not be opened by the user himself/herself, but only by authorized service personnel.
- The product is not meant for re-sale to any unauthorized agencies/scrap dealers/kabariwalah.
- Don't dispose of the discarded Electronic Equipment in household bins or Municipal bins.
- Don't dump the discarded Electronic Equipment in the open or in any land fill site, as this will result in contamination of the soil and the ground water.
- Do not keep any replaced spare part(s) from the product in exposed area.

11 Accessories

You can buy accessories from customer service, from specialist retailers or online. Only use original accessories, as these have been specifically designed for your appliance.

Accessories are appliance-specific. When purchasing accessories, always quote the exact product number (E no.) of your appliance. → Page 11

You can find out which accessories are available for your appliance in our catalogue, in the online shop or from our customer service.
www.bosch-home.com

Accessory	Description	Order number
Mounting set	Kit to be used in case of fly ash bricks and walls with lesser compressive strength (8 x screw and dowel)	10011800
Installation kit – 6 inches	- Aluminium flexible pipe – diameter: 6 inch, length 8.5 feet (after expansion) - Cowl (1 qty) - Clamps (2 qty) - Screw set for installation - Aluminium tape (1 roll)	12052283

12 Customer Service

Detailed information on the warranty period and terms of warranty in your country is available from our after-sales service, your retailer or on our website.

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

Helpline no.: 1800-266-1880 (Monday to Saturday – 8 am to 8 pm)

Email ID: service.in@bosch-home.com

Chat with us (WhatsApp): +91-8451000555



12.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate. The rating plate can be found on top of the appliance.


Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

13 Technical specifications

	Weight (in kg)	Rated voltage (in V)	Rated power (in W)	Rated frequency (in Hz)	Maximum ex- traction power IEC 61591 (in m3/hr)	Maximum ex- traction power IS 374 (in m3/hr)
DWK68IJ60I	14.6	220-240	183	50	680	1200
DWK98IJ60I	18.6	220-240	183	50	680	1200
DWA68IJ60I	11.4	220-240	182	50	680	1200
DWA98IJ60I	13.2	220-240	182	50	680	1200
DWB68IJ60I	11.9	220-240	183	50	700	1300
DWB98IJ60I	14.2	220-240	183	50	700	1300

Lamp specifications


DWK68IJ60I DWK98IJ60I DWB68IJ60I DWB98IJ60I	Max Power 2 x 1.5 W	Voltage DC 12 V	LED module Square 30 x 130 mm
DWA68IJ60I DWA98IJ60I	Max Power 1 x 1.5 W	Voltage DC 12 V	LED module Square 30 x 130 mm

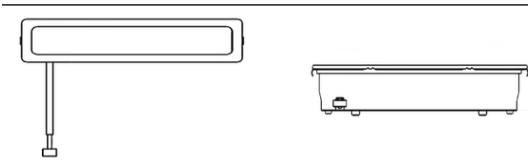

ILCOS DSS-1.5/40-S-130/30


14 Installation instructions

Observe this information when installing the appliance.

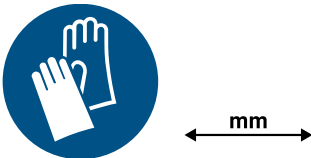


14.1 Included with the appliance

After unpacking all parts, check for any damage in transit and completeness of the delivery.

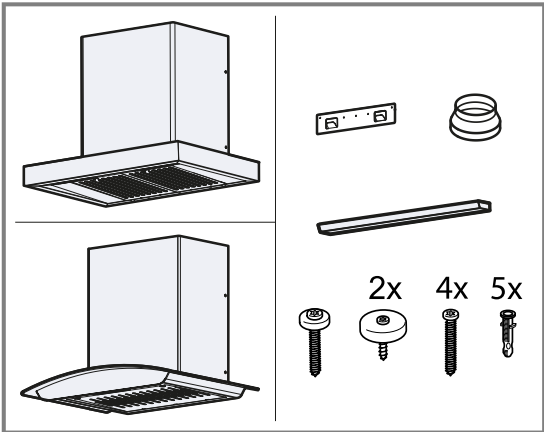


Part	Qty	Unit
Extractor hood	1	PC
User manual	1	PC
Mounting plate	1	PC
Oil collecting container	1	PC
Wall plug - $\varnothing$ 8 x 40 mm	5	PC
Screw M5 x 45 mm	4	PC
Plastic washer with screw M5 x 45 mm	1	PC
Rubber spacer with screw M5 x 15 mm	2	PC
Duct hose reducer	1	PC

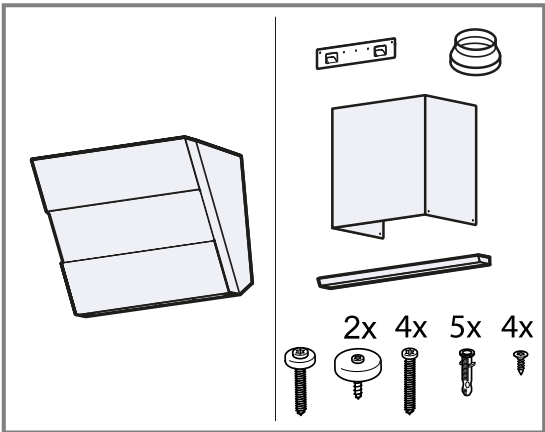


Part	Qty	Unit
Extractor hood	1	PC
User manual	1	PC
Mounting plate	1	PC
Oil collecting container	1	PC
Wall plug - $\varnothing$ 8 x 40 mm	5	PC
Screw M5 x 45 mm	4	PC
Plastic washer with screw M5 x 45 mm	1	PC
Rubber spacer with screw M5 x 15 mm	2	PC
Duct hose reducer	1	PC
Duct cover with screw set M4 x 10 mm	1	PC

14.2 Dimensions


You will find the dimensions of the appliance here

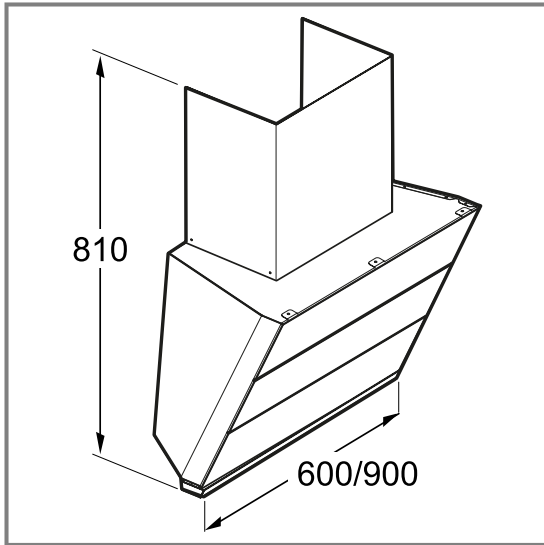

DWK68IJ60I, DWK98IJ60I

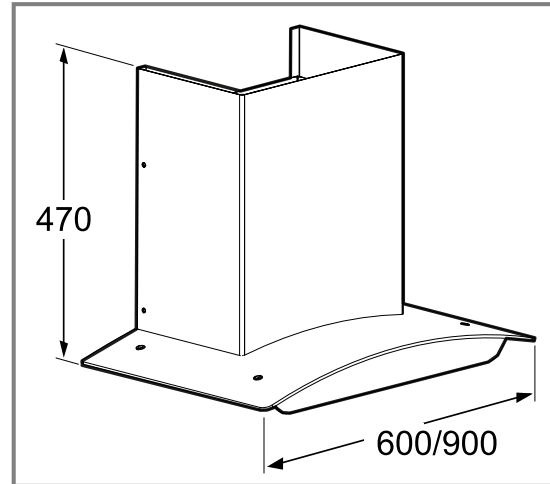

DWA68IJ60I, DWA98IJ60I

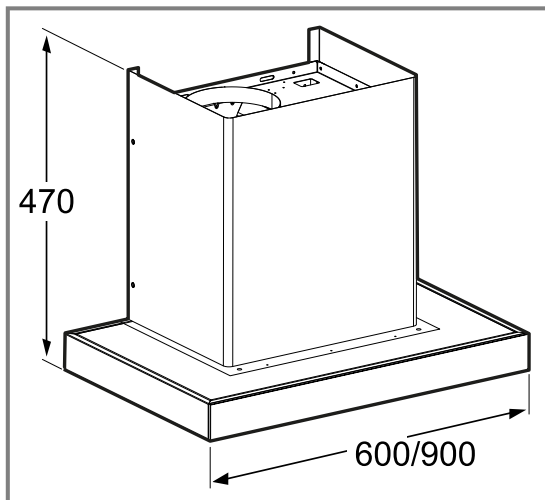


DWB68IJ60I, DWB98IJ60I

14.3 Safety clearances


Comply with the safety clearances for the appliance.

The screw holes for the appliance bracket must be at least 1100-1500 mm above the hob.


For curved glass models DWA68IJ60I and DWA98IJ60I: It is recommended to keep a minimum distance approx. 20 mm between the glass and the Kitchen cabinets.

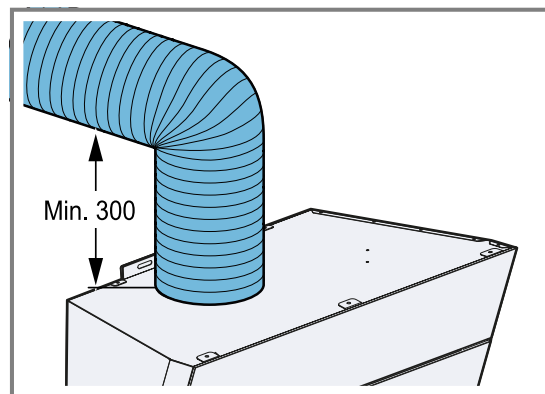


All appliances - Recommended to have the first bend of flexible duct at minimum distance of 300 mm from the chimney hood.

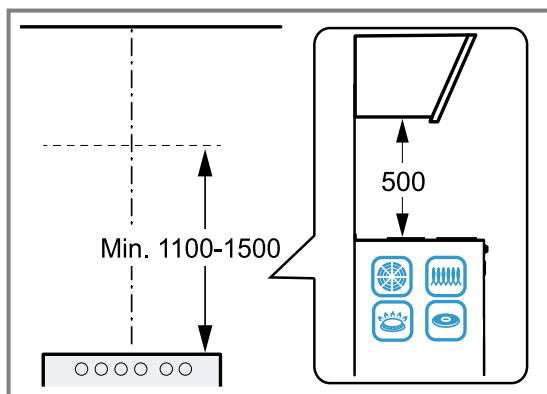

DWK68IJ60I, DWK98IJ60I

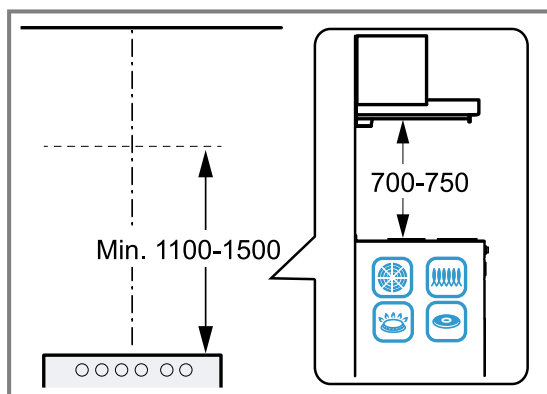

DWA68IJ60I, DWA98IJ60I

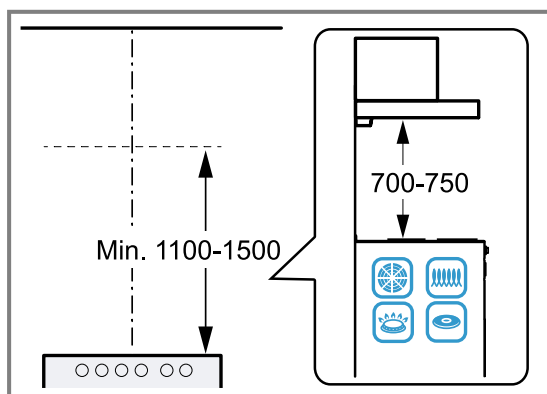


DWB68IJ60I, DWB98IJ60I

14.4 Secure installation

Follow these safety instructions when installing the appliance.

WARNING – Risk of poisoning!

Risk of poisoning from flue gases being drawn back in. Room-air-dependent heat-producing appliances (e.g. gas, oil, wood or coal-operated heaters, continuous flow heaters or water heaters) obtain combustion air from the room in which they are installed and discharge the exhaust gases into the open through an exhaust gas system (e.g. a chimney). With the extractor hood switched on, air is extracted from the kitchen and the adjacent rooms. Without an adequate supply of air, the air pressure falls below atmospheric pressure. Toxic gases from the chimney or the extraction shaft are sucked back into the living space.

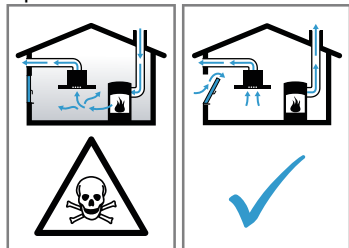

- ▶ Always ensure adequate fresh air in the room if the appliance is being operated in exhaust air mode at the same time as a room-air-dependent heat-producing appliance is being operated.
- ▶ It is only possible to safely operate the appliance if the pressure in the room in which the heating appliance is installed does not fall below 4 Pa (0.04 mbar). This can be achieved whenever the air needed for combustion is able to enter through openings that cannot be sealed, for example in doors, windows, incoming/exhaust air wall boxes or by other technical means. An incoming/exhaust air wall box alone is not sufficient to ensure compliance with the limit.
- ▶ In any case, consult your responsible chimney sweep. They are able to assess the house's entire ventilation setup and will suggest the suitable ventilation measures to you.
- ▶ Unrestricted operation is possible if the appliance is operated exclusively in circulating-air mode.

Risk of poisoning from flue gases being drawn back in.

- ▶ If an extractor hood with an open-flued heat production source is installed, the power supply for the extractor hood must be provided with a suitable safety switch.

Risk of poisoning from flue gases being drawn back in.

- ▶ Do not emit the exhaust air into a smoke or exhaust gas flue that is in operation.
- ▶ Do not emit the exhaust air into a shaft that is used to ventilate installation rooms for heat-producing appliances.
- ▶ If the exhaust air is to be conveyed into a smoke or exhaust gas flue, you must obtain the consent of the heating engineer responsible.

WARNING – Risk of suffocation!

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

WARNING – Risk of fire!

Grease deposits may catch fire.

- ▶ Never work with open flames close to the appliance (e.g. flambéing).
- ▶ Do not install the appliance near a heat-producing appliance for solid fuel (e.g. wood or coal) unless a closed, non-removable cover is present. There must be no flying sparks.
- ▶ The specified safety clearances must be complied with in order to prevent a build-up of heat.
- ▶ Observe the specifications for your cooking appliances. If the installation instructions for the cooking appliances specify a different clearance, the larger of the two must always be provided for. If gas hobs and electric hobs are operated together, the largest specified clearance applies.

WARNING – Risk of injury!

Components inside the appliance may have sharp edges.

- ▶ Wear protective gloves.

The appliance may fall down if it has not been properly fastened in place.

- ▶ All fastening components must be fixed firmly and securely in place.

The appliance is heavy.

- ▶ To move the appliance, two people are required.
- ▶ Use only suitable tools and equipment.

The appliance is heavy.

- ▶ The appliance must not be fitted directly onto plasterboard or similar lightweight materials.
- ▶ To ensure correct installation, you must use a material which is sufficiently stable and suitable for both the structural conditions and the weight of the appliance.

Changes to the electrical or mechanical assembly are dangerous and may lead to malfunctions.

- ▶ Do not make any changes to the electrical or mechanical assembly.

⚠ WARNING – Risk of electric shock!

Sharp-edged components inside the appliance may damage the connecting cable.

- ▶ Do not kink or trap the connecting cable.

Incorrect installation is dangerous.

- ▶ Never equip the appliance with an external switching device, e.g. a timer or remote control.
- ▶ When the appliance is installed, the mains plug of the power cord must be freely accessible. If free access is not possible, an all-pole isolating switch must be installed in the permanent electrical installation according to the conditions of Overvoltage Category III and according to the installation regulations.
- ▶ When installing the appliance, check that the power cable is not trapped or damaged.

14.5 General information

Follow these general instructions during the installation.

- For the installation, observe the currently valid building regulations and the regulations of the local electricity and gas suppliers.
- When discharging the exhaust air, the official and legal regulations, such as the regional building code., must be observed.
- In order to freely access the appliance for servicing, select an easy-to-reach installation site.
- The surfaces of the appliance are sensitive. Avoid damaging them during installation.

14.6 Instructions for the electrical connection

In order to safely connect the appliance to the electrical system, follow these instructions.

⚠ WARNING – Risk of electric shock!

It must always be possible to disconnect the appliance from the electricity supply. The appliance must only be connected to a protective contact socket that has been correctly installed.

- ▶ The mains plug for the mains power cable must be easily accessible after the appliance is installed.
- ▶ If this is not possible, an all-pole isolating switch must be integrated into the permanent electrical installation according to the conditions of overvoltage category III and according to the installation regulations.
- ▶ The permanent electrical installation must only be wired by a professional electrician. We recommend installing a residual-current circuit breaker (RCCB) in the appliance's power supply circuit.

Sharp-edged components inside the appliance may damage the connecting cable.

- ▶ Do not kink or trap the connecting cable.
- The connection data can be found on the rating plate. → *Page 11*
- The connecting cable is approx. 1.30 m long.
- This appliance complies with the EC interference suppression regulations.
- The appliance corresponds to protection class 1. You should therefore only use the appliance with a protective earth connection.
- Do not connect the appliance to the power supply during installation.
- Ensure that the protection against contact is guaranteed during installation.

14.7 Information on the installation situation

- Install this appliance on the kitchen wall.
- To install additional special accessory parts, observe the enclosed installation instructions.
- The width of the extractor hood must correspond at least with the width of the hob.
- To optimally detect the cooking vapours, install the appliance in the middle of the hob.

14.8 Information about the hotplate

There must be adequate ventilation of the room when the extractor hood is used at the same time as appliances burning gas or other fuels.

14.9 Instructions for the exhaust air pipe

The appliance manufacturer does not provide any warranty for faults attributable to the pipeline.

- Use a short, straight exhaust air pipe with as large a pipe diameter as possible.
- Long, rough exhaust air pipes, many pipe bends or small pipe diameters reduce the suction power and increase the fan noise.
- Use an exhaust air pipe that is made of non-combustible material.
- To prevent condensate from returning, fit the exhaust pipe with a 1° gradient from the appliance.

Round pipes

We recommend round ducts with a diameter of 6 " (152 mm).

14.10 Instructions for the air extraction mode

For air extraction mode, a one-way flap should be installed.

Notes

- If a one-way flap is not included with the appliance, one can be ordered from a specialist retailer.
- If the exhaust air is conveyed through the external wall, a telescopic duct should be used.

14.11 Installation

Checking the wall

1. Check whether the wall is horizontal and adequately load-bearing.
2. The wall plugs must have a secure grip.
3. Use the enclosed screws and wall plugs. The enclosed screws and wall plugs are suitable for use with solid brickwork. Use suitable fixing material for other structures, e.g. plasterboard, porous concrete, poroton bricks. Use the mounting set available as accessory in case of fly ash bricks and walls with lesser compressive strength.


Preparing the wall

Notes

- Depending on the appliance design, the holes may need to be drilled differently than described. Observe this information when installing the appliance.
- The method of fixing is not to depend on the use of adhesives.


1. Ensure that there are no electrical wires, gas pipes or water pipes in the area where holes are to be drilled.
2. Cover the hob to prevent damage.
3. Draw a central vertical line.
4. Mark the position of the fastening screws in the centre above the hob. Observe the required safety clearances.

→ "Safety clearances", Page 14

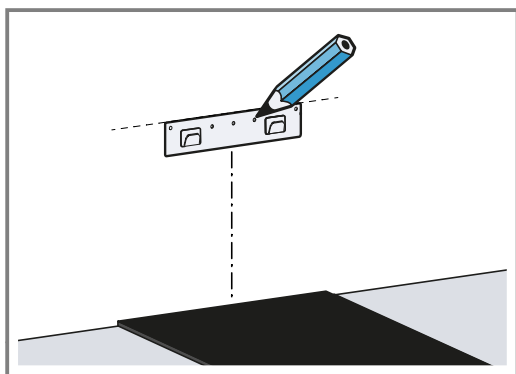

5. Punch-mark the marked positions of the fastening screws.
6. Drill the holes for the 5 fastening screws with a diameter of 8 mm and a drilling depth of 50–60 mm.
7. Insert the wall plugs so that they are flush with the wall.

8. Screw on the appliance bracket with the outer four screws hand-tight, align it and screw it on tightly.

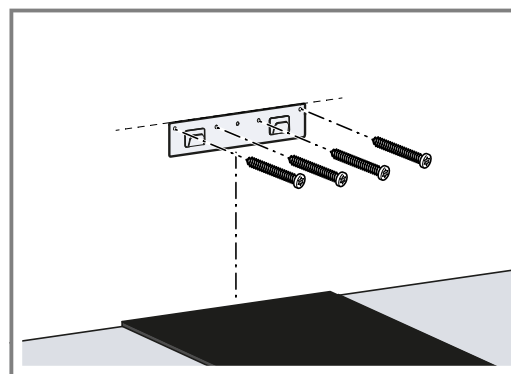


Installing the appliance


⚠ WARNING – Risk of injury!

Components inside the appliance may have sharp edges.


- ▶ Wear protective gloves.
 - ▶ The appliance is heavy.
 - ▶ Two people are needed to move the appliance.
1. Screw in the two spacers on the rear of the appliance.

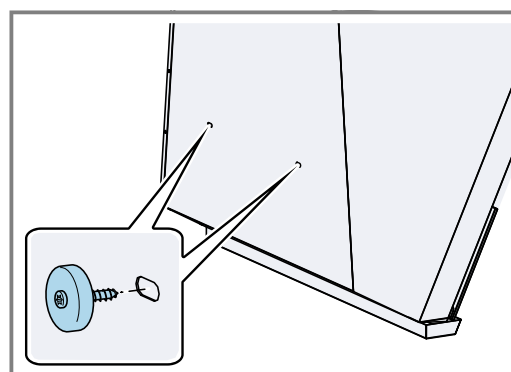

2. Hook the appliance into the appliance bracket on the wall from above.

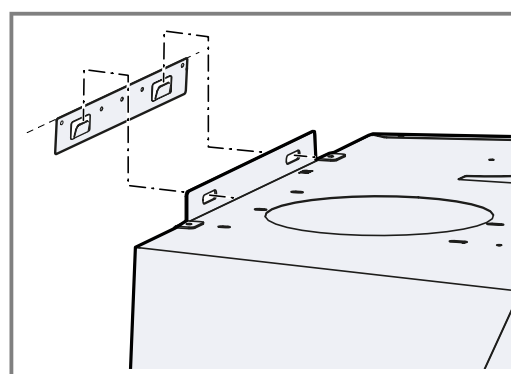

3. Screw the middle screw together with the washer into the appliance bracket to secure the appliance.

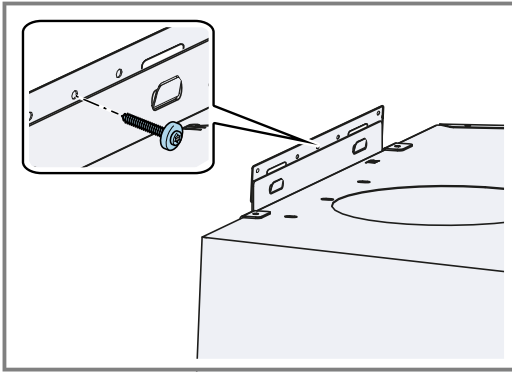

4. Ensure that the appliance is firmly seated and cannot wobble or come loose.
5. Do not place any additional load on the appliance, for example by placing heavy objects on it or leaning on it.

Connecting the exhaust air pipe


Requirements

- A suitable exhaust air pipe can be obtained from our customer service, specialist retailers or online.
 - Ensure that the exhaust air pipe is installed in accordance with the instructions provided.
1. Secure the exhaust pipe to the air pipe connector.
 2. Establish the connection to the exhaust air opening.
 3. Seal the joints.

Fitting the flue duct


Depending on the appliance design, the flue duct must be installed separately. Only use original accessories, as these have been specifically designed for your appliance.

- Tighten the flue ducts to the appliance using 4 screws.

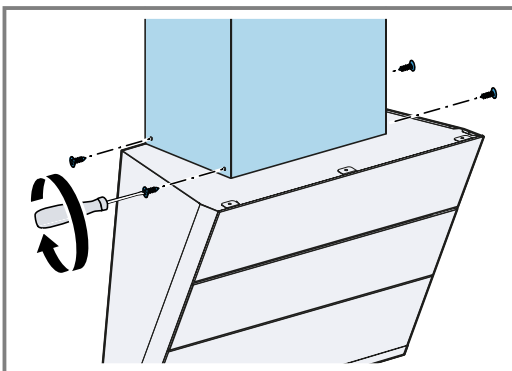

Installing the oil collection container

- Push the oil collection container completely back onto the holders on the left and right of the appliance.

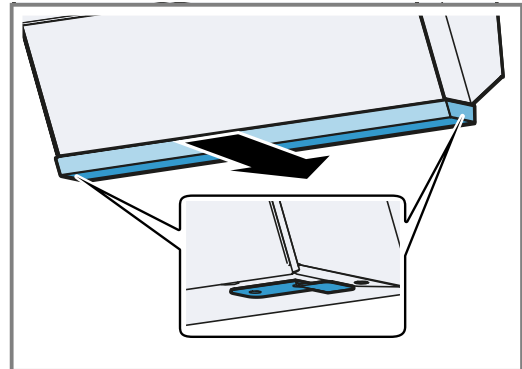

Warranty Terms and Conditions

Product	Standard Warranty period	Warranty on parts
Chimney hoods	2 years	2 years standard warranty + 8 years extended warranty on Blower motor only

- 1) The warranty is confined only to the first purchase of the appliance and is non-transferable. This warranty card shall be presented to our staff at the time of service and the warranty shall be void if the warranty card is altered / tampered with or lost
- 2) The Warranty period (both Standard Warranty Period and Extended Warranty Period) starts from the date of purchase of the appliance.
- 3) The 2 year warranty covers only manufacturing defect in material, Parts and workmanship that may arise despite normal operation and usage of the appliance, as prescribed in the instruction manual.
- 4) Repairs, installations and removal of the appliance shall be carried out only by an authorized Service Personnel, failing which this warranty will be void
- 5) In the event of change of address, the new address shall be intimated to the Authorized service Center by calling our after-sales service. Enclosed after-sales service directory.
- 6) Repairs & replacements of parts would be purely at the discretion of the Authorized Service Personnel only. The company's obligation under this warranty shall be limited to repair and providing replacement of defective parts only. It is hereby clarified that after the Standard Warranty Period, visiting charges will be applicable for all visits and the same will be borne by the customer. In the Extended Warranty period, in case the appliance needs to be transported to the Authorized Service Centre for repair, the transportation charges from and to the place of installation shall be borne by the customer.
- 7) The customer shall provide a reasonable, sufficient and safe working space to access the appliances for service. The customer is liable to move away all blocking objects or move the appliance to an appropriate location with electricity for testing of the appliance.
- 8) In case repair cannot be completed onsite, the company reserves the right to carry the appliance to its authorized service center and return the same after repair.

- 9) In case of appliances installed beyond municipal limits of the jurisdiction of company's Authorized Service Center, all expenses incurred in transportation of the appliance or parts thereof from and to the company's Authorized Service Center, as well as expenses incurred on deputing of service personnel/ technician towards conveyance and other incidental expenses, will be borne by the customer.
- 10) .In case of repairs the appliance and/ or the replaced spare part will be warranted only for the remaining of the original warranty period and the replaced components will become property of the company.
- 11) The company shall be under no obligation or deemed to be in default for any delay or failure in performance resulting from causes beyond its reasonable control (e.g.strikes, floods, earthquakes etc.) including but not limited to delay in servicing due to non-availability of spare parts and / or accessories.
- 12) In case of repair, the company owns the right to repair or replace the spare part, which are tested thoroughly to ensure the appliance is operational.
- 13) .Authorized Personnel appointed and trained by the company will provide repair services to the customer if required.
- 14) Warranty not applicable in the following cases.
 - a. The warranty card is not completed properly at the time of purchase.
 - b. The completed warranty card is not presented to authorized service personnel at the time of service of the product.
 - c. Product is not purchased from an authorized sales dealer.
 - d. The product is used for commercial purposes. The product is used at any places such as lodging house, hotels, dormitory etc.
 - e. The serial number is deleted, defected or altered.
 - f. Noise or vibration that is considered as normal for example Air flow noise, Blower motor running noise or warning beeps.
 - g. Replace fuse, correcting house wiring, house plumbing and defect or damage caused by household pets, rats, cockroaches or any other animal or insects

STANDARD WARRANTY CARD

Customer's Name: _____

Address: _____

City: _____ Pin: _____ State: _____

Telephone: _____ Mobile: _____

E-mail: _____ Model/E-Nr: _____

Serial No.: _____

Date of Purchase: _____ Date of expiry: _____

Dealer's Name

Customer's signature

Additional Warranty Terms and Conditions

- 1) The additional warranty is only applicable in the following models: DWK68IJ60I, DWK98IJ60I, DWA68IJ60I, DWA98IJ60I, DWB68IJ60I, DWB98IJ60I.
- 2) This additional warranty does not substitute or amend the conditions of the standard warranty issued along with appliance and commences only after the expiry of the terms of the standard warranty.
- 3) Under this additional warranty, the customer will get 8 years functional warranty exclusively on the blower motor only, subject to the terms hereinafter contained.
- 4) The additional warranty does not cover any wear and tear parts.
- 5) The standard visiting charges will be applicable for the visit and will have to be borne by the customer. Clause 9 of the standard warranty will apply in case of installations.
- 6) The blower motor of the hoods shall be repaired or replaced during the additional warranty period as per company policy. The company decision shall be final.
- 7) In case of repairs or replacement of the blower motor of the appliances during the additional warranty, it will be warranted only for the remaining of the additional warranty period.
- 8) The filled and stamped original warranty card along with additional warranty card shall be presented to our staff at the time of service and the warranty shall be void if the warranty card is altered/ tampered with or lost.
- 9) The additional warranty is confined only to the first purchase of the appliance and is non-transferable.
- 10) The additional warranty period starts from the expiry of initial warranty period of the appliances.
- 11) Repairs, installations, and removal of the appliances shall be carried out by an authorized service personnel only, failing which this additional warranty will be void.
- 12) The event of change in address shall be intimated to the authorized service center.
- 13) The company reserves the right to changes, modify with equivalent value, withdraw, or extend the offer without prior notice at any point of time and no correspondence in this regard shall be entertained.

- 14) The company shall be under no obligation or deemed to be in default for any delay or failure in performance resulting from causes beyond its reasonable control (eg: strikes, floods, earthquakes etc.) including delay in servicing due to non-availability of spare parts and / or accessories.
- 15) All other terms and conditions shall remain the same as per the original standard warranty card of the appliance except those covered above.

ADDITIONAL WARRANTY CARD

Customer's Name: _____

Address: _____

City: _____ Pin: _____ State: _____

Telephone: _____ Mobile: _____

E-mail: _____ Model/E-Nr: _____

Serial No.: _____

Date of Purchase: _____ Date of expiry: _____

Dealer's Name

Customer's signature

Blank lined paper template with horizontal ruling lines.





Thank you for buying a Bosch Home Appliance!

Register your new device on MyBosch now and profit directly from:

- **Expert tips & tricks for your appliance**
- **Warranty extension options**
- **Discounts for accessories & spare-parts**
- **Digital manual and all appliance data at hand**
- **Easy access to Bosch Home Appliances Service**

Free and easy registration – also on mobile phones:

www.bosch-home.com/welcome



Looking for help? You'll find it here.

Expert advice for your Bosch home appliances, help with problems or a repair from Bosch experts.

Find out everything about the many ways Bosch can support you:

www.bosch-home.com/service

Contact data of all countries are listed in the attached service directory.

BSH Household Appliances Manufacturing Pvt. Ltd.

Arena house, 2nd floor, Main building,
Plot no 103, Road no 12, MIDC,
Andheri East, Mumbai - 400 093
www.bosch-home.com



9001985206 (050122)

en