


Ceiling Fan Light User Manual

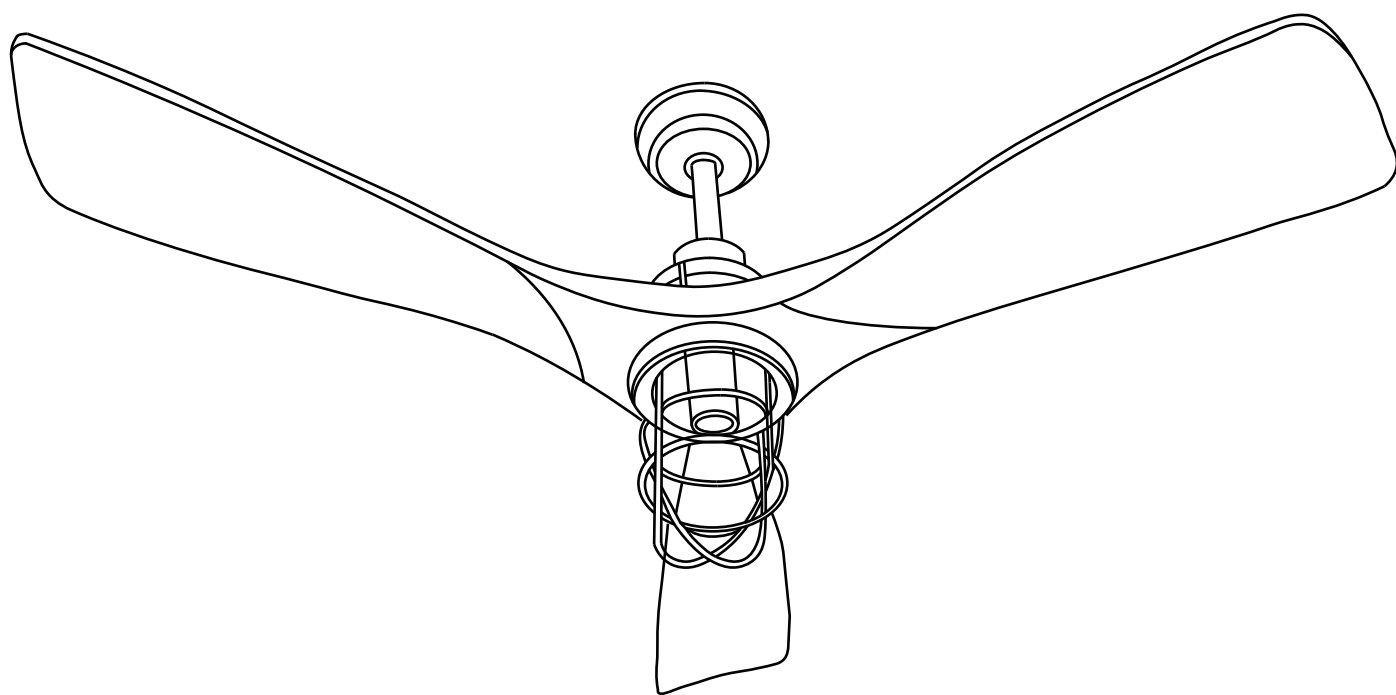



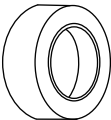
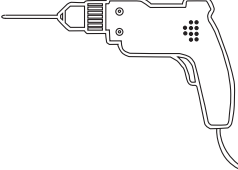


Thank you for purchasing our product. Before using the product, please read this manual carefully and keep it for future reference.

CEILING FAN LIGHT





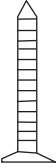


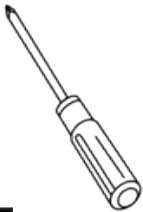PREPARATION

■ First, read the safety information on page 3 and use the parts list to ensure that all hardwares are present and in good condition. If any parts are missing or damaged, do not attempt to assemble the product.

Tools may required:

Phillips screwdriver	Goggles	Tape	Electric drill	Ladder	Wire cutters
 +					

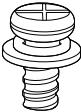ACCESSORIES

						
AA	BB	CC	DD	EE	FF	GG






AA	Expansion screw	2
BB	Wire connector	3
CC	Blade screw	7
DD	Plastic expansion tube	4


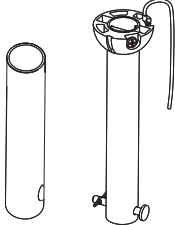
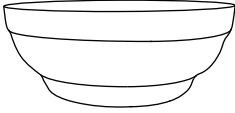
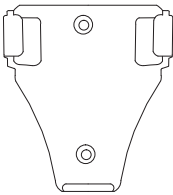
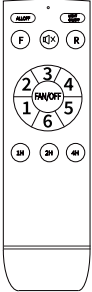
CEILING FAN LIGHT

EE	Self-tapping screw	4
FF	J-box screw	2
GG	Washer	2

PACKAGE CONTENTS

- Please check carefully whether any parts are missing from the package and make sure to confirm all parts inside the box. (Each 1 pack)

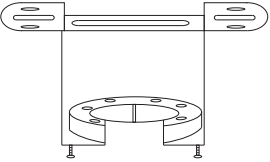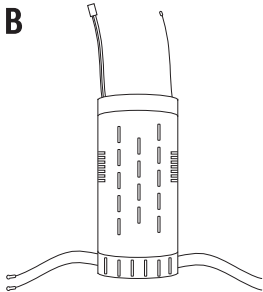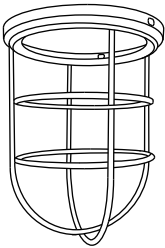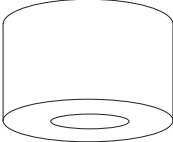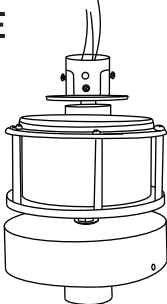Mounting Bracket	Receiver	Lampshade	Coupling Cover	Fan Motor Host
A 	B 	C 	D 	E 
1	1	1	1	1

Fan Blade	Downrod	Canopy cover	Remote Controller Bracket	Remote Controller
F 	G 	H 	I 	J 
3	2	1	1	1

CEILING FAN LIGHT

IMPORTANT WARNING

- To reduce the risk of electric shock, turn off all power sources.
- All wiring must comply with the National Electrical Code and local electrical codes. Electrical installation should be performed by a qualified licensed electrician.
- **WARNING:** To reduce the risk of personal injury, use only the two steel screws (and lock washers) provided with the outlet box for installation. Most outlet boxes are typically used to support lighting devices instead of fans and may need to be replaced. If in doubt, please consult a qualified electrician.




WARNING

TO REDUCE THE RISK OF FIRE
ELECTRIC SHOCK OR PERSONAL INJURY
MOUNT FAN TO OUTLET BOX MARKED
ACCEPTABLE FOR FAN SUPPORT

- Do not turn the fan blades until the fan installation is completed.
- To avoid personal injury or damage to the fan and other items, maintain and clean the fan with care.
- Do not use water or detergents to clean the fan or fan blades. A dry rag or slightly damp cloth is suitable for cleaning.
- Electrical diagrams are for reference only. Please refer to the instructions used with the packaging for properly assembled lighting kits.

CEILING FAN LIGHT


SAFETY RULES

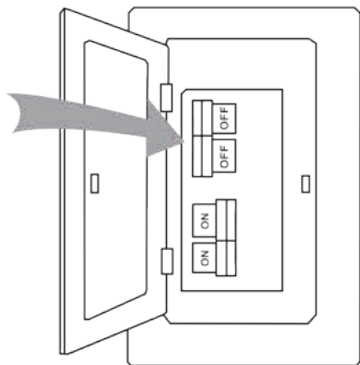


Turn off the main circuit power switch and wall fan switch.



Failure to disconnect the power supply prior to installation may result in serious injury or death.

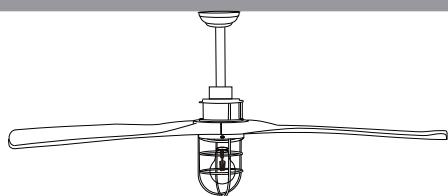

Horizontal ceiling installation

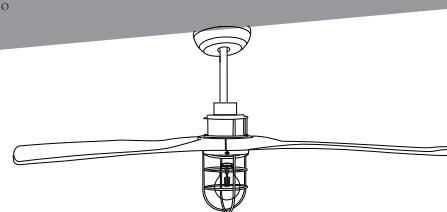

Slope ceiling installation

Proper installation: The ceiling fan must be mounted vertically on a sturdy ceiling, and the fan must be installed in a manner capable of supporting a weight greater than 66 lbs. If the fan is mounted on a slanted ceiling, the hanger's opening should be tilted upward, and the slot should be inserted into the ear.



Safety Tips: Slope ceiling installation is only applicable to slope ceiling installation below 15° horizontally.


INSTALLATION RECOMMENDED

■ Recommended Room Size:


36 inches
COVER RANGE UP TO
10FT X 10FT

42 inches
COVER RANGE UP TO
12FT X 12FT


52 inches
COVER RANGE UP TO
15FT X 15FT

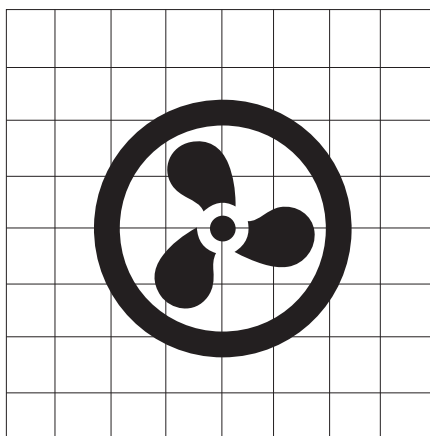

CEILING FAN LIGHT

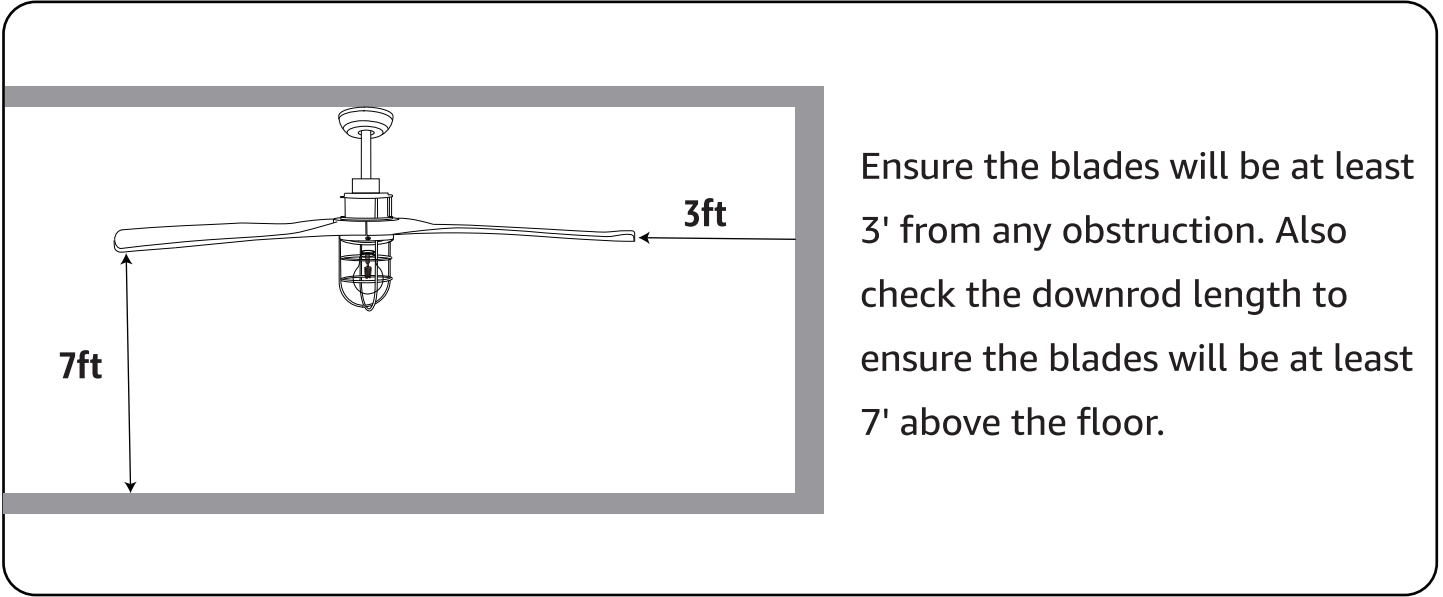

■ Recommended Installation Height and downrod length :

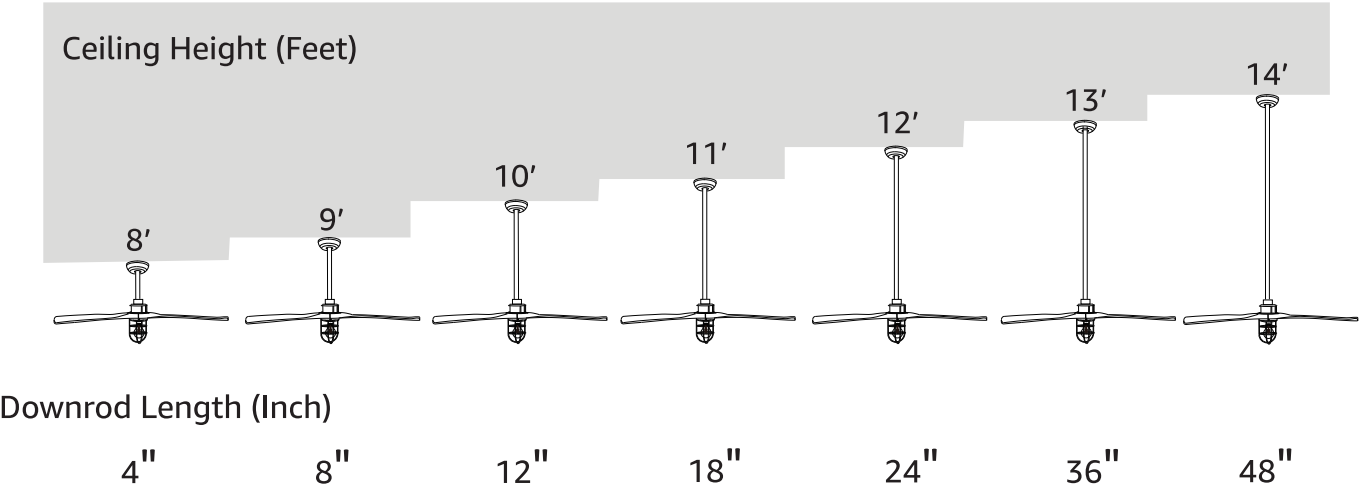

TIPS: 4" and 8" downrods are included.

ELECTRICAL AND STRUCTURAL REQUIREMENTS

- Your new ceiling fan will require a grounded electrical supply line of AC110~130V/60Hz 15 Amp Circuit. Electrical code requires use of a fan-rated outlet box to support the extra weight and motion associated with a ceiling fan. A fan-rated box will be labeled as such and typically supports up to a 66lbs ceiling fan. Fan-Rated Outlet Boxes vary in rating and design. Ensure the ratings of your ceiling fan outlet box meet the requirements for the ceiling fan being installed. Figure 1, Figure 2 and Figure 3 depicts different structural configurations that may be used for mounting the outlet box.

CEILING FAN LIGHT

■ Low-profile use (Figure 1)




A 1/2-deep pancake box is meant to be screwed to a joist or block. It's used if onlone cable is coming into the box. It is alsoavailable in a saddle-mount configuration.

■ Deep-profile use (Figure 2)

A 2-1/4" deep box can be attached toblocking between joists and is roomy enough to handle more than one cable.

■ Brace use (Figure 3)

Paired with a deep box, this hanger is meantto span between two joists and takes theplace of wooden blocking.

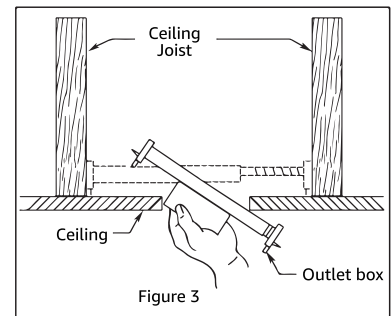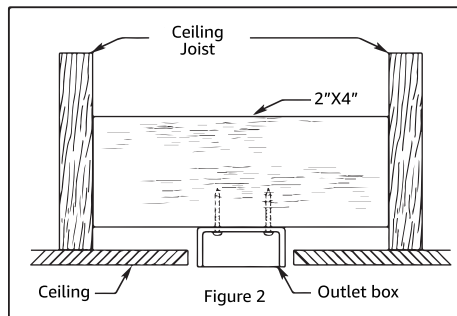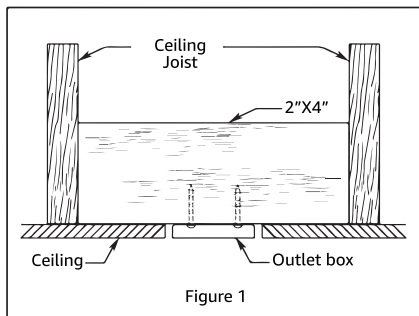

- If your fan is to replace an existing light fixture, turn power off at the main fuse box and remove the existing light fixture.

⚠ WARNING



Turning off wall switch is not sufficient, to avoid possible electrical shock be sure electricity is turned off at the main fuse box before wiring. All wiring must be in accordance with National and Local codes and the ceiling fan must be properly grounded as a precaution against possible electrical shock.

⚠ WARNING



DO NOT operate this fan with a variable(Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.

CEILING FAN LIGHT

INSTALLATION

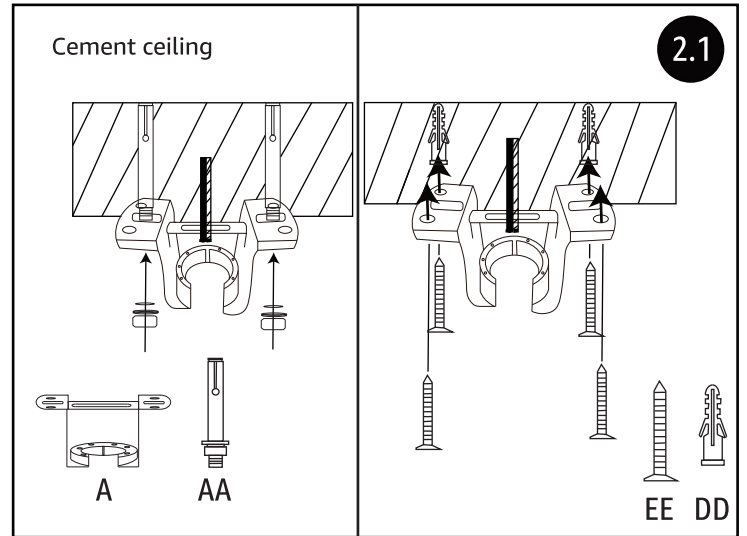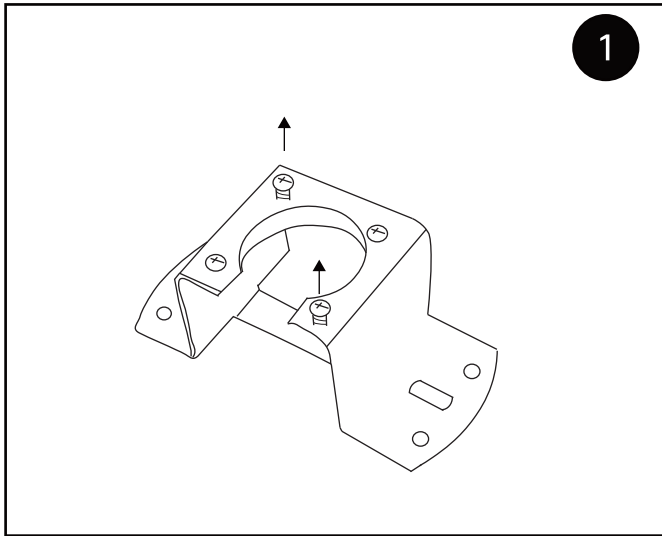


- 1 Unscrew the two diagonal screws on the mounting bracket 2~3 circles, and ensure that it remains securely fixed on the bracket.
- 2 Mount the bracket to the ceiling and use appropriate accessory screws to secure it based on the type of ceiling material.

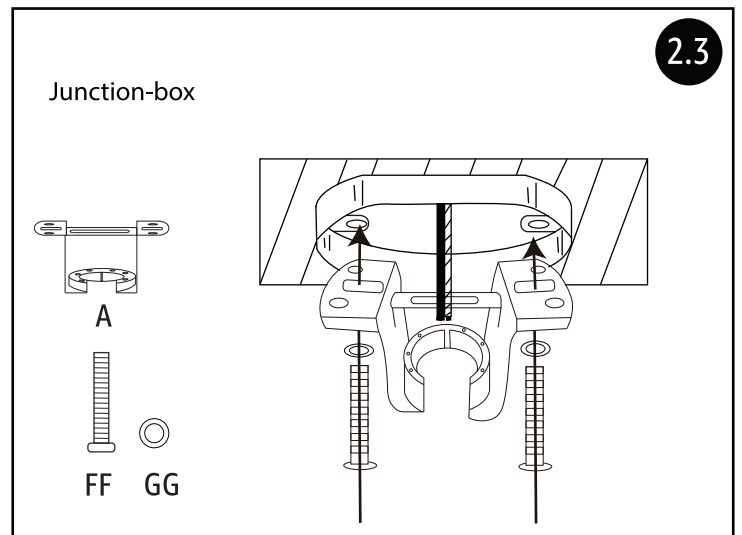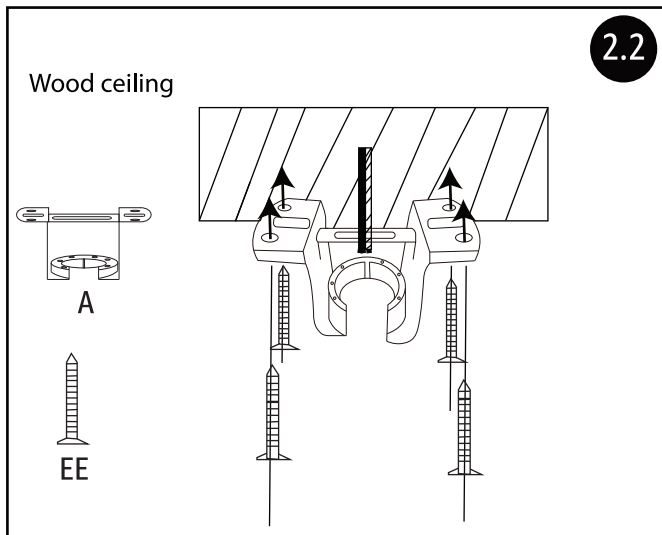


- 2.1 Cement ceiling: Drill hole on the cement ceiling, then use expansion screws or expansion tube and self-tapping screw to fix.
- 2.2 Wood ceiling: Use self-tapping screws to drive into the wooden ceiling.
- 2.3 Junction box: Use j-box screw and washer to fix the bracket to the ceiling.

CEILING FAN LIGHT


INSTALLATION

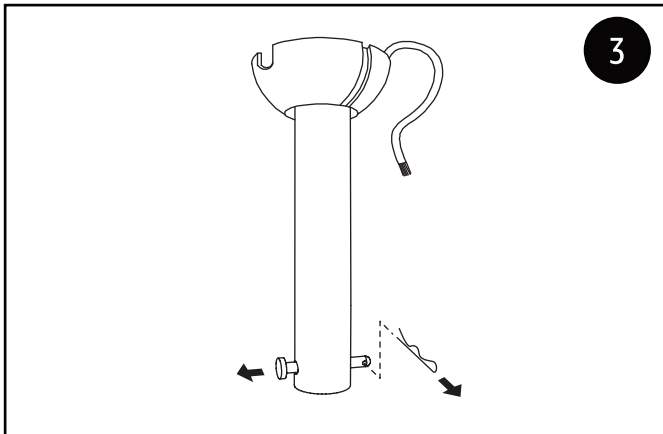


3 Take out the downrod pin of the 8" downrod assembly.

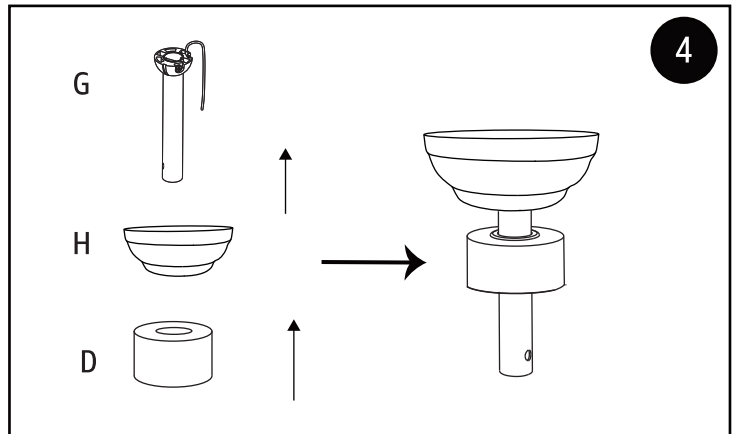


4 Assemble the canopy cover and coupling cover to the downrod.

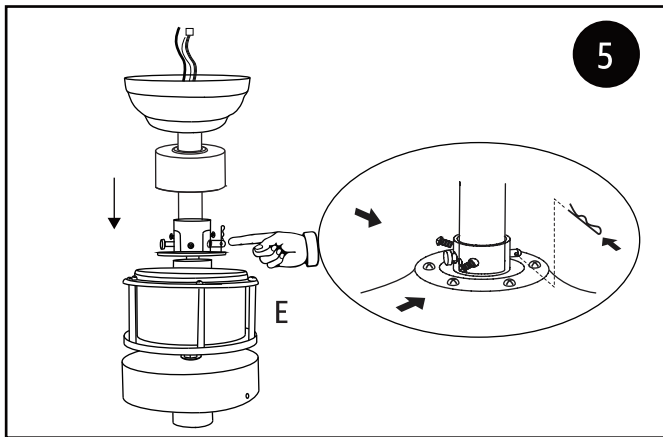


5 Insert the downrod to the yoke, then fix with downrod pin and 2 side screws.

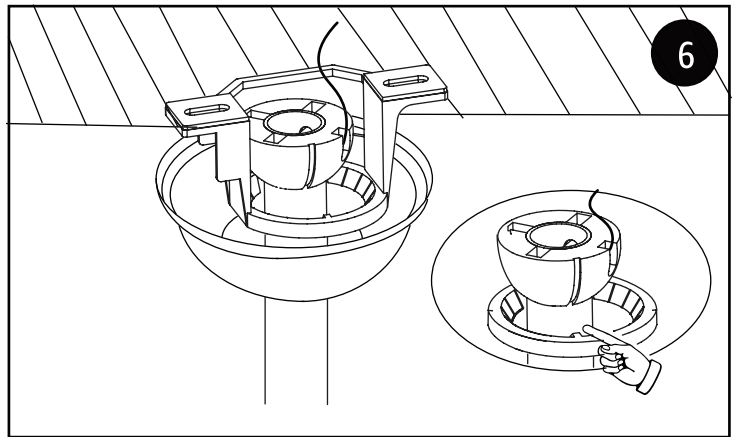

6 Install the downrod into the mounting bracket opening that is already securely fastened to a structural ceiling member. The tab opposite the mounting bracket opening should fit into the slot on the ball.

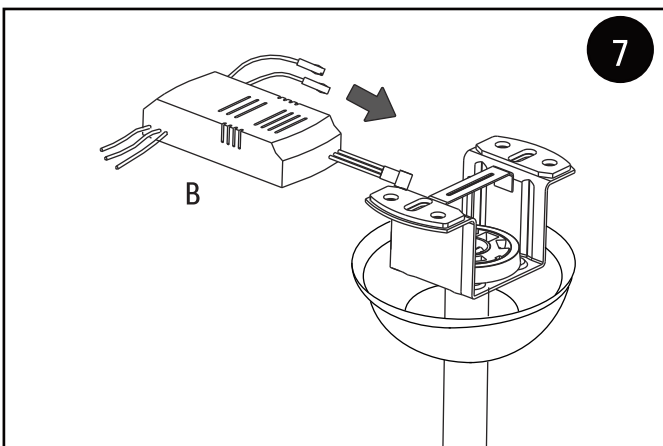



7 Insert the receiver into the mounting bracket.

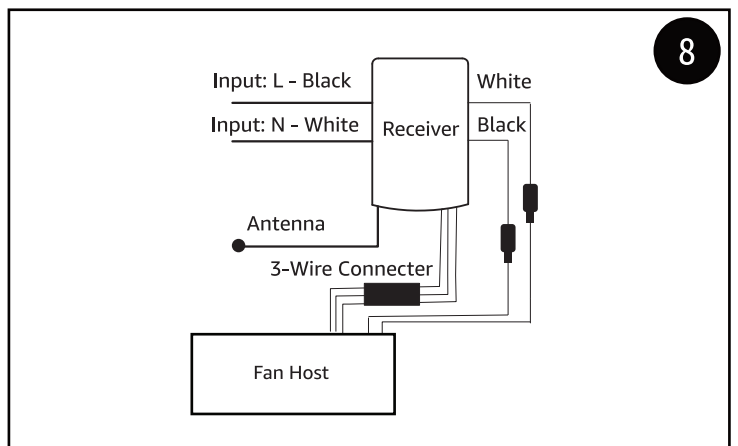



8 Connect the wires between the controller and the fan motor: white to white wire, blue to blue wire, and connect the 3-pin wire terminal.

CEILING FAN LIGHT



INSTALLATION

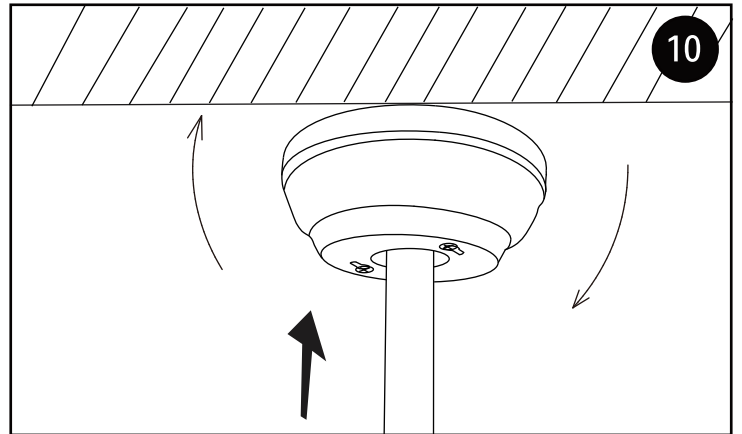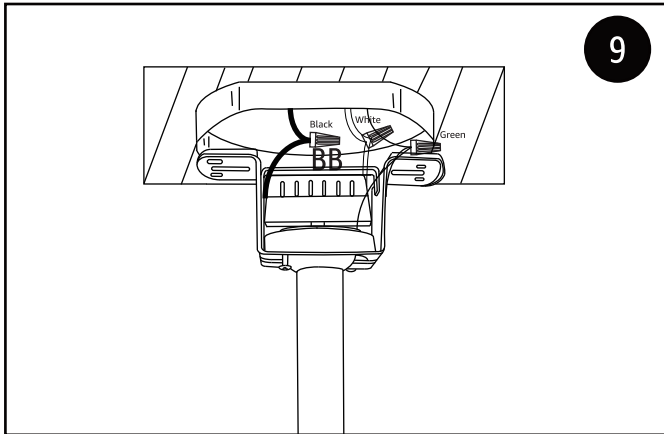

- 9 Connect the wires from the receiver to the main power supply from ceiling: black - live wire, white - neutral wire, green/bare - ground wire.
- 10 Push the canopy cover upward, align it with the two screws from step one, rotate and tighten the screws to secure canopy cover.

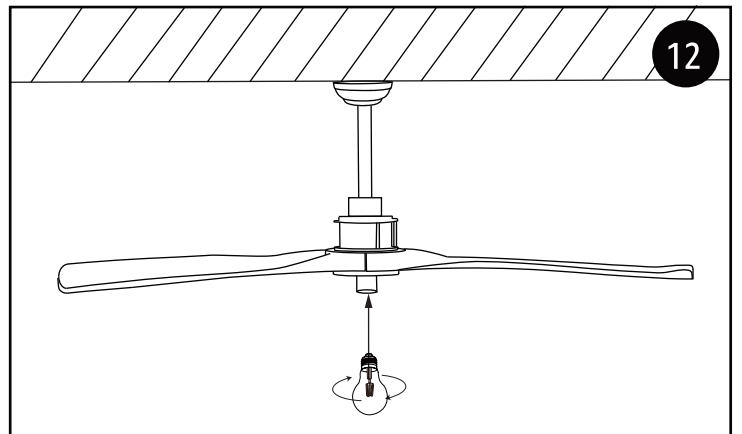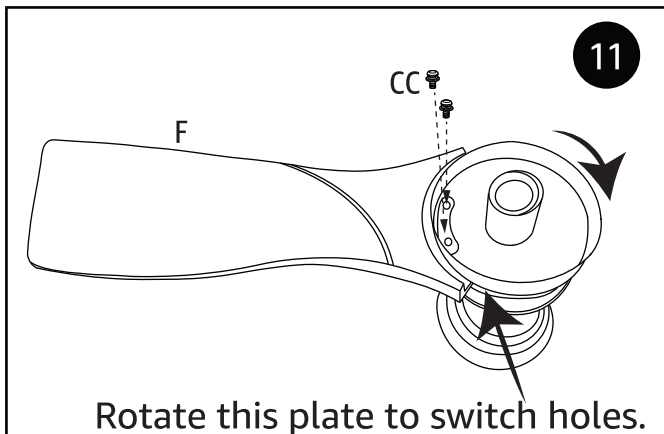

- 11 Attach the fan blade to the motor host. Rotate the host lower plate to switch the installation holes' position.
- 12 Screw in the 1xE26 light bulb (Light bulb not included).
Recommended: E26, 120V/60Hz, A19/ST19/ST21/G25, Max 60W.

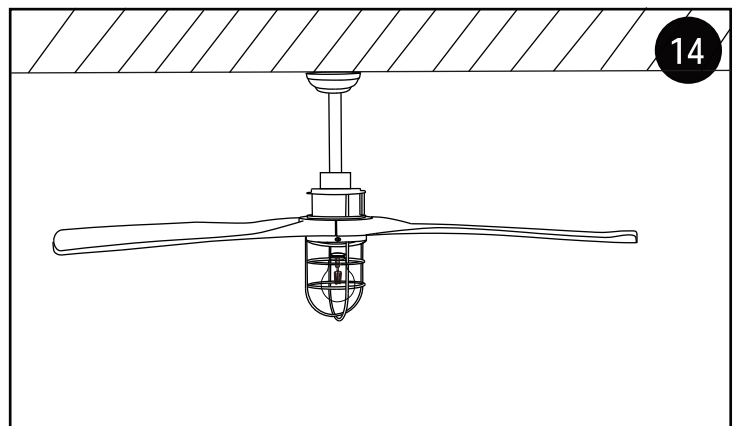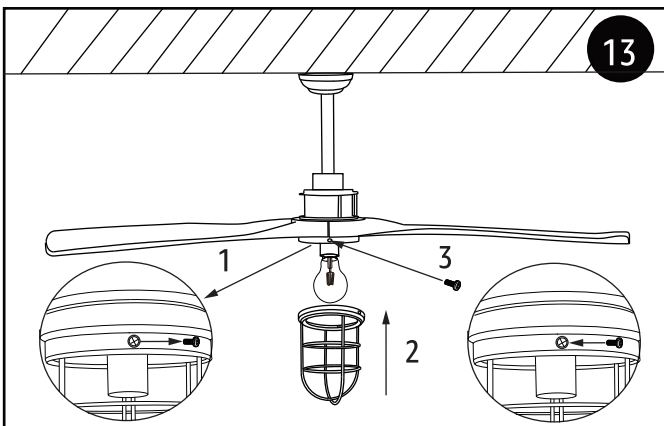

- 13 Take out 3 cage screws pre-installed, then align the hole of cage, tighten screws.
- 14 Installation is completed.

CEILING FAN LIGHT


HOW TO OPERATE YOUR CEILING FAN

- **IMPORTANT:** Using a full range dimmer switch(not included) to control fan speed will damage the fan. To reduce the risk of fire or electrical shock, do not use a full range dimmer switch to control the fan speed(Figure 1).



(Figure 1)

- Restore electrical power to the outlet box by turning the electricity on at the main fuse box.(Figure 2).

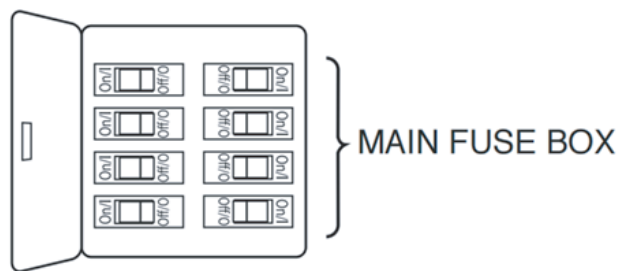

(Figure 2)

⚠ WARNING

Check to see that all connections are tight, including ground, and that no bare wire is visible at the wire connectors, except for the ground wire.


Do not operate this fan with a variable(Rheostat) wall controller or dimmer switch. Doing so could result in damage to the ceiling fan's remote control unit.

CEILING FAN LIGHT

REMOTE CONTROL


■ Installing Wall Plate:

Attach wall plate using the two provided screws.

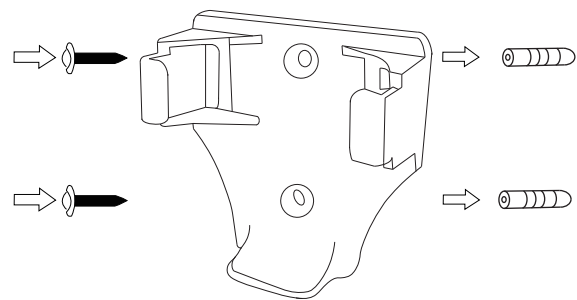

- To operate the fan, please install 2 AAA batteries (included) in the handheld remote transmitter. If not used for extended periods of time, remove the batteries to prevent damage to the transmitter. Store the remote away from excessive temperatures and humidity.

ALL OFF	Light & Fan all OFF
LIGHT ON/OFF	Adjust color temperature Short time on/off to change color
F	Forward
R	Reverse
🔊X	Remote controller mute
1-6	Fan Speed
FAN/OFF	Fan stop
1H 2H 4H	Fan stop & light off after 1 hour Fan stop & light off after 2 hours Fan stop & light off after 4 hours

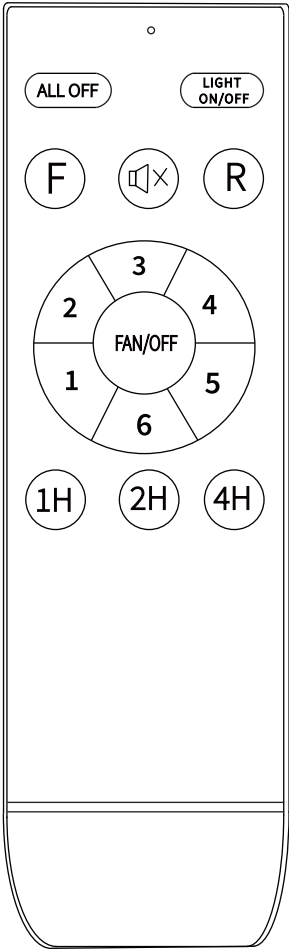

Pairing: Turn on the fan light, hearing “beep” once, then long-press 1H and 4H at the same time, when hearing “beep” twice; it works.

CEILING FAN LIGHT

TROUBLE SHOOTING

PROBLEM	SUGGESTED REMEDY
If fan does not start	<ol style="list-style-type: none">1. Check main and branch circuit fuses or circuit breakers.2. Make sure forward/reverse switch is firmly in bottom or top position. Fan will not operate when switch is in the middle.3. Make sure that the wall control is turned "ON"4. Check line wire connections to fan and switch wire connections in switch housing. CAUTION: Make sure main power is turned off.5. Make sure battery has power, change battery(2*AAA) to try again.6. The remote controller is not paired, check Page.11 to pair.7. The motor or receiver or remote controller is fault, contact our customer service.
If fan sounds noisy	<ol style="list-style-type: none">1. Make sure all screws in motor housing are snug. (not over tightened)2. Make sure the screws which attach the fan blade bracket to the motor are tight.3. Make sure the blade is correct installed, "UP" side up.4. Too close to the wall, make sure the blades at least 3ft to the wall.5. Make sure wire connectors in switch housing are not rattling against each other or against the interior wall of the switch housing. <p>CAUTION: Make sure main power is turned off before entering switch housing.</p> <ol style="list-style-type: none">6. If using an optional ceiling fan lightkit, make sure the screws securing the lampshade tight.7. Some fan motors are sensitive to signals from Solid State variable speed controls. DO NOT USE a Solid State variable speed control.8. Allow "break-in" period of 24 hours. Most noises associated with a new fan will disappear after this period.
If fan wobbles	<p>All blades are weighed and grouped by weight.</p> <p>The following procedures should eliminate most of the wobble. Check for wobble after each step.</p>

CEILING FAN LIGHT

TROUBLE SHOOTING

PROBLEM	SUGGESTED REMEDY
If fan wobbles	<ol style="list-style-type: none">1. Check that all blades are screwed firmly into motor housing.2. Make sure that canopy and mounting bracket are tightened securely to ceiling junction box and junction box is mounted firmly to ceiling joist.3. Make sure the ball head into the slot.4. Make sure the the downrod is well fixed by screws5. Most wobble problems of fan are caused when blades are not in equal level. *To check the blade levels, select a point on the ceiling above the tip of any blade. Measure the distance from the ceiling to the blade tip, to an accuracy of 1/8 inch. Rotate the blades until the next blade is in the measuring position. Repeat measurement for each blade. If all blade levels are not equal, you can adjust blade levels by the following procedure: **To adjust a blade tip down, insert a washer(not supplied) between the blade and blade bracket at the screw closest to the motor. **To adjust a blade tip up, insert washer (not supplied) between the blade and blade bracket at the two screws farthest from the motor.6. Interchanging two adjacent blades could redistribute the weight and possibly result in smoother operation.
If light does not work or flickering	<ol style="list-style-type: none">1. Check for loose or disconnected wires in fan switch housing.2. Check the wiring of receiver to the light kit.3. Check for loose or disconnected wires in light kit, make sure connector is correct inserted.4. Check for faulty light bulbs. (light bulb version only)5. There is too many ceiling fans with different control system in the same area, shut down other ceiling fan to check if still flickering. <p>CAUTION: Make sure main circuit is turned off before entering switch housing.</p>

CEILING FAN LIGHT

CONTACT US


1 Log into your Amazon.com account,click “Returns&Orders” on the top-right corner.



2 Find your order in list and click “View order details” .



3 Click the “store name” following the Sold by, below the product title.

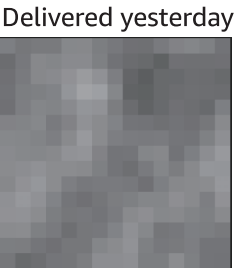

PRODUCT TITLE: LED LIGHT XX

Sold by: XXXXXXXXXX

Serial Numbers: XXXXXXXXXXXXXXXX

AZ: XXXXXXXXXXXXXXXXXXXXXXXX

Return eligible through XXX.XX XXXX \$XX.XX

4 Click the yellow button” Ask a question”, on the top-right corner, to contact the seller .



CUSTOMER SERVICE

30-Days Full Refund Guarantee

If you are not completely satisfied or the item isn't what you expected, just tell us within 30 days. We will give you a full refund unconditionally.

Friendly Reminder

It's better to contact us than leaving a negative shopping experience. Nothing is more important than your satisfaction, and we will do our best to serve you.

Quick Response within 12 Hours


You can contact us without any hesitation at any time of the day, and we will reply to you within 12 hours. (It would be appreciated if you could provide us with a video or pictures, if available)

2-year Warranty

We will send you brand new items for free or give you a full refund if any quality problems occur within 2 years from the date of purchase.

CEILING FAN LIGHT

REPLACE THE DOWNROD

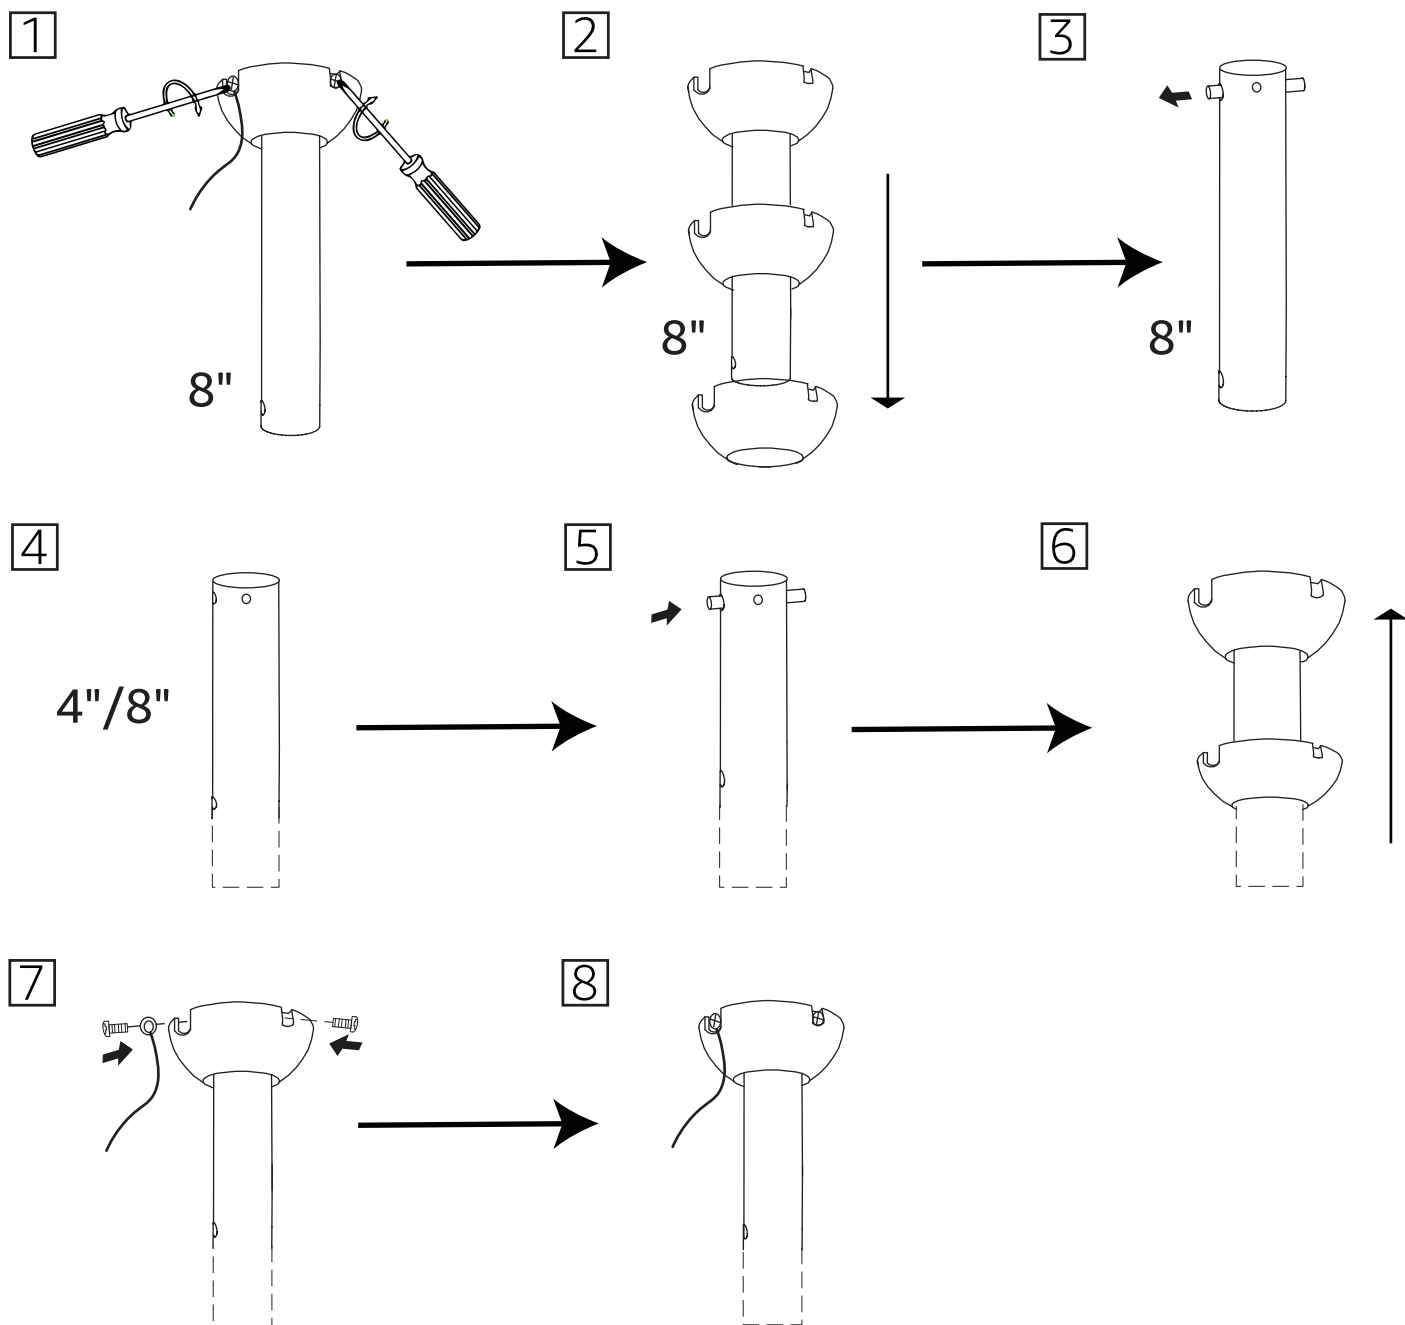

WARNING

Fan fall hazard

To prevent serious injury or death:

- Always follow the downrod assembly instructions exactly.
- Verify the downrod is assembled correctly by firmly pulling on the hanger ball.
- Pin must be reinserted to secure downrod assembly

