

Gourmia®



COLD BREW COFFEE MAKER

Model# GCM7800

USER MANUAL

Read this manual thoroughly
before using and save it for
future reference

FOR CUSTOMER SERVICE
QUESTIONS OR COMMENTS
VISIT US @ GOURMIA.COM
INFO@GOURMIA.COM
OR CALL 888.552.0033

Model: GCM7800
© 2019 Gourmia
www.gourmia.com
The Steelstone Group
Brooklyn, NY

All rights reserved. No portion of this manual may be reproduced by any means whatsoever without written permission from The Steelstone Group, except for the inclusion of quotations in a media review.

Although every precaution has been taken in the preparation of this manual, The Steelstone Group assumes no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein. Although every effort has been made to ensure that the information contained in this manual is complete and accurate, The Steelstone Group is not engaged in rendering professional advice or services to the individual consumer; further, The Steelstone Group shall not be held responsible for any loss or damage allegedly arising from any information or suggestion in this manual.



Welcome to the Exciting World of ***Cold Brewing*** **from Gourmia**

Congratulations on your purchase of the Cold Brew Coffee Maker from Gourmia, exclusively designed for fast cold brewed coffee!

If you enjoy the deep coffee flavor in cold brew yet dislike the long process of cold brewing—you've made the right choice.

With your new Gourmia Cold Brew Coffee Maker, your fresh and flavorful coffee is only moments away. We've designed a new vacuum technology that creates a high-pressure environment to powerfully and quickly extract flavor from the coffee grinds, reducing a day long process to just a few minutes. We're confident that you'll find your new Gourmia Cold Brew Coffee Maker easy and fun to use; with the end results being a delicious cold brew coffee.

The pages of this manual offer comprehensive instructions to guide you through the functions and features of the Gourmia Cold Brew Coffee Maker. Inside this guide you will also find information on its modes of operation, complete step-by-step instructions for the operation, assembly, cleaning, and maintenance of your appliance.

Please read all safety instructions thoroughly to ensure safe usage at all times.

Thank you for your purchase! We sincerely hope you will enjoy this as well as the many innovative products brought to you by Gourmia.

IMPORTANT SAFEGUARDS

Before using this electrical appliance, the following basic precautions should always be followed:

1. Remove all bags and packaging from the appliance before use.
2. Unplug the appliance when not in use.
3. All parts must be properly assembled before use.
4. To protect against risk of electric shock, never immerse cord, plug, or main unit in water or any other liquid.
5. Operate appliance on a stable and dry surface.
6. Do not operate the appliance with a damaged cord or plug. If the appliance malfunctions or is damaged, contact customer service.
7. Do not use attachments that do not come with the appliance.
8. This appliance is intended for indoor and household use only.
9. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge unless they are supervised and instructed by a person responsible for their safety.
10. When cleaning, never immerse the main unit in water or any other liquid. Instead, wipe the surface with a soft, damp cloth and dry thoroughly.
11. Children should be supervised to ensure that they do not play with the appliance.
12. Do not leave the appliance unattended.
13. Use only cold water or room temperature water. Never use hot water.

SAVE THESE INSTRUCTIONS



TABLE OF CONTENTS


Know Your Coffee Maker6

Using Your Coffee Maker.....8

Cleaning & Maintenance.....10



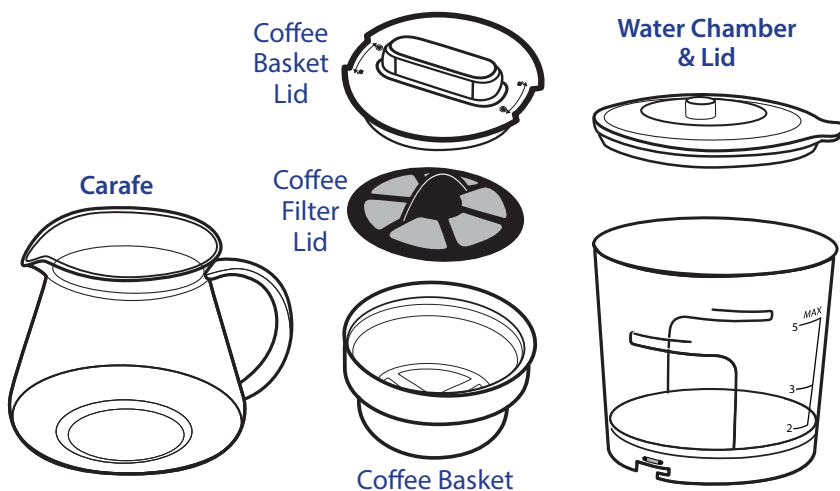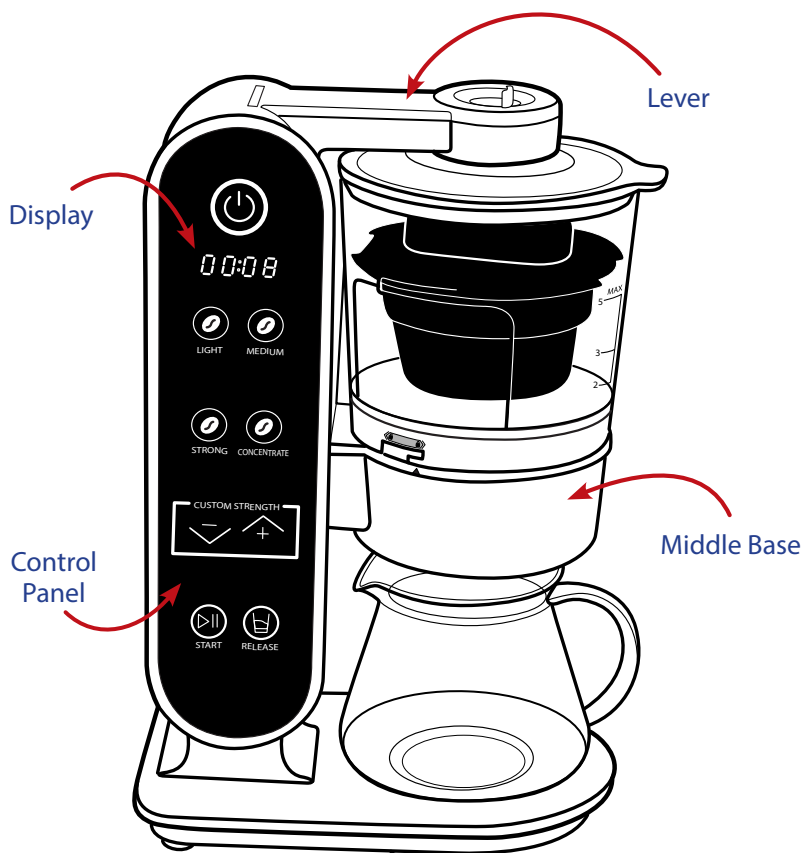

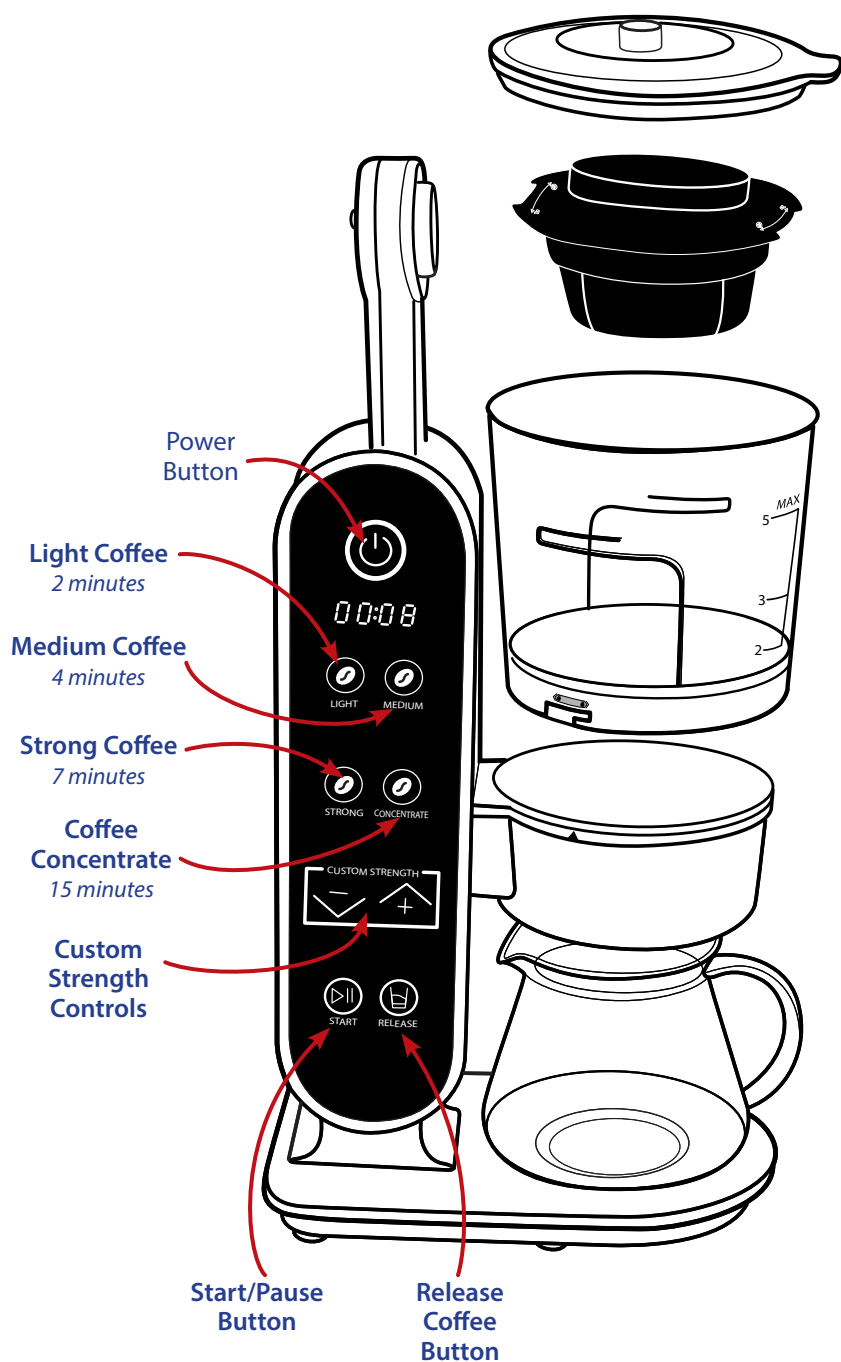

1. Lift the Lever.
2. Add coffee grinds into the coffee basket. Maximum coffee weight is 60 grams.


3. Place the coffee filter lid inside the coffee basket above the coffee grinds.
4. Screw the coffee basket lid onto the coffee basket, until it locks into place. For best results, make sure the lid is screwed on tightly.
5. Place the coffee basket into the water chamber. Align the open lock icon with the arrow on the inside of the water chamber and turn clockwise to align the lock icon with the arrow.
6. Add room temperature water to the water chamber and place it on the middle base. Turn the water chamber clockwise to lock it into place. Align the lock icon with the arrow on the middle base.

The diagram illustrates the assembly of the water chamber into the blender jar. The top part shows the water chamber being lowered into the jar. The middle part is a circular inset labeled "Water Chamber Inner View" showing the internal components. The bottom part is another circular inset showing the water chamber being secured with a latch.

7. Place the water chamber lid on top of the water chamber.
8. Push the lever down.
9. Place the coffee carafe onto the base plate.
10. Plug in the appliance.
11. Press the power button to turn on the machine. Then choose your brewing strength by pressing one of the preset options.

To customize the strength, use the custom strength controls to increase or decrease the brewing time from 2 minutes to 30 minutes. The controls will increase / decrease the brewing time in 15 second increments.

12. Press the start button to begin.
13. The coffee will release into the coffee carafe when the brewing cycle is complete.

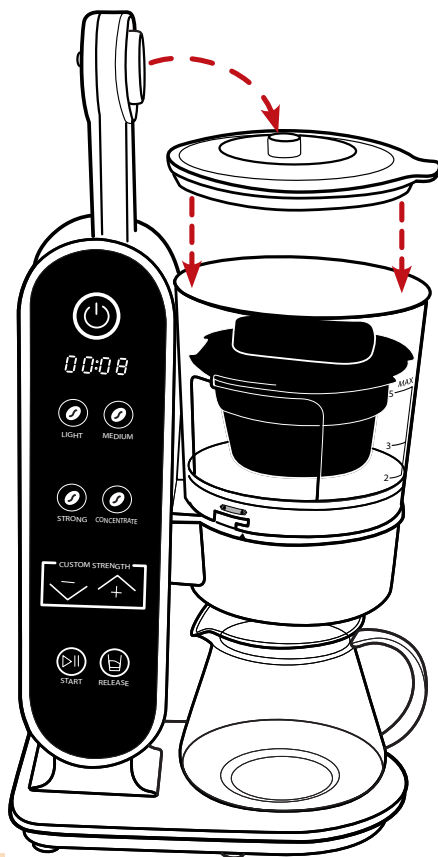

Note: During the brewing cycle, you can press the release button to release your cold brew coffee.

BREWING CYCLE

LIGHT	2 minutes
MEDIUM	4 minutes
STRONG	7 minutes
CONCENTRATE	15 minutes

CLEANING AND MAINTENANCE

1. Lift up the lever and remove the coffee basket.
2. Pour cold water into the water chamber and put the water chamber lid back on.
3. Run a few cycles to clean out the cold brew.
4. The carafe, water chamber lid, coffee basket lid, coffee filter lid, coffee basket, and water chamber can all be cleaned in a dishwasher or with warm soapy water and rinsed thoroughly.

Note: *Never immerse the main unit in water or any other liquid.*



STORAGE

- Make sure all parts are clean and dry.
- Store in a clean and dry place.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Guarantee and service

If you need service or information or if you have a problem, please visit our website or contact your distributor.

WARRANTY & SERVICE

This Limited Warranty is for one full year from the date of purchase. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at the seller's discretion. In the event that repair isn't possible, the seller will replace the product/part. If product repair/replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned.

Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.

**FOR CUSTOMER SERVICE
QUESTIONS OR COMMENTS
VISIT US @ GOURMIA.COM
INFO@GOURMIA.COM
OR CALL 888.552.0033**

