

ACTIVESHOP[®]

Instructions for use

Activ Power J202 milling machine



Importer:

ACTIVESHOP Sp. z o.o.
ul. Graniczna 8b, bud.
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/05/2025



Scan for
different
language
s




Functional milling machine Activ Power J202 is a device that is perfect for performing manicures and pedicures. It allows you to efficiently prepare your nails for further treatments and makes it much easier to remove the remains of previous styling. Good balance of the head, well-thought-out functionality and a multitude of available options make the milling machine perfect for professional use.

Technical specifications:

Rated voltage	220-240 V, 50 Hz
Power	65 W
Net weight	674 g
Dimensions	14 x 17 x 8.5 cm
Output voltage	3-15 V
Current	1 A
Rotational speed	Max 35000 rpm.

Package includes:

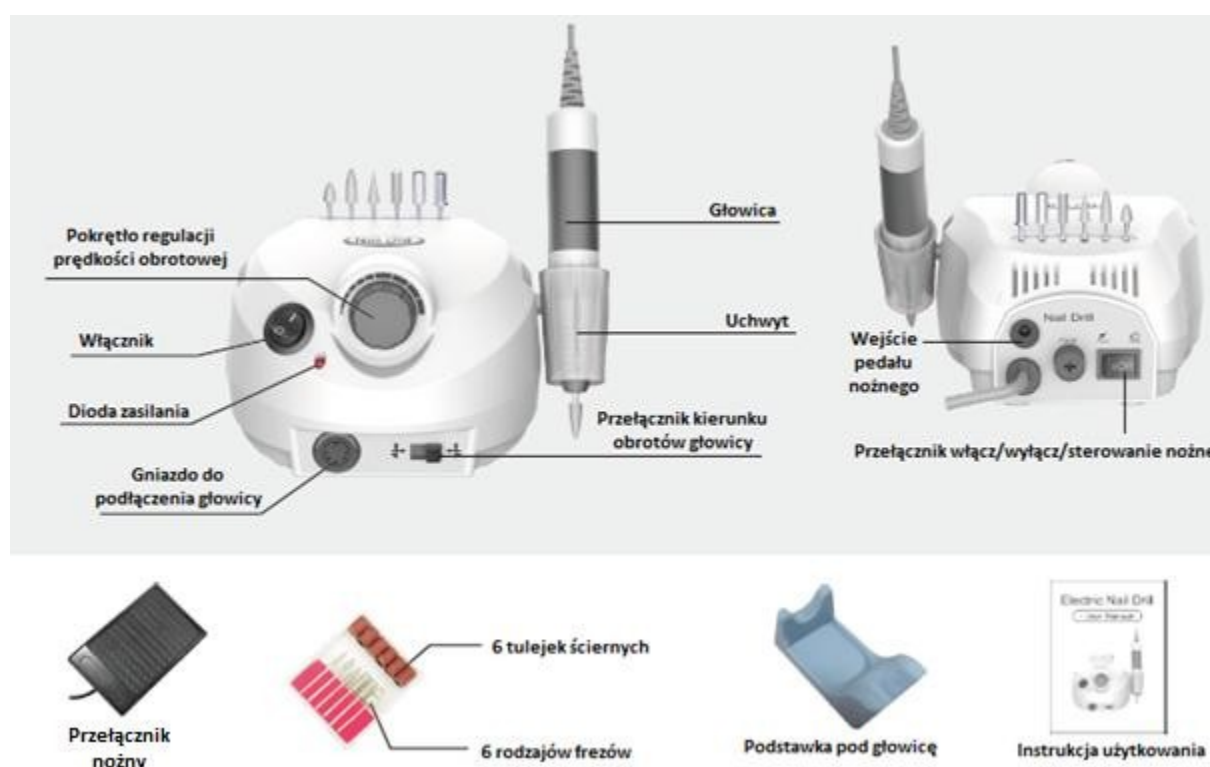

Connecting and commissioning

1. Connect the head plug to the head connection socket on the control unit.
2. Connect the foot switch to the foot switch socket, if needed.
3. Select the cutter that suits you and insert it into the head accordingly (look at the next page for instructions on how to install and remove the cutter).
4. Turn the speed control knob to the left.
5. Insert the power cord into the electrical outlet.

Replacing the cutter



1. Turn the head handle clockwise until you hear a click.
2. Pull out the cutter.
3. Insert the selected cutter in the same place.
4. Turn the handle in the opposite direction to lock the cutter.
5. You can use the given cutter.

Using the cutter

1. Switch the switch to the "1" position.
2. Slide the "on/off/foot control" switch to "on" for manual control. The power LED will light up and the cutter will start to rotate slowly.
3. Change the rotation speed with the potentiometer to the right to increase the speed. Make sure you set the speed within a reasonable range.
4. When the switch is set to foot control, press the foot switch and the cutter will begin to rotate according to the speed set on the potentiometer.
5. Change the position of the head direction switch to change the head direction.

Attention:

Always start operating the device at the minimum speed.

Make sure you set the cutter rotation to the minimum speed before changing the direction of rotation.

If the power LED does not light up when using the device, check the fuse and replace it if necessary.


Permissible speed

- The permissible speed may vary slightly, depending on the materials of the cutter or its type.

Note

- Use only recommended cutters.
- Always remove dirt before replacing the cutter.
- Make sure you do not exceed the maximum speed specified by the manufacturer or distributor for the cutter you are using.

ROZMIAR	PRĘDKOŚĆ MAX
5mm	41000
7mm	30000
10mm	20000
13mm	16000

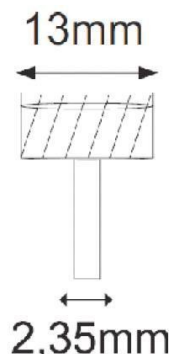

- Large cutters, even when run below their maximum rated speed, may begin to vibrate. Speed should be reduced immediately to prevent damage to the cutter, the bit or the user.
- Always use a good quality cutter.

Cleaning and maintenance

Always turn off and unplug the machine before cleaning. Use a soft, dry cloth to clean the cutter.

Remove the cutter from the head and put it in the box.

Store the device in a cool and well-ventilated area.

Caution:

Never use chemical solvents, etc. to clean the control unit or head.

Never pour water or other liquids directly on the control unit or head.

SAFETY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel avoids undesirable consequences during treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All service and repair work must be performed only by an employee of an authorized service center (ACTIVESHOP SP. Z O.O. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately remove the plug from the socket and contact the authorized service provided by ACTIVESHOP SP. Z O.O. in the following cases:
 - (a) liquid has entered the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.
5. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
6. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the stated life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device its damage and even burning.

CAUTION:

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons with impaired physical and mental capabilities and persons without experience and knowledge of the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unsupervised when children or persons without sufficient knowledge in the use of the appliance are near it.
5. This electrical appliance is not a toy. Improper use of or contact with an electrical appliance electrical device may pose a health risk or lead to death, so use and store the device out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be thrown into household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and

then handed over to collection points for waste electronic and electrical equipment.

At the end of their useful life, old appliances also contain full-value recyclable components, so they should be handed over for reprocessing. They should be handed over to the appropriate points collection, as well as they can be transferred to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in the original packaging. Store the device in a well-ventilated room with a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to shock mechanical or atmospheric factors.