



Exit Stopper[®]

STI-6400WIR Series



Features

- Alarm helps prevent unauthorized exits/entries through doors.
- Easy to install.
- Select volume, alarm duration and delay settings.
- May be mounted on top, right, left or next to almost any door.
- User can select on-site whether to use an alarm or annunciator.
- Less expensive than heavy horizontal bar type units and practical for all emergency doors.
- Contact STI for custom applications.

We protect the things that protect you.[®]

Table of Contents

- Warnings and Cautions..... Page 2
- Warranty Information..... Page 2
- Specifications Page 3
 - 1. Dimensions Page 3
 - 2. Polycarbonate..... Page 3
 - 3. Electronics Page 3
 - 4. Remote Horn Page 3
- Circuit Board Set-Up..... Page 4
- Terminal Strip Layout..... Page 4
- Switch Settings..... Page 4
- Alarm Feature Description Page 5
- Installation Instructions..... Page 6
- Mounting Options Page 7

Warnings

All units are recommended for indoor use, not for outdoor use. Unit must be tested periodically to verify the life of battery. STI recommends you change the 9 Volt battery twice a year. Installer may need to purchase a simple audio-meter, typically available at your local electronics store, to measure the sound in areas where the alarm is expected to be heard during normal noise environment. Results from this test may prove it beneficial to purchase additional exit stopper units.

All specifications and information shown are current as of publication and subject to change without notice.

Warranty Information

- Three year guarantee against breakage of polycarbonate in normal use (one year on electro mechanical and electronic components).
- Electronic warranty form at www.sti-usa.com/wc14

Specifications _____

Polycarbonate Enclosure

Dimensions	5.375" W x 5.375" H x 2 " D (137mm x 137mm x 51mm)
Flammability	UL94 V-2
Wall Thickness	0.12 in (3.05mm)

Electronics: STI-6400 - All Units


Power Source	9 VDC Alkaline or 12V-24VDC wired Class II UL Listed transformer
Horn Volume at 1 ft.	95 dB low / 105 dB high
Relay Output	Form C Dry Contacts 0-30 VDC or VAC, 1 Amp
Stand by Current	10uA
Alarm Current	130mA at 95 dB / 200mA at 105 dB
Operating Temperature Range	32° to 113°F (0° to 45°C)

Electronics: STI-6403 and STI-6404 - Remote Horn Unit

Power Source	9 VDC operating power* only
Horn Volume at 1 ft.	95 dB low / 105 dB high
Stand by Current	0 A
Alarm Current	50mA at 95 dB/ 200 mA at 105 dB

* Power source for the STI-6403 and STI-6404 Remote Horn uses a separate power source from the STI-6400 alarm. The Remote Horn contains an internal 9 volt battery. Horn operates when the Form C contact at main unit is activated on alarm.

Circuit Board Set-up

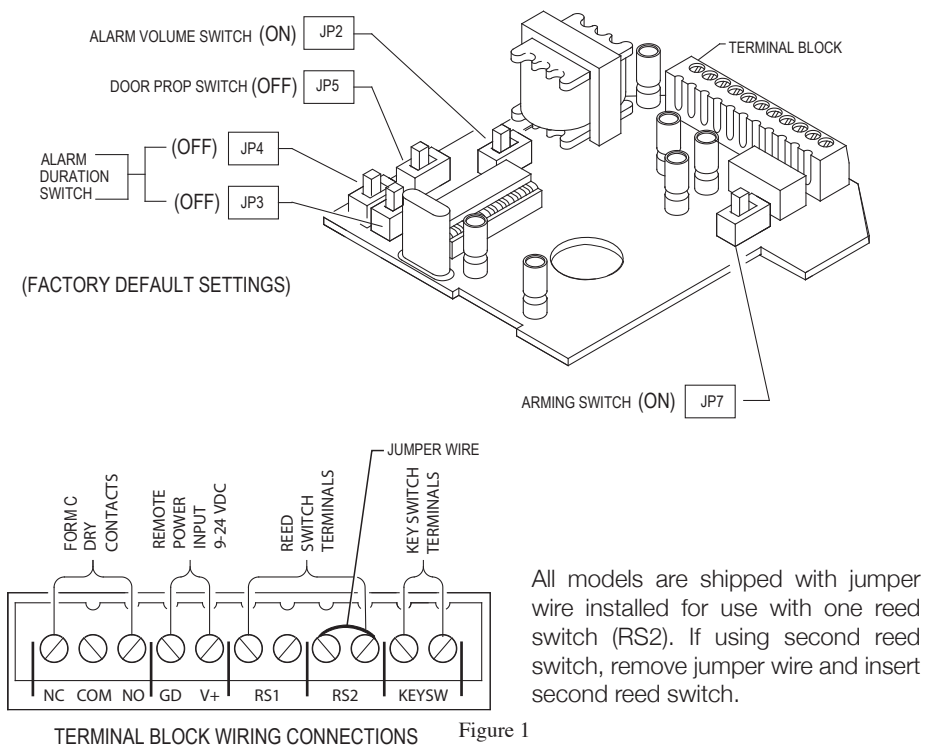

Switch Settings

FEATURE	JP2	JP3	JP4	JP5	JP7
Volume - High (105 dB) at 1 ft.	ON*				
Volume - Low (95 dB) at 1 ft.	OFF				
Duration - 30 Second Alarm		OFF*	OFF*		
Duration - 180 Second Alarm		OFF	ON		
Duration - Continuous Alarm		ON	OFF		
Duration - Annunciator Mode		ON	ON		
Trip - Immediate				OFF*	
Door Prop Mode				ON	
Arming - Immediate					ON*
Arming - 30 Second Delay					OFF

Slide black lever to desired ON/OFF position as labeled on circuit board.
*Factory Settings

Alarm Feature Description

- **Volume Switch JP2** - Sets alarm volume to high 105 dB or low 95 dB.
- **Duration Switch JP3 and JP4** - Amount of time alarm sounds after trip. Arming resets at end of duration if door is closed. Alarm will not reset if in continuous mode; alarm will sound until reset with the key or until battery is drained.

Annunciator mode will sound a series of short beeps until door is closed or 15 seconds.

- **Door Prop Mode Switch JP5** - Once unit is armed with the key (OFF to ON) the alarm will sound if the door remains open for 15 seconds. If the door opens and closes within 15 seconds, the alarm will not sound.
- **Arming Delay Switch JP7** - Delays arming of alarm for 30 seconds. To start arming delay timing, cycle the key switch (OFF to ON). Door must remain closed for 30 seconds for alarm to arm.

Test Alarm

Note: STI recommends testing the alarm in factory settings (see Switch Settings) prior to mounting.

1. Make sure key switch is in the OFF position.
2. Remove tamper screw on the side of the unit using the tamper wrench provided. Remove housing cover. Save the tamper wrench for future service and battery replacement (Fig. 2).
3. Connect battery.
4. Place magnet next to reed switch. Note: For STI-6402 model, insert jumper wire in RS2 terminals or install second reed switch and place magnet next to reed switches 1 & 2.
5. Turn the key switch to the ON position.
6. Move magnet away from reed switch. Unit should alarm immediately.
7. Turn unit off with the key to silence alarm.

Installation Instructions

1. Set switches on circuit board to desired alarm settings (Fig. 1).
2. If using external power source, use Class II UL Listed transformer. 9V battery will be in no-load standby.
3. Mount main unit on or next to the door using hardware provided. Reed switch may be moved to one of four positions shown in Fig. 2 or you may route the reed switch through the knockout in the bottom of the cover as shown in Fig. 3.
4. Mount magnet using hardware provided. Magnet must be within $\frac{3}{4}$ " of the reed switch when door is closed. Please refer to figures 7, 8 and 9 for other mounting options.
Note: When mounting on metal doors or door frame, use plastic spacers provided. Magnet must be within $\frac{3}{8}$ " of the reed switch when door is closed.
5. Replace cover by sliding flanges on inside of cover into slots on base, snap closed and replace the tamper screw.

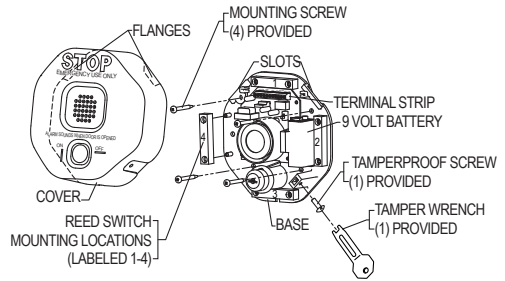


Figure 2

VIEW SHOWING MAGNET INSTALLATION


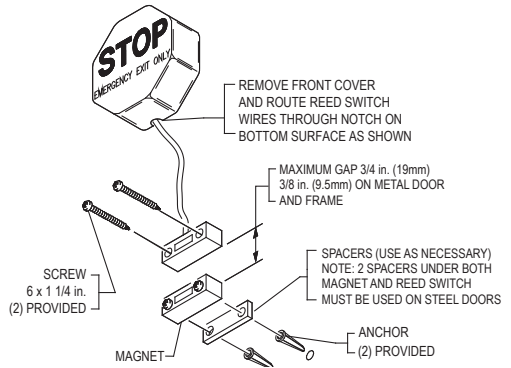


Figure 3

STI-6402WIR Double Door Install Notes

1. If not using extra reed switch, leave jumper wire across terminals RS2 on terminal block.
2. Determine length needed for reed switch wires. STI provides 1 reed switch with 6 ft. wires. Cut to desired length.
3. Connect first reed switch in RS1 and second in RS2 (Refer to Fig. 1 for additional details.)

*Note: Alarm will sound when either door is opened.

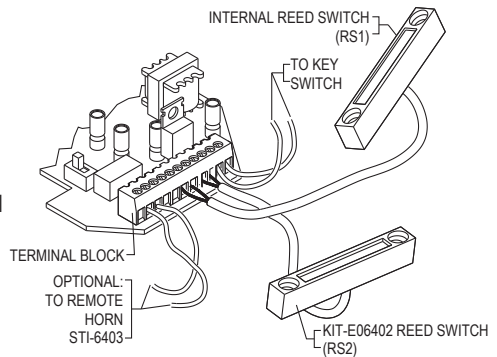

VIEW SHOWING INSTALLATION OF

Figure 4

Mounting Options



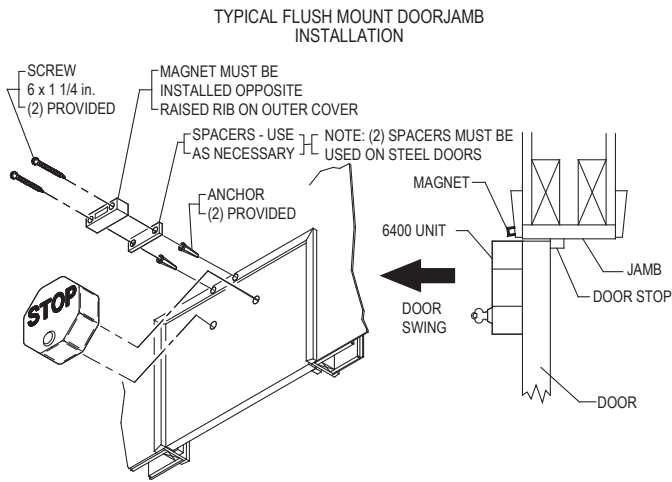


Figure 7

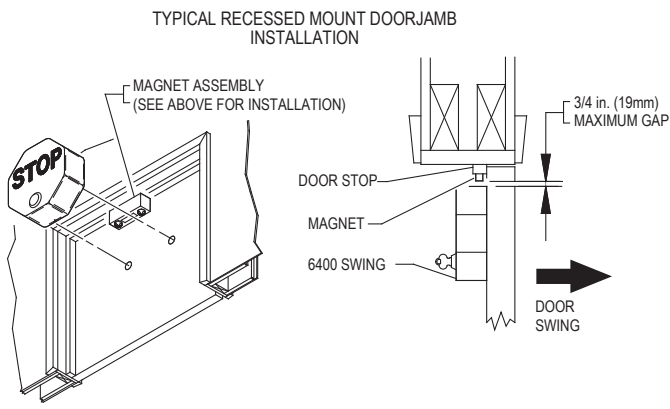

*Note: When mounting reed switch on door and the main unit on wall, wire service loop must be used. Figure 8

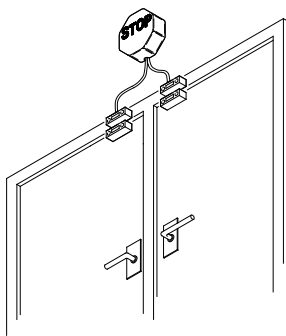

TYPICAL DOUBLE DOOR INSTALLATION
STI-6402WIR

Figure 9

Rely on STI®



USA



**Safety Technology
International**



EMEA

2306 Airport Rd • Waterford, MI 48327, USA

Phone: 248-673-9898 • info@sti-usa.com • www.sti-global.com

Taylor House • 34 Sherwood Road • Bromsgrove, Worcestershire • B60 3DR • England
Tel: +44 (0)1527 520 999 • info@sti-emea.com • www.sti-global.com

Unit 7A • Lockhead Avenue • Airport Business Park • Waterford • X91 HWF2 • Ireland
info@sti-emea.com • www.sti-global.com