



(Back View)

**LEAVE THIS CARD IN THIS ROOM**

Instruction continue on the back

## REMOTE VOLUME CONTROL OF MICROPHONES

### XD TEACHER MICROPHONE (OWN) LEVEL ADJUSTMENT

Press either the *UP* or *DOWN* arrow button to increase or decrease the volume level of the Teacher Microphone. A *green* LED over the OWN (for own microphone) will flash with each press.

The *SELECT* button determines which level will be controlled by the UP/DOWN buttons.

Volume Up

Volume Down



### XD STUDENT MICROPHONE (OTHER) LEVEL ADJUSTMENT

To adjust the XD Student Microphone (OTHER) volume, first press the *SELECT* button so that the LED over the *OTHER* label comes on. Now press the UP/ DOWN buttons to control the level of the OTHER microphone.



## TURNING ON DEVICES

To turn on the XD Solo, flip the *switch* on the back of the device to the *On* position. The battery indicator lights to the left should be illuminated.



To turn on the XD Teacher Mic, press and hold the *PWR/MUTE* button until the *BATT* indicator light glows green. To turn off the XD Teacher Mic, press and hold the *PWR/MUTE* button for approximately three seconds or until the *BATT* indicator light turns off.



## WIRELESS AUDIO PAIRING

1. Press the *power/MODE* button to activate the *Wireless Audio* function. Press the *power/MODE* button again to turn the *Wireless Audio* function off.
2. When the *Wireless Audio* function is activated successfully, the screen will show "*Wireless Audio Disconnected*", then it is ready to pair.
3. Activate the *Wireless Audio* connection on any *Wireless Audio* capable device.
4. Find the device name "*TQ8*" on the pairing list to connect the device.
5. When the pairing is successful, the speaker will emit a tone and the screen will show "*Connected.*"
6. The speaker is ready to stream audio from the device.

