

BRAUN

Series 5

5系



91136113/XI-16



电动剃须刀

5197cc

5090cc

5050cc

5147s

5145s

5040s






wet & dry




干湿两用

Type 5769

型号 5769

        www.braun.com

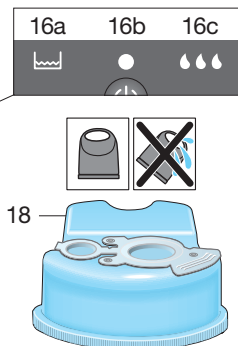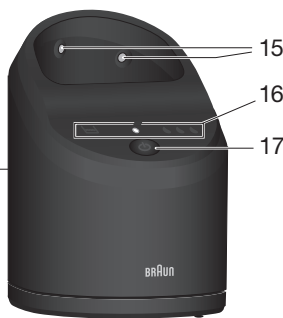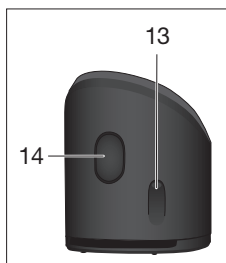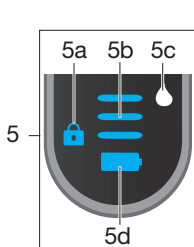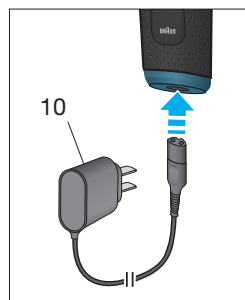

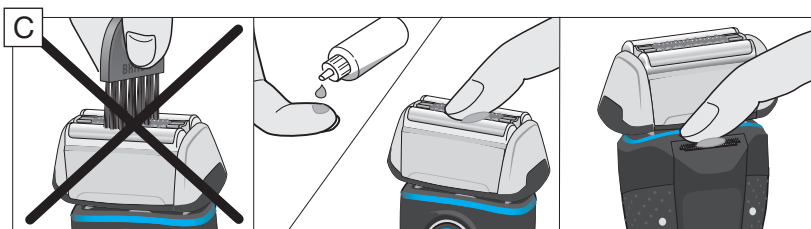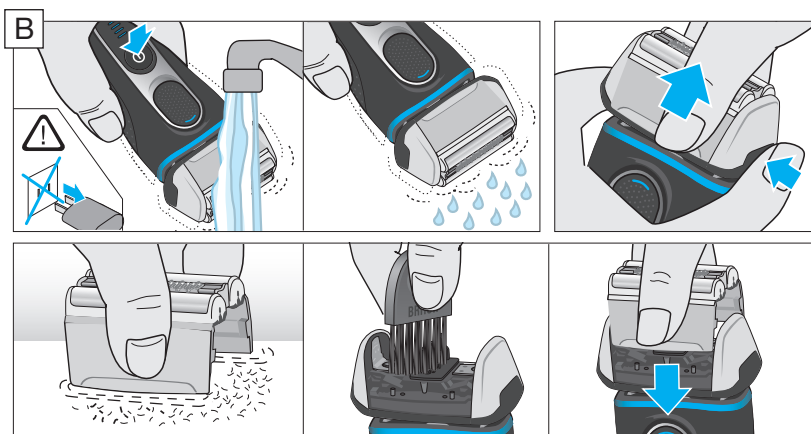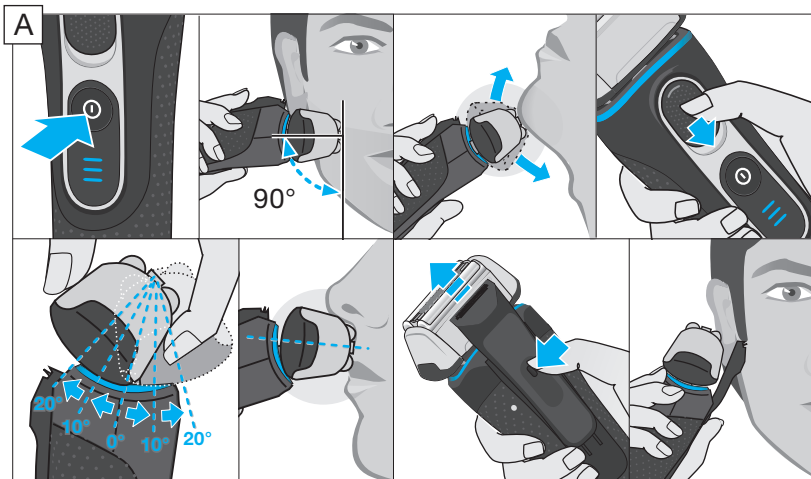

最新Braun售后服务部地址

城市	公司名称	地址	联系电话
中区			
200085	上海 上海开呈家电维修服务有限公司	上海市闸北区虬江路1009号(近西藏北路)	63566755/56329466
201100	上海 上海千捷家电有限公司	上海市闵行区雅致路31弄1号105室	64122533
201112	上海 上海馨美电器有限公司	上海市浦锦路2049弄39号301(万科VMO商务中心)(地铁8号线芦恒路站)	20916662
310016	杭州 杭州中侨家电维修服务有限公司	杭州市采荷路10号	86047438
215000	苏州 苏州普捷伦电器有限公司	苏州市平江区平四路37号	68662852/68662880
266071	青岛 青岛华海信业电子电子有限公司	青岛市南区银川西路3号政泰商务楼202室	85977910
361003	厦门 厦门市思明区新鹭声电子技术服务部	厦门市后溪溪路248号之6、7、8号	5170118
210003	南京 南京博伊华电子电器经营部	南京市中山北路223号建达大厦	83420092
214031	无锡 无锡讯通通信设备服务有限公司	无锡市五爱北路27号	82729805
213001	常州 常州市金博家电经营部	常州市天宁区迎宾路江南佳园4-S-10	88836628
226001	南通 崇川区明瑞电器维修服务中心	南通市南川园通明花苑6幢106店面	96889688/85102088
315040	宁波 宁波市江东明楼币城家电维修部	宁波市江东惊驾路508号	87771344
315000	宁波 宁波海曙创佳数码家电维修部	宁波市海曙区迎春街98号	87134422/56682009
230001	合肥 合肥市包河区国升电器维修安装服务部	合肥市经开区青龙潭路长安花园安尔斯堡9栋107商铺	63682143/68992143
450000	郑州 郑州百川电器技术有限公司	郑州市北下街79号	66964036
330003	南昌 南昌市西湖区海洋电器服务部	南昌市永叔路6号	86215790/82175587
北区			
100078	北京 北京盛侨家用电器维修服务中心	北京市丰台区方庄芳群园2区6号楼金芳公寓408室	67698025/67630617
100035	北京 北京盛侨家用电器维修服务中心	北京市西城区德胜门内大街54号	66561976
300022	天津 天津市大东电器维修有限公司	天津市和平区河北路50号信德大厦512室	27120167/27120168/27120170
110011	沈阳 沈阳市今东业家电技术服务有限公司	沈阳市沈河区承德路36-1	24870309/24855340
150020	哈尔滨 哈尔滨市道外区尼康映像数码维修站	哈尔滨市道外区南勋街18号	88940125
116021	大连 大连中服电子技术服务中心	大连市沙河口区西南路800-2号	66841988
130021	长春 长春圣炎电子产品有限公司	长春市朝阳区桂林路1810号(工农大路 with 桂林路交汇路口30米)	85676646
710014	西安 陕西百利商贸有限公司	西安市高新区高新一路15号阳光大厦6楼	88756202
南区			
510600	广州 广州市博健电器有限公司	广州市五羊新城明月二路春风路E-12栋首层	87386165(6)
528403	中山 中山市益华维修中心	中山市东区夏洋街26号	88884250
518028	深圳 深圳市顺电连锁股份有限公司	深圳市福田区香梅北路天健天然居商业中心2006号	83286255
400020	重庆 江北区中侨家电维修部	重庆市江北区建新南路18号城市领地A栋附2楼7号门市	63527117
530001	南宁 南宁市南方家电维修中心	广西南宁市唐山路29号首层	3118895/3907787
650051	昆明 昆明松和电器有限公司	昆明市环城北路280号	3645557
430015	武汉 武汉市江岸区兆利达家电维修中心	武汉市唐家墩路201号新大陆城市花园E栋1单元101室	85730517/85790611
610017	成都 成都市武侯区金维电子经营部	成都市大安东路57号3-6号	86944135/3528
528200	佛山 佛山市禅城区得圣家电维修部	佛山市禅城区城门西商业街9号之二、之三	83213535
350001	福州 福州福春电器维修服务有限公司	福州市晋安区塔头路三角池63号嘉源欣苑1座16-18店	87582122/87555110
325000	温州 温州市声像技术服务公司	温州市锦绣路利苑花苑5幢一层南1-05号	88850706/10187

上海涵思贸易有限公司可办理零件及产品邮购 电话: (021)64606449
 E-mail: sp-order@hansi.sh.cn 邮编: 201100
 注: 如果当地无特约维修站, 请与就近的维修站联系。
 或登陆博朗售后网站 www.braun-service.com.cn 获得服务。

BRAUN
博朗

广州宝洁有限公司

地址: 广州市经济技术开发区滨河路一号

售后服务日常联系地址: 中国上海浦东三林路550号 邮编: 200124

上述售后服务部地址确定于2015年7月, 可能有不定期更新。如有疑问, 请咨询客户服务热线。



手机扫描二维码
进入博朗售后网站

English

Our products are designed to meet the highest standards of quality, functionality and design. Thank you for your trust in Braun's quality and we hope you enjoy your new Braun product.

Read these instructions completely, they contain safety information. Keep them for future reference.

Warning

Your appliance is provided with a special cord set, which has an integrated Safety Extra Low Voltage power supply. Do not exchange or tamper with any part of it, otherwise there is risk of an electric shock. Only use the special cord set provided with your appliance.

If the appliance is marked  492, you can use it with any Braun power supply coded 492-XXXX.



This appliance is suitable for cleaning under running water and use in a bathtub or shower. **For safety reasons it can only be operated cordless.**

Detach the shaver from the power supply before using it with water.

Do not shave with a damaged foil or cord.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the safe use of the appliance and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.

Clean&Charge Station

To prevent the cleaning fluid from leaking, ensure that the Clean&Charge Station is placed on a flat surface. When a cleaning cartridge is installed, do not tip, move suddenly or transport the station in any way as cleaning fluid might spill out of the cartridge. Do not place the station inside a mirror cabinet, nor place it on a polished or lacquered surface.

The cleaning cartridge contains a highly flammable liquid so keep it away from sources of ignition. Do not expose to direct sunlight and cigarette smoking nor store it over a radiator.

Do not refill the cartridge and use only original Braun refill cartridges.

Shaver

- 1 Foil & Cutter cassette
- 2 Cassette release button
- 3 MultiHeadLock switch
- 4 On/off switch
- 5 Shaver display
- 5a Lock symbol (travel lock)
- 5b Charging segments
- 5c Cleaning indicator
- 5d Battery symbol
- 6 Long hair trimmer
- 7 Shaver-to-station contacts
- 8 Release button for long hair trimmer
- 9 Shaver power socket
- 10 Special cord set (design can differ)
- 11 Protection cap*
- 12 Travel case*

* not with all models

First use and Charging

Connect the shaver to an electrical outlet by snapping the special cord set (10) into the shaver power socket (9) or for cc models via the Clean&Charge Station (see Chapter «Clean&Charge Station»).

Basic operating information

- A full charge provides up to 50 minutes of cordless shaving time. This may vary according to your beard growth and environmental temperature.
- Recommended ambient temperature for charging is 5 °C to 35 °C. The battery may not charge properly or at all under extreme low or high temperatures.
- Recommended ambient temperature for storage and shaving is 15 °C to 35 °C.
- Do not expose the appliance to temperatures higher than 50 °C for extended periods of time.
- When the shaver is connected to an electrical outlet, it may take some minutes until the display illuminates.

Charging / low charge

The charge status is shown in the shaver display (5).

- During charging the respective charging segment (5b) will blink.
- When the shaver is fully charged and connected to an electrical outlet, all 3 charging segments will light up for a few seconds. Then the display turns off.
- The battery symbol (5d) will flash red, when the battery is running low. You should be able to finish your shave. With switching off the shaver a beep sound reminds of the low charge status.

Using the shaver

Press the on/off switch (4) to operate the shaver.

Tips for a perfect dry shave

For best results, Braun recommends you to follow 3 simple steps:

1. Always shave before washing your face.
2. At all times, hold the shaver at the right angle (90°) to your skin.
3. Stretch your skin and shave against the direction of your beard growth.

MultiHeadLock switch (head lock)

To shave hard-to-reach areas (e.g. under the nose) slide the MultiHeadLock switch (3) down to lock the shaver head. The shaver head can be locked in five positions.

To change position, move the shaver head with your thumb and forefinger back or forth. It will automatically click into the next position.

For automatic cleaning in the Clean&Charge Station the head lock should be released.

Long hair trimmer

To trim sideburns, moustache or beard press the release button (8) and slide the long hair trimmer (6) upwards.

Travel lock

- The lock symbol (5a) lights up in the display when the shaver has been locked to avoid unintended starting of the motor (e.g. for storing it in a suitcase).
- Activation: By pressing the on/off switch (4) for 3 seconds the shaver is locked. This is confirmed by a beep sound and the lock symbol in the display. Afterwards the display turns off.
- Deactivation: By pressing the on/off switch for 3 seconds again the shaver is unlocked.

Manual cleaning of the shaver

Cleaning under running water

- **Switch on the shaver (cordless) and rinse the shaver head under hot running water until all residues have been removed.** You may use liquid soap without abrasive substances. Rinse off all foam and let the shaver run for a few more seconds.

- Next, switch off the shaver, press the release button (2) to remove the Foil & Cutter cassette (1) and let it dry.
- If you regularly clean the shaver under water, then once a week apply a drop of light machine oil on top of the Foil & Cutter cassette.

The shaver should be cleaned after each foam usage.

Cleaning with a brush

- Switch off the shaver. Remove the Foil & Cutter cassette (1) and tap it out on a flat surface. Using the brush, clean the inner area of the pivoting head. Do not clean the cassette with the brush as this may damage it!

Clean&Charge Station (C&C) (not with all models)

The Clean&Charge Station has been developed for cleaning, charging, lubricating, disinfecting, drying and storing your Braun shaver.

- 13 Station power socket
- 14 Lift button for cartridge exchange
- 15 Station-to-shaver contacts
- 16 Clean&Charge Station display
- 16a Level indicator
- 16b Status light
- 16c Cleaning program indicators
- 17 Start button
- 18 Cleaning cartridge

Installing the C&C

- Remove the protection foil from the C&C display.
- Press the lift button (14) at the rear side of the C&C to lift up the housing.
- Hold the cleaning cartridge (18) down on a flat, stable surface (e.g. table).
- Carefully remove the lid from the cartridge.
- Slide the cartridge from the rear side into the base of the station until it snaps into place.
- Slowly close the housing by pushing it down until it locks.
- Using the special cord set (10), connect the station power socket (13) to an electrical outlet.

Using the C&C

Important: The shaver needs to be dry and free from any foam or soap residue!

Insert the shaver in the C&C upside down, with the front showing and released head lock (3).

The contacts (7) on the back of the shaver need to align with the contacts (15) in the C&C. Push the shaver in the correct position. A beep sound confirms that the shaver sits properly in the C&C.

The C&C analyzes the hygiene status. The status is shown by the cleaning program indicators (16c) in the C&C display (16).

Charging the shaver in the C&C

Charging will start automatically when the shaver has been placed in properly.

Cleaning the shaver in the C&C

When the cleaning indicator (5c) lights up in the shaver display, insert the shaver into the C&C, as described above.

Cleaning programs

- 💧 short economical cleaning
- 💧💧 normal level of cleaning
- 💧💧💧 high intensive cleaning

Start automatic cleaning

Start the cleaning process by pressing the start button (17). If status light (16b) does not shine (C&C switches to stand-by after ca. 10 minutes), press start button twice. Otherwise cleaning will not start. **For best shaving results, we recommend cleaning after each shave.**

Each cleaning program consists of several cycles, where cleaning fluid is flushed through the shaver head. Depending on your Clean&Charge Station model and/or program selected, the cleaning time takes up to 3 minutes. During this time the status light blinks. Leave the shaver in the station for drying. It takes several hours until remaining moisture evaporates depending on the climatic conditions.

After completing the cleaning and charging procedure, all indicators turn off.

Removing the shaver from the C&C

Hold the C&C with one hand and tilt the shaver slightly to the front to release it.

Cleaning cartridge / Replacement

When the level indicator (16a) lights up permanently red, the remaining fluid in the cartridge is sufficient for about 3 more cycles. When the level indicator blinks red, the cartridge needs to be replaced – about every 4 weeks when used daily.

After having pressed the lift button (14) to open the housing, wait for a few seconds before removing the used cartridge to avoid any dripping. Before discarding the used cartridge, make sure to close the openings using the lid of the new cartridge, since the used cartridge will contain contaminated cleaning solution.

The hygienic cleaning cartridge contains ethanol or isopropanol (specification see cartridge), which once opened will naturally evaporate slowly. Each cartridge, if not used daily, should be replaced after approximately 8 weeks to ensure optimal disinfection. The cleaning cartridge also contains lubricants for the shaving system,

which may leave residual marks on the outer foil frame and the cleaning chamber of the C&C. These marks can be removed easily by wiping gently with a damp cloth.

Accessories

Braun recommends changing your shaver's Foil & Cutter cassette every 18 months to maintain your shaver's maximum performance.

Available at your dealer or Braun Service Centres:

- Foil & Cutter cassette: 52S/52B
- Cleaning Cartridge: CCR
- Braun Shaver cleaner spray

Environmental notice

Product contains batteries and/or recyclable electric waste. For environment protection do not dispose of in household waste, but for recycling take to electric waste collection points provided in your country.



The cleaning cartridge can be disposed of with regular household waste.

Subject to change without notice.

For electric specifications, see printing on the special cord set.

Trouble-Shooting

Problem	Possible reason	Remedy
SHAVER		
Shaver does not charge completely and keeps blinking.	Ambient temperature is out of valid range.	Recommended ambient temperature for charging is 5 °C to 35 °C.
Charging does not start when connected to power socket.	1. Sometimes charging could start delayed (e.g. after long storage). 2. Ambient temperature is out of valid range. 3. Special cord set is not plugged in properly.	1. Wait a few minutes, if charging will start automatically. 2. Recommended ambient temperature for charging is 5 °C to 35 °C. 3. Special cord set needs to snap into place.

Unpleasant smell from the shaver head.	1. Shaver head is cleaned with water. 2. Cleaning cartridge is in use for more than 8 weeks.	1. When cleaning the shaver head with water only use hot water and from time to time some liquid soap (without abrasive substances). Remove Foil & Cutter cassette to let it dry. 2. Change cleaning cartridge at least every 8 weeks.
Battery performance dropped significantly.	1. Foil and cutter are worn which requires more power for each shave. 2. Shaver head is regularly cleaned with water but not lubricated.	1. Renew Foil & Cutter cassette. 2. If the shaver is regularly cleaned with water, apply a drop of light machine oil on top of the foil once a week for lubrication.
Shaving performance dropped significantly.	1. Foil and cutter are worn. 2. Shaving system is clogged.	1. Renew Foil & Cutter cassette. 2. Soak the Foil & Cutter cassette into hot water with a drop of dish liquid. Afterwards rinse it properly and tap it out. Once dry apply a drop of light machine oil on the foil.
Shaver head is damp.	1. Drying time after automatic cleaning was too short. 2. Drain of the Clean&Charge Station is clogged.	1. Clean directly after shaving to allow enough time for drying. 2. Clean the drain with a wooden toothpick.

CLEAN&CHARGE STATION

Cleaning does not start when pressing the start button.	1. Shaver is not placed properly in the Clean&Charge Station. 2. Cleaning cartridge contains not enough cleaning fluid (display blinks red).	1. Insert shaver into the Clean&Charge Station and push it to the rear side of the station (contacts of the shaver need to align with contacts in the station). 2. Insert new cleaning cartridge. Press start button again.
Increased consumption of cleaning fluid.	Drain of the Clean& Charge station is clogged.	– Clean the drain with a wooden toothpick. – Regularly wipe the tub clean.