 
 
 




Original	Replacement	Original	Replacement
	Zone Off		Shift + Power
	Zone On		Power
	Quick Select 1 (DVD)		1
	Quick Select 2 (SAT/CBL)		2
	Quick Select 3 (VCR/iPod)		3
	DVD		Shift + 2
	TV		Shift + 1
	iPod		Guide / EPG / -/-
	HDP		7
	Net/USB		8
	SAT/CBL		9
	VCR		4
	DVR		D.Menu / Top
	V.AUX		Fav / Marker / PC
	Tuner		6
	SAT TU		0
	DTU		5
	CD		Shift + 3
	Phono		Smart / List
	M.Zone Call		Display / Media
	CH+		CH+ / Page+
	Shift		Setup / OPT /
	Vol+		Vol+
	CH-		CH- / Page-
	Mute		Mute / Dimmer
	Vol-		Vol-
	Menu		Menu / Home
	Up		Up
	Memory		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Search		Red / Netflix / Search
	Down		Down



 


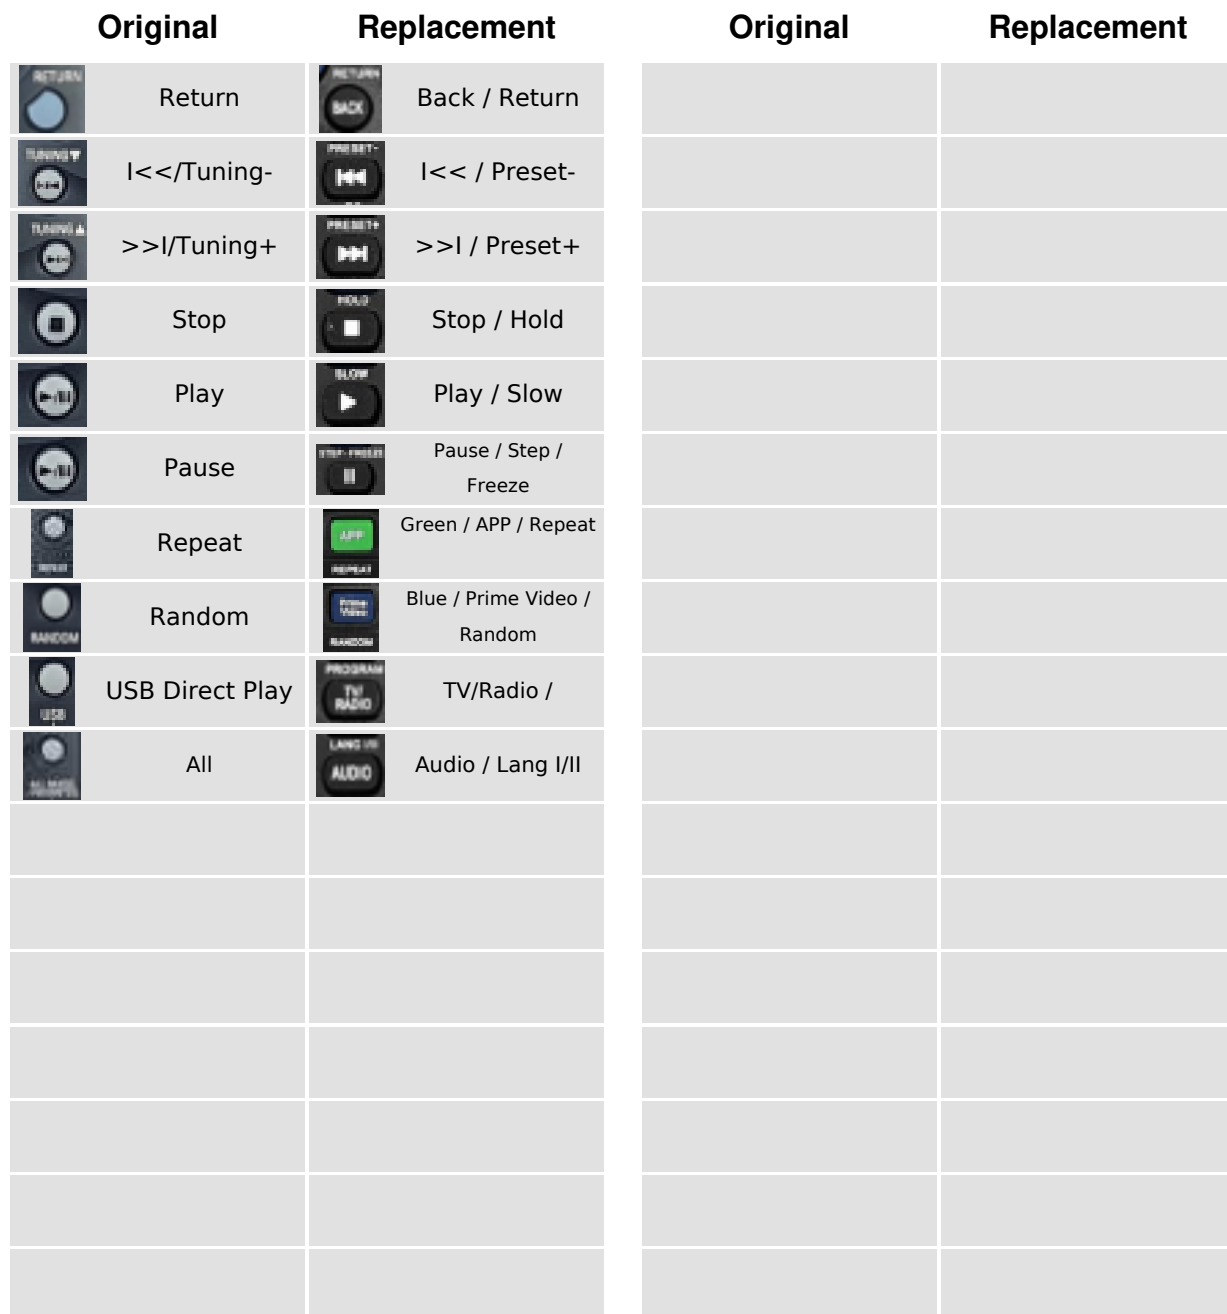

 
 
 
Original	Replacement
 Zone Off	 +  Shift + Power
 Zone On	 Power
 Quick Select 1 (DVD)	 1
 Quick Select 2 (SAT/CBL)	 2
 Quick Select 3 (VCR/iPod)	 3
 DVD	 +  Shift + 2
 TV	 +  Shift + 1
 iPod	 Guide / EPG / -/--
 HDP	 7
 NET/USB	 8
 SAT/CBL	 9
 VCR	 4
 DVR	 D.Menu / Top
 V.AUX	 Fav / Marker / PC
 Tuner	 6
 SAT TU	 0
 DTU	 5

 
Original	Replacement
 CD	 +  Shift + 3
 Phono	 Smart / List
 M.Zone Call	 Display / Media
 CH+	 CH+ / Page+
 Shift	 Setup / OPT /
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Menu	 Menu / Home
 Up	 Up
 Memory	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Search	 Red / Netflix / Search
 Down	 Down



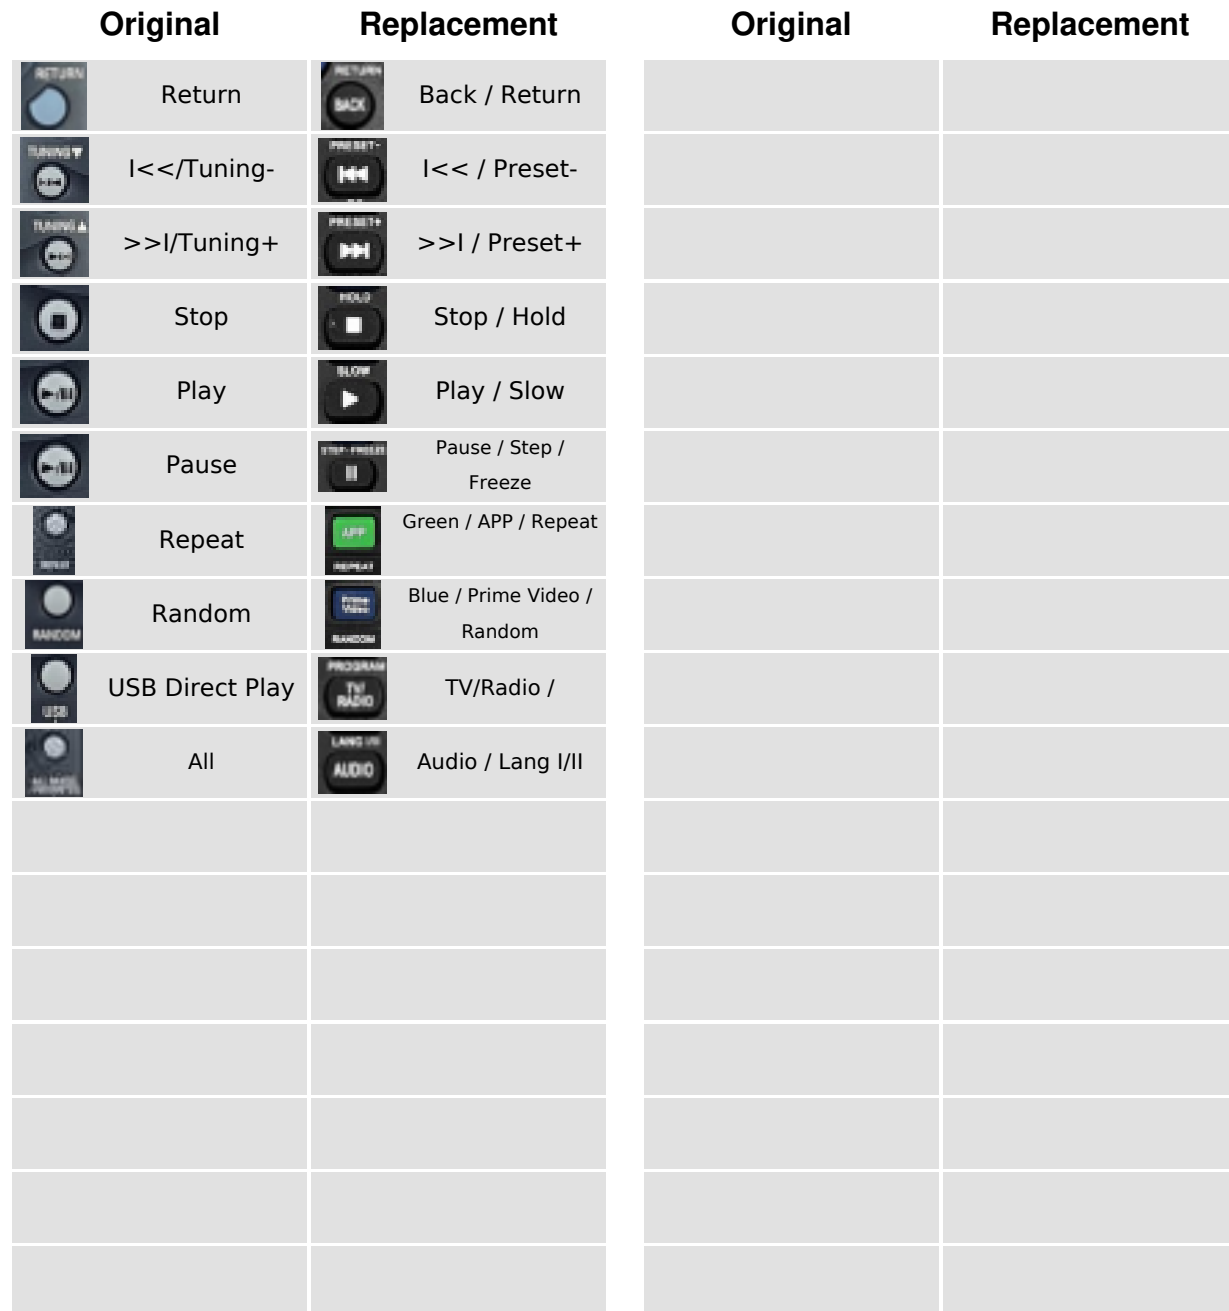 




Original	Replacement
 Zone Off	 Shift + Power
 Zone On	 Power
 Quick Select 1 (DVD)	 1
 Quick Select 2 (SAT/CBL)	 2
 Quick Select 3 (VCR/iPod)	 3
 DVD	 Shift + 2
 TV	 Shift + 1
 iPod	 Guide / EPG / -/-
 HDP	 7
 NET/USB	 8
 SAT/CBL	 9
 VCR	 4
 DVR	 D.Menu / Top
 V.AUX	 Fav / Marker / PC
 Tuner	 6
 SAT TU	 0
 DTU	 5

Original	Replacement
 CD	 Shift + 3
 Phono	 Smart / List
 M.Zone Call	 Display / Media
 CH+	 CH+ / Page+
 Shift	 Setup / OPT /
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Menu	 Menu / Home
 Up	 Up
 Memory	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Search	 Red / Netflix / Search
 Down	 Down



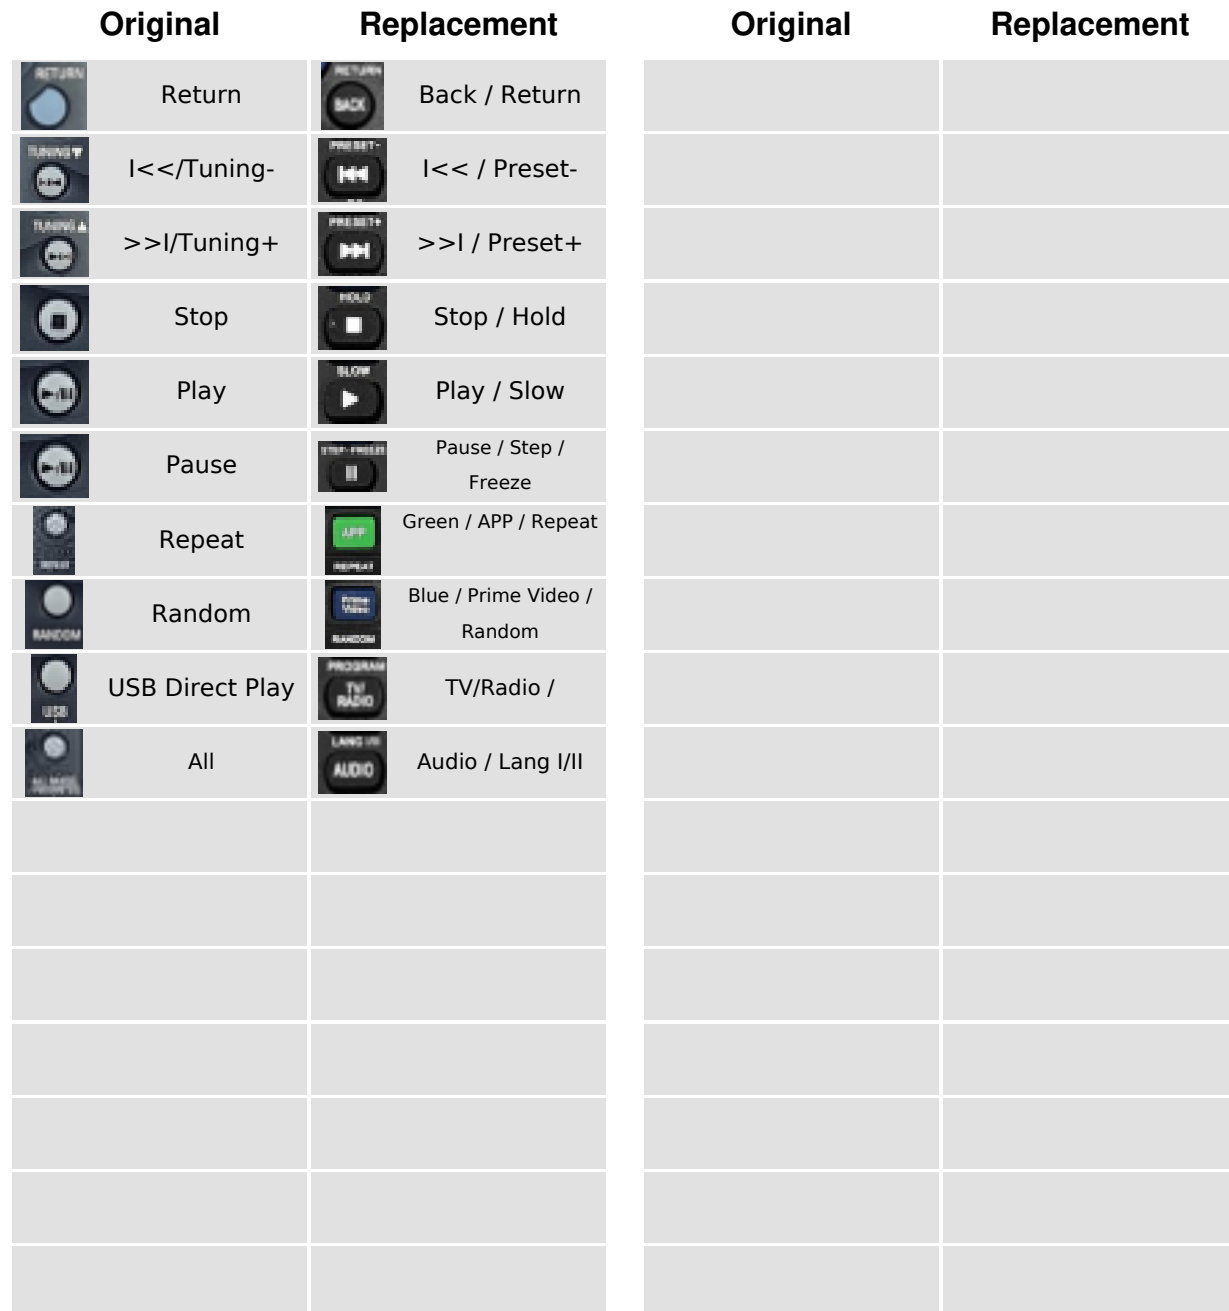



Original	Replacement
 Zone Off	 +  Shift + Power
 Zone On	 Power
 Quick Select 1 (DVD)	 1
 Quick Select 2 (SAT/CBL)	 2
 Quick Select 3 (VCR/iPod)	 3
 DVD	 +  Shift + 2
 TV	 +  Shift + 1
 iPod	 Guide / EPG / -/--
 HDP	 7
 NET/USB	 8
 SAT/CBL	 9
 VCR	 4
 DVR	 D.Menu / Top
 V.AUX	 Fav / Marker / PC
 Tuner	 6
 SAT TU	 0
 DTU	 5

Original	Replacement
 CD	 +  Shift + 3
 Phono	 Smart / List
 M.Zone Call	 Display / Media
 CH+	 CH+ / Page+
 Shift	 Setup / OPT /
 Vol+	 Vol+
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Memory	 Info / Angle
 Search	 Red / Netflix / Search
 I<</Tuning-	 I<< / Preset-
 >>I/Tuning+	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Repeat	 Green / APP / Repeat




 A circular icon with a white dot in the center, representing a random selection function.