



POWER BANK

MQ110

User Manual


The product manual contains important information.
Before using the product, please read the manual carefully and keep it properly

Product Introduction

Thank you for purchasing IMIKI product.

The brief description of the product assures you to operate freely,
fully embodies the value of this product, please read carefully before use.

Product appearance (Please refer to the actual product for details)

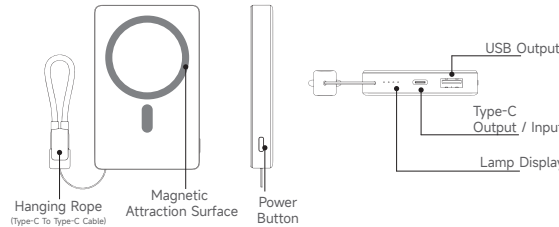

Specifications (Please refer to actual item)

Name	Magnetic Wireless Charging Power Bank
Model	MQ110
Battery	Li-polymer
Battery Capacity	10000mAh/38.5Wh/3.85V
Nominal Capacity	6000mAh(5V \approx 2A)
Shell Material	PC+ABS+Aluminum Alloy
Type-C Input	5V \approx 3A 9V \approx 2A
Type-C Output	5V \approx 3A 9V \approx 2.22A 12V \approx 1.67A
USB-A Output	5V \approx 4.5A 4.5V \approx 5A 5V \approx 3A 9V \approx 2A 12V \approx 1.5A
Wireless Charging Output	5W/7.5W/10W/15W
Total Output	5V \approx 3A(15W Max)
Execution Standard	GB 31241-2022 GB 4943.1-2022

Mobile Power Warranty

Warranty Commitment

If the product cannot function properly due to internal component issues within one year from the date of sale, you can bring it with you.
The product and all accessories will be delivered to the dealer for free repair.

Special Reminder For Mobile Power Supply Warranty

1. Inability to enjoy warranty commitments

From the date of sale, if one of the following situations causes the product to malfunction, our company will not be responsible for the product. According to the terms and conditions of the warranty commitment and replacement commitment, you can choose to provide paid services. The situations where you cannot enjoy the warranty commitment are as follows:

- (1) Exceeding the valid warranty commitment period;
- (2) Failure or damage caused by not following the user manual for use, maintenance, or storage
- (3) No valid three guarantee certificate and valid invoice (excluding those that can prove that the product is within the three guarantee validity period);
- (4) Unauthorized alteration of the three guarantee certificate;
- (5) Damage caused by human factors (such as falling, liquid ingress, etc.);
- (6) Damage caused by force majeure;
- (7) Repairs, modifications, modifications, or dismantling by unauthorized service personnel to prevent damage to the dismantling sticker;
- (8) Faults caused by use under harsh conditions (such as excessive temperature of water, fire, etc.);
- (9) Parts are incomplete, the product appearance is stained, the packaging is worn out, and cannot be replaced or returned;
- (10) Failure or damage caused by non-product design, technical, manufacturing, or quality issues;
- (11) Using non-original accessories or cables;
- (12) The quality of the receiving equipment does not meet national standards or has defects;
- (13) The power supply does not comply with national regulations;
- (14) Other improper use, intentional behavior, or violation of this product manual;

2. Invoices and three guarantees vouchers are important credentials for obtaining services. Therefore please keep it safe and carry it with you when needed. If you are unable to present the invoice and three guarantees certificate, or if the information recorded does not match the faulty product. If it is altered, blurred, and cannot be identified, the faulty product cannot enjoy the three guarantees service commitment.

3. When fulfilling the three guarantees promise, in addition to the invoice and three guarantees voucher, please bring the faulty product and all accessories to the dealer. When replacing the product for free, the replacement time will be indicated on the back of the invoice and stamped with the official seal. On the new three guarantees certificate, indicate the three guarantees period, and the starting time will be calculated from the date of replacement.

Warranty Card

This certificate is an important basis for after-sales service of mobile power supply
Please keep it safe

Commodity Information	Product Name		Maintenance Record (To be filled out by the maintenance organization)		
	Product Model		Repair Date	Maintenance Records	Authorized Maintenance Signature
	Purchase Price				
	Purchasing Date				
User Information	User Name				
	Contact Number				
	Mailing Address				
	Invoice Number				

Mobile Power Usage Safety Warning

- Do not use or idle this product in high temperature or humid environments. Do not expose to sunlight. (Product usage temperature range: Charge at 0°C to 35°C, discharge at -10°C to 60°C Storage temperature range: -20°C to 60°C)
- Do not throw this product into fire or water, nor do you allow it to be wiped with a damp cloth to avoid causing leakage, short circuit or other faults.
- Do not use this product unattended.
- Do not disassemble the device on your own. This product does not have any parts that can be disassembled/maintained on your own.
- Do not forcefully drop, shake, strike, impact, or squeeze this product.
- Do not short-circuit the positive and negative poles of the product input or output. To prevent equipment or external objects from catching fire.

- Please keep the product out of reach of children.
- Please verify that the output voltage of the charger matches this product before using it. To prevent equipment or external objects from catching fire.
- If the voltage of the charger does not match, it can cause the mobile power supply to overload and cause danger such as smoke and fire.
- Please choose a reputable manufacturer and a charger that has passed the national 3C certification.
- Please unplug the charger after fully charging the mobile power supply.
- If there are any abnormal situations such as odor, heat, discoloration, deformation, or night leakage during the use of the mobile power supply, please stop using it immediately.

- If the skin is contaminated with battery liquid, it should be immediately washed with tap water and seek medical attention in a timely manner.
- Attention: Improper battery replacement may pose a risk of explosion, and only batteries of the same or equivalent type can be used for replacement. The battery must not be exposed to environments such as sunlight, fire, or similar overheating conditions. If consumers use a power adapter for charging, you should purchase a power adapter that has obtained CCC certification and meets the standard requirements for use.

Disposal of electrical and electronic equipment



The crossed-out garbage can means that you are legally obliged to collect these devices separately from unsorted municipal waste. Disposal in residual waste bin or yellow bin is prohibited. If the products contain batteries or accumulators that are not permanently installed, they must be removed before disposal and disposed of separately as batteries.

Possibilities of returning old appliances

Owners of old devices can hand them in within the framework of the options set up and available by public waste disposal authorities for returning or collecting old devices to ensure that the old devices are properly disposed of.

Data protection

We would like to point out to all end users of waste electrical and electronic equipment that they are responsible for deleting personal data on the old equipment to be disposed of.



We, IMIKI Co, Ltd, hereby declare that this device complies with the basic requirements and the other applicable provisions of the EU Declaration of Conformity according to the Radio Equipment Directive 2014/53/EU and the RoHS Directive 2011/65/EU. The full EU declaration of conformity can be found on the website: <https://www.imikilife.com/declarations>

Manufacturer: IMIKI Co., Ltd
Address: 1401F, South Area, Jingji Yujing Times Building, Longgang District, Shenzhen, China

