

Limited Warranty – Electronics (USA)

JL Audio warrants this product to be free of defects in materials and workmanship for a period of two (2) years from the original date of purchase. This warranty is not transferable and applies only to the original purchaser from an authorized JL Audio dealer. Should service be necessary under this warranty for any reason due to manufacturing defect or malfunction, JL Audio will (in its discretion), repair or replace the defective product with new or remanufactured product at no charge. Damage caused by the following is not covered under warranty: accident, misuse, abuse, product modification or neglect, failure to follow installation instructions, unauthorized repair attempts, misrepresentations by the seller. This warranty does not cover incidental or consequential damages and does not cover the cost of removing or reinstalling the unit. Cosmetic damage due to accident or normal wear and tear is not covered under warranty.

Products installed as original equipment by boat manufacturers are covered by the boat manufacturer's warranty, not JL Audio, Inc.

Warranty is void if the product's serial number has been removed or defaced.

Any applicable implied warranties are limited in duration to the period of the express warranty as provided herein beginning with the date of the original purchase at retail, and no warranties, whether express or implied, shall apply to this product thereafter. Some states do not allow limitations on implied warranties, therefore these exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

If you need service on your JL AUDIO product:

All warranty returns should be sent to JL Audio's Amplifier Service Facility (freight-prepaid through an authorized JL Audio dealer and must be accompanied by proof of purchase (a copy of the original sales receipt). Direct returns from consumers or non-authorized dealers will be refused unless specifically authorized by JL Audio with a valid return authorization number. Warranty expiration on products returned without proof of purchase will be determined from the manufacturing date code. Coverage may be invalidated as this date is previous to purchase date. Non-defective items received will be returned freight-collect. Customer is responsible for shipping charges and insurance in sending the product to JL Audio. Freight damage on returns is not covered under warranty.

For Service Information in the U.S.A. please call

JL Audio Customer Service:

(954) 443-1100 9:00 AM – 5:30 PM (Eastern Time Zone)

JL Audio, Inc.

10369 North Commerce Pkwy. Miramar, FL 33025

(Do not send product for repair to this address)

International Warranties:

Products purchased outside the United States of America are covered only

by that country's distributor and not by JL Audio, Inc.

JL Audio® and the JL Audio logo are registered trademarks of JL Audio, Inc. ©2019 JL Audio, Inc. For more detailed information please visit us online at www.jl-audio.com

Due to our policy of continuous product development, all specifications are subject to change without notice.

MV-i-HUB_MIAN_070819

Planning Your Installation

It is important that you take the time to read this manual thoroughly and that you plan your installation carefully. It is very easy to damage electrical systems in modern vessels. Never assume that you have found appropriate wires without consulting a reliable wiring diagram or without using proper test equipment. If you are uncomfortable or unfamiliar with diagrams or testing methods, please enlist the services of your authorized JL Audio dealer to perform the installation. Your authorized dealer has the training, expertise and installation equipment to ensure optimum performance from this product.

If you have any questions regarding the instructions in this manual or any aspect of your amplifier's operation, please contact your authorized JL Audio dealer for assistance. If you need further assistance, please contact the JL Audio Technical Support Department at technical@jl-audio.com/support.

Safety Considerations

- Install this product in a dry, well-ventilated location that does not interfere with factory installed systems.
- This product should never be submerged under water or subjected to high-pressure water spray.
- Do not install where it will be directly exposed to the elements, or in the engine compartment, or in any areas of extreme heat. Areas exposed to a heater or hot air should also be avoided.
- When selecting a mounting location, consider the orientation of the chassis and its associated connections. When possible, route wiring and cables to direct condensation and moisture away from the amplifier.
- Securely mount this product so that it does not come loose in the event of a collision or sudden jolt, or as a result of repeated vibrations during normal operation.
- Check before drilling to make sure that you will not be drilling into an exterior panel/hull, fuel tank, fuel line, wiring harness, or other vital system.
- Do not run system wiring outside or underneath the vessel. This is an extremely dangerous practice, which can result in severe damage/injury.
- Protect all system wires from sharp edges by carefully routing them, tying them down and using grommets and loom, where appropriate.
- Secure all wiring as needed, using cable ties or wire clamps to protect them from moving parts and sharp edges.

MV-i-HUB

JLid-COMM & NETWORK BRIDGE HUB



CONNECTION GUIDE

What is Included

- (1) MV-i-HUB
- (1) Connection Guide

Product Description

The MV-i-HUB is an accessory designed to provide network connectivity for up to six MVI amplifiers in a multi-amp system. Networking greatly simplifies the configuration process by permitting the setup and/or tuning of all amplifiers using a single TUN™ project file. (See What is TUN™ section for more info.) Additionally, networking synchronizes DSP presets of all amplifiers and distributes commands from a single Digital Remote Controller (DRC) across the entire amplifier network.

 
The MV-i-HUB includes JLid-COMM ports to connect up to six amplifiers (one "Master" MVI amplifier and up to five "Slave" MVI or MVI amplifiers). Power for the MV-i-HUB is provided by the connected amplifiers. Note: a "Master" MVI amplifier connection is required for MV-i-HUB operation. The MV-i-HUB utilizes a proprietary JLid™ communication protocol via standard CAT5e network cables (not included). Use only CAT5e type network cables and keep cable lengths as short as possible for optimum performance. Audio signals are NOT transmitted via JLid-COMM connections.

The MV-i-HUB has a dedicated JLid-CTRL port for the connection of a compatible accessory (sold separately). Refer to the JLid-CTRL Port section on the next page for additional info.

Mounting Considerations

The MV-i-HUB is equipped with keyhole style mounting holes to simplify installations in confined spaces or vertical-mount applications. Mounting screws may be preinstalled, allowing connections to be made prior to securing in its final location. See diagram at right.

When selecting the installation location, consider the mounting orientation of the MV-i-HUB and its associated connections. If possible, position the MV-i-HUB vertically, with all connections pointing downward. Wiring and cables should be routed to direct potential condensation and moisture away from its chassis. When installed in this manner, the MV-i-HUB achieves an IPX2 water-resistance rating.

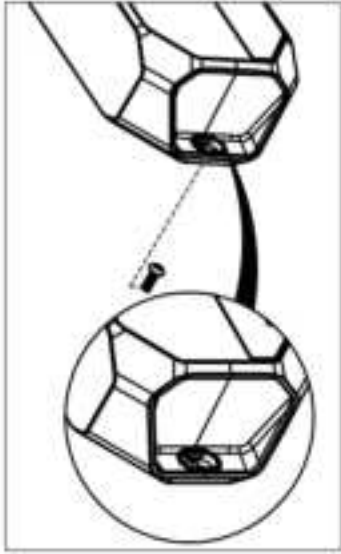

1 JLib-COMM Amplifier Port Connections

The MVI-HUB is equipped with one "Master" and five numbered JLib-COMM ports to connect to the JLib-COMM ports on MV and MVI amplifiers. All JLib-COMM connections are made using standard CAT5e network cables (not included). For optimum performance, use only CAT5e type network cables and keep cable lengths as short as possible. Refer to the table below for connection info. When selecting the "Master" amplifier, keep in mind that the USB port on the "Master" amplifier is the connection point for the PC or Mac[®] used to set up and tune the amplifiers in the network, using TuN[™] software.

JLib-COMM Ports on MVI-HUB	Connection	Notes
JLib-COMM Master Port	JLib-COMM Port of the Master MVI Amplifier (required for MVI-HUB operation)	For TuN [™] configuration using a PC or Mac [®] , connect your computer to the USB Port of the Master MVI Amplifier only.
JLib-COMM Ports 1 to 5	JLib-COMM Port of Slave Amplifiers (MV or MVI models)	

2 Amp Identifier and Status LEDs

Each JLib-COMM amplifier port is outfitted with a status LED that will illuminate solid blue when connected to an amplifier. Pressing an Amp Identifier button on the MVI-HUB will change its status LED to white and cause the top LED on the connected amplifier to flash white. This functionality is useful for identifying specific amplifiers after installation.

3 Control Source and Status LEDs

Press the Control Source button to toggle between optional control methods. Refer to the table below for connection info.

Control Source Selection	Connection	Functionality
JLib-CTRL	VXI-BTC Bluetooth [®] Communicator	Wireless configuration of an amplifier network, using a compatible device running TuN [™] applications.
	Compatible M-DRC and DRC Controllers	Preset selection and level controls (varies by model)
NMEA 2000 [®]	NMEA 2000 [®] Network	Not used (TBA, future development)

4 NMEA 2000[®] Connection

Currently not used, this connection is intended for future NMEA[®] 2000 control options (TBA).

5 JLib-CTRL Port

The JLib-CTRL Port allows the connection of an optional control accessory (sold separately). Refer to the table below for compatible accessories. For additional information, refer to the documentation included with each accessory.

JLib-CTRL Accessory	Functionality	Notes
Digital Remote Controller	M-DRC-50	Push-button preset selection only. Includes RGB LED ring to identify selected preset.
	DRC-205	Remote preset selection and adjustment of levels, fade and balance. Includes RGB LED ring to identify selected preset. Note: This controller is not marine-rated.
Bluetooth [®] Communicator	VXI-BTC	Permits wireless configuration of an amplifier network, using a compatible device running TuN [™] Mobile and TuN [™] Express applications. Note: The VXI-BTC provides a control interface only and does NOT support audio streaming.

6 USB Port

The USB Port allows connection of a PC for future firmware updates to the MVI-HUB using a standard USB A/B cable (not included). **Note:** For TuN[™] configuration using a PC or Mac[®], connect your computer to the USB Port of the "Master" MVI Amplifier only.

7 Reset Buttons

Use a small pin to perform the following:

- (A) **Factory Reset (wipe memory, reboot MVI-HUB)** - Press and hold Button A for 7 seconds. All user settings will be erased and the MVI-HUB will revert to its factory settings!
- (B) **Reboot MVI-HUB** - Press and release Button B to restart the MVI-HUB. Previous user settings will be retained.

APPENDIX A: FREQUENTLY ASKED QUESTIONS

"Do I still need to send audio input signals to my amplifiers?"

Yes, audio input signals are required for each amplifier.

"Where do I connect my USB A/B cable for TuN[™] configuration?"

 
 
Compatible computers running TuN[™] software should connect to the USB Port of the Master MVI amplifier only.

"Where do I connect my DRC controller?"

Compatible DRC remote controllers should be connected to the JLib-CTRL Port of the MVI-HUB.

"Why isn't my DRC controller working?"

Make sure JLib-CTRL has been selected using the Control Source button of the MVI-HUB.

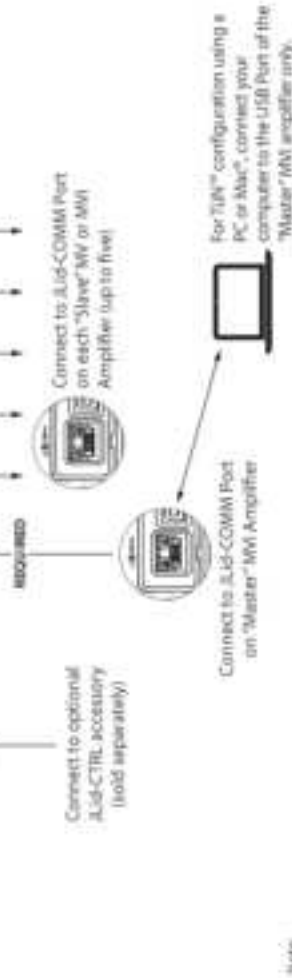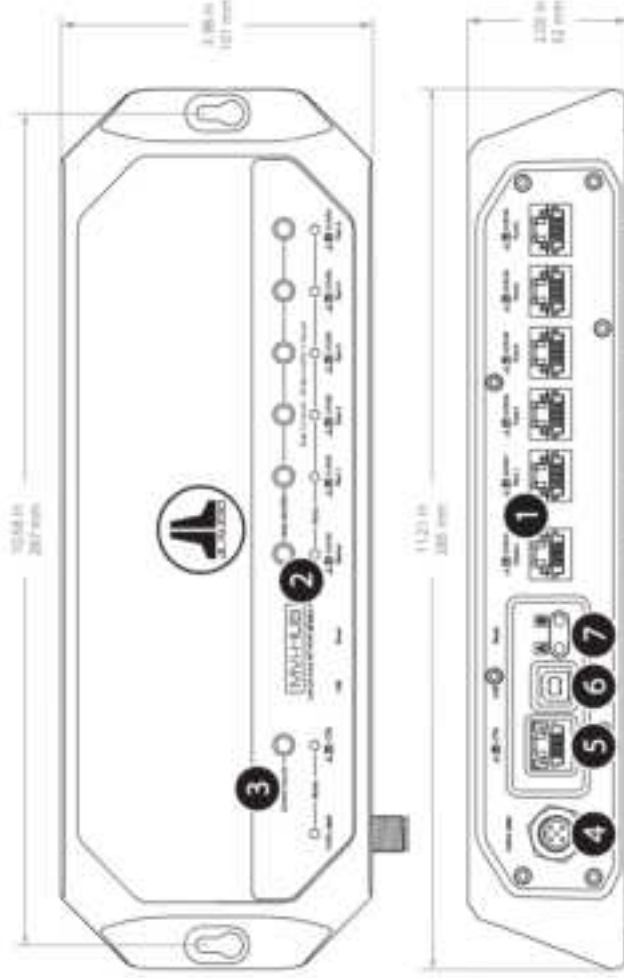

- Notes:**
- JLib[™] Network Connections are made via CAT5e Network Cables (not included).
 - JLib[™] Network Connections support data communications only - No Audio.
 - Power and Audio input connections (not pictured) are required for each amplifier.
 - Components pictured may not be to scale.

 
TuN[™] SOFTWARE

What is TuN?


TuN[™] is software that you use to configure MV or MVI amplifiers, and other JL Audio DSP products. TuN[™] automatically recognizes what it is connected to, and allows you to make adjustments with a clear interface specifically set up for that product. TuN[™] is available for download for free in a variety of applications, for computers and most handheld devices. For more information, visit: jlaudio.com/tun



For Windows[®] PC or Mac[®] computers, TuN[™] connects via USB and offers complete control and command of the entire MV and MVI feature set from the comfort of your desk or driver's seat. Software also runs in demo mode, without connected amplifiers, for offline setup or demo purposes. Test drive it for free!



 For iPad or Android tablets, Enjoy the TuN[™] software experience on your tablet, with the freedom of a wireless connection via Bluetooth[®]. Requires VXI-BTC Bluetooth[®] Communicator.



Wireless connection and streamlined options, for fast and simple amplifier setup. Download TuN[™] Express for iPhone, iPad and Android phones & tablets. Requires VXI-BTC Bluetooth[®] Communicator.

Specifications	Host Interface	Proprietary JLib [™] Interface
	Input Operating Voltage	5 VDC
	IP Rating	IPX2 (water resistant vertically with connections protected downstream)
	Dimensions L x W x H	11.21 in x 3.98 in x 2.28 in / 285 mm x 101 mm x 58 mm