

LED Stage Lighting Equipment Instructions

18 PCS 4-in-1 + colorful light With strip



Please read the instruction manual carefully before use

Please read the instructions carefully for the use, operation and maintenance of this product.

- Please keep the instruction manual for future viewing. If you sell it to other users, please confirm that they have also received this manual.
- All the equipment is completely from the manufacturer, please operate according to the instructions, the damage caused by non-compliance is not covered by the warranty.
- After opening the packaging, please check whether the product is damaged in the transportation works before use.
- This product is dedicated indoors and can only be used in dry environments.
 - It is recommended that technicians familiar with the product operate the product.
- Use safety rope when installation. Please do not lift the entire product through the lamp head.
- The product must be installed in a ventilated environment and at least 50cm from the surface.
- Make sure there are no vents holes, overheating the product.
- Before operation, make sure that the voltage and power supply frequency meet the product requirements.
- Yellow and green conductors must be grounded to avoid electric shock.
- The maximum temperature is TA: 40°C. Stop operating when the ambient temperature exceeds the maximum temperature.
- Please do not connect this product to the other dimmers.
- In the first use, it may smoke or smell bad, and these will disappear after a few minutes.
- Make sure there is no flammable around before use to avoid a fire!
- Please check the power cord carefully and replace it immediately with any damage.
- Avoid long runs to shorten their service life. Avoid any flammable liquid, water, or metal objects from entering the lamp.
- In the event of an accident, please cut off the power immediately.
- Please do not use it in a dirty or dusty environment, and remember to clean the device frequently.

1.Key Description:



MENU: function key UP: Key DOWN: key ENTER: Confirm key

Operation Instructions: Pressing function key A will cycle through 12 different functions. The number before the decimal point of the digital tube represents the current function (refer to the function table). The number after the decimal point represents the parameter corresponding to the function. Press the B or C key to modify its parameter value;

2. LED display window function comparison table, (after all functions are selected, press the D key again to save and confirm)

number	content	Functional Description
1	A.001 D.001	A001: 10 channels, D001: 6 channels. Press the up and down keys to add or subtract values from 001 to 512.
2	CH06/CH10	Press the Up or Down key to select 10-channel or 6-channel mode.
3	r.000	Select red color, (000-255) up and down keys to change brightness
4	g.000	Select green color, (000-255) up and down keys to change brightness
5	b.000	Select blue color, (000-255) up and down keys to change brightness
6	U.000	Select white color, (000-255) up and down keys to change brightness
7	FH.00	Strobe, (01-99) press button Up/Down to change speed.
8	CL.01	Manually change color.Press button Up/Down to change color.
9	CC.71	Color jumping (000~255) press button Up/Down to change speed.
10	dE.72	Color change gradually (000~255) press button Up/Down to change speed.
11	CP.73	Color pulse change (000~255) press button Up/Down to change speed.
12	SOU.9	Sound control (1-9) 9: Colorful voice control changes; 1-8 voice control strobe

3. DMX512 6CH

CH	Content	Functional Description
1CH	R dimming	Red dimming from dark to bright.
2CH	G dimming	Green dimming from dark to bright.
3CH	B dimming	Blue dimming from dark to bright.
4CH	W dimming	White dimming from dark to bright.
5CH	Circle control function selection	0-3 off 4-50 function 1, 51-100 function 2, 101-150 function 3, 151-200 function 4, 201-255 function 5,
6CH	Circle function speed	Speed from slow to fast

4. DMX512 10CH

CH	Content	Functional Description
1CH	Total dimming	From dark to bright.
2CH	R dimming	Red dimming from dark to bright.
3CH	G dimming	Green dimming from dark to bright.
4CH	B dimming	Blue dimming from dark to bright.
5CH	W dimming	White dimming from dark to bright.
6CH	Strobe	Strobe, speed from slow to fast.
7CH	Function option	0-50 Invalid 51-100 Color selection 101-150 Jump change 151-200 Gradual change 201-250 Pulse change 251-255 Sound control
8CH	Function speed	7CH (51-250) channel function speed from slow to fast, 7CH (251-255) sound control mode selection
9CH	Circle control function selection	0-3 off 4-50 function 1, 51-100 function 2, 101-150 function 3, 151-200 function 4, 201-255 function 5,
10CH	Circle function speed	Speed from slow to fast