
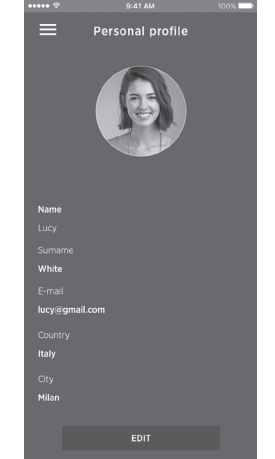
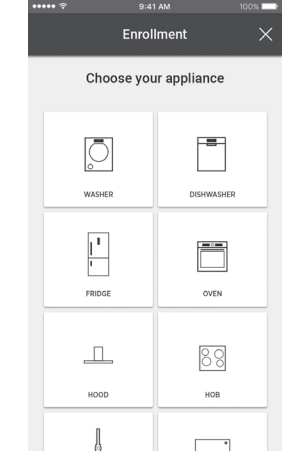
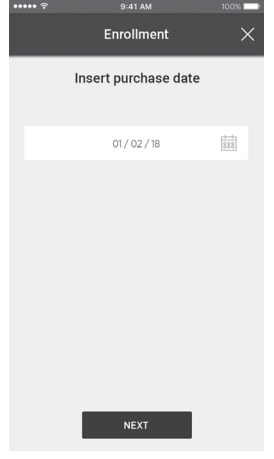


5.







* The interaction with the appliance is enabled only by Android smartphones equipped with compatible NFC technology

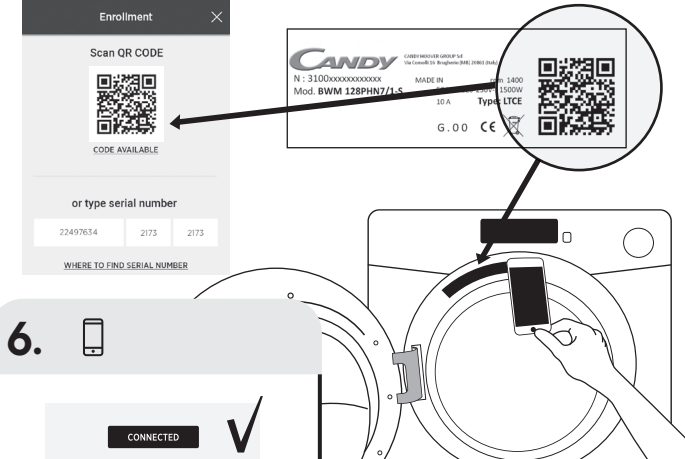

1.  *Download the **Candy simply-Fi** App

ANDROID APP ON Google play
* Download on the App Store
2.  Personal profile

3.  Enrollment

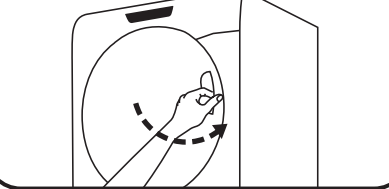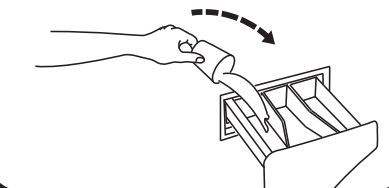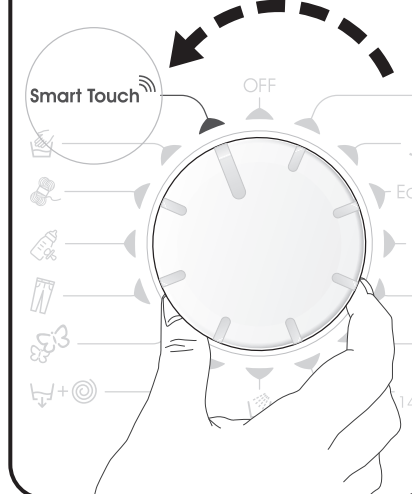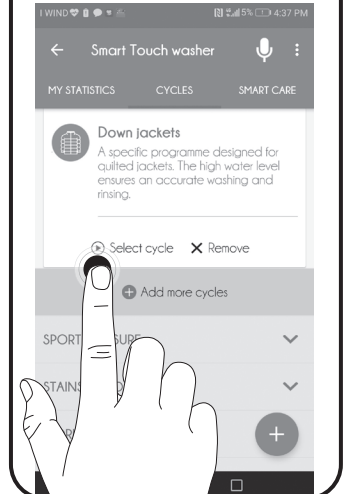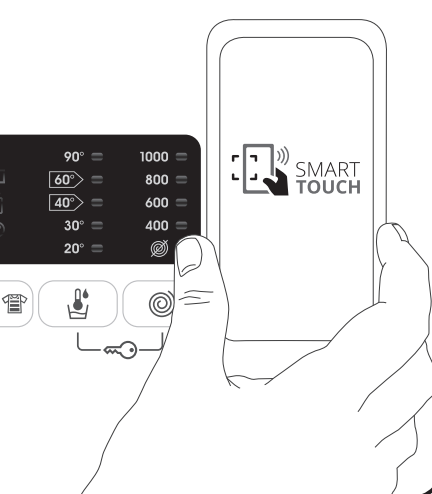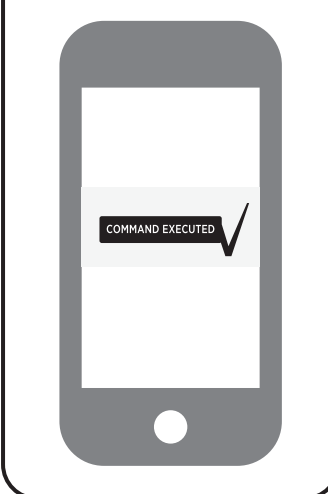4.  Enrollment

5.  Enrollment

6.  CONNECTED ✓


DAILY APP USAGE

1.  
2.  
3.  Smart Touch

4.  Smart Touch

5.  Smart Touch

6.  COMMAND EXECUTED ✓


Download the **Candy simply-Fi** App

To download any other further information in your language, please go to:
<http://go.he.services/se2dm>

Scarichi l'app **Candy simply-Fi**

Per ulteriori informazioni collegarsi al sito:
<http://go.he.services/se2dm>

Laden Sie die **Candy simply-Fi** App aus dem App Store herunter.

Um weitere Informationen in Ihrer Sprache herunterzuladen, gehen Sie bitte zu:
<http://go.he.services/se2dm>

Descarga la App **simply-Fi** de Candy

Para descargar más informaciones en tu idioma, visita:
<http://go.he.services/se2dm>

Téléchargez l'application **Candy simply-Fi**

Pour télécharger toute autre information dans votre langue, rendez-vous sur:
<http://go.he.services/se2dm>

Изтеглете приложението **Candy simply-Fi** от магазина за приложения

За да изтеглите допълнителна информация на вашия език, моля, отидете на:
<http://go.he.services/se2dm>

Candy simply-Fi uygulamasını indiriniz.

Daha fazla bilgiye ulaşmak için lütfen aşağıdaki websitely ziyaret ediniz.
<http://go.he.services/se2dm>

Preuzmite **Candy simply-Fi** aplikaciju preko App storea

Za preuzimanje ostalih informacija na vašem jeziku, molim posjetite:
<http://go.he.services/se2dm>

Töltse le a **Candy simply-Fi** applikációt az App store-ból

További információkért kérjük, látogasson el a:
<http://go.he.services/se2dm>

Iz trgovine z aplikacijami prenesite aplikacijo **Candy simply-Fi**

Do več informacij v svojem jeziku lahko dostopate na naslovu:
<http://go.he.services/se2dm>

Preuzmite **Candy simply-Fi** Aplikaciju sa Vaše prodavnice

Kako bi preuzeli bilo koje druge informacije na Vašem jeziku, molimo posetite:
<http://go.he.services/se2dm>

Stáhněte si aplikaci **Candy simply-Fi** App z obchodu App store

Chcete-li stáhnout další doplňující informace ve vašem jazyce, navštivte prosím stránku:
<http://go.he.services/se2dm>

Pobierz aplikację **Candy simply-Fi** z App store

Aby pobrać dodatkowe informacje w Twoim języku, przejdź na stronę:
<http://go.he.services/se2dm>

Descărcați aplicația **Candy simply-Fi** din App store

Pentru a descărca mai multe informații în limba dumneavoastră, vă rugăm să accesați:
<http://go.he.services/se2dm>

Stiahnite si aplikáciu **Candy simply-Fi** App z obchodu App store

Pre doplňujúce informácie a možnosť ich stiahnutia vo vašom jazyku, prosím navštívte stránku:
<http://go.he.services/se2dm>

Завантажте додаток **Candy simply-Fi** з "App store"

Щоб завантажити будь-яку іншу додаткову інформацію, перейдіть на сторінку:
<http://go.he.services/se2dm>

Κατεβάστε την εφαρμογή **Candy simply-Fi** από το App Store

Για να κατεβάσετε περισσότερες πληροφορίες στη γλώσσα σας, παρακαλώ επισκεφθείτε την ιστοσελίδα:
<http://go.he.services/se2dm>

Download de **Candy simply-Fi** App in de App store

U kan in de toekomst verdere informatie in uw moedertaal downloaden via:
<http://go.he.services/se2dm>

Descarregue a aplicação **Candy simply-Fi** da App Store

Para descarregar mais informações na sua língua, por favor aceda a:
<http://go.he.services/se2dm>

Download vores **Candy simply-Fi** App fra App store

For download af yderligere informationer på Dansk, besøg:
<http://go.he.services/se2dm>

Ladda ner **Candy simply-Fi** appen från App Store / Play Butik

Om nedladdning behövs för ytterligare information på det egna språket, gå till:
<http://go.he.services/se2dm>

Lataa **Candy simply-Fi** sovellus App Storesta

Lataa lisätietoja osoitteesta:
<http://go.he.services/se2dm>

Last ned **Candy simply-Fi** App fra App Store / Play-butikken

Hvis du laster ned nødvendig ytterligere informasjon på sitt eget språk, gå til:
<http://go.he.services/se2dm>

CANDY Smart



43035345



To download any other further information in your language, please go to:
go.he.services/se2dm

SMART


1. 
2. 
3. 
4. 
5. 



Download the **Candy simply-Fi** App




1.

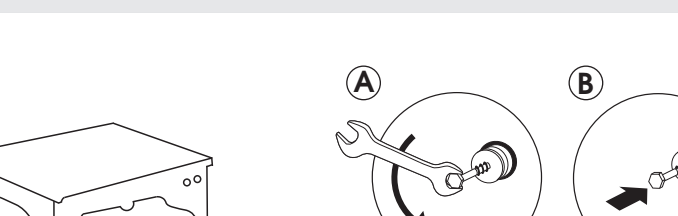

The diagram illustrates the removal of the door hinge pins. The main illustration shows a refrigerator door with two hinge pins being removed using a wrench. Three circular insets (A, B, C, D) show the detailed steps: A shows the wrench turning the pin; B shows the pin being pulled out; C shows the pin being turned 180 degrees; D shows the pin being inserted into the door.

2.

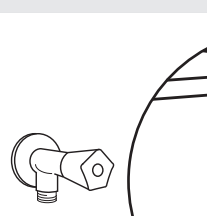

2.  

*

EN	A: Prewash	B: Softeners	C: Washing
IT	A: Prelavaggio	B: Ammorbidente	C: Lavaggio
DE	A: Vorwäsche	B: Weichspüler	C: Waschen
ES	A: Prelavado	B: Suavizante	C: Lavado
FR	A: Prelavage	B: Adoucissant	C: Lavage
BG	A: Предпране	B: Омекшител	C: Пране
TR	A: Ön yıkama	B: Yumuşatıcılar	C: Yıkama
HR	A: Pretpranje	B: Omekšivači	C: Pranje
HU	A: Előmosás	B: Óblító	C: Mosás
SL	A: Predpranje	B: Mehčalec	C: Pranje
CS	A: Předpraní	B: Omekšivač	C: Praní
SR	A: Predpirka	B: Zmekšivađla	C: Praní
PL	A: Pranie Wstępne	B: Środek Zmiękczący	C: Pranie
RO	A: Prespălare	B: Balsam De Rufe	C: Spălare
SK	A: Predperieka	B: Zmäkčovače	C: Pranie
UKR	A: Попереднє прання	B: Пом'якшувач	C: Прання
EL	A: ΠροΠλυσή	B: Μολακτικά	C: Κριώση Πλ
NL	A: Voorwas	B: Wasverzachtter	C: Hoofdwass
PT	A: Pré Lavagem	B: Aditivos	C: Lavagem
DA	A: Forvask	B: Blødgøringsmidler	C: Vask
SV	A: Förtvätt	B: Sköljmedel	C: Tvätt
FI	A: Esipesu	B: Huuhteluaine	C: Pesu
NO	A: Forvask	B: Skytles	C: Vask

B: Softeners	C: Washing
B: Ammoribidente	C: Lavaggio
B: Weichspüler	C: Waschen
B: Suavizante	C: Lavado
B: Adoucissant	C: Lavage
B: Омоекител	C: Прање
B: Yumuşatıcılar	C: Yıkama
B: Omešivači	C: Pranje
B: Öblítő	C: Mosás
B: Mehčalec	C: Pranje
B: Omešivač	C: Pranje
B: Šmekčováňa	C: Praní
B: Środék ZmiękcZający	C: Pranie
B: Balsam De Rufe	C: Spălare
B: Zmňakčovače	C: Pranie
B: Пом'якшувач	C: Прання
B: Μαλακτικά	C: Κυρίως Πλ
B: Wasverzachter	C: Hoofdwaa
B: Aditivos	C: Lavagem
B: Błdgładzącyśmidler	C: Vask
B: Sköjlmedel	C: Tvätt
B: Huşuhtel(uaine	C: Pesu
B: Skylltes	C: Vask

C: Washing
C: Lavaggio
C: Waschen
C: Lavado
C: Lavage
C: Прање
C: Yikama
C: Pranje
C: Mosás
C: Pranje
C: Pranje
C: Prani
C: Pranie
C: Spălare
C: Pranie
C: Прання
C: Κιρώς Πλ
C: Hoofdwaa
C: Lavagem
C: Vask
C: Tvätt
C: Pesu
C: Vask

P PROGRAM

The diagram illustrates the 'PROGRAM' section of the Candy washing machine control panel. It features a digital display showing 'Time Remaining' as 0:59. Below the display are several touch controls: 'My Selection', 'Options', a clock icon, a water icon, a detergent icon, and a 'Start/Pause' button. To the right of the display is a 'SMART TOUCH' icon. The main control is a circular program selector with a 'Smart Touch' label and an 'OFF' position. The selector has 12 positions, each with a corresponding icon and label: 'OFF', '+ Pre', 'EcoMix 20°', '59Min.', '14/30/44Min.', a water icon, a detergent icon, a water icon, 'EcoMix 20°', '59Min.', '14/30/44Min.', and a water icon. A hand is shown pressing the 'Start/Pause' button.

The diagram illustrates the 'Options' screen for the 'Start' and 'Pause' functions. The screen is divided into two main sections: 'My Selection' and 'Options'. The 'Options' section contains a 'Start' button and a 'Pause' button. The 'Start' button is highlighted, indicating it is the selected function. The screen also displays 'Kg Detector', 'Time Remaining' (1:40), and a progress bar.

3.

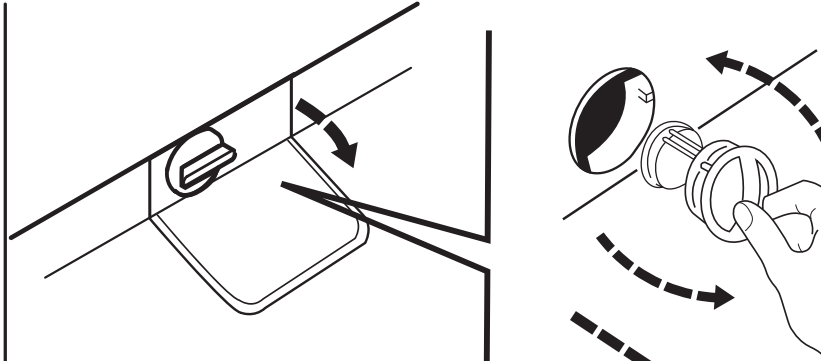


Diagram 3 illustrates the final step of assembly. On the left, a line drawing shows the handle being inserted into the cap, with a dashed arrow indicating the direction of movement. On the right, a hand is shown turning the cap clockwise, as indicated by a dashed curved arrow, to secure the handle in place.

	 (MAX.)								 °C MAX			
	5	6	7	8	9	10	11	12		2		1
	Kg	Kg	Kg	Kg	Kg	Kg	Kg	Kg		2		1
	5	6	7	8	9	10	11	12	90°	●	●	
	5	6	7	8	9	10	11	12	60°	●	●	●
EcoMix 20°	5	6	7	8	9	10	11	12	20°	●	●	
	5	6	7	8	9	10	11	12	60°	●	●	
	2,5	3	3,5	4	4,5	5	5,5	6	60°	●	●	
	1,5	2	2,5	3	3	3,5	3,5	4	60°	●	●	
14'	1	1	1	1,5	1,5	1,5	1,5	2	30°	●	●	
 30'	1,5	2	2,5	2,5	2,5	2,5	2,5	3	30°	●	●	
44'	3	3	3,5	3,5	3,5	3,5	3,5	4	40°	●	●	
	-	-	-	-	-	-	-	-	-		●	
	-	-	-	-	-	-	-	-	-			
	2	2	2,5	2,5	2,5	2,5	2,5	3	40°	●	●	
	3	3	3	3	3	3	3	3	40°	●	●	
	3,5	4	4,5	5,5	6	6,5	7	8	60°	●	●	
	1	1	1	2	2	2	2	2,5	40°	●	●	
	1	1	1	2	2	2	2	2,5	30°	●	●	
Smart Touch 	WI-FI											