



POWER A2
KICKSTAND REPLACEMENT PROCEDURES
PART # W13110002028

Required Tool: (Not included)

A. 3 mm Allen wrench

! WARNING

! CAUTION: To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

Step 1

Using a 3 mm Allen wrench, loosen and remove the two (2) bolts that hold the kickstand onto the frame. Remove kickstand.



Step 2

Reverse the steps.

ATTENTION: Charge battery 8 hours before using.