Size:  $194(w) \times 200(h) \text{ mm}$ 

# 书纸材质双面印刷

# Bluetooth



# Instruction Manual

Thank you for purchasing the Magnetic Speaker.
This manual provides more information about this wireless speaker, please read the instructions before using.



©Disney www.disney.com

# Product Overview





- 1. Power ON/OFF 2. Play / Pause
- 3. Previous Song / Volume Down
- 6. LED Indicator
- 4. Next Song / Volume Up

### Package Contents

1(One) Minnie Shower Duck Wireless Speaker 1(One) USB Type-C Charging Cable 1(One) Instruction Manual

Power on: Press and hold 3 seconds on the Power ON/OFF Button. Power off: Press and hold 3 seconds on the Power ON/OFF Button. Note: Always power off the speaker when not in use.

# Pair Wireless speaker with your mobile device

- 1. Keep the distance between your wireless speaker and mobile phone (or other devices) within 32.8 Feet.

  2. Power on the wireless speaker.

  3. Activate the Bluetooth function on your phone within range and select
- "SP-0768 SPK" from the list shown
- 4. You will hear an alert sound when pairing is successful.

# Reconnect Wireless speaker to your mobile device

When powered on, the wireless speaker will automatically connect with the last successfully paired device

# Charging your Wireless speaker

- ⚠ For your safety, please always use appropriate 5V output charger/ Adapter to charge the product, **DO NOT USE** Quick Charging USB Adapter to charge the product, as it might damage the product.
- Use the USB Type-C charging cable provided with this wireless speaker.
   Connect the USB Type-C plug to USB Type-C charging port on the speaker, then connect the USB plug to wall adapter to begin charging.
   The Charging Indicator will turn on while charging and will turn off once fully charged.

## NOTE:

You must select a qualified charger from a regular manufacturer.
You must charge the Wireless speaker if it has been not used for more than 6 months

# Bluetooth Speaker / TWS / FM Radio Mode

Bluetooth Speaker Mode:
Play/Pause: Short press the Play/Pause Button once.
Next Track: Short press the "M" Button
Previous Track: Short press the "M" Button
Volume Up: Long press the "M" Button
Volume Down: Long press the "M" Button

Note:
Please purchase two pieces of Shower Duck Wireless Speakers to perform TWS Mode.
TWS Mode is not supported in FM Radio Mode.

- I. Turn On both wireless speakers.

  2. Disconnect both wireless speakers from any Bluetooth device.

  3. Keep both wireless speakers side by side.

  4. Double press on the Mode Button on ONE of the wireless speakers. And then it will have an alert sound.

  5. The wireless speaker will connect with the other wireless speaker in few seconds. When successluly connected, both wireless speaker will have another alert sound.

  6. Now you can follow the "Pair Wireless speaker with your mobile device" to pair with the mobile device.

  7. To disable the TWS mode, double press on the Mode Button on ONE of the wireless speakers. They will have an alert sound and then

### If the Wireless speaker cannot be paired with your device, please try the following: The product is IPX4 splash proof rated. However, DO NOT immerse the unit in water. It may cause product failure

40°C/104 °F

For proper water protection, make sure the Water Resistance Plug of the unit is completely flush with the unit by pressing along the entire edge of the cover until it is completely and securely in place.

- Make sure the cover and surrounding surfaces are completely dry before opening the cover to prevent moisture from damaging the internal
- . Keen the cover free of dirt, sand, or other objects that can interfere with proper sealing. If for any reason the cover is not making a tight waterproof seal, water may enter the unit.
- DO NOT clean unit with oily soaps or use chemicals or solvents. Clean with damp cloth

Ensure that your speaker is in pairing mode or reconnection mode.

Ensure that Bluetooth search function of your mobile device is activated.

# If the Wireless speaker cannot be recharged

If you use a power outlet, ensure that the power supply is connected securely, and the outlet works.

A Safety instructions for the lithium battery and charging the product The input voltage to the product is DC 5V 1A

- The input voltage to the product is DC 5º 1A.
 - In order to charge the product in safe manner and reliable conditions, please only adopt certified appropriate charger/adapter for charging the product.
 - Only charge the product at ambient temperatures between 10°C/50°F and

Do not heat above 70°C/158°F, eg. Do not expose to sunlight or throw into fire.
 Switch off the product after use.

-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property and we cannot control the operating process during the time the user using this

In extreme cases, abuse or misuse of Lithium battery pack can lead to explosion, heat generation, fire development or smoke development.

# FCC STATEMENT

This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions:(1) this device may not cause harmful interference, and (2) this device must accept any interference received.

including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the

for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio accommunications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures:
 Reorient or relocate the receiving antenna.
 Increase the separation between the equipment and receiver.

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or experienced radio/ TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

The Bluetooth\* word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.



FCC ID: 2ADM5-SP-0768

# ITEM# SP-0768-MINNIE

Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106

Keep All Relevant Information Made in China

# **Technical Specification**

**Water Protection** 

Specifications: Driver Diameter: 45 mm

Impedance: 4 Ohms

Impedance: 4 Onns
Power Supply: Li-ion Battery 3.7V 300 mAh
Playtime: 1.5-2 Hours
Charging Time: 1.5-2 Hours

Bluetooth Range: 32.8 Feet

Bluetooth Version: 5.3 FM Radio Mode IPX4 Water Protection Function

USB Type-C Charging Cable Included

USB Type-C Charging Cable rating 5V/1A Max.