

Bazyths

ENJOY YOUR NEW BAZYTHS SMART TOILET

Please contact Bazyths Support if you have any questions.

Contact Information:

support@bazyths.com
www.bazyths.com




Bazyths
www.bazyths.com
support@bazyths.com

INSTRUCTION

SMART TOILET

Concealed cistern series

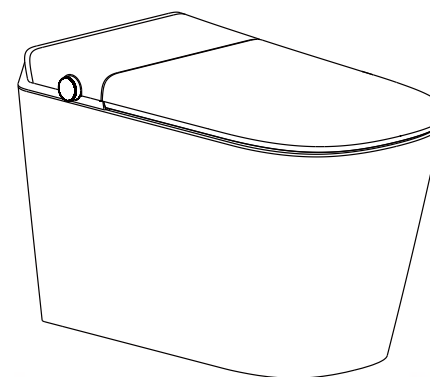

Thank you for purchasing our product.

Before using, please read the instruction carefully.

Please keep the instruction properly for further reference.


Catalogue

| | |
|---|----|
| Packing List | 02 |
| Installation of the Battery Box | 04 |
| How to Use Foam Shield & Toilet Bowl Cleaner Tablets..... | 05 |
| Component Name | 06 |
| Function Introduction | 07 |
| Cautions | 08 |
| Installation Instruction | 11 |
| Preparation before Use | 16 |
| Panel Cognition | 17 |
| How to Use | 20 |
| Function Setup and Adjustment | 21 |
| Cleaning and Maintenance | 26 |
| FAQ | 30 |
| Function List | 31 |
| Product Specification | 32 |
| Acceptance Record | 33 |


Packing List

Dear user,

Please count the following items after opening the package:

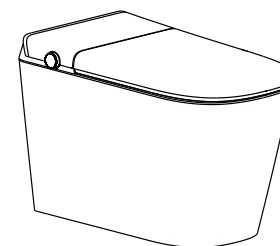


Smart Toilet

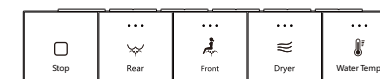


Remote Control & Mounting Bracket


Requires 2 alkaline AAA batteries
(batteries not included).

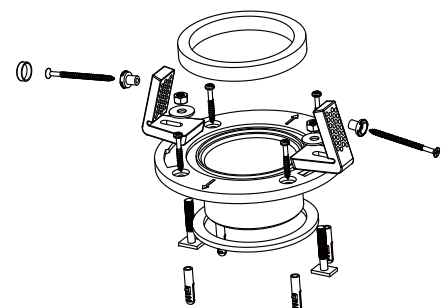

Flange, Sealing Wax Rings,
Mounting Accessory Kit

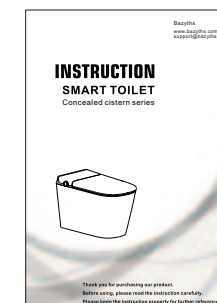

Instruction Manual

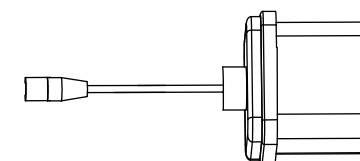


Backup Battery Box
for Power Outage Flush

Requires 10 AA alkaline batteries to enable flushing
during a power outage(batteries not included).

Packing List

Dear user,

Please count the following items after opening the package:

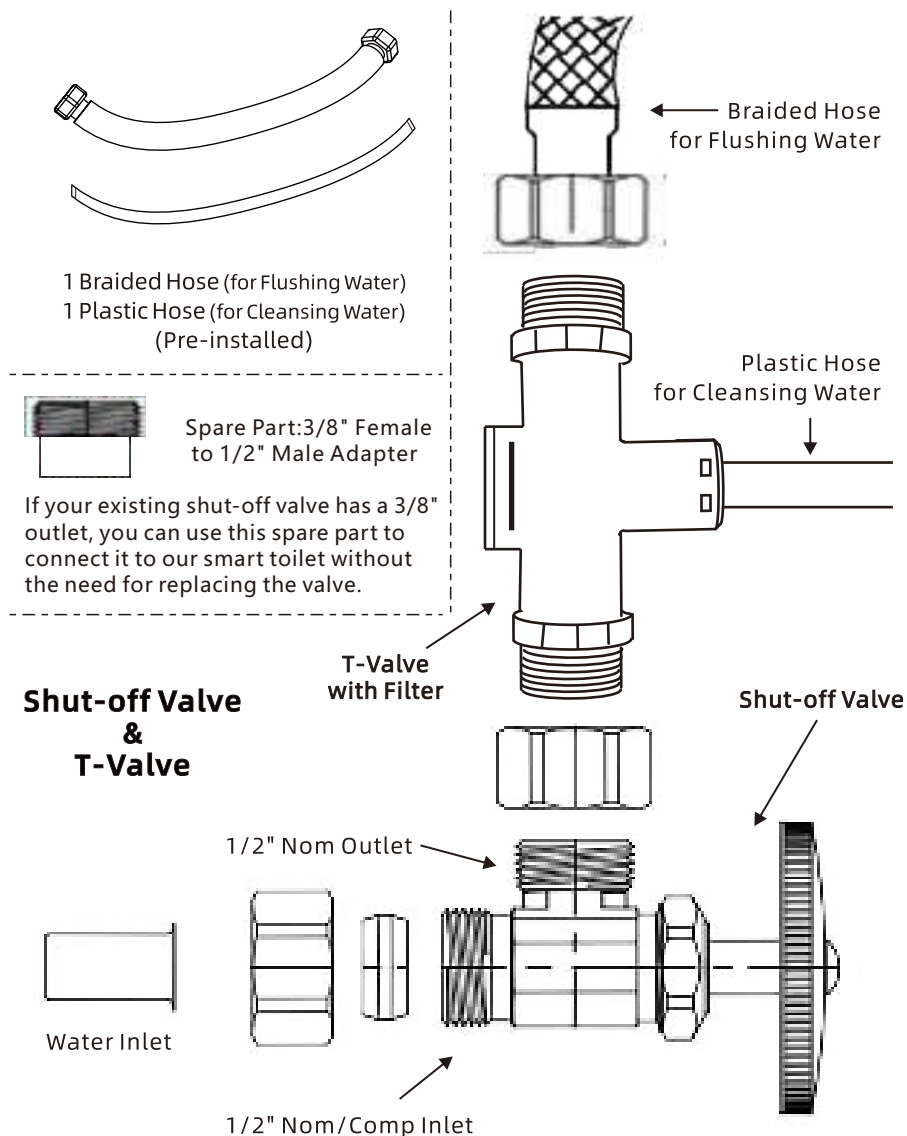

Installation of the Battery Box

Installation of the Battery Box for Power Outage

1. This battery box is for use as backup during power outages. **The battery box must not be used simultaneously with a plugged-in power source when the toilet is in operation.** It is recommended to connect it to the main unit only during power outages. We accept no responsibility for the consequences of using dual power sources at the same time, and such usage is not covered by the warranty.

2. Before activating the power outage flushing function, install 10 AA alkaline batteries (Batteries not supplied. Please purchase batteries separately before installation.) into the battery box in advance (open the battery box with a screwdriver). Do not mix new and old batteries, batteries of different models, or batteries from different brands. When replacing the batteries, ensure that all are replaced at the same time.


3. Please follow the "+" and "-" signs on the battery box when installing batteries. This battery box is a series battery group, and no single cell can be reversed. Failing to do so may cause battery damage, and in severe cases, may pose safety hazards such as explosion and combustion.

4. Take out the battery connection cable from the rear side of seat cover and connect it to the battery box, ensuring that it is plugged in place.

5. Do not disassemble the battery box unnecessarily. After replacing the battery, make sure to seal the battery box tightly. If moisture from the bathroom gets into the box, it could cause the batteries to rust and become damaged.

6. When replacing batteries, disconnect the battery box from the main unit.

7. To avoid potential hazards, this battery box cannot be recharged.

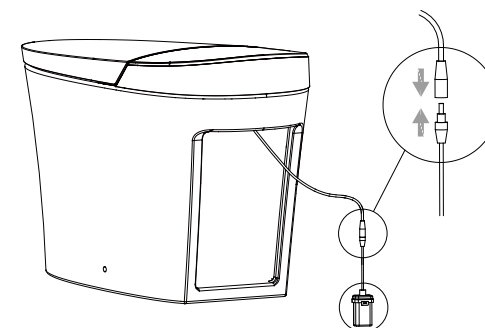

How to Use Foam Shield & Toilet Bowl Cleaner Tablets


■ Introduction to the Foam Shield Function

The Foam Shield creates a soft foam layer inside the toilet bowl that prevents splashing, blocks odors, and keeps the bowl cleaner. It is an innovative feature designed to enhance hygiene and provide a more comfortable and pleasant bathroom experience.


■ How to Get Your Free Foam Shield Liquid

For transportation safety, the foam liquid is not pre-filled in the foam shield bottle. After receiving your toilet, please contact us at support@bazyths.com to request the foam liquid. Your first bottle is completely free, and we will ship it to you separately.


■ Replace the Foam Shield Bottle

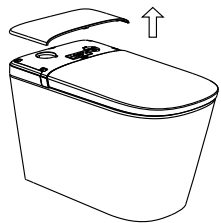


1. Hold both hands together on the left and right sides of the decorative cover, and lift it out vertically.

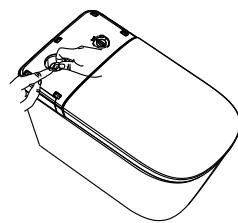


2. Press the connector cap and detach the soft tube.

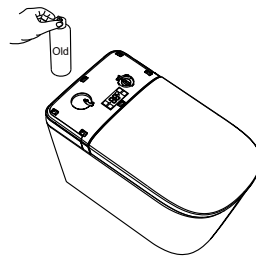


3. Remove the old bottle.

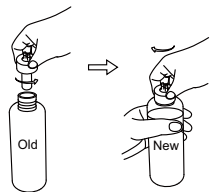

4. Take the connector head from the old bottle and attach it to the new bottle.

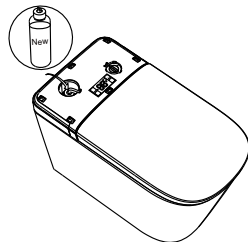


5. Place the new bottle back into the machine and reconnect the soft tube.

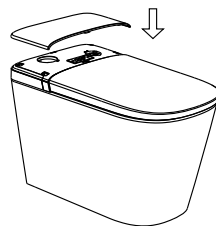


6. Secure the decorative cover back in place.

Note: Regardless of whether you use the Foam Shield function, please ensure that a foam liquid bottle is placed here and that the soft tube is connected to the bottle. Without a bottle, water leakage may occur.

Component Name

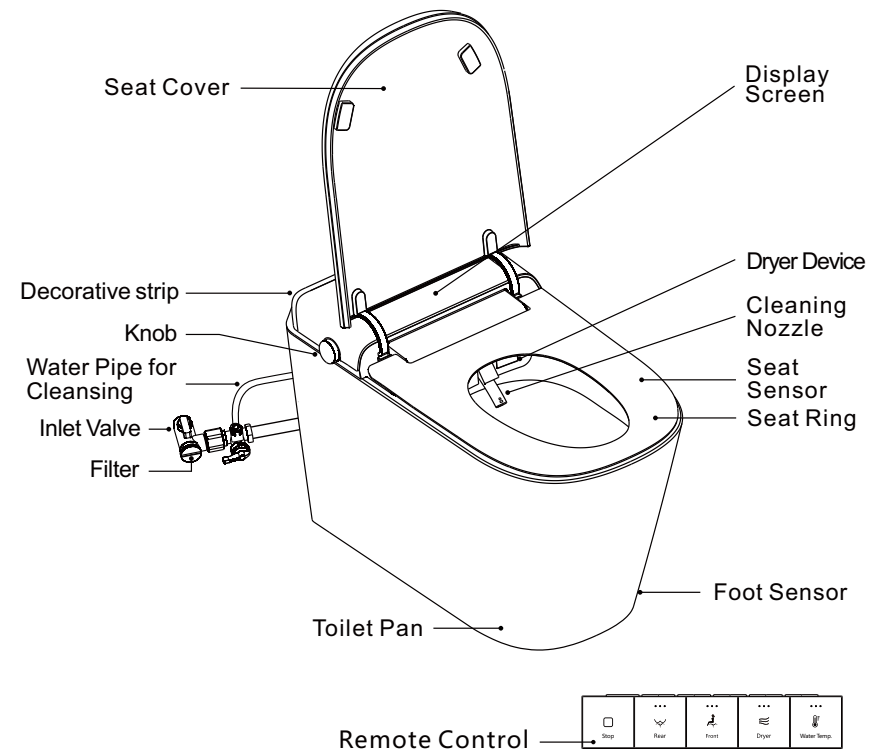

Technical Drawing

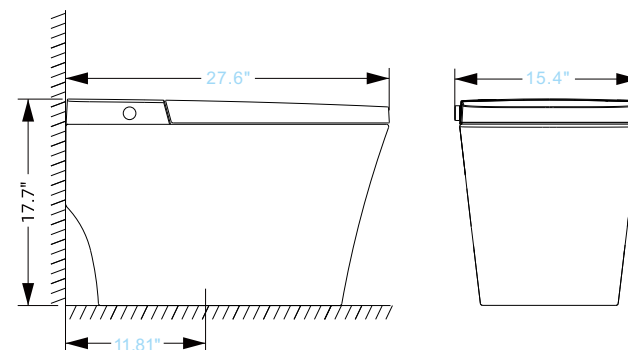

Function Introduction

Remark: Below functions can be adjusted or turned on/off by remote control. Details will be listed later in this manual.

Super Quiet Flushing--- Flushing noise below 45 decibels

Auto lid---Auto open the lid when human body gets close to the front of toilet.

Foot sense to open the lid or the seat ring---Auto open the lid or the seat ring when human body gets close to the toilet.

H/C massage---Cleaning water will alternate hot and cold.

Rear cleansing---Single hole nozzle, powerful cleansing.

Moving rear cleansing---Nozzle moving to wash with wide range.

Front cleansing---Special nozzle hole for female, gently cleansing

Moving front cleansing---Nozzle moving to wash with wide range.

Strength adjustment---Adjust the cleaning strength according to what you like.

Position adjustment---Adjust cleaning position by moving the nozzle forward and backward.

Cleansing water temp. adjustment---4 levels of cleaning water temp. circulation adjustment: normal/high/medium/low.

Warm air drying---Drying after cleansing

Seat sense---All functions can be conducted after seated.

Seat ring temp. adjustment---Seat ring with built-in heating device; 4 levels of seat temp. circulation adjustment: normal/high/medium/low.

Smart seat temp. ---Auto adjust the seat temperature according to different seasons.

Remote control---All functions can be conducted by the remote control.

Auto flush---Auto flush after you use the toilet and stand up.

Flush by remote control---Flush by pressing the flushing button on the remote control.

Foot sense flush---Can flush by foot sense.

Night light---With light inside, convenient for night using.

Nozzle cleaning---Press this button when unseated, the nozzle will be self-cleaning, easy for daily maintenance.

Nozzle auto cleaning---Nozzle will be auto-cleaning before and after using.

Blackout flush---With built-in standby battery, can operate flushing functions when power outage.

User 1 and user 2 shortcut settings---Dual user memory button, one click switch to exclusive mode

Foam Shield ---Provides deodorizing, splash-proof, anti-stick, and antibacterial protection.

Cautions



WARNING



NO DISASSEMBLE


Please do not disassemble, repair or modification of this product.

◆ May to cause fire, electric shock damage.



NO WATER

Please do not use wet hand to pull the plug.

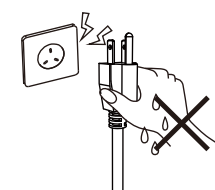


◆ May to cause electric shock damage.



NO SOAKING

Please do not pour water, or detergent or deodorant, etc. on the equipment and the power plug.

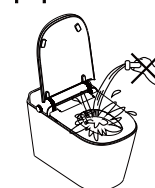


◆ May to cause fire, electric shock damage.



PROHIBIT

Only support 110V AC. Please do not put through power supply before making sure the inlet valve open.

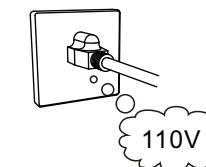

◆ May to cause fire.



PROHIBIT

No scratch,damage the wire.No change,curve/tensile,bend.bind. bear.pirch the wire. No using loosening socket.

◆May to damage the wire,to cause electric shock or fire.



PROHIBIT

Do not connect with outer water supply.

◆May to cause corrosion inside and fire.

◆May to cause inflammation of the skin.



GROUND WIRE


Please be sure to come it with the ground wires.

◆It is easy to get an electric shock when failure and leakage.



PROHIBIT

Do not put it in the wet area.

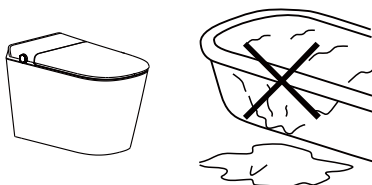

◆Easy to get an electric shock and fire.



ABIDANCE

Long time using,set the temperature to the normal level.

◆Long time using +1 level.may cause scald.



NO BURNING

Keep away from fire.

◆Easy to get on fire.



ABIDANCE

Chilren,old man.patient.tired person.drunk person.person who having sleeping pills.


The above stated people,need to be accompanied with. and set the dry temperature on 1.

◆Long time using +1 level.may cause scald.



PROHIBIT

Do not use wet hand to operate remote control,or to purl the remote.

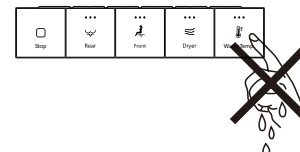


◆Easily lead to the remote control failure.

Installation Instructions

■ Installation of the Smart Toilet

1. Confirmation of installation environment


Before installation, please confirm that the bathroom wall and floor tiles have been completed, and that the sewage pipes, water pipes, and electrical circuits have been reserved as shown in the figure below. This toilet rough-in is 300mm (11.81in); Water inlet pressure range: 0.15Mpa (dynamic) - 0.75Mpa (static); water inlet temperature: 4°C-35°C (39.2°F-95°F).

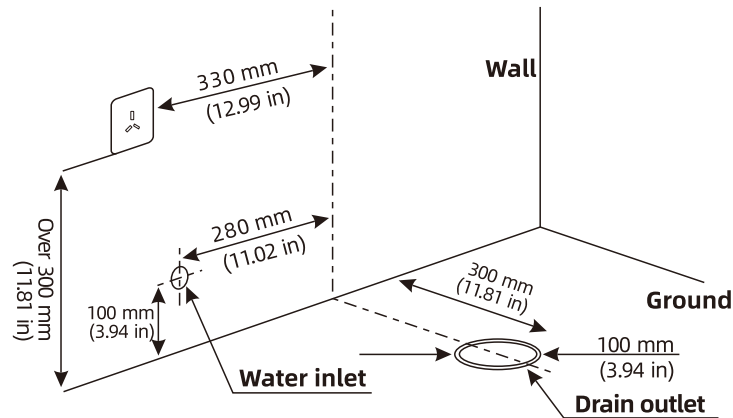

2. Assembly of dedicated shut-off valve

Install the shut-off valve provided with the product.

- Note: If your existing shut-off valve has a 3/8" outlet, you can use our Spare Adapter (Refer to page 3) to connect it to our smart toilet without the need to replace the valve.

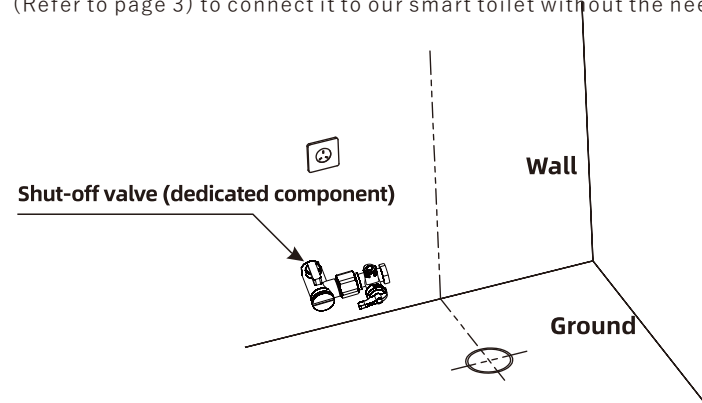


3. Installation and fixation of the toilet

<1.1> Align the "flange-ABS" on the ground drain outlet, adjust the "flange-ABS" arrow to point vertically to the wall, and mark the drilling position of the ground. Drill four holes in the ground according to the marks.

<1.2> Install "sealing wax ring-thin" at the bottom of "flange-ABS"

<1.3> Insert the "expansion plastic sleeve - small" completely into the small hole; Align the hole position and install "flange-ABS" and "sealing wax ring-thin"; Use "round head self tapping screw-5×36mm" to lock.

<1.4> Insert the "bolt-8×43mm" into the slot of "flange-ABS"; Adjust "bolt-8×43mm" to make the center line of the two bolts perpendicular to the arrow marked on the flange body.

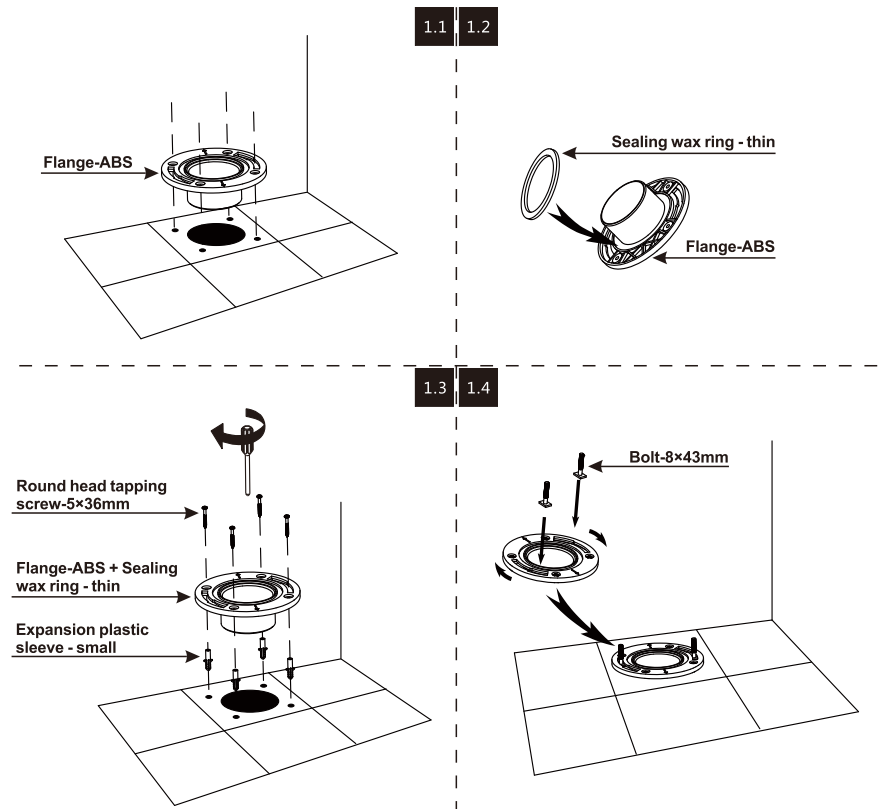


<2.1> Align the "sealing wax ring-thick" with the drain outlet and install it on the "flange-ABS". Insert two L-shaped plastic fixed blocks and gaskets into "bolt-7×43mm"; Then install the "large washer-8×24×1.8mm" and "nut 5/16" in sequence.


<2.2> Align the drain outlet of the intelligent toilet with the center of the flange for installation.

<2.3> Install the "T-shaped pad" on the small holes on both sides of the ceramic pan, and drive in the "flat head self tapping screw-5×75mm".

<2.4> Cover the "T-shaped pads" on both sides with the "decorative caps".

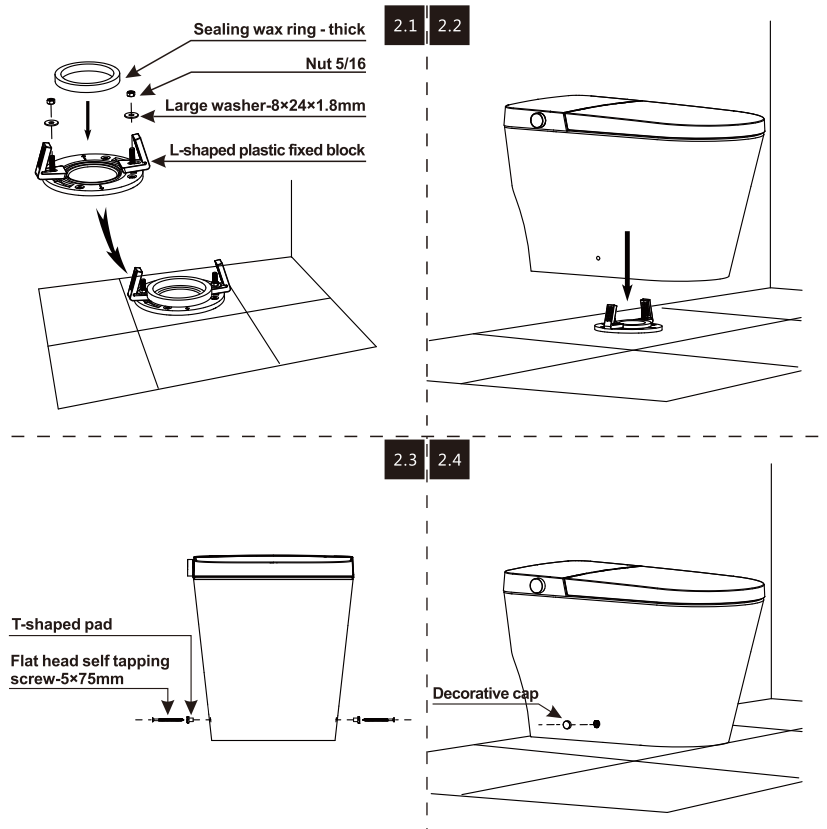


<3> Apply a layer of glass glue at the bottom of toilet.

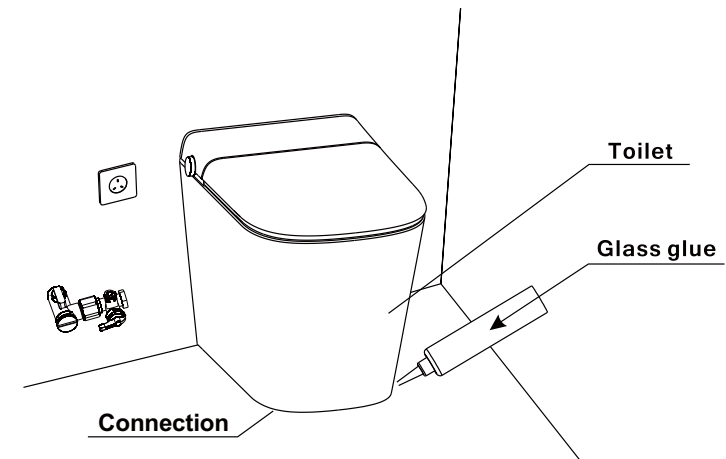

4. Connection for the inlet water pipe

Connect the inlet pipe with the inlet valve & filter cotton by using the tools like spanner.

◆ Notice: Turn on the water inlet valve after installation to check whether it leaks.

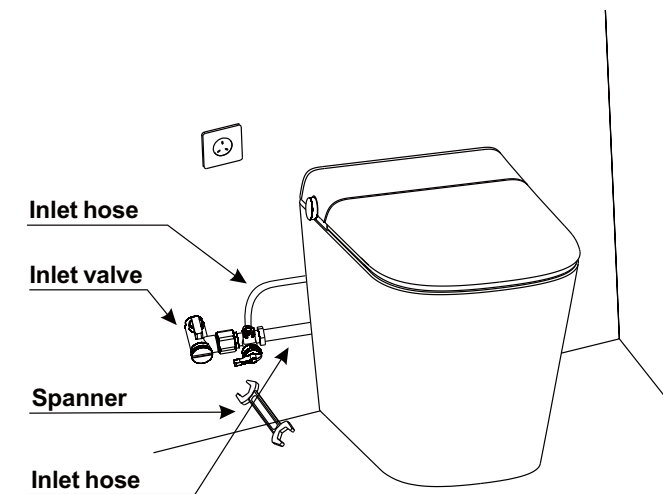

■ The installation method of remote control

1. Check the installation of remote control batteries.

Open the battery cover of the remote control and put two alkaline batteries (AAA) into the remote control one by one.

- When installing the battery, do not put the positive and negative sides of the battery in reverse.
- Do not use different or different types of batteries at the same time.
- Remove the battery when it is not in use for a long time.

2. Confirm the installation location of the remote control.


Install the remote control in a suitable area where it should be easy for getting or operating when you sit on the smart toilet.

3. Install the remote control bracket on the wall.

Tear off the protective tape of 3M tape on the back of bracket and apply to the selected dry tile surface.

4. Install remote control.


Align the remote control with the bracket, insert it from top to bottom, and the installation is completed.

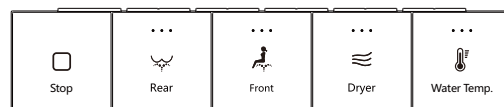


Preparation before Use

1. Open the inlet valve.

Rotate the valve switch counterclockwise to fully open the inlet valve.

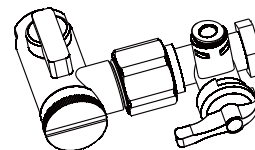

2. Plug the power plug into the socket.

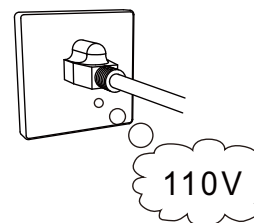

Insert the power plug into the 110V socket, and the intelligent toilet will automatically operate check once, and the host will be in power on mode.

- ◆ Auto-open the seat cover and seat ring will be self-reset. Do not obstruct it.
- ◆ Do not use the wiring that exceeds the power supply specification such as the wiring board.
- ◆ The socket must have reliable safety grounding.


3. Adjust the cleansing water temperature and the seat temperature to the appropriate level.

4. Pressing the buttons on remote control to run each function refer to the function adjustment instructions.


Panel Cognition

This product could be conducted mostly by remote control, assisted by the host operate panel.

◆ Remote control panel

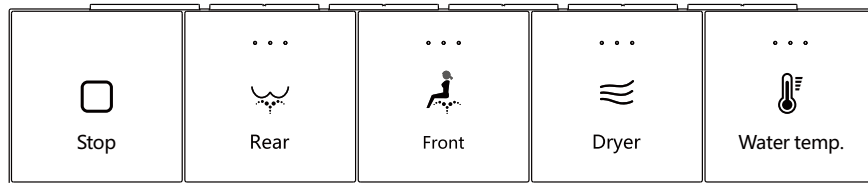

Front

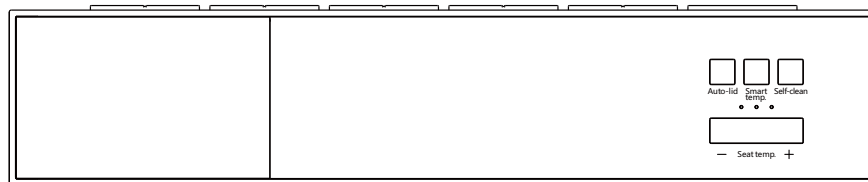

Back




Side

● Remote control match code instruction:

1. Press the "Front cleansing" and "Dryer" buttons on the remote control while powering on, and the indicator light will flash to enter match mode.
2. Cut off and re-power on the power plug, the knob indicator light flashes twice. And then press the "stop" button on the remote control. The knob light "blue" lights up to match.
3. The knob indicator light turns to normal display, indicating successful matching. Wait for the host reset to complete.

◆ Knob button(with halo)

Front Cleansing

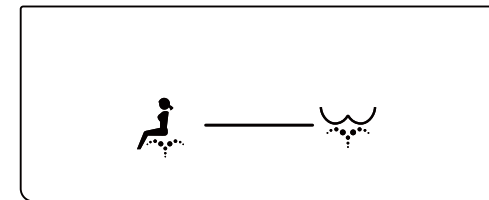


Rear Cleansing

Press the knob to switch the function of flushing and stop


- Vertically pressing the knob to flush once when the smart toilet is not working.
- When on seated, rotating clockwise the knob to turn on the rear cleansing function; Rotating anticlockwise to turn on the front cleansing function; and vertically pressing the knob to stop the running function like rear cleansing, front cleansing or drying.
- When rear cleansing or front cleansing, rotating the knob once in the same direction to turn on the drying function.

◆ Host display screen

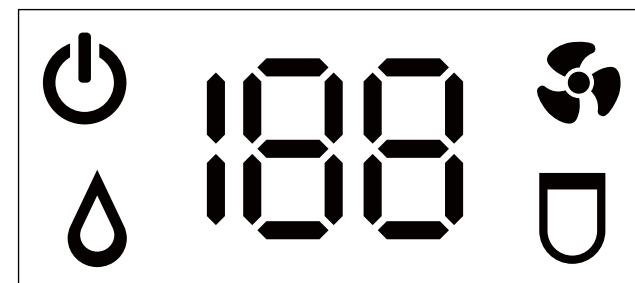

- ⏻ Power indicator: Light up when smart toilet switches on.
- 188 Temperature level: Show the setting temperature when smart toilet switches on.
- ⚙ Air temperature icon: When the icon lights up, it will show the setting air temperature.
- 🪑 Seat temperature icon: When the icon lights up, it will show the setting seat ring temperature.
- 💧 Water temperature icon: When the icon lights up, it will show the setting water temperature.
- The temperature showed on the screen is the setting temperature. It will circularly show the water temperature, seat temperature and air temperature with 30 seconds interval.
- When the human body leaves the toilet sensor area, the screen will be automatically turned off after about 30 seconds.

◆ Ambient light

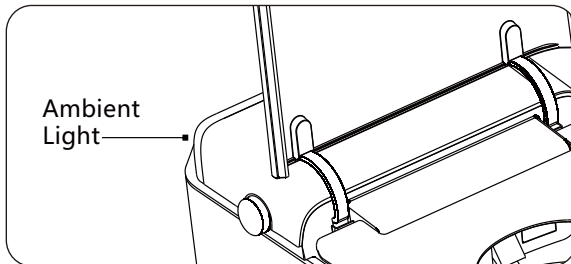


- The smart toilet boot default mode 1 for the atmosphere light: it will be lighted up when the human body is closed and it will be turned off when closing the seat cover over 30 seconds.
- Long pressing the night Light function button on the remote control to set on/off of the atmosphere light. Power off memory on/off and setting mode.
- Pressing the button of Position on remote control to switch atmosphere light mode when the atmosphere light is on within 5 seconds. The display screen displays 1-64 means the mode number. Pressing the Stop button of remote control to exit setting if confirm the mode.

How to Use

■ When seated on the seat

- ◆ When hear "di", all the functions start up.
- ◆ Auto clean the nozzle once.

■ Start rear cleansing or front cleansing function

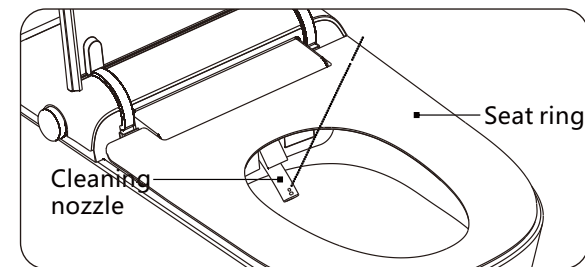


- ◆ Start the rear cleaning or front cleaning function by remote control.
- ◆ Adjust the cleaning position and water pressure by remote control.
- ◆ Start drying function by remote control.
- ◆ Press "Stop" button, rear cleaning, front cleaning or drying stops working.

■ When unseated on the seat

- ◆ Auto flush the toilet once.

Function Setup and Adjustment

■ Auto-open the seat cover

When get close to the toilet, the lid will auto-open. Pressing the button of  on remote control to turn on/off this function.

■ Lid/Seat open

This product has the function of lid/seat open. When people get close to the toilet, the lid and seat ring will be auto opened by foot sense.

Press the button Cover Up/Seat up on the remote control to open/ close the lid and seat.

Open the seat cover and seat ring by foot sensor: Under the state of unseated, when the seat cover and seat ring are in the low position, sense the foot sensor of toilet side with foot once, the seat cover will auto-open; when the seat cover is in the high position and the seat ring is in the low position, sense the foot sensor of toilet side with foot by one time, the seat ring will open; when the seat cover and seat ring are in the high position, sense the foot sensor of toilet side with foot by one time, the seat cover and seat ring will close and the toilet will flush once. Please note that if the last operation is flushing, it won't flush again when close the seat cover.


Open the seat cover and seat ring by remote control: In the state of unseated, press the button open the seat cover and seat ring on the remote control to open or close the seat cover and seat ring. Press the button close the seat cover, the seat cover and seat ring will be closed, and the toilet will flush once. Please note that if the last operation is flushing, it won't flush again when close the seat cover.


● When the smart toilet is under the state of rear cleansing, front cleansing, flushing or other functions, the function of open or close the seat cover and seat ring can not be used.

■ Rear cleansing

This product has the function of rear cleansing by using single hole nozzle.

Pressing the button  on remote control to enter the rear cleansing state: the nozzle moves back and forth, by using single hole nozzle.

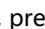In the state of rear cleansing, pressing the button  on remote control to switch the fixed cleansing mode: the nozzle stop moving. It can be operated circularly.


● The rear cleansing function will be off automatically after 90 seconds. Pressing other function buttons to directly switch to other functions or the button  to stop the function of rear cleansing within 90 seconds.


● The nozzle will auto-clean before and after rear cleansing function.

■ Front cleansing

This product is equipped with the function of front cleansing by using a feminine hole nozzle for gentle cleansing.

Pressing the button  on the remote control to enter the moving cleansing state: the nozzle move back and forth, enjoy the gently care.

In the state of front cleansing, pressing the button  on remote control to switch the fixed cleansing mode: the nozzle stop moving. It can be operated circularly.

● Front cleansing function will be off automatically after 90 seconds. Switch to other functions or press the button  to stop it directly within 90 seconds.

● The nozzle will auto-clean before and after front cleansing function.


■ Water pressure adjustment

In the state of rear cleansing or front cleansing, pressing the button of rear cleansing or front cleansing on remote control again to adjust proper water pressure strength.


● 4 levels of water pressure are available.

■ Nozzle position adjustment

In the state of rear cleansing or front cleansing, pressing the button  to move the nozzle back and forth and adjust to the proper cleansing position.


● 5 levels of nozzle position are available. Pressing the button  to start this function and adjust to the proper cleansing position.

■ Water temperature adjustment

Pressing the button  on remote control, it will "di" and enter the state of adjusting water temperature. Then adjust it to the comfortable water temperature for cleansing.


- 4 levels of water temperature are available: normal, high, medium and low. The water temperature will switch to another level when press the button of water temperature once.

■ Hot and cold massage

Pressing the button  on remote control to start the H/C massage mode. The water temperature alternates between cold and hot, changed from normal temperature to setting level. If the setting level of water temperature is normal, it will alternating change from normal level to low level.

■ Drying function

Pressing the button  on remote control, it will dry the wet parts of body.

- The drying function will be off automatically for 3 minutes. Directly switch to other functions or press the button  to stop it within 3 minutes.

■ Drying temperature adjustment

Pressing the button  on remote control, it will "di" and enter the state of drying temperature. Then adjust the proper drying temperature.

- 4 levels of drying temperature are available: normal, high, medium and low. The drying temperature will switch to another level when pressing the button of drying temperature once.


■ Seat ring temperature adjustment

Pressing the button  on remote control, it will "di" and enter the state of seat ring temperature setting. Then adjust the proper seat ring temperature.

- 4 levels of seat ring temperature are available: normal, high, medium and low. The seat ring temperature will switch to another level when pressing the button of seat ring temperature once.


■ Night light

This product is equipped with lighting function, which is convenient for nightly use.


- Pressing the button  to turn on/off the night lighting function.

■ Nozzle cleaning

Pressing the button  on remote control, the water will flow out to clean the nozzle.

- The function of nozzle cleaning only be available when unseated.
- The nozzle cleaning function will be off for 90 seconds. Pressing the button  on remote control to finish it.

■ Power button

Long pressing the button  on remote control to close the host system.

■ Flushing by remote control

Pressing the button  on remote control to flush the toilet once.

- Flushing when in the state of cleansing, the function of cleansing will be stopped.

■ Flushing manually

Pressing the flushing rotary knob vertically, and then flushing the toilet once.

- This function would be available even if the host system is shut down.
- Flushing when in the state of cleansing, the function of cleansing will be stopped.


■ Flushing by foot sensor

Designed for men to urinate, no need to bend down to find the buttons or remote control to flush. Foot sensor can achieve flushing.

- Smart toilet uses capacitive induction technology. Using foot to lightly touch the ceramic sensor area icon, it will flush automatically after the foot left.

■ Smart power-saving mode

Starting the smart power-saving mode, the host system enters the power saving mode. Once the product is used, it will immediately return to normal mode: the seat ring automatically heats to the set temperature.

● Long press the button  on remote control to turn on or off the smart power-saving mode. The smart toilet will auto-remember the last operation when power off. Starting the smart power-saving mode, the knob light flashes 10 seconds; Closing the smart power-saving mode, the knob light flashes 4 times.



● In the smart power saving mode, the seat ring stops heating when unseated; and the seat ring is automatically heated to the set temperature level or the smart seat temperature level when seated.

■ Flushing when power off


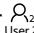
When power off, long pressing the side rotary knob for 3 seconds to start the function of flushing when power off.

■ Smart seat ring temperature

When connect the power, toilet will be set to smart seat ring temperature mode, which will adjust the seat ring temperature automatically according to the indoor temperature.

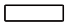Pressing the button  on remote control to close the smart seat ring temperature mode. Long pressing the button  on remote control or re-connect the power of toilet to enter the smart seat ring temperature mode.

■ User 1 and user 2 shortcut settings

Long press the  or  button on remote control for 3 seconds to save the settings of the current status such as the nozzle position, water pressure, water temperature, seat temperature and drying temperature; When in use, press user1 or user 2 to set the toilet according to the above settings preset by the user.


■ Foam Shield

Manual Activation: Press the "Foam Shield" button on the remote control to activate the foam shield manually. Foam will be dispensed once. Automatic Activation Foam is automatically generated once you are seated. Press and hold the "Foam Shield" button on the remote control for 3 seconds to turn the automatic foam function on or off.

Cleaning and Maintenance

■ Clean and maintain power plug

Please clean the power plug regularly: when cleaning, remove the power plug from the socket and wipe it with dry cloth.

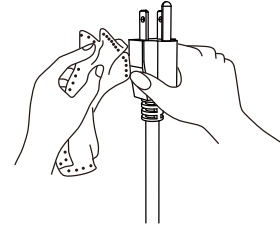

● Dust accumulated on the power plug may cause fire.

■ Clean and maintain the main engine part of intelligent toilet

When cleaning the surface of the main engine, please wipe it with a soft wet cloth.

<1> When cleaning and maintaining, please pull the power plug out of the socket to avoid contact with water.


<2> If the surface has stubborn blot, you can use a soft wet cloth with kitchen detergent (neutral) to swab.

■ Clean and maintain the ceramic part of intelligent toilet

You can pour a neutral toilet cleaner into a soft brush or sponge and rinse with tap water.

<1> Do not use detergent or disinfectant contained with chlorine or acidity.

<2> Do not use brushes with abrasive materials.

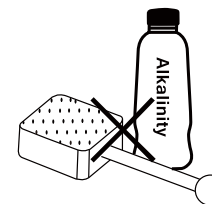

■ Cleaning and maintain of nozzle

■ Moisture condensation

Because the temperature and humidity are different between indoor and ceramic pan/ seat cover, the ceramic pan and seat cover may be moisture condensation. Please change air completely in the bathroom in case of moisture condensation.

- ◆ In case of moisture condensation, please use the dry cloth to scrub.

■ Change the batteries in remote control

Change new batteries when remove control insensitive or the indicator could not work.

- ◆ Do not mistake the positive pole and negative pole when install the batteries.
- ◆ Do not mix the different type of battery.
- ◆ Please take out the battery if not using for a long time.

FAQ

Some problems can be fixed by simple operation. Please confirm below items before entrusting service.

| Problem | | Reason | Solution |
|---|--------------------|--|---|
| Not working after pressing the power button(no light) | | The socket power on or not? | Please check if power out or tripping operation |
| | | Does power plug switch close or not? Are power indicator on plug off? | Press the reset button on power plug to light the indicator. |
| | | Is it the power plug connected well? | Reconnect the power plug |
| Remote control is insensitive or not working | | The battery run out of power | Change new battery |
| The temperature of seat cover, washing water and dryer are not heat enough. | | Check if the setting of remote control correct or not? | Setting related temperature |
| | | Check if it is in power-saving state? | Close the power-saving function |
| Button not working | | Some buttons are no response on normal working state. | Some operations can not working in the same time, please read the instruction carefully. |
| Nozzle could not spray water or low spray water pressure | Can hear alarm | The water supply cut off? | Waiting for water supply |
| | | Inlet valve open or not? | Open the inlet valve |
| | | The filter blocking | Clean the filter |
| | Can not hear alarm | Low water pressure or you have set the low level water pressure on remote control. | Press the button to increase the water pressure |
| | | Have you hear “di” when sitting? Whether it is in the range of the sensor? | Please sit down on the seat cover and make sure you have proper posture |
| Radar sensing doesn't work or doesn't work as expected. | | Is the rader sensing too sensitive? | It is recommended to restart or turn off the radar sensing function. (Refer to page 20 for instructions.) |

Function List

| CONFIGURATION FUNCTION | Item with Middle-level configuration | Item with High-level configuration |
|---|--------------------------------------|------------------------------------|
| Ambient Light | | ● |
| H/C Massage | ● | ● |
| Rear Cleansing | ● | ● |
| Rear Cleansing with Nozzle Oscillation | ● | ● |
| Front Cleansing | ● | ● |
| Front Cleansing with Nozzle Oscillation | ● | ● |
| Cleansing Strength Adjustment | ● | ● |
| Cleansing Position Adjustment | ● | ● |
| Cleansing Water Temperature Adjustmengt | ● | ● |
| Warm Air Drayer | ● | ● |
| Seat Sensor | ● | ● |
| Seat Ring Temperature Adjustment | ● | ● |
| Remote Control | ● | ● |
| Off Seat Auto Flush | ● | ● |
| Foot Sensor Flush | ● | ● |
| Flush by Remote Control | ● | ● |
| Flush by Side Knob | ● | ● |
| Night Light | ● | ● |
| Nozzle Cleaning | ● | ● |
| Nozzle Auto Cleaning | ● | ● |
| Power Outage Flush | ● | ● |
| Auto Lid | | ● |
| Foot Sensor to Open the Lid | | ● |
| User 1 and user 2 settings | ● | ● |
| Buit in tank | ● | ● |
| Foam Shield | | ● |

● Indicates this product contains the function, blank indicates no function.

Remarks : The function of different items may be different from the above list , detailed function is in accordance with the actual product.

Product Specification


| | | |
|-------------------------------|----------------------|---|
| Nominal voltage | | 110V~ 60Hz |
| Rated power | | 1300W |
| Length of power line | | 1.2m |
| Water pressure range | | 0.15MPa-0.75MPa(still) |
| Water efficiency level | | Level 2 |
| Flushing water consumption | | Below 5.0L |
| Cleaning water consumption | | Below 0.5L/Min |
| Unit cycle energy consumption | | Below 0.04kW.h |
| Size of product | | LWH:710*400*455 mm |
| Weight of product | | 43kg |
| Cleaning machine | Water-heating method | Thermal type |
| | Water-temp. control | 4-level adjustable,Normal level, 1st-95°F, 2nd-100°F, 3rd-104°F |
| | Max heating voltage | 1300W |
| | Safety device | Temperature sensor, temperature fuse |
| Seat-heating | Heating power | 40W |
| | Seat-ring temp. | 4-level adjustable,Normal level, 1st-95°F, 2nd-100°F, 3rd-104°F |
| | Safety device | Temperature sensor, temperature fuse |
| Drying device | Heating power | 270W |
| | Air temp. adjustment | 4-level adjustable,Normal level, 1st-95°F, 2nd-113°F, 3rd-131°F |
| | Safety device | Resettable thermal protector,temp. fuse |

Acceptance Record


After installation, please try to operate the toilet and write down result below.

| Item | Result |
|---|------------------------------------|
| Power socket is AC 110V+/-10%, load more than 2000W? | |
| Power socket loose or not? And connected well or not? | |
| Do the connection of fittings loose? or found any leakage? | |
| Lighting up on toilet? | |
| Nozzle leakage? | |
| Function of rear washing is well or not?(including levels adjustment) | |
| Function of lady washing is well or not?(including levels adjustment) | |
| Function of wide washing is well or not?(including levels adjustment) | |
| Function of water temperature is well or not? (including levels adjustment) | |
| Function of seat cover temperature is well or not? (including levels adjustment) | |
| Function of nozzle cleaning is well or not? | |
| Remote control function is well or not? | |
| Function of manual flushing and auto-flushing is well or not? | |
| Function of drying is well or not?(including levels adjustment) | |
| Remark: | |
| Shop: | Installers: |
| | Checking personnel: |
| | Date: |


In the normal operating status, please press the nozzle cleaning button on remote control, the nozzle will stretch out and auto-clean. You could use the tooth-brush to clean it at the same time. Please do not stretch the nozzle by force.

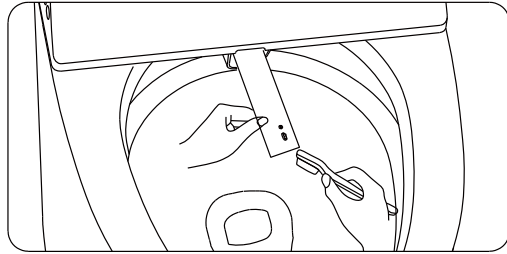


◆ Detachable nozzle model cleaning method

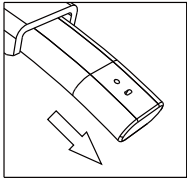

1. Press the button of self-cleaning on remote control to extend out the nozzle.

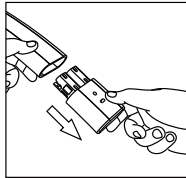

2. After the nozzle is extended, pull out the front nozzle with hand.

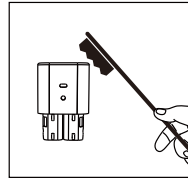

3. Use a toothbrush to clean the nozzle.


■ Cleaning and maintain of water inlet filter

<1> Shut off the inlet valve first to stop water supplying.

<2> Use coin to open the filter counterclockwise, then clean it by brush or water directly.

<3> Reinstall the filter and screw up. Do not leave behind the seal ring of filter.

<4> Open the inlet valve to check if leakage. If there is any leakage, please recheck and reinstall.

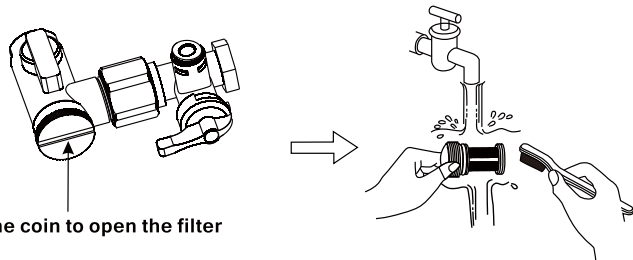


Use the coin to open the filter

■ Not to use for a long time


When not to use this product for a long time, please do the following operation: draining out all the water in smart toilet to prevent water pollution or frozen; shutting off the power; taking out the battery in the remote control.

<1> Shut off the inlet valve first, stop supplying water.

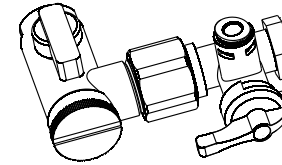

<2> Pull off the plug from the power socket.

<3> Remove the inlet pipe from the inlet valve to drain out the water inside pipe and the pipe.

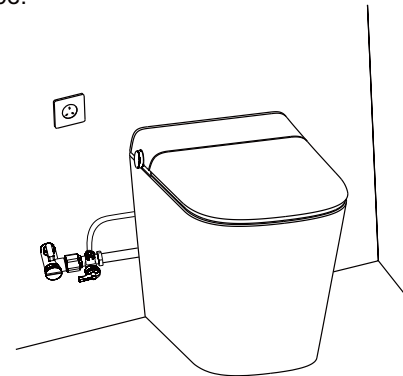

◆ When reusing the product, you can just open the inlet valve, put the plug into the socket and starting up.

■ Frozen

In winter, the intelligent toilet may be damaged for the frozen inside. To prevent the frozen, please keep the power on and operate as follows:

◆ Set the temperature of seat and water to the highest level.

◆ In case the inlet pipe frozen inside, the nozzle can not work, please use warm cloth to heat the inlet valve or open the heating also can fixed this problem.