

Smart Lock Gateway

User Manual

Thank you for purchasing our products. Please review this manual thoroughly before operating your device All pictures in this manual are for illustration purpose only. Actual product may vary due to product upgrade

SMART LOCK GATEWAY G2

Dimensions 70mm x 70mm x 26mm Network WiFi 2.4G IEEE standard: 802.11 b/g/n Power interface Type-C USB 5V/500mA Power input:

Light Status



When the Gateway is powered on:

- Flashing Red/Blue lights: Stand-by mode - Ready to Pair
- Blue light: Normal mode
- Red light: Network failure

Pair with App



APP

 






Pair with App









6 While the light is flashing in Red and Blue alternately, tap on "+"



Pair with App



8 Select the network and enter your Wi-Fi password.







FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
 -- Increase the separation between the equipment and receiver
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Disclaimer

We continuously optimize products as new technologies and features are developed. For this reason, we reserve the right to make alterations to the products without prior notice