


# Cumbor

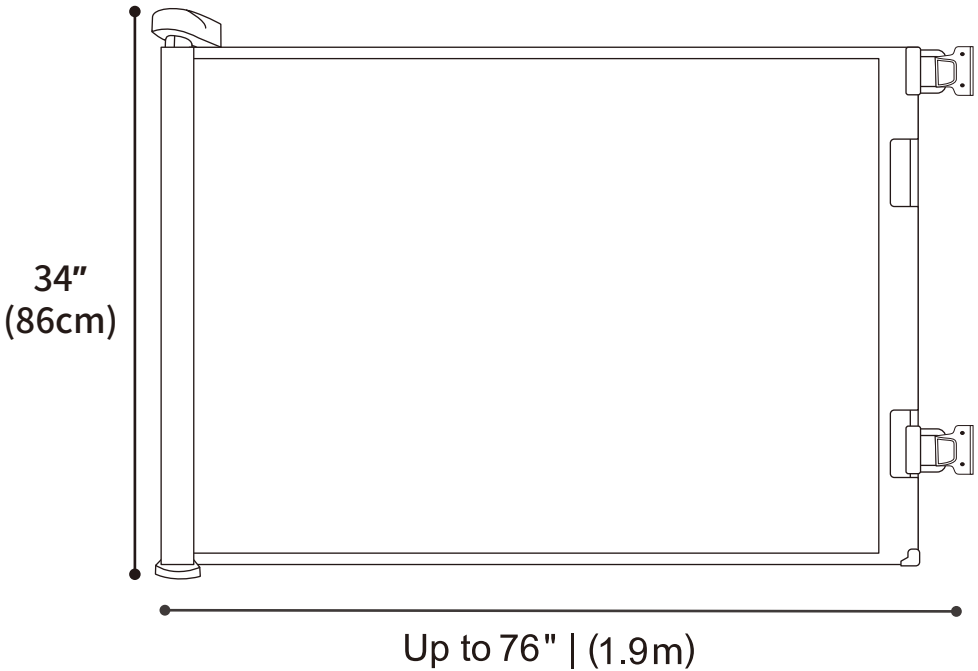

IMPORTANT: READ AND FOLLOW THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.

## Retractable Safety Gate

Instruction Manual



# TABLE OF CONTENTS

---

Warnings	03
----------	----

## WHAT'S IN THE BOX

1.Parts	05
2.Mountings	06

## INSTALLATION

1.Gate Placement	08
2.Installation Steps	09
3.Adjustable Lower gate mount	10
4.Gate Removal	11

## OPERATION

1.How to Open and Lock	13
2.Cleaning Instructions	15

Warranty Information	16
Manufacturer Support	17

## GENERAL

Read this instruction manual carefully and keep it in a safe place for future reference. The correct use and maintenance of this product is essential for proper functioning and safety.

## MAINTENANCE

Regularly check that the gate is functioning correctly. Lubricate hinges and moving components with a suitable spray lubricant. Tighten and adjust mounts to ensure secure and smooth operation. Inspect all components regularly and stop using if any components are damaged or missing.

# WARNING

Children have died or been seriously injured when gates are not securely installed.

- This gate is suitable for use with children from 6 months up to 24 months of age.
- Minimum width of opening is 27.6 inches; maximum width of opening is 55 inches. The ideal width of the opening is 35.4 inches.
- ALWAYS install and use gate as directed and use all required parts.
- You MUST install the gate with screws and brackets. Without screws and brackets, children will be able to push the gate open.
- STOP using when a child can climb over or dislodge the gate.
- Use only when the [locking/latching] mechanism is securely engaged.
- NEVER use to keep children away from pool.
- Do not use the gate if any components are damaged or missing.
- This safety gate must not be fitted across windows.
- Gates must be checked regularly to ensure that it is secure and functioning in accordance with these instructions.
- Additional or replacement parts must only be obtained from the manufacturer or distributor.
- Check that the gate is always correctly closed.
- Discontinue the use of the gate if it becomes damaged, broken, or disassembled.
- If the gate is used at the bottom of stairs to prevent the child from climbing up the stairs, it must be placed on the lowest stair.
- If you decide to use this gate at the top of the stairs, place it at least 8 inches back from the top step.

# WARNING


- To prevent serious injury or death, securely install gate or enclosure and use in accordance to manufacturer's instructions.
- Incorrect installation can be dangerous.
- Danger to older children who are tall enough to climb over the gate.
- Never install this product on glass doors. Install this product against reliable doors or walls.
- This safety barrier is for domestic use only.
- This safety gate has a manual closing system.
- Do not put any goods which can be grabbed by children or pets near this product to prevent injury.
- Before using this product, carefully inspect for any loose parts and whether any parts need to be tightened.
- Always check that that the safety gate is correctly closed.
- Gate must be installed as close to the ground as possible, as per the installation guides.
- The safety gate must be fitted between rigid surfaces such as plaster board, timber or cement walls.

## Caution:

This product is a deterrent and not a substitute for adult supervision. Never leave children unattended. Check the gate regularly to ensure safe usage.

# WHAT'S IN THE BOX

## 1.PARTS

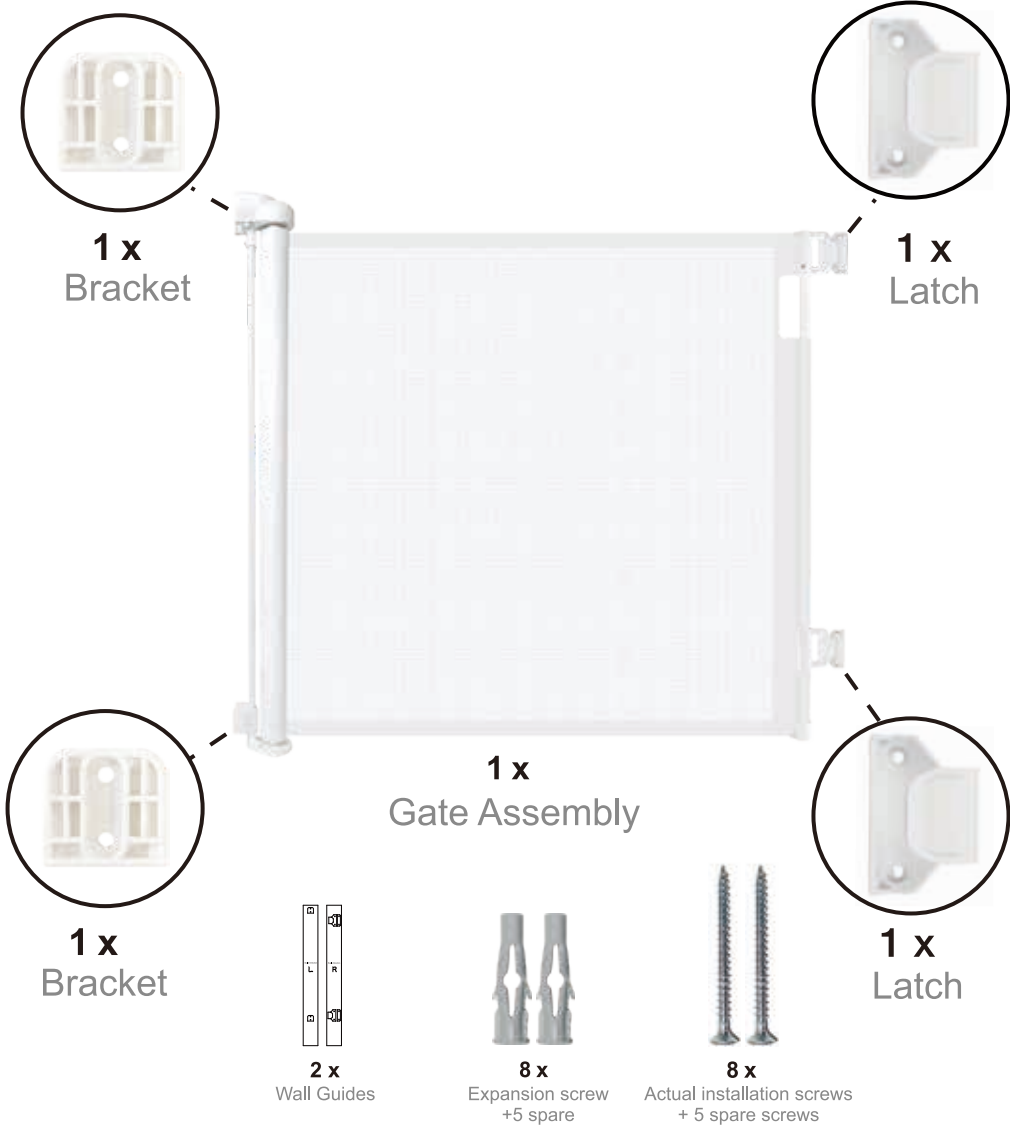


This gate must only be fixed to a solid and secure surface. If unsure, check with a qualified builder or trades person to see that the installation you intend is suitable and safe within the chosen location.

**TOOLS PREPARATION:**



A. Philips head screw driver

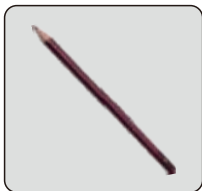

B. Pencil




C. Power drill




D. Hammer

**Please select the proper accessories and a suitable wall**

1. Install on wooden material

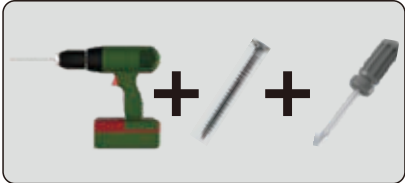

2. Install on cement wall

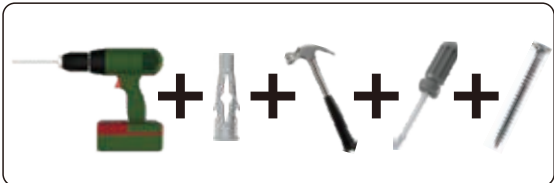

**\*Do not install onto sheet rock or glass**

## 2.MOUNTINGS

The gate must be installed on a structurally sound opening. Ensure mounting surface (wall,door frame,stair posts, etc) is strong, rigid and has an even surface.

**Note:If using the gate on stairs, it must be placed either on the top step or on the lowest step at the bottom.**


Select the appropriate fixing method from the following list.



### 1.For installation Screws


For example:wood mounting

Drill 5/64"(2mm) pilot holes and use the wood screws provided screwing directly into the wood.

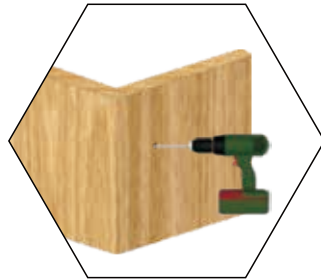

### 2.For installation Screws Anchor

For example:hard wall mounting concrete  
Drill 15/64"(6mm) pilot holes and about 50mm deep, insert anchor and secure with screws.

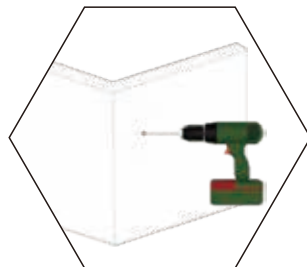





# INSTALLATION

## 1.GATE PLACEMENT


SUITABLE PLACEMENT OF THE SAFETY GATE AND CATCH MOUNT

Inside Opening or Doorway

Inside Opening or Doorway

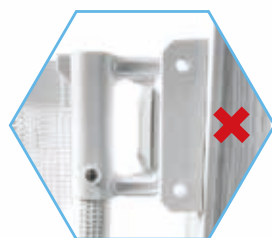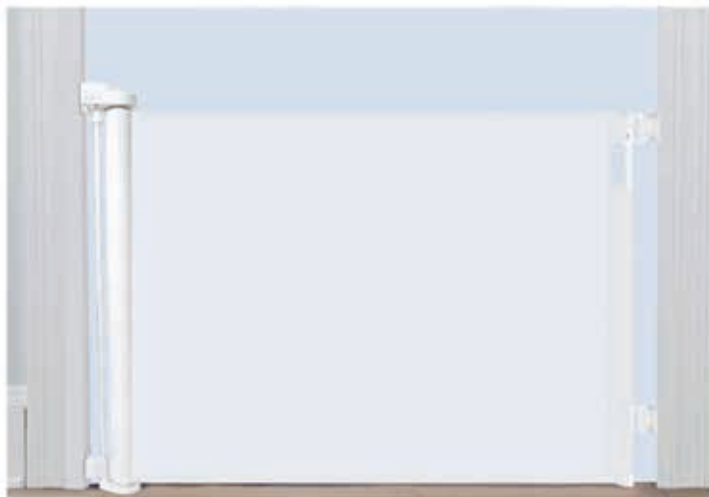


Outside Opening or Doorway

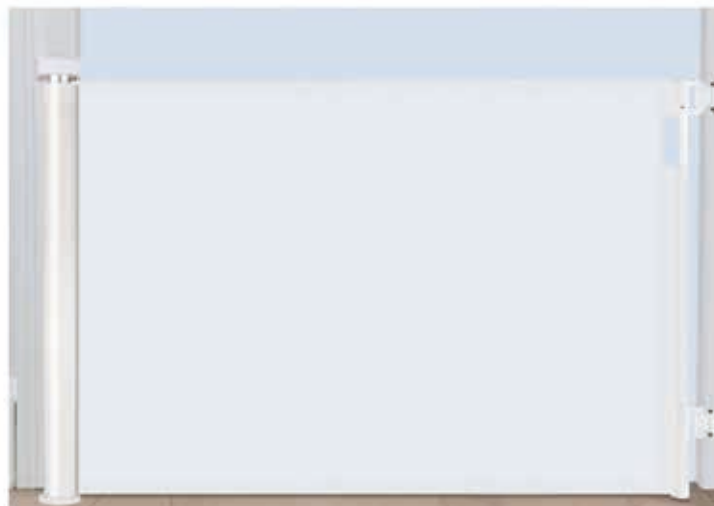

## 2.INSTALLATION STEPS

The product must be installed on the ground to better realize the separation function.

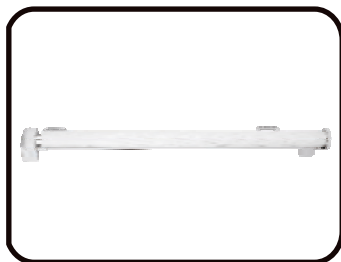

1.Main body Gate



2.Mark the holes position of the lower and upper brackets as the left guide with a pen and keep in a vertical direction.




3.Mark the holes position of the lower and upper latches as the right guide with a pen.



4.Drill holes with an electric drill as the marks



5.Insert the expansion screws to all holes

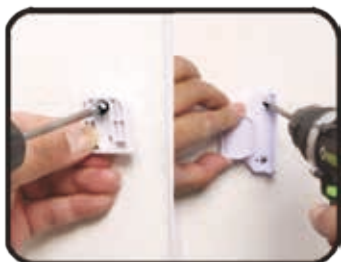

6.Drill the two Brackets and Two Latches to wall. (Please notice the obverse and the reverse are correctly facing)



7.Install Gate to upper Brackets as the arrow indicates.




8.Install Gate to Lower Bracket as the arrow indicates. Please make sure to install the gate to upper Bracket first then install gate to upper Bracket at Gate to the Lower Bracket.



9.In the "Unlock" state, the gate can be pulled out.

### 3.Adjustable lower gate mount.

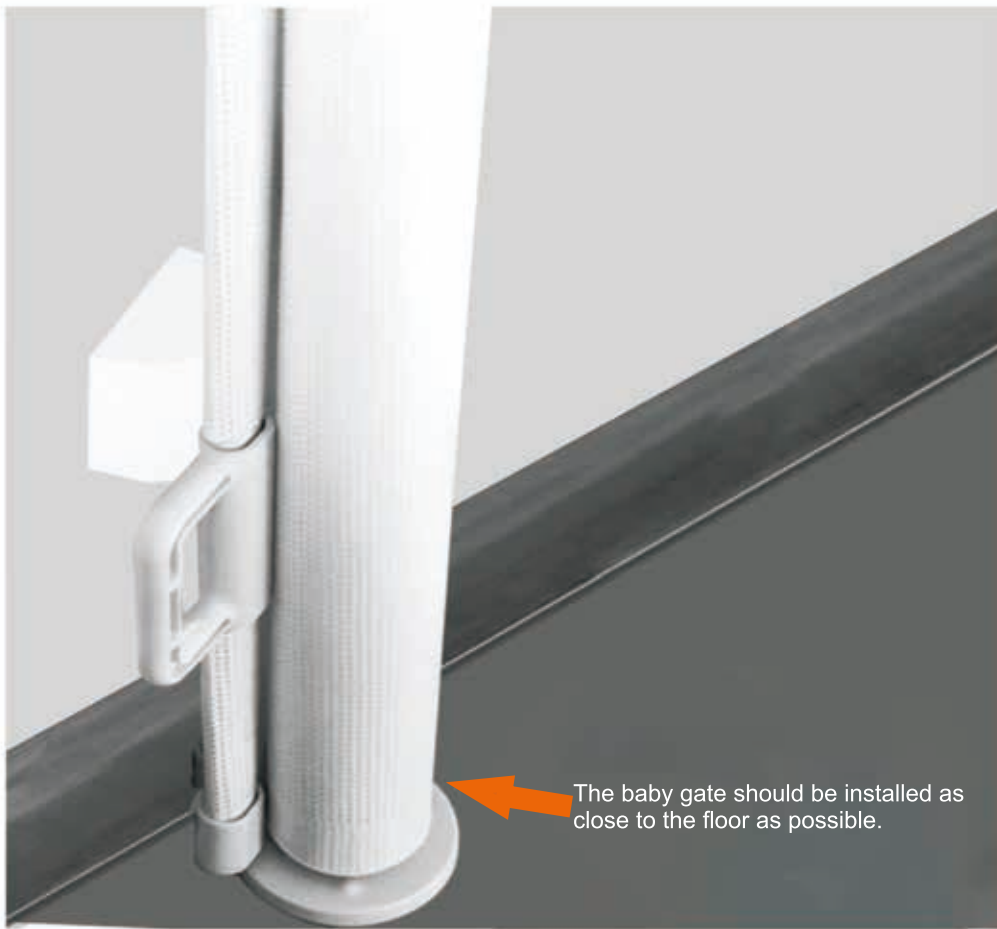

## 4. Gate Removal

1.Push and hold the button






2.Lift the gate upwards to disemble it from the bracket



### Note:

This Extra Wide Outdoor Retractable Gate extends up to 76" wide and is 34" tall. This gate minimum width of the opening is 27.6in. The maximum width of the opening is 76in. The preferred width of the opening should be 35.4 inches.

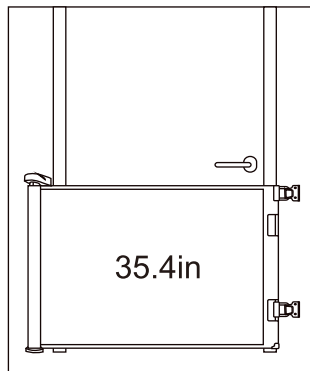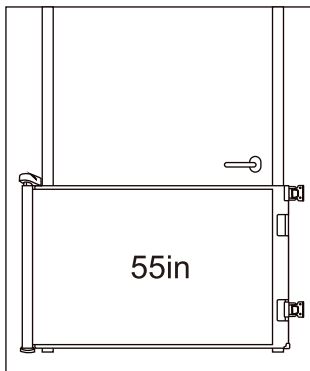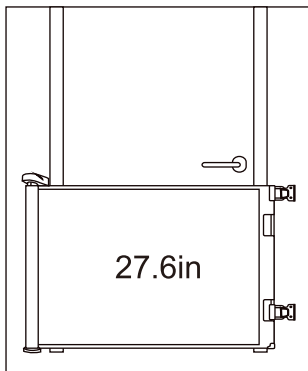

### Remark:

If you don't need to use this retractable baby gate, please press the button at the bottom of the upper bracket to remove it.

How to remove or dismantle: When not in use, please put it in a safe place that children cannot touch it.



How to maintain and clean: wipe the surface of the product regularly with a sponge and non-abrasive cleaner, and please check the hinges of the product regularly. If you find any problems or that any part is broken, please stop using it immediately

# OPERATION

## 1-1:HOW TO LOCK THE GATE



## 1-2:HOW TO OPEN THE GATE



Note: When the gate is retracting always hold the handle and guide the gate evenly back into its original position. Never let go of handle when gate is retracting.

## 2.CLEANING INSTRUCTIONS

Simply use a soft damp cloth to wipe dry after cleaning. Do not use chemical or abrasive cleaners.

Thank you very much for choosing our products.  
Please read the instruction manuals carefully before using this retractable safety gate. Do not use if any part is broken, torn, or missing.



# WARRANTY INFORMATION

## TWO YEARS NON-TRANSFERABLE LIMITED WARRANTY

To provide customers with quality shopping and user experience, we guarantee to replace or issue a refund or provide acceptable solutions to any defective (as customers prefer) from the date of purchase to 2 years.

Proof of purchase must be provided (Amazon order number or receipt) when making a claim to our customer support center.

The warranty is not transferable. We only provide warranty services for buyers purchased from our Amazon store and the recipients possessed the purchase proof, and not any other purchaser or subsequent owner.

Price matching policy is not applicable. No price difference refund.

Sellers are the responsible party. Amazon allows different sellers to sell the same product, so please confirm the seller by checking the order details before contacting us.

### WHAT IS COVERED

1. Received defective or used (proof needed) products;
2. Received with missing parts;
3. Defective items under proper use.

### WHAT IS NOT COVERED

1. Purchased from non-Amazon channel or other physical stores;
2. Gift without proof of purchase;
3. Tampering/abnormal use/accidental damage;
4. Replacements and parts;
5. Installation fee/labor fee.

### MAKING A CLAIM

If you have any problems when using our products, you can choose any of the methods to reach out to us.

## Manufacturer Support:



1-888-281-8150 (24/7)



[support@aborderproducts.com](mailto:support@aborderproducts.com)(24/7)



30 Days Free Return & Replacement



2-Year Product Warranty

Gifted parts, replacements, consumable products are not covered by the 2-year warranty. Manufacturer' s warranties may not apply in all cases, depending on factors such as use of the product, where the product was purchased, or who you purchased the product from. Please review the warranty carefully, and contact the manufacturer if you have any questions.



