



User's Manual



Remote Control Racer



© 2015 VTech
Printed in China
91-003063-010 UK

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years



To learn more about this and other VTech® products, visit www.vtech.co.uk

INTRODUCTION

Thank you for purchasing the **VTech® Toot-Toot Drivers Remote Control Racer**.

Grab the steering wheel-shaped remote control and race to victory with the **Toot-Toot Drivers Remote Control Racer**! This powerful race car will entertain your little one with playful music, fun sounds and phrases. Use the remote control to drive the racer over **SmartPoint** locations to hear fun phrases, sounds, short tunes and sing-along songs.

LIGHT-UP
FACE BUTTON



POWER
INDICATOR LIGHT



DIRECTIONAL
BUTTONS

INCLUDED IN THIS PACKAGE

- One **Remote Control Racer**
- One remote control
- One user's manual

 
WARNING:

All packing materials, such as tape, plastic sheets, packaging locks and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this user's manual as it contains important information.

Unlock the packaging locks:

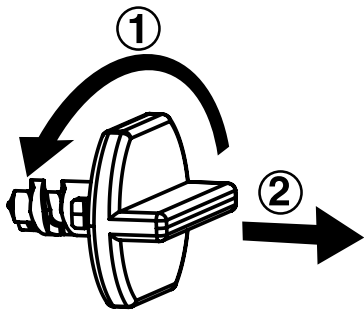


- ① Turn the packaging lock counter-clockwise several times.
- ② Pull out and discard the packaging lock.

GETTING STARTED


BATTERY INSTALLATION – VEHICLE

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the race car. Use a screwdriver to loosen the screw.
3. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover and tighten the screw to secure.

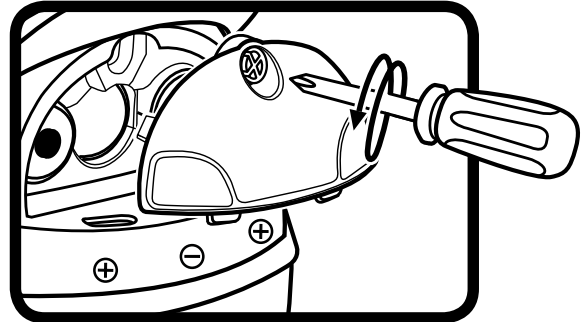

BATTERY INSTALLATION - REMOTE CONTROL

 1. Locate the battery cover on the back of the remote control. Use a screwdriver to loosen the screw.
2. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
3. Replace the battery cover and tighten the screw to secure.

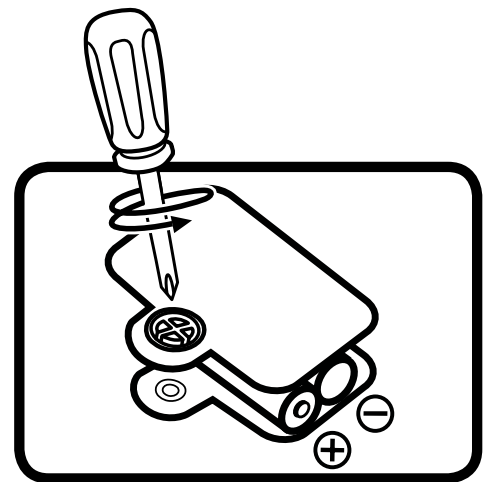

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

 
www.recycle-more.co.uk

www.recyclenow.com

PRODUCT FEATURES

1. OFF/MODE SELECTOR SWITCH – VEHICLE

To turn the unit **ON**, slide the **OFF/MODE SELECTOR SWITCH** to the **REMOTE CONTROL MODE** (MOTOR) or **STANDARD MODE** (⏻) position. To turn the unit **OFF**, slide the **OFF/MODE SELECTOR SWITCH** to the **OFF** (●) position.

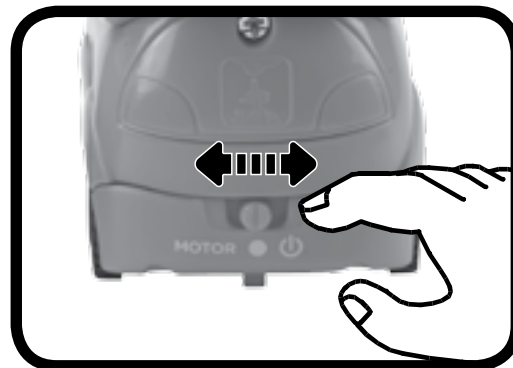

2. CHANNEL SELECTOR SWITCH

To allow the **Remote Control Racer** and remote control to function together, slide the **CHANNEL SELECTOR SWITCH** (1 2 3) to the same location on the **Remote Control Racer** and remote control.

 
 
Note: If two or three **Remote Control Racers** are operating in the same vicinity, place each unit on a different channel (1 2 3).

(A maximum of three **Remote Control Racers** can operate in one location.)

3. FORWARD/BACKWARD BUTTONS

In **REMOTE CONTROL MODE**, press the **FORWARD BUTTON** or **BACKWARD BUTTON** on the remote to make the race car go forward or backward. (The effective distance for the race car to recognise the remote control is 9 ft. to 18 ft. The distance will be shorter when the batteries are low.)

For your child's safety, only use the motorised car on Toot-Toot Drivers play sets. Do not roll the car on your clothing, body or hair while the motorised car is turned on. If something gets caught in the car's wheels while the motor is on, lift the car up so it is no longer touching your child or slide the mode selector switch to the off position to turn off the motor.

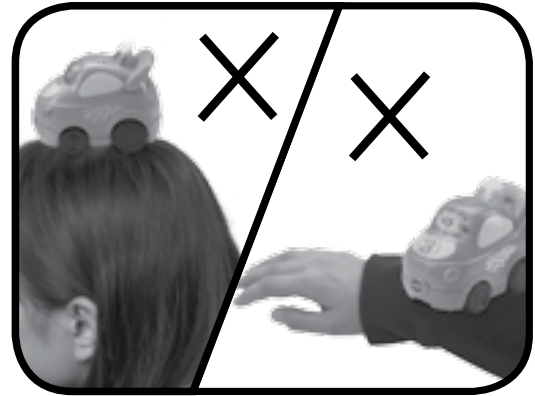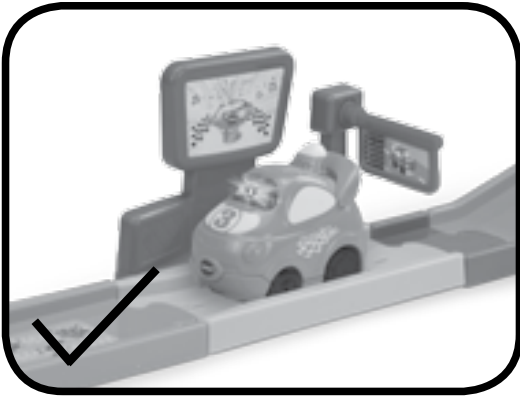

4. AUTOMATIC SHUT-OFF

 
 
To preserve battery life, the **VTech® Toot-Toot Drivers Remote Control Racer** will automatically power down after approximately 60 seconds without input in **STANDARD MODE** and 120 seconds in **REMOTE CONTROL MODE**. In **STANDARD MODE**, the unit can be turned on again by pressing the light-up face button or pushing the vehicle. In **REMOTE CONTROL MODE**, press the light-up face button or turn the unit off and on to turn the unit on. (The remote control cannot wake up the race car.)

Note: The **Remote Control Racer** is in try-me mode in the packaging. After opening the package, turn the vehicle off and on again to proceed with normal play.

Note: For optimal performance, keep your Toot-Toot Driver Remote Control Racer indoors and out of direct sunlight.

ACTIVITIES

1. Slide the race car's **OFF/MODE SELECTOR SWITCH** to either **REMOTE CONTROL MODE** or **STANDARD MODE** to turn the race car **ON**. You will hear a song, a phrase and sounds. The light-up face button will flash with the sounds.
2. Press the light-up face button to hear race car sounds, songs and phrases. The light-up face button will flash with the sounds.
3. When the race car is in **STANDARD MODE**, push the race car to hear fun sounds and melodies. While a melody is playing, push the vehicle again to add in fun sounds on top of the melody. The light-up face button will flash with the sounds.
4. For remote control play, turn the race car to **REMOTE CONTROL MODE (MOTOR)**. To drive the race car with the remote control, put both items on the same **CHANNEL SELECTOR SWITCH** number. Once both items are on the same channel, press the forward or backward button on the remote for some racing fun!

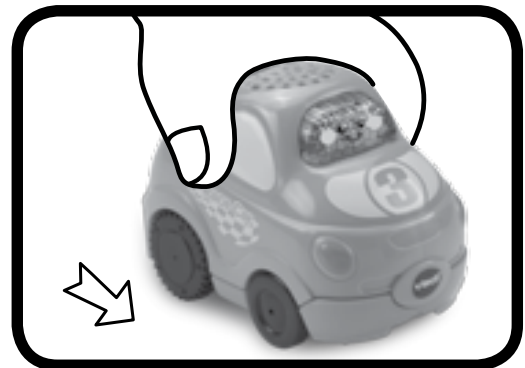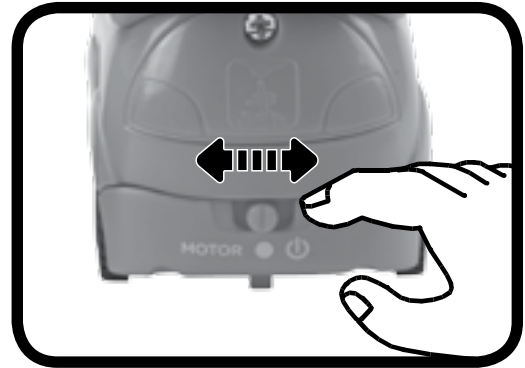

5. Operate up to three vehicles at once by putting each **Remote Control Racer** on a different channel number using the **CHANNEL SELECTOR SWITCH!** (Each **Remote Control Racer** sold separately.)
6. For added fun, the **Remote Control Racer** interacts with other **Toot-Toot Drivers** play sets. Simply roll or navigate the race car over one of the play set's **SmartPoint** locations to see the light flash and to hear greetings, fun sounds, short tunes and sing-along songs (each play set sold separately).

SING-ALONG SONG LYRICS

SONG 1

3, 2, 1,
I'm a race car,
Join my team,
Grab the remote,
We can win first place!

SONG 2

One lap left,
Finish the race.
Vroom, vroom, vroom.

SONG 3

Safety belt on,
Let's win the race.
Vroom, vroom, vroom.

MELODY LIST

1. Big Rock Candy Mountain
2. This Old Man
3. Hey Diddle Diddle
4. Chop Sticks
5. Can Can
6. On Top of Old Smokey

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

 
If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit sit for a few minutes, then replace the batteries.
4. Turn the unit **ON**. The unit should now be ready to play again.
5. If the product still does not work, replace with an entire set of new batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK), with any problems and/or suggestions that you might have. A service representative will be happy to help you.

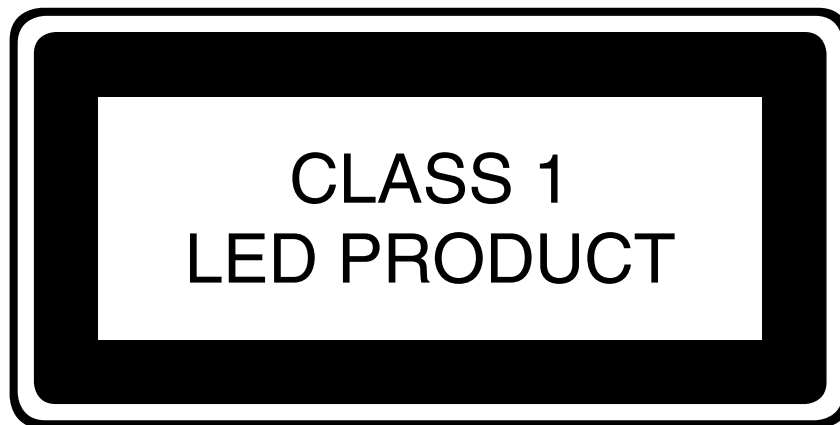



PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

Join the VTech club online at www.vtech.co.uk

