

'Click' to download complete Manual



SAMSUNG

Printer

CLP-300 Series CLP-300/XSG

Basic Model : CLP-300

SERVICE Manual

Samsung Color Laser Printer



CLP-300

The keynote of Product

[The keynote of Product]

[Series Model]

.CLP-300: B/W 16 ppm, Color 4 ppm, SPL-C

.CLP-300N: CLP-300 + Network

[Resolution]

. 2400 x 600 dpi

[CPU]

.Samsung CorrusM 170MHz

[Interface]

.CLP-300 : USB 2.0

.CLP-300N : USB 2.0, Ethernet 10/100 Base TX

[Consumables]

.2K black toner cartridge

.1K color toner cartridge

.Waste toner box

[Paper Handling]

.150 sheets Semi-cassette

.1 sheet manual slot

.150 sheet Face-Down



ELECTRONICS

* This service manual is a property of Samsung Electronics Co., Ltd.
Any unauthorized use of Manual can be punished under applicable
international and/or domestic law.

* This service manual is also provided on the web, the ITSELF
system Samsung Electronics Co., Ltd.
“<http://itself.sec.samsung.co.kr>”

© Samsung Electronics Co., Ltd. June. 2006
Printed in Korea.

VERSION NO. : 1.00

CODE : JC-0164K

Contents

1. Precautions

1.1 Safety Warning	1-1
1.2 Caution for safety	1-2
1.3 ESD Precautions	1-5
1.4 Super Capacitor or Lithium Battery Precautions	1-5

2. Product Specification

2.1 Product Overview	2-1
2.2 Specifications	2-2
2.3 Model Comparison Table	2-7

3. System Overview

3.1 System Structure	3-1
3.2 Main PBA Description	3-7
3.3 CRUM	3-17
3.4 General Description	3-19

4. S/W Structure and Descriptions

4.1 Architecture	4-1
4.2 Language Monitor	4-1
4.3 Status Monitor	4-1
4.4 Network Interface	4-2
4.5 Printer Driver <-> Status Monitor	4-2
4.6 System F/W Flow	4-3
4.7 Alarm Shortage	4-4
4.8 Error status	4-4

Continued

4.9 CRUM Overview	4-5
4.10 FW Upgrade	4-5
4.11 Initailize Flow	4-6

5. Disassembly and Reassembly

5.1 Precautions When Replacing Parts	5-2
5.2 Parts for Maintenance and Repair	5-3
5.3 Information Related in Disassembly and Assembly	5-5
5.4 Disassembly Procedure	5-10

6. Alignment and Adjustments

6.1 Control Panel	6-1
6.2 Function	6-2
6.3 Jam Removal	6-6
6.4 Sample Pattern	6-9
6.5 Periodic Defective Image	6-10
6.6 How to use EDC (Engine Diagnostic Control) Mode	6-11
6.7 Error Message	6-17

7. Troubleshooting

7.1 Procedure of Checking the Symptoms	7-1
7.2 Troubleshooting Checklist	7-2
7.3 Solving General Printing Problems	7-3
7.4 Solving Print Quality Problems	7-7
7.5 Common Windows Problems	7-11
7.6 Common Macintosh Problems	7-11
7.7 Common Linux Problems	7-12
7.8 Major Problems Trouble shooting	7-15

Continued

8. Exploded Views & Parts List

8.1 Main	8-2
8.2 Top Cover	8-3
8.3 Rear Cover	8-4
8.4 Front Cover	8-5
8.5 Main Driver	8-6
8.6 Main Frame	8-8
8.7 LSU Cover	8-10
8.8 Fuser Unit	8-11
8.9 ELA-UNIT OPC DEV	8-12
8.10 ITB Unit	8-13
8.11 Casstte Unit	8-14

9. Block diagram

9.1 Block Diagram	9-1
-----------------------------	-----

10. Connection Diagram

10.1 Connection Diagram	10-1
-----------------------------------	------

11. Schematic Diagram

11.1 Main Board	11-1
11.2 Panel	11-16
11.3 DEVE INF	11-17
11.4 ITB INF	11-18
11.5 SMPS-110V	11-19
11.6 SMPS-220V	11-20
11.7 HVPS	11-21

Continued

12. Reference Information

12.1 Tools for Troubleshooting	12-1
12.2 Acronyms and Abbreviations	12-2
12.3 Select a location for the printer	12-4
12.4 A4 ISO 19752 Standard Pattern	12-5