

Table of Contents

Package Contents	1
Specifications	1
Safety Information	2
Getting to Know Your Tower Fan	5
Controls & Display	5
Remote Control	6
Getting Started	6
Using Your Tower Fan	6
Care & Maintenance	8
Troubleshooting	9
Warranty Information	10
Customer Support	11

Package Contents

1 x	Tower Fan
2 x	Base
1 x	Plastic Nut
1 x	Remote Control
1 x	Quick Start Guide
1 x	User Manual

Specifications

Model	LTF-F362-KEUR
Power Supply	220–240V~, 50/60Hz
Rated Power	26W
Timer	1–12 hr
Dimensions	16.5 x 16.5 x 92 cm / 6.5 x 6.5 x 36.2 in
Weight	4.0 kg / 8.8 lb

Item	Symbol	Value	Unit
Maximum fan flow rate	F	26.4	m ³ /min
Fan power input	P	36.8	W
Service value	SV	0.7	(m ³ /min)/W
Standby power consumption	P _{SB}	0.3	W
Seasonal electricity consumption	Q	12.1	kWh/a
Fan sound power level	L _{WA}	55	dB(A)
Maximum air velocity	c	3.9	meters/sec
Measurement standard for service value	EN IEC 60879-2019 / EN 50564:2011 / EN IEC 60704-1:2021 / EN IEC 60704-2-7:2020		

Note:

- 55dB(A)L_w (sound power level) ≈ 41dB(A)L_p (the averaged sound pressure level).
- The maximum air velocity measured on the air outlet is 7.9m/s.

READ AND SAVE THESE INSTRUCTIONS

SAFETY INFORMATION

To reduce the risk of fire, electric shock, or other injury, follow all instructions and safety guidelines.

General Safety

- **Only** use your tower fan as described in this manual.
- **Do not** use your tower fan outdoors.
- To protect against electric shock, **do not immerse the tower fan** cord, plug, or housing in water or spray with liquids.
- **Do not** place the tower fan in a window.
- Keep your tower fan away from water, and wet or damp areas.
- Keep your tower fan away from open flames, heat sources, or other heating and cooking appliances.
- **Do not** use where combustible gases, vapours, metallic dust, aerosol (spray) products, or fumes from industrial oil are present.
- **Do not** place anything into any opening on the tower fan.
- **Do not** use with any openings blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Avoid contact with moving fan parts.
- **Do not** hang or mount the tower fan on a wall or ceiling.
- **Only** use the tower fan on a dry and level surface.
- Close supervision is necessary when the tower fan is used by or near children.
- Children shall **not** play with the appliance.
- Children should be supervised to ensure they **do not** insert fingers or objects into the vent openings.
- Cleaning and user maintenance shall **not** be made by children without supervision.
- Keep the inside of the tower fan dry. To prevent moisture buildup, avoid placing in rooms with major temperature changes.
- Unplug the tower fan when not in use for an extended period of time.
- **Do not** use other items or third-party parts as replacement parts for this tower fan.
- **Do not** use your tower fan if it is damaged or not working correctly, or if the cord or plug is damaged. **Do not** try to repair it yourself. Contact **Customer Support** (see page 11).
- **WARNING:** To reduce the risk of fire or electric shock, **do not** use this tower fan with any solid-state speed controls (such as a dimmer switch).
- This tower fan can be used by children 8 years and older as well as persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the tower fan in a safe way and understand the hazards involved.
- Not for commercial or industrial use. Household use **only**.
- Ensure that the fan is switched off from the supply mains before removing the guard.
- Batteries are to be inserted with the correct polarity.
- If the appliance is to be stored unused for a long period, the batteries should be removed.

SAFETY INFORMATION (CONT.)

Power Cord

- Turn off the tower fan before removing the plug from the outlet. To unplug, grab the plug and pull from the outlet. **Never** pull from the power cord.
- Keep the tower fan near the outlet it is plugged into. The use an extension cord is not recommended.
- **Always** turn the tower fan off and unplug it when not in use and before moving, cleaning, or servicing the fan.
- **Never** place the cord near any heat source.
- **Do not** cover the cord with a rug, carpet, or other covering. **Do not** place the cord under furniture or appliances.
- To avoid a tripping hazard, keep the cord out of areas where people walk often. Place the cord where it will not be tripped over and safely coil the cord.
- A loose fit between the AC outlet and plug may cause overheating and a distortion of the plug. Contact a qualified electrician to replace a loose or worn outlet.
- If the power cord is damaged, it must be replaced by Arovast Corporation or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (see page 11).
- Your tower fan should **only** be used with **220–240V, 50/60Hz** electrical systems. **Do not** plug into another type of outlet.

Electromagnetic Fields (EMF)

Your Levoit tower fan complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

This product contains a coin/button battery.



WARNING: CHEMICAL BURN HAZARD.

KEEP OUT OF REACH OF CHILDREN.

Swallowing can lead to chemical burns, perforation of soft tissue, and death. Severe burns can occur within 2 hours of ingestion. Seek medical attention immediately.

- Place sticky tape around both sides of the battery and dispose of it immediately in an outdoor trashcan or recycle safely;
- Store spare batteries securely;
- Empty recycling units on a regular basis;
- Use non-transparent containers to keep the batteries out of view.

Unfortunately, it is not obvious when a button or coin battery is stuck in a child's esophagus (food pipe). The child might:

 
- Cough, gag or drool a lot;
- Appear to have a stomach upset or a virus;
- Be sick;
- Point to their throat or stomach;
- Have pain in their abdomen, chest, or throat;
- Be tired or lethargic;
- Be quieter or more clingy than usual or otherwise "not themselves";
- Lose their appetite or have a reduced appetite;
- Not want to eat solid food / be unable to eat solid food.

SAFETY INFORMATION (CONT.)

These sorts of symptoms vary or fluctuate, with the pain increasing and then subsiding.

A specific symptom to button and coin battery ingestion is vomiting fresh (bright red) blood. If a child does this, seek immediate medical help.

The lack of clear symptoms is why it is important to be cautious with “flat” or spare button or coin batteries in the home and the products that contain them. Be aware that even used button or coin batteries may cause injury.

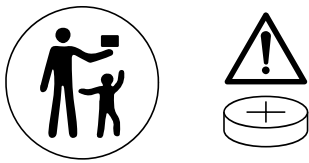

This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Proper disposal and recycling helps protect natural resources, human health and the environment.

For more information on disposal and recycling of this product, contact your local municipality, disposal service, or the shop where you bought this product.

This product is RoHS compliant.

This product is in compliance with Directive 2011/65/EU, and its amendments, on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Instructions for Users on Removal, Recycling and Disposal of Used Batteries

To remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries. For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste-management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire, explosion or leakage of flammable liquid/gas, don't disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), sunshine or like, expose to extremely low air pressure or dispose of in fire or water. Replace only with specified batteries. The symbol indicating 'separate collection' for all batteries and accumulators shall be the crossed-out wheeled bin shown below:



GETTING TO KNOW YOUR TOWER FAN

Note: See inside cover. [Figure 1]

Tower fan diagram

- A. Control Panel
- B. LED Display
- C. Vents
- D. Power Cord
- E. Remote Control
- F. Fan Blade
- G. Back Cover
- H. Base
- I. Plastic Nut (underneath base)

Control Panel

- J. Oscillate Button
- K. Fan Mode Button
- L. Advanced Sleep Button
- M. Timer Button
- N. Fan Speed Button
- O. On/Off Button

LED Display

 
- P. Normal Mode Indicator
- Q. Advanced Sleep Mode Indicator
- R. Celsius Indicator
- S. Sound Off Indicator
- T. Auto Mode Indicator
- U. Turbo Mode Indicator
- V. Hour Indicator
- W. Oscillate Indicator

CONTROLS & DISPLAY



On/Off Button

- Tap to turn the tower fan on/off.

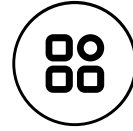

Fan Mode Button

- Tap to cycle through fan modes: Normal, Turbo, and Auto (see **Fan Modes**, page 6).
- Press and hold for 3 seconds to turn selection sounds on/off.



 
Timer Button

- Tap to cycle through timer options from 1–12 hours.
- Press and hold to quickly cycle through options in increments of 1 hour.




Advanced Sleep Button

- Tap to turn Advanced Sleep Mode on/off (see **Advanced Sleep Mode**, page 7).

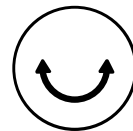

Oscillate Button

 - Tap to turn oscillation on/off.
- The tower fan has a 90° angle of oscillation.

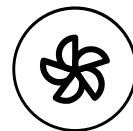

Fan Speed Button

- Tap to cycle through fan speeds from 1 (low) to 12 (high).

REMOTE CONTROL

The remote control can be used to control any of the tower fan's functions from a distance. The remote must be within 5 m / 16 ft of the tower fan to work.

 
Note:

- Remove the plastic tab from the remote control's battery compartment before using.
- To replace the battery, see page 8.



Sound & Display Off Button



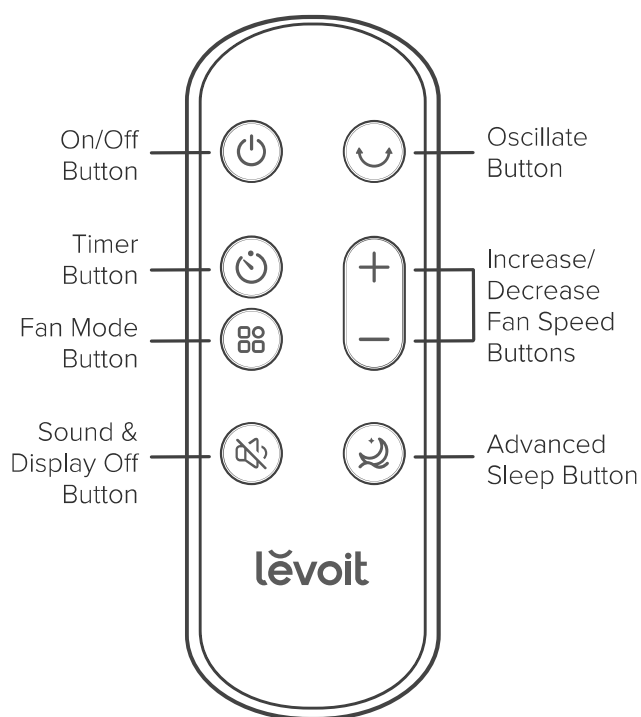

- Press to turn selection sounds and display on/off.




GETTING STARTED


1. Remove all packaging.
2. Snap the two pieces of the base together. *[Figure 2.1]*
3. Unscrew the plastic nut from underneath the tower fan. *[Figure 2.2]*
4. Secure the base to the tower fan with the plastic nut. *[Figure 2.3]*
5. Place the tower fan on a flat, stable surface such as the floor.
6. When using the tower fan, allow at least 38 cm / 15 inches of clearance from the front of the tower fan. Keep away from anything that would block air flow, such as curtains. *[Figure 2.4]*

USING YOUR TOWER FAN


1. Plug in and tap  to turn on the tower fan.
2. Tap  to change fan speed from 1 (low) to 12 (high).
3. Optionally, tap  to select a different fan mode.
4. Tap  to turn Advanced Sleep Mode on/off.

Normal Mode

Use Normal Mode to manually control the tower fan's speed. Tap  to change fan speed from 1 (low) to 12 (high).

- This is the tower fan's default mode.
-  will show on the display.





Fan Modes

Tap  to cycle through fan modes: Normal, Turbo, and Auto.

Turbo Mode



Use Turbo Mode with air conditioning to quickly circulate air in your home.

USING YOUR TOWER FAN (CONT.)

1. Tap  and select Turbo Mode.  and  will show on the display.
2. The tower fan automatically starts oscillating and operates at fan speed 12.
3. When the room temperature drops 3°C, the fan speed will decrease to 6 and the tower fan automatically adjusts the fan speed according to the fluctuating room temperature.
3. Optionally, tap  to manually adjust the fan speed while in Auto Mode. The tower fan will then operate according to the following logic:
 - A. If the temperature increases 1°C, the fan speed will increase one level.
 - B. If the temperature decreases 1°C, the fan speed will decrease one level.

Auto Mode

Use Auto Mode for automatic fan speed adjustments according to the room temperature.






1. Tap  and select Auto Mode.  will show on the display.
2. The starting fan speed is determined by the current room temperature.

Room Temperature	Fan Speed
≤ 21°C	1
22°C	2
23°C	3
24°C	4
25°C	5
26°C	6
27°C	7
28°C	8
29°C	9
30°C	10
31°C	11
> 31°C	12

Note: The max ambient working temperature is 40°C.





Advanced Sleep Mode

Advanced Sleep Mode is an optimized sleep mode that takes into account the stages before you sleep, during sleep, and as you wake up.

1. Tap  to turn Advanced Sleep Mode on.  and  will show on the display.
 - A. After 5 seconds, the display will turn off and selection sounds will be disabled.
 - B. The starting fan speed is determined by your current fan speed when you select Advanced Sleep Mode.
2. After 1 hour, the tower fan will decrease fan speed as the room temperature stabilizes.
3. The tower fan then automatically adjusts the fan speed according to the fluctuating room temperature as you sleep and wake up.
 - A. If the temperature increases 1°C, the fan speed will increase one level.
 - B. If the temperature decreases 1°C, the fan speed will decrease one level.
4. Tap  or  to turn Advanced Sleep Mode off.

USING YOUR TOWER FAN (CONT.)

Sound and Display Off

1. Press and hold  for 3 seconds to turn off selection sounds and the display.
2. Optionally, press  on the remote control.
3. After **5 seconds of no operation**, the display will automatically turn off and selection sounds will be disabled.
4. Tap any button to temporarily turn the display back on. If you don't tap another button, the display will turn back off after 5 seconds.
5. Press and hold  for 3 seconds (or press  on the remote) to turn on selection sounds and the display.

Memory Function

When the tower fan is in standby or turned off and unplugged, it will remember all its previous settings, except for timer.

CARE & MAINTENANCE

Cleaning the Tower Fan

- Unplug before cleaning.
- Wipe the outside of the tower fan with a soft, dry cloth. If necessary, wipe the housing with a damp cloth, then immediately dry.
- Use a vacuum, duster, or compressed air to clean the inside of the tower fan.
- If necessary, use a Phillips screwdriver to remove the back cover and clean the inside of the tower fan. *[Figure 3.1]*

Note:

- *Make sure the tower fan is turned off before removing the back cover.*
- *Clean the internal parts with a dry cloth.*
- **Do not** clean with abrasive chemicals or flammable cleaning agents.

Replacing the Remote Control Battery

1. Insert a coin/button battery into the slot and rotate counterclockwise to remove the battery compartment. *[Figure 3.2]*
2. Remove the old battery.
3. Replace with a new 3V CR2025 battery. Make sure the polarities match. *[Figure 3.3]*
4. Replace the battery compartment.

Storage

If not using the tower fan for an extended period of time, cover the tower fan and store in a cool, dry place to avoid moisture damage.

TROUBLESHOOTING

Problem	Possible Solution
Tower fan will not turn on or respond to button controls.	Plug in the tower fan.
	Check to see if the power cord is damaged. If so, stop using the tower fan and contact Customer Support (see page 11).
	Plug the tower fan into a different outlet.
	Tower fan may be malfunctioning. Contact Customer Support (see page 11).
Tower fan makes an unusual noise while the fan is on.	Make sure the tower fan is operating on a hard, flat, level surface.
	Tower fan may be damaged, or a foreign object may be inside. Stop using the tower fan and contact Customer Support (see page 11). Do not try to repair the tower fan.
Tower fan randomly turns off.	Tower fan is malfunctioning. Stop using the tower fan and contact Customer Support (see page 11).

If your problem is not listed, please contact **Customer Support** (see page 11).

WARRANTY INFORMATION

Product Name	TempSense 36 DC Tower Fan
Model	LTF-F362-KEUR
Date of Purchase	
Order ID	

Levoit Limited Product Warranty

Two (2) Year* Limited Consumer Product Warranty

Etekcitcity GmbH ("VESYNC") warrants that the product shall be free from defects in material and workmanship for a period of 2 years from the date of original purchase ("Limited Warranty Period"), provided the product was used in accordance with its use and care instructions (e.g., in the intended environment and under normal circumstances).

***This warranty does not limit your rights as may be mandated or granted by the applicable national or regional consumer protection laws in your region, in which cases the Limited Warranty Period is extended pursuant to the applicable requirements.**

Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this limited Warranty Policy, VESYNC will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online LEVOIT store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

Who is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.

Be Aware of Unauthorized Dealers or Sellers

This limited warranty does not extend to products purchased from unauthorized dealers or sellers. VESYNC's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to VESYNC's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from VESYNC or its authorized dealers.

If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support Team.

What's Not Covered?

- Normal wear and tear, including normal wearing parts, replacement parts or component, or damages due to misuse.
- If the proof-of-purchase has been altered in any way or is made illegible.
- If the model number, serial number or production date code on the product has been altered, removed or made illegible.
- If the product has been modified from its original condition.
- If the product has not been used in accordance with directions and instructions in the user manual.
- Damages caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.
- Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than VESYNC.
- Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher-safe).
- Incidental and consequential damages.
- Damages or defects exceeding the cost of the product.

Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Make sure your product is within the specified limited warranty period.
2. Make sure you have a copy of the invoice and order ID or proof-of-purchase.
3. Make sure you have your product. **DO NOT** dispose of your product before contacting us.
4. Contact our Customer Support Team.
5. Once our Customer Support Team has approved your request, please return the product with a copy of the invoice and order ID.

Sole and Exclusive Remedy

THE FOREGOING LIMITED WARRANTY CONSTITUTES VESYNC'S EXCLUSIVE LIABILITY, AND YOUR SOLE AND EXCLUSIVE REMEDY, FOR ANY BREACH OF ANY WARRANTY OR OTHER NONCONFORMITY OF THE PRODUCT COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. THIS LIMITED WARRANTY IS EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES. NO EMPLOYEE OF VESYNC CORPORATION OR ANY OTHER PARTY IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE LIMITED WARRANTY IN THIS LIMITED PRODUCT WARRANTY STATEMENT.

WARRANTY INFORMATION (CONT.)

Disclaimer of Limited Warranties

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, VESYNC CORPORATION PROVIDES THE PRODUCTS YOU PURCHASE FROM VESYNC CORPORATION "AS IS" AND VESYNC CORPORATION HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

Limitations of Liability

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL VESYNC CORPORATION, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:

(a) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM VESYNC CORPORATION IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR

(b) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF VESYNC CORPORATION OR ONE OF ITS SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES.

AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT, VESYNC CORPORATION SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER AND, IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

Other Rights You May Have

SOME JURISDICTIONS DO NOT ALLOW FOR: (1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/OR (3) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO THE DISCLAIMERS IN THIS POLICY MAY NOT APPLY TO YOU. IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY,

AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

Changes to this policy

We may change the terms and availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:

Etekcity GmbH
Vossbarg 1
25524 Itzehoe, Germany

CUSTOMER SUPPORT

If you have any questions or concerns about your new product, please contact our local distributor or our helpful Customer Support Team.

E-mail:

support.de@levoit.com
support.fr@levoit.com
support.es@levoit.com
support.it@levoit.com
support.eu@levoit.com

* Please have your order invoice and order ID ready before contacting Customer Support.