

<div>English</div> <div>weTag Item Finder User Manual</div> <div>Model: weTag</div> <div><div>Works with</div><div>Apple Find My</div></div>	<div>Active 1-Year Warranty</div> <div>Please send your order number to our WhatsApp / Email within 7 days after receiving the product to activate the warranty. We will provide you 1 year after-sales service.</div> <div>(Support free replacement of damaged products. No need to return damaged products)</div> <div><div>Email: qxqvip@gmail.com</div><div>WhatsApp: +86 18038108503</div></div>	<div>Major Functions</div> <div><div>1. By using the Apple Find My app, you can find your weTag from your iPhone, iPad, iPod touch, or Mac. Simply open the Apple Find My app, click on the corresponding item, and you will see the location of the weTag item finder. Use the map guide to find it.</div><div>2. Even if it is left in a place far away from you, you can also enable the lost mode to lock the location of the item and use the map guide to find it since Apple device are widely used.</div><div>3. In addition, if your weTag item finder leaves the range of your Apple device, you will receive an alarm notification. This can help you timely discover the lost items and avoid further losses.</div></div>	<div>Turn On/Off</div> <div><div>1. Turn On:</div><div>Click the button once, item finder makes a sound of "Di Di Di Di Di".</div><div>2. Turn Off</div><div>Press and hold the button of weTag item finder for 5s, and it will play the confirmation sound "Di Di.</div><div>3. Reset</div><div>Click the button 5 times in a row, when the 5th time is pressed, don't release the button, and keep pressing the button for 3 seconds at least, a beeping "Di Dididididi" will be played by buzzer. Release the button after confirming the sound effect (the above operation needs to be completed within 5 seconds).</div><div>4. Battery Replacement</div><div>The weTag item finder has a built-in CR2032 cell battery, which can usually last for 1 year. Battery replacement is very easy, open the back cover along the back cover gap, a new CR2032 cell battery can be replaced.</div></div> <div></div>
<div>How to Connect</div> <div><div><div></div><div>① Turn on the item</div></div><div><div>Find My</div><div>② Open "Find My" App</div></div><div><div><div>Items</div><div>③ Tap "Add Item"</div></div><div><div>Add New Item</div><div>④ Select "Other Supported Item"</div></div></div></div>	<div><div><div>weTag</div><div>⑤ Click the weTag to connect</div></div><div><div>1</div><div>⑥ Finish</div></div></div> <div>Note:</div> <div>1. Only for Apple device (such as iPhone), 2. Need turn on the iPhone Bluetooth function and internet. 3. need log into iCloud account, in "Settings" - "Apple ID" - enable "Share My Location" in the Apple Find My app. 4. The Find Items app on Apple Watch requires the latest version of watchOS.</div> <div>Connect other device</div> <div>The Item finder can only be connected to one device. If you want to connect to other devices, please remember to do the "Remove Item" operation on the Apple Find My app. if still can't connect, please reset it.</div>	<div>Privacy Data Protection</div> <div>1. Personal location information protection: The Apple Find My network uses advanced encrypt on to ensure that no one else, not even Apple or Shenzhen Winnershine Electronics Co., Ltd, can view the location of your weTag. 2. Prevent Anonymous Tracking: How to prevent the device from being maliciously tracked? When someone else's item finder is mixed into your belongings and tracked for a period, you will be prompted in the following two ways. If you have iPhone, iPad and other Apple device, you will get reminders on Apple device, this function is supported on iOS14.5 or iPadOS14.5 and later versions of Apple devices. If you do not have Apple devices, when someone else's item finder is mixed into your belongings and tracked over a period, when it moves, it will emit a beep to remind you. If it happens that your friend is wearing a item finder, or there are many people on this device in the public transportation you take, don't worry, because if the item finder does not leave its owner's side, it will not trigger such a warning reminder.</div>	<div>备注:</div> <div>1、说明书用105克双铜纸</div> <div>2、彩色打印</div> <div>3、双面打印。</div>