

Change a pan/tilt camera's position presets

Pan/Tilt cameras have the ability to save a variety of position presets. The *Home* pan/tilt preset is the position the camera returns to after 10 minutes of inactivity.


Note: Presets can only be updated using the desktop Alarm.com customer website. The Alarm.com app only has the ability to move the current position of the pan/tilt camera.

Compatible cameras


- 180° HD Camera (ADC-V622)
- ADC-V620PT
- ADC-V610PT

To move a pan/tilt camera's view to a preset

Using the Alarm.com app:

1. Log into the Alarm.com app.
2. Tap **Video**.
3. Tap to select the pan/tilt camera to change the current position.
4. Tap .
5. Tap the preset you would like the camera to move to.

Using the Alarm.com customer website:

1. Log into the Alarm.com customer website.
2. Click **Video**.
3. Mouse over the desired pan/tilt camera, and then click .
4. Click the preset you would like the camera to move to.

To change position presets for pan/tilt cameras using the Alarm.com customer website:

1. Log into the Alarm.com customer website.
2. Click **Video**.



3. Click **Settings**.
4. Using the *Video Device* dropdown menu, select the pan/tilt camera to be edited.
5. Click **Pan/Tilt Presets**.
6. Click ✎ for a current preset to edit that preset's position, or click **Create New** to create a new preset.
7. Click the arrow buttons on the edge of the Live View image to adjust the camera's position.
8. Enter the desired preset name in the *Preset name* field.
9. Click **Save**.

