

Use and Care Guide

R4010



Register Your New Product Today!

By registering your new Remington® product, you will receive special offers.
Register online at: RemingtonProducts.com

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following.

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE.

DANGER

To reduce the risk of electric shock:

- For connection of the power supply unit to a power source not in the U.S.A. and Canada, use a USB cable of the proper configuration for the power outlet.
- Do not reach for a plugged in appliance that has fallen into water. Unplug it immediately.
- All models can be used wet or dry. They can be used in the shower and rinsed under the faucet for cleaning.
- Detach the appliance from the power supply cord before cleaning.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink. Do not place or drop into water or other liquid.
- Unplug this appliance from the electrical outlet immediately after charging or using.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children, or individuals with certain disabilities or special needs.
- Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug or if it is not

working properly, if it has been dropped or damaged, or if it has been dropped into water.

- Keep the cord away from heated surfaces.
- Never drop or insert any object into any of the appliance's openings.
- Household use only.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach the plug to the appliance, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Always pull on cord plug to unplug from wall socket. Never pull on electric cord.
- Do not plug or unplug this appliance when your hands are wet.
- Do not use an extension cord or a voltage converter with this appliance.
- Do not wrap the cord around the appliance.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Detach removable power cords from appliance for storage.
- Do not use this appliance with a damaged or broken head or cutters, as facial injury may occur.
- The power unit is intended to be correctly oriented in a vertical or floor mount position.
- Shavers, including the trimmer, are for use on facial hair only. They should not be used for shaving the hair on your head or any other part of your body.

Product Features



SHAVER PARTS

- | | |
|--|----------------------------------|
| 1. Precision Plus Heads | 5. Charging Indicator |
| 2. Powerflex™ 360° Pivoting Head and Cutter Assembly | 6. Power Port |
| 3. Head Release Button | 7. Enhanced Pop-Up Trimmer |
| 4. On/Off Push Button | 8. Stubble Attachment/Head Guard |
| | 9. USB cable (not shown) |

Product may vary slightly from what is illustrated.

FEATURE	R4010
POWER SYSTEM	cordless
FULL CHARGE TIME	4 hrs.
CORDLESS RUN TIME*	50 min.
QUICK CHARGE	no
INDICATORS	3 stage LED
VOLTAGE TYPE	5.0 Volt DC with USB cable
TURBO	no
WATER RESISTANCE	waterproof
REPLACEMENT PART NO.	SPR-PR13IG

Waterproof – Shaver can be used in the shower and with shaving gels. Can be cleaned by rinsing under running water.

Cordless – shaver can only be used without the USB cable.

3 Stage LED Indicator

- Blinking red: low battery
- Pulsing green: charging
- At full charge: light will turn off.

Worldwide Use

 
Shaver charges with USB cable.

**Some run times vary by version of each model. To identify your model, refer to the packaging or on the back of the shaver.*

Charging

Before using, read the important safety instructions in front of the manual. For best long term battery performance, before first use, charge for the full charge time. (See chart based on model.)

1. Plug USB charging cable into shaver (A).
2. Plug USB charging cable into any standard USB Type-A wall adaptor.
3. Use shaver until recharge is required.

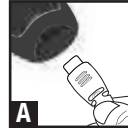


CAUTION!


- Make sure the shaver and your hands are dry when charging the shaver.
- Always charge the shaver in a cool, dry place.

Shaving

 1. Press power button to turn on (C).
2. Shave face and neck using short, circular strokes (D).
3. Use light pressure against your skin.
4. Using other hand to pull skin taut will help low lying hairs to stand up and enter the cutters more easily.

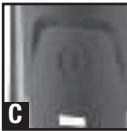

Trim

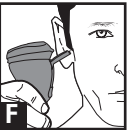 

1. Press trimmer release button to engage trimmer (E).
2. Trim long, difficult hairs and side burns (F).
3. Close trimmer by pressing down (G).

Stubble Look

The stubble attachment comb is designed to help you grow and maintain a 3-day stubble look. Be aware that you cannot shave a full long beard down to stubble length with the stubble attachment.

To achieve the look:

- Clean shave your face initially and then let your beard grow for two or three days.
- Attach the stubble attachment to the cutting head of the shaver.
- Shave your face with slow, rotating motions. The stubble attachment will only trim hairs that are over 1.5 mm in length. Use light pressure while shaving for even results.
- Shave with the stubble attachment at least every two days to maintain the length and do not allow hairs to get too long.
- Detach the stubble attachment if you wish to have a clean shaven look on your neck or other areas of your face where you do not want stubble showing.

Tips:

- Faster growing areas of your beard will be trimmed first. Slower growing areas of your beard will fill in over a period of a few days or weeks.

Shaving Tips With Gel or Foam (In Shower or Over the Sink)

NOTE: In order to ensure optimal performance, thoroughly rinse the shaver head under water during and after shaving.

1. Apply water to face and neck area.
2. Apply shave gel or foam to applicable shaving area.
3. Rinse shaver head under water.
4. Shave face and neck using short, circular strokes.
5. Throughout the shave, regularly rinse shaver head under water to avoid residue build up.
6. When finished shaving, rinse face.
7. Thoroughly rinse shaver head of all gel or foam.
8. Follow cleaning and care instructions.

Cleaning and Care

 


Your shaver may be cleaned under warm water.

NOTE: When cleaning your shaver, make sure the shaver is turned off and disconnected from the power cord.

CAUTION!

- To clean the external surfaces of the shaver, use a damp cloth. Do not use strong detergents or other chemicals.
- To dry, wipe the surface of the shaver with a dry towel. Do not use a hair dryer or heater to dry the shaver.

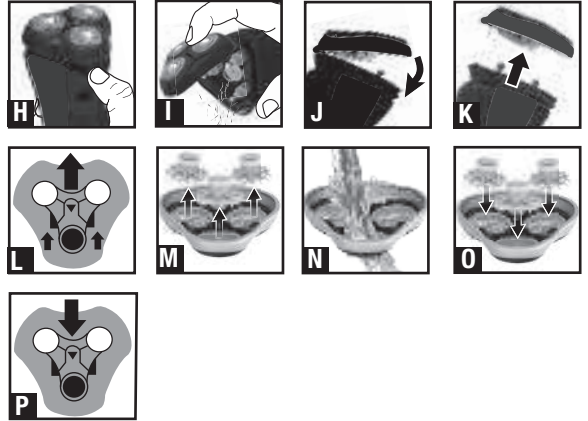

Daily:

- Pull off stubble attachment/head guard, if using, and rinse attachment.
- Press the release button on front of shaver and open head assembly (H).
- Tap out excess hair shavings (I).
- Rinse the head of the shaver in running water.
- Leave head open for drying.
- Snap head closed before using the shaver again (J).
- Reattach stubble attachment/head guard to protect shaving head until next use.

Weekly:

- Perform the daily cleaning steps 1 and 2.
- Remove the cover from the hair pocket assembly (K). Place the body of the shaver aside to ensure that it will not get wet.
- Slide the blue inner cutter carrier down to release it from the assembly (L).
- Remove the inner cutter carrier away from the cutters.
- Remove the cutters (M).
- Thoroughly rinse away any debris from inner and outer cutters (N).
- Replace the inner cutters. Match the hub colors of the inner and outer cutters (O).
- Place the inner cutter carrier back into position and lock into place (P).
- Lubricate each cutter with household oil.
- Align the spring hinge into the slot at the back of the hair pocket and press into place. Snap the head assembly closed (J).

Trimmer: Lubricate teeth with oil every six months

Product Disposal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver with the batteries.

To Remove the Rechargeable Battery:

- Run shaver until the motor stops.
- Open the hair pocket and remove 1 screw from the top.
- Remove the three drive shafts and the shaver head.
- Unscrew the 2 screws on the top housing.
- Carefully pry off the front housing.
- Unscrew the 6 screws on the inner housing.
- Carefully pry off the back housing.
- Lift the battery carrier and circuit board out of the shaver body and then cut the tabs holding the batteries to the circuit board.
- Dispose of the battery safely.

CAUTION: ALL RECHARGEABLE BATTERIES MUST BE RECYCLED OR DISPOSED OF IN ACCORDANCE WITH APPLICABLE STATE AND LOCAL REGULATIONS. DO NOT PUT IN FIRE OR MUTILATE, AS THE BATTERY MAY BURST OR RELEASE TOXIC MATERIALS. DO NOT SHORT-CIRCUIT, AS THIS MAY CAUSE BURNS.

How to Order Shaver Accessories

Maintain your shaver's peak performance! Keep Your Shaver Performing Like New!

- Because your satisfaction is important to us, we make it simple for you to keep your new shaver performing at its peak.
- For the best possible shave, it is necessary to replace the heads and cutters on your shaver every 12 months.
- Remington makes this easy!

Your shaver uses replacement part SPR-PR131G.



Two Easy Ways to Order!

- U.S. residents call 1-800-392-6544
- U.S. residents order online at [RemingtonProducts.com](https://www.RemingtonProducts.com)

It is very important to replace your head and cutters when necessary to ensure a close, comfortable shave without irritation. We recommend they be replaced every 12 months. Here are some signs of head and cutter wear, indicating that replacement is needed:

- Irritation:** As the heads get excessively worn you may experience some skin irritation. This would be especially noticeable when you apply moisturizing lotion.
- Pulling:** When the cutters wear you may feel a sense of pulling and a loss of closeness when you shave. This is an indication that it is time to replace your heads and cutters.

Warranty

Limited Four-Year Warranty

Empower Brands, LLC warrants this product to the original purchaser against any defects that are due to faulty material or workmanship for a four-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse. If the product should become defective within the warranty period, we will replace it free of charge. Keep your sales receipt and call 800-736-4648 in the U.S. or Canada or contact us at: contactus@remingtonproducts.com for warranty information. Warranty excludes:

- Heads and cutters

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear and breakage
- Any other conditions beyond our control

EMPOWER BRANDS, LLC SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO FOUR YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the disputed Crimea region.

Empower Brands, LLC Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Empower Brands, LLC will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the U.S. and Canada.

Remington Guarantees Satisfaction After 30 Days!

Remington 60-Day Money Back Guarantee*

If within 60 days after purchasing any Remington® product, you are not completely satisfied and would like a refund, keep your receipt and contact us at contactus@remingtonproducts.com or call 800-736-4648 in the U.S. or Canada.**

*Applies to U.S. and Canadian customers' returns only.

**Terms and conditions apply.

- Refund will be in the form of a check issued in U.S. Dollars and will include applicable taxes, if any, paid by customer.
- Please allow 4–6 weeks to receive your refund by check.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please do not throw this product away with normal household waste. If possible, take it to an official collection point in your area that recycles this type of product. Thank you for considering the environment.

TYPE: R10A

Questions or comments: Call 800-736-4648 in the U.S. Or visit [RemingtonProducts.com](https://www.RemingtonProducts.com)

Dist. by: Empower Brands, LLC, Middleton, WI 53562

© Registered Trademark and ™ Trademark of Empower Brands, LLC © 2024 Empower Brands, LLC All rights reserved. 03/2024 30490

Made in China

T22-7003204-A