

80g双胶186C+K 风琴折
双色印刷 75x95mm

Model: MS62115

MONSTER™

PORTABLE BLUETOOTH SPEAKER

Quick Start Guide

Please read this Quick Start Guide carefully and keep it for future use

Product Overview

•Speaker

•USB-C Charging Cable

•Quick Start Guide & Warranty Letter

②

①

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

1.Power On/Off

Long press: Power on/off

Short press: Mode switch

2.Indicator Light

3.Previous song/Volume down

Long press: Previous song

Short press:Volume down

4.,Play/Pause

Short press: Play/pause

Double click:Enable/disable the voice assistant

5.Next song/Volume up

Long press: Next song

Short press: Volume up

6.Bluetooth mode

Short press: Disconnect Bluetooth

Double click: Enter/exit Bluetooth Broadcast Mode

Hold for 5 seconds to clear all paired device records

7.Light mode switch

Long press:Turn on/off the light

Short press:Light mode switching

8,AUX Input

External audio devices can be connected using audio cables

9.RESET

10.USB-C Charging

11.Micro SD card Input

Connect a Micro SD card mode storage device

LED indicator/Voice prompt Guide

	Describe	Voice/Tone	Status
Indicator Light	The white light flashing	Power on tone	Power on
	All lights off	Power off tone	Power off
Indicator Light	The white light flashing	-	Not connected
	The white light stays on	Connected tone	Connected
Low battery	The red light flashing	Low battery tone	-
Speaker charging	Charging in progress, the red charging indicator light stays on	-	-
	After fully charged, the red charging indicator light turns off	-	-

Power/Charging

For better enjoyment, fully charge the speaker before use.

A USB-C charging cable (charge only) is included for standard USB compatible device.

Please use a 5V/2A or above power adapter (not included).

Caution: - Other incompatible charges may cause damages.

- Do not use if the connector or device is wet or damaged.

Power On/Off

To turn on the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power on tone.

To turn off the speaker, press and hold the Power On/Off Button for 2 seconds, you will hear a power off tone.

Caution: If no Bluetooth device is connected, the speaker will turn off in 15 minutes.

Bluetooth Connection

• When first used and turned on, the speaker will automatically enter a waiting mode for connection.

• If the Bluetooth device is already connected, press "🔗" button to disconnect the current connection so that you can connect to another device.

• The speaker will automatically enter pairing mode if it is not connected to a Bluetooth device.

When connecting, enable the Bluetooth function of the mobile phone, search for "Monster S150 Plus" and connect. After the connection is successful, you will hear a voice prompt, the white light of stays on.

Music Control

Short press "▷" music can be played or paused.

Long press "⏮" to go to the previous song.

Long press "⏭" to go to the next song.

Call Mode

Answer a call: Short press the "▷" button.

Reject a call: Long press the "▷" button.

End the call: Short press the "▷" button.

Volume Control

Short press the "⏮" button to turn up the volume.

Short press the "⏭" button to turn down the volume.

Micro SD Card Playback

When speaker is on and micro SD card (not included) is inserted, micro SD card is the priority playback source. If you want to use Bluetooth function, press the "🔊" button to switch the source.

AUX IN Playback

When speaker is on and audio source is inserted via AUX IN (not included) , AUX IN is the priority playback source. If you want to use Bluetooth function, press the "🔊" button to switch the source.

BLUETOOTH BROADCAST MODE

Set one "S150 Plus" as the main speaker, and you can connect it to more than 100 auxiliary "S150 Plus" speakers to control their functions.

1.First, connect one of the "S150 Plus" speakers to your Bluetooth device (such as a mobile phone) as the main speaker and play music.

2.Press the "🔗" button twice on the main speaker and other "S150 Plus" speakers to enter Bluetooth broadcast connection mode and connect automatically.

3.After successful connection, the green LED indicator on the main speaker will continue to flash, and the green LED indicator on the auxiliary speaker will change from flashing to long light.

Power Saving Settings

•In Bluetooth mode, when no device is connected, the speaker will be switched off automatically in 15 minutes.

•AUX IN mode/ Micro SD card mode no music playback for 15 minutes, the speaker will be switched off automatically.

Reset Device

If the speaker needs to be reset, press the reset button.

Caution

•It is not recommended to replace the battery privately.

•The battery (battery pack or battery pack combination) must not be exposed to sunshine, fire or similar overheated environments.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

• Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

For service, warranty, or product information, Please contact: support@mcl-audio.com with your order ID.

FCC ID: 2AVD2-MS62115

IC Caution

Radio Standards Specification RSS-Gen, Issue 5

- English:

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

This device may not cause interference.

This device must accept any interference, including interference that may cause undesired operation of the device.

RF exposure statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

- French:

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

Cet appareil ne doit pas causer d'interférences.

Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Déclaration d'exposition RF:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

IC: 28087-MS62115

Model:MS62115

MONSTER™

便携蓝牙音响

快速指南

请仔细阅读本快速指南并妥善保管以备将来使用
本产品由中国平安保险经纪公司承保

产品概述

•音响

•USB-C充电线

•快速指南&保修卡

②

①

③

④

⑤

⑥

⑦

⑧

⑨

⑩

⑪

1.电源开/关机

长按: 开/关机

短按: 模式切换

2.指示灯

长按: 上一首歌

短按: 调低音量

4.播放/暂停

短按: 播放/暂停

双击: 启用/关闭语音助手

5.下一曲/音量加

长按: 下一首歌

短按: 调高音量

6.蓝牙模式

短按: 断开/回连蓝牙

双击: 进入/退出蓝牙广播模式

长按5秒可清除所有已配对的设备记录

7.灯效模式

长按: 关闭/开启灯效

短按: 切换灯效

8.AUX输入接口

使用音频线 (不包含) 可以连接外接音频设备

9.复位按键

10.USB-C充电接口

11.TF CARD输入接口

连接 TF CARD (不包含) 存储设备

LED 指示灯 / 语音提示指南

	描述	语音提示	状态
指示灯	白色指示灯闪烁	开机提示音	开机
	所有灯熄灭	关机提示音	关机
指示灯	白色指示灯闪烁	-	未连接
	白色指示灯长亮	连接成功提示音	已连接
低电提示	红色指示灯闪烁	低电提示音	-
	充电中, 红色指示灯长亮	-	-
音响充电	充满电, 红色指示灯熄灭	-	-

电源/充电

为了更好的使用体验, 在使用音响前, 您需要先为其充满电。

包装中包含了一条USB-C充电线 (仅充电, 无数据传输功能), 使用5V/2A或以上适配器 (不包含) 进行充电。

注意:- 其它不兼容的充电线可能会造成损坏。

- 如果连接线或设备潮湿、损坏, 请勿充电。

开机/关机

在关机模式下, 按住"🔊"键2秒开启音响, 可听到开机提示音。

关闭音响, 请再次按住"🔊"键2秒, 可听到关机提示音。

注意: 开机后如没有连接到蓝牙设备, 音响大约在15分钟后关闭。

蓝牙配对

•首次使用并开机时, 音响将自动进入配对模式。

•如已连上蓝牙设备, 单击"🔗"键, 即可断开当前连接, 以便与其它设备进行配对。

•如没有连上蓝牙设备, 音响也会自动进入配对模式。

连接时, 启用手机的蓝牙功能, 搜索"Monster S150 Plus"进行连接, 连接成功后你会听到提示音, 白色指示灯长亮。

音乐控制

短按"▷"键, 可播放或暂停音乐。

长按2秒"⏮"键, 可播放上一首歌。

长按2秒"⏭"键, 可播放下一首歌。

通话控制

接听来电: 短按"▷"键。

拒接来电: 长按2秒"▷"键。

结束通话: 短按"▷"键。

音量控制

短按"⏮"键调高音量。

短按"⏭"键调低音量。

TF CARD模式播放

开机时,TF CARD (不包含) 插入音响后, 会以TF CARD为优先播放, 届时如需用蓝牙播放时, 短按"🔊"键来切换音源。

AUX IN模式播放

开机时,外接AUX IN音源输入后, 会以外接AUX IN音源为优先播放, 届时如需用蓝牙播放时, 短按"🔊"键来切换音源。

蓝牙广播模式

设置一个"S150 Plus"为主音响, 可连接100+"S150 Plus"副音响控制其功能。

1.首先, 将其中一个"S150 Plus"音响连接到您的蓝牙设备 (例如手机) 作为主音响并播放音乐。

2.双击主音响和其它"S150 Plus"音响上的"🔗"键, 进入蓝牙广播连接模式并自动连接。

3.连接成功后, 主音响绿色指示灯闪烁, 副音响绿色指示灯由闪烁变为长亮。

省电设置

•音响开机后, 如没有连接到蓝牙设备, 大约在15分钟后自动关机。

•在AUX IN模式/ TF Card模式, 15分钟未播放音乐将自动关机。

恢复出厂设置

如果音响需要复位, 请按下复位按键。

注意

•不建议未经许可私下更换电池。

•电池[电池组或电池组合]不得暴露在诸如日照、火烤或类似过热环境中。

产品有毒有害化学物质或元素表

本表格依据SJ/T11364-2014的规定来编制

部件名称	有害物质					多溴联苯 (PBBs)	多溴二苯醚 (PBDEs)
	铅 (Pb)	汞 (Hg)	铬 (Cr)	多环芳烃 (CAH)	邻苯二甲酸盐 (PAHS)		
外壳	○	○	○	○	○	○	○
线材	○	○	○	○	○	○	○
喇叭	○	○	○	○	○	○	○
主板	×	○	○	○	○	○	○
电池	○	○	○	○	○	○	○
其它	○	○	○	○	○	○	○

0表示该有害物质在该部件所有均质材料中的含量均在GB/T18557规定的限量要求以下。
X表示该有害物质在该部件至少一种材料中的含量超过GB/T18557规定的限量要求。

PDF
A000