

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support

PIANO USER MANUAL

MODEL: BD-663

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Piano

MODEL: BD-663



(The picture is for reference only, please refer to the actual object)

NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Accessory

Power cord * 1


Music sheet stand * 1

Microphone * 1


Music sheet clip * 1

Earphones * 1

Piano sticker * 1

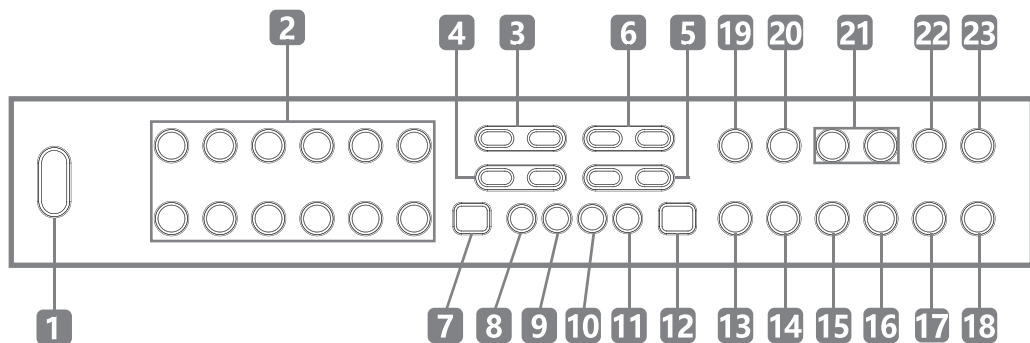

- | | | |
|---------------------------|----------------------|---------------------|
| 1 POWER | 9 SINGLE | 17 DUAL KEY |
| 2 Number Selection | 10 FINGER | 18 Metronome |
| 3 VOLUME+/- | 11 FILL-IN | 19 TONE |
| 4 TEMPO+/- | 12 START/STOP | 20 RHYTHM |
| 5 TRANSPOSE+/- | 13 PROG | 21 LESSON |
| 6 RHYTHM VOL+/- | 14 RECORD | 22 SUSTAIN |
| 7 DEMO | 15 PLAY | 23 VIBRATO |
| 8 SYNC | 16 KEY DRUM | |

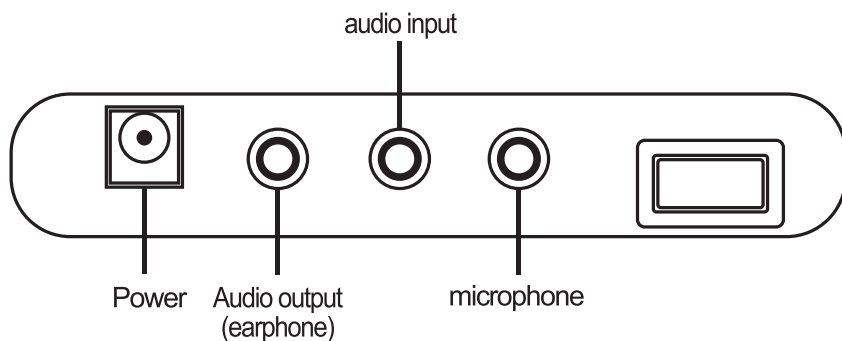

1.POWER

Turn on the power, you can play the keyboard and enter the playing state. In standby mode, if there is no operation for 2 minutes, it will automatically enter the sleep mode, and press any key to resume.

2.Number Selection

Number selection area has 0-9 number selection and **【+】** **【-】** sequential selection, a total of 12 keys. Hold down the **【+】** **【-】** key for more than 2 seconds to add or decrease options continuously. If tone mode/rhythm mode is not selected, the default value is tone mode after power-on. When selected, if the number pressed exceeds the maximum number of tones or rhythms, the original value is maintained.

3.VOLUME+/-

Press **【VOLUME +】** and **【VOLUME -】** key, can increase or decrease the main volume. Each time you press the **【VOLUME +】** and **【VOLUME -】** key, you can increase or decrease one level. Press and hold the **【VOLUME +】** and **【VOLUME -】** key, can speed up the selection. Press the **【VOLUME +】** and **【VOLUME -】** key at the same time can restore the default value. The main volume ranges from 00 to 15 and is divided into 16 levels. The default value is level 13.

4.TEMPO+/-

Use the **【TEMPO +】** and **【TEMPO -】** key to speed up or slow down the tempo speed.

5.TRANSPOSE+/-

Press the **【TRANSPOSE +】** and **【TRANSPOSE -】** key, each time can move up or down a semitone, and display the transpose state in the digital tube, thereby adjusting the key tonality. When you press the **【TRANSPOSE +】** and **【TRANSPOSE -】** key at the same time, you can restore the default tone "C".

6.RHYTHM VOL+/-

【RHYTHM VOL】 key is used to control the rhythm volume, press **【RHYTHM VOL +】** key to increase the rhythm volume, press **【RHYTHM VOL -】** key to decrease rhythm volume. There are 16 segments (1 ~ 16) of rhythm volume control, and the default value is 12 segments after power-on. While holding down the **【RHYTHM VOL +】** **【RHYTHM VOL -】** key at the same time, the rhythm volume returns to the default value.

7.DEMO

Press the **【DEMO】** key to play the song from the next song, and will automatically play the song in a loop. And then press the **【DEMO】** key for the second time to play the next song. In this mode, the digital selection area automatically enters the demo song selection mode.

When you press the tone selection key while playing the demo, the digital selection key will switch to the tone selection mode temporarily, and then return to the demo selection mode after 3 seconds.

(see Appendix 3 for details of all the demo songs.)

8.SYNC

Press the **【SYNC】** key to enter the synchronization model.

When the rhythm has not been played, press the **【SYNC】** key for the rhythm synchronization function, and then press the first 19 keys to automatically play the selected rhythm.

When the rhythm is playing, press this key to enter the synchronous mode and stop the rhythm playing.

9.SINGLE

The **【SINGLE】** key only works in rhythm and general mode. In rhythm mode, press this key and press the range of keys C2~F3# . After pressing single finger, the corresponding chord accompaniment sound can be heard.

10.FINGER

The **【FINGER】** key only works in rhythm and general mode. If the rhythm play, press this key, and press any keys of the range of keys C2~F3#, and then press multi-fingered, you can hear the corresponding chord accompaniment; if not press multi-fingered chord fingering, the keyboard won't play chord rhythm.

11.FILL-IN

Press the **【FILL-IN】** key to insert a 1-4 beat interval into the current rhythm.

12.START/STOP

Press the **【START/STOP】** key to start the rhythm directly.

In the teaching, recording, programming, playing, demo, metronome and other modes, press the **【START/STOP】** key to exit the current mode.

13.PLAY

Press the **【PROG】** key to enter programming mode with a default speed of 120. And you can record the sound of the drum , in programming mode, only the sound of drum is valid, if you type notes, there will be only sound but not record notes.

The maximum record number is 32, when the record full, it can not continue to record the next drum, can press the **【PLAY】** key at any time to play the edited drum sound.

Each time you press this key, it will erase the last memory and re-enter programming mode. When you exit programming mode, the last memory will be erased. In this mode, the keys automatically turn into the keyboard drum.

14.RECORD

Press the **【RECORD】** key to enter the recording mode, then press any key or drum key to start recording.

The maximum number of recordings is 85, when the full, it can not continue to record any note. While recording, you can press the **【PLAY】** key to play at any time.

Each time you press this button, it will erase the last memory and re-enter the recording mode. When you exit recording mode, you will erase the last memory.

15.PLAY

In the programming mode, press the **【PLAY】** key to play the recording drum sound and repeat.

In the recording mode, press the **【PLAY】** key to play the recording note with the selected tone color of the recording at the time

Press the **【PLAY】** key, and if no value was previously recorded, no action occurs.

16.KEY DRUM

Press the **【KEY DRUM】** key to get the percussion instrument tone on the corresponding keys.

17.DUAL KEY

Press the **【DUAL KEY】** key to turn on and off the dual keyboard function. When the dual keyboard function is turned on, the keys in the C3~B4 scale will be played as C4~B5, and the keys in the C5~C8 scale will be played as C4~C7. You can use the number selection area to choose the main tone to replace the original tone of C4 ~ C7 keys.

18.Metronome

Press the 【Metronome】 key , there are four variations: 1/4 beat → 2/4 beat → 3/4 beat → 4/4 beat → stop. The default value of the metronome is 120.

19.TONE

Press the 【TONE】 key and then use number selection area to select the tone. Use the 0-9 keys or 【+】 【-】 choose the tone.

20.RHYTHM

Press the 【RHYTHM】 key and then use number selection area to select the rhythm. Use the 0-9 keys or 【+】 【-】 choose the rhythm.

21.LESSON

OKON:

Press the 【OKON】 key to enter the one key teaching mode and the keyboard teaches according to the demo songs, while the song is playing, the user presses any key will be played as the right melody, if the main melody does not reach the next stanza, the background sound will repeat the play of one stanza, and stop playing until the end of the song. After the end of the song, can continue to teach the same song.

FOLLOW:

Press the 【FOLLOW】 key to enter the follow-play teaching mode and the keyboard teaches according to the demo songs. While the song is playing, the main melody is not played, the user must press the corresponding keys according to the notes shown on the digital tube in order to continue playing the next note, the background sound will repeat one stanza until the end of the song. After the end of the song, can continue to teach the same song.

(Under the lesson mode, we can use the number selection area to select other demo song to teach.)

22.SUSTAIN

Press the 【SUSTAIN】 key to turn on or off the sustain function. After the sustain function turns on, the tone will have the extension effect when playing the keyboard.

23.VIBRATO

Press the 【VIBRATO】 key to turn the vibrato function on or off. After the vibrato function turns on, when playing the keyboard, the tone will have the vibrato effect.

32.APPENDIX A (TONE COLOR CRT)

T000 Acoustic Grand Piano	T040 Crystal	T080 Reed Organ 1
T001 Bright Acoustic Piano	T041 Electoric Piano 3	T081 Clavi 1
T002 Electoric Piano 2	T042 Synth Bass	T082 Baritone Sax
T003 Music Box 1	T043 Overdriven Guitar	T083 String Ensemble 5
T004 Church Organ	T044 Tuba	T084 Soft Piano
T005 Electoric Giutar (Clean) 1	T045 Synth Harp	T085 Science Fiction
T006 Distortion Guitar	T046 Synth Tone 1	T086 Irish Harp
T007 Acoustic Bass	T047 Bright Clarinet	T087 Electoric Giutar 1
T008 Violin	T048 Bass Shanai	T088 Sitar 1
T009 Orchestral Harp	T049 India Sitar	T089 Big Pipe
T010 String Ensemble 1	T050 Electoric Piano 1	T090 Soft Guitar
T011 Trumpet	T051 Soft Electoric Piano	T091 Electoric Piano 5
T012 Tenor Sax 1	T052 Electoric Giutar (Muted)	T092 Square
T013 Clarinet	T053 Accordion	T093 String Ensemble 6
T014 Synth Vocal 1	T054 String Ensemble 3	T094 Vibraphone
T015 Synth Tone 3	T055 Cello	T095 Kalimba 2
T016 Synth Effect 3	T056 Synth Vocal 3	T096 Muted Trumpet
T017 Sitar	T057 Soprano Sax	T097 Synth Bass 2
T018 Kalimba	T058 Kalimba 1	T098 Shanai 2
T019 Shanai	T059 Synth Effect 1	T099 Synth Tone 5
T020 Bright Violin	T060 Bright Sax	T100 Jungle Bass 1
T021 Bass Harp	T061 String Ensemble 4	T101 Pi Pa 1
T022 Slide Guitar	T062 Synth Effect 4	T102 Feedback Gt.
T023 Electoric Bass (Fingar)	T063 Synth Vocal 4	T103 Uilleann Harp
T024 Rock Organ	T064 Fiddle	T104 Jazz Bass
T025 Electoric Giutar (Jazz)	T065 Africa Kalimba	T105 Flugel Horn
T026 Rhodes Piano	T066 Percussive Organ	T106 Muted Horn
T027 Celesta 1	T067 Soft Electric Guitar	T107 Wood Barafon 1
T028 Horizontal Piano	T068 Synth Piano	T108 Electronic Piano 3
T029 Soft Grand Piano	T069 Electoric Piano 4	T109 Multi Reed
T030 Bass Kalimba	T070 Classical Music Box	T110 Guitar Pinch 1
T031 Taiko Drum	T071 Bright Acoustic Piano 1	T111 Multi Wind
T032 Synth Effect 2	T072 Synth Bass 1	T112 Clavi 2
T033 Bright Sitar	T073 Acoustic Giutar (Nylon)	T113 Celesta 2
T034 Synth Vocal 2	T074 Shanai 1	T114 Harpsichord 2
T035 Synth Tone 2	T075 Pedal Harp	T115 Mellow Fm
T036 Alto Sax	T076 Synth Tone 4	T116 Pi Pa 2
T037 Oboe	T077 Sehtar	T117 Upright Piano
T038 String Ensemble 2	T078 French Horn	T118 Electronic Piano 4
T039 Trombone	T079 Black Clarinet	T119 Hard Vibe 1

32.APPENDIX A (TONE COLOR CRT)

T120	Wood Barafon 2	T160	Hard Vibe 2
T121	Music Box 2	T161	Twin Bones
T122	Marimba 2	T162	Synth Harpsi. 2
T123	Santur	T163	Attack Clav. 2
T124	Reed Organ 2	T164	Chorus Guitar.
T125	Puff Harmonica	T165	Steel Bell 2
T126	Ukulele	T166	Tsugaru
T127	12-str. Gt	T167	Oct Harp
T128	Guitar Pinch 2	T168	Bodhran
T129	Slow Violin	T169	Tubular Bells 2
T130	Bright String	T170	Suona
T131	Jungle Bass 2	T171	Castanets
T132	Indian Flute	T172	Attack Harp 1
T133	Clavi 3	T173	Electric Vraphone
T134	Celesta 3	T174	Soft Sax 1
T135	Church Bells	T175	Soft Clav.
T136	Marimba 3	T176	Soft Guitar 1
T137	Dulcimer 2	T177	Grow Guitar
T138	Reed Organ 3	T178	Didgeridoo 1
T139	Electric Giutar (Clean) 2	T179	Attack Barafon
T140	Koto 2	T180	Mute Barafon 1
T141	Xylophone 2	T181	Nay
T142	Shanai 2	T182	Soft Santur
T143	Dulcimer 3	T183	Dual Horns 1
T144	English Horn 2	T184	Hard Barsoon 1
T145	Electric Giutar (Clean) 3	T185	Tron Flute
T146	Shamisen 2	T186	Kawala 1
T147	Koto 3	T187	Jazz Organ
T148	Kalimba 2	T188	Soft Accord
T149	Steel Bell 1	T189	Wind Organ
T150	Tenor Sax 2	T190	Viola Attack
T151	Woodblock 2	T191	Bari & Tenor
T152	Synth Harpsi. 1	T192	Soft Sax 2
T153	Attack Clav. 1	T193	Attack Harp 2
T154	Crystal	T194	Didgeridoo 2
T155	Bag Pipe 2	T195	Dual Horns 2
T156	Barafon	T196	Hard Barsoon 2
T157	Organ Flute	T197	Kawala 2
T158	Kalimba 3	T198	Soft Guitar 2
T159	Reed Horn	T199	Mute Barafon 2

33.RHYTHM OF APPENDIX 2 (CRT)

R000	Rumba
R001	Samba
R002	Tango
R003	Boogie
R004	Pop Rock
R005	Latin
R006	Hully Gully
R007	Disco
R008	Bossanova
R009	Waltz
R010	16Beat Pop
R011	Rock'N Roll
R012	Country
R013	Reggae
R014	Soul Rock
R015	Swing
R016	8 Beat
R017	Cha Cha
R018	Mambo
R019	Caribbean Dance
R020	Country Bossanova
R021	Classical Waltz
R022	Ober Polka
R023	European disco
R024	Latin Rock
R025	8beat Soul
R026	Indigenous Tango
R027	Indigenous Boogie
R028	Europe Rumba
R029	Classical Samba
R030	Pop Mambo
R031	Fanatical Sand
R032	8beat Pop
R033	Brazil Cha Cha
R034	Country Slow Rock
R035	Jazz Swing
R036	South Africa Country
R037	Pop Reggae
R038	Clup Pop
R039	Lyric Rock

33.RHYTHM OF APPENDIX 2 (CRT)

R040 Classical Boogie	R080 Indigenous	R120 Latin Waltz
R041 Rock Samba	R081 Indigenous Rumba	R121 Ober Polka
R042 Rock Disco	R082 Indigenous Country	R122 Unplugged
R043 Brazil Latin	R083 Jazz Bossanova	R123 Blue Grass 1
R044 Single Rock	R084 Europe Samba	R124 Blue Grass 2
R045 Country Waltz	R085 Classical 8 Beat	R125 Blue Grass 3
R046 Europe Swing	R086 Pop Waltz	R126 Saturday Night
R047 Europe Reggae	R087 Tricks Latin	R127 Pop Ballad
R048 Rock Salsa	R088 Country Cha Cha	R128 Slow Soul
R049 Indigenous Cha Cha	R089 Classical Reggae	R129 Bright Pop
R050 Classical Tango	R090 Jazz Polka	R130 Club Latin
R051 Jazz Rumba	R091 Jazz Tango	R131 Disco Chocolate
R052 Indigenous Polka	R092 Jazz Slow Rock	R132 Disco Fox
R053 India's Indigenous	R093 Jazz 16 Beat	R133 Disco Funk
R054 Single 16 Beat	R094 Jazz Boogie	R134 Disco Hands
R055 Mixed Bossanova	R95 Jazz Bo	R135 Disco Latin
R056 Indigenous Slow Rock	R096 Indigenous Rock	R136 Disco Party
R057 Country Jazz	R097 Jazz Disco	R137 Disco Samba
R058 Brazil Mombo	R098 Latin Salsa	R138 Dixie Jazz
R059 Europe 8 Beat	R099 Classical Swing	R139 Pop New Age
R060 Classical Country	R100 China Style	R140 Uk pop
R061 16Beat Shuffle	R101 Slow Rock	R141 USA March
R062 Jazz 8 Beat	R102 Slow Rock 2	R142 Club Dance
R063 Classical Slow Rock	R103 Slow Waltz	R143 Rumba 2
R064 Tricks Bossanova	R104 70's Soul	R144 8Beat Modern
R065 Tricks Mambo	R105 Straight Rock	R145 Country Ballad
R066 Indonesian Pop	R106 Techno	R146 Hard Rock
R067 South Africa Polka	R107 Mambo 2	R147 Hully Gully 2
R068 Classical Rumba	R108 Country 2	R148 Jive
R069 Brazilian Tango	R109 8Beat Adria	R149 LoveSong
R070 Rock Boogie	R110 Big Band Shuffle	R150 Medium Jazz
R071 Jazz Samba	R111 Big Band middle 1	R151 Modern Country Pop
R072 Classical Disco	R112 Big Band middle 2	R152 Modern R&B
R073 Jazz Latin	R113 Big Band Fast 1	R153 Pasodoble
R074 Indigenous Salsa	R114 Big Band Fast 2	R154 Samba1
R075 Argentina Waltz	R115 Bolero	R155 Samba2
R076 Indigenous Swing	R116 CatGroove	R156 Schlager Rock
R077 Jazz Cha Cha	R117 ClassicPianoBld	R157 SchlagerAlp
R078 European Rock	R118 Cumbia	R158 Tarantella
R079 Indigenous Reggae	R119 Funky Disco	R159 Tijuana Waltz

33.RHYTHM OF APPENDIX 2 (CRT)

R160 Electro Pop
R161 Fusion
R162 Hip Waltz
R163 Limbo Rock
R164 Acoustic Ballad
R165 Piano Ballad
R166 R&B Ballad
R167 Rock Ballad
R168 Reggae 2
R169 Slow&Easy
R170 Swing Waltz
R171 Pub Piano
R172 Jazz BigBand
R173 Jazz Club
R174 Jazz Waltz1
R175 Jazz Waltz2
R176 Jazz Rock
R177 Salsa
R178 Analog Ballad
R179 Show Tune
R180 68 Beat Blues
R181 16 Beat Ballad
R182 68 Bea tBallad
R183 Big Band Ballad
R184 West Shuffle
R185 Calypso
R186 Casa
R187 Chrliston
R188 Detroit
R189 Dance Pop
R190 Espag Nol
R191 Fast Gospel
R192 Ground Beat
R193 Guad Dance
R194 Modern Cha Cha
R195 Merengue
R196 Pasodobl
R197 Rave
R198 Sy Boogie
R199 Seville

34.THE APPENDIX 3 (THE DEMONSTRATION TABLE)

D00 Bulaklak	D30 Iyugyog Mo
D01 Are You Sleeping	D31 Pamela
D02 First Day Funk	D32 My Humps
D03 Twinkle Twinkle Little Star	D33 The Beautiful Blue Danube
D04 Jingle Bells	D34 Fur Elise
D05 A Doodoo A Daadaa	D35 Nocturne op.9 no.2
Ahh Ahh	D36 Spring
D06 Always	D37 Chanson Du Toreador
D07 Nandito Lang Ako	D38 Girls Picking Tea and
D08 Hallelujah	Chasing Butterflies
D09 Hawak Kamay	D39 Symphony No.40
D10 Kembot	D40 Spanish Bull Dances
D11 Hari Ng sablay	D41 Oh Susanna
D12 Narda	D42 Jaunty
D13 Patuloy Ang Pangarap	D43 Turkish March
D14 Born This Way	D44 The Maiden's Prayer
D15 Dancing Queen	D45 Bridal Chorus
D16 Another Day In Paradise	D46 Cradle Song
D17 Kabet	D47 Menuett G Bur
D18 Walan natira	D48 Mary Had A Little Lamb
D19 I love you	D49 Schubet Lullaby
D20 Higher	D50 Small bees
D21 Mang Jose	D51 Upuan ft. Jeazell
D22 Nobody	Grutas of Zelle
D23 214	D52 Old McDonald Had
D24 Alipin	a Farm
D25 Beer	D53 Minuet In G
D26 Bye Bye na	D54 Waka Waka
D27 Charing	D55 This Old Man
D28 Crazy for you	D56 She Wore A Yellow
D29 Doobidoo	Ribbon
	D57 Long Long Ago
	D58 Minsan lang kitang
	iibigin
	D59 Little Brown Jug

1 Battery



- Please take care off following attentions
- Do not attempt to disassemble or short-circuit the battery
- Do not expose or burn it in the fire
- Do not mix the new and old battery
- Do not mix different types of batteries
- Do not charge the battery
- The positive and negative poles of the battery must be properly installed
- Please remove the battery from the electronic keyboard If you do not use for a long time,

2 Exception



Please do the following steps when exception for the electronic keyboard like fuming, over hot and so on.

- 1). Power off
- 2). Pull the adaptor down from the power socket on the wall when are using.
- 3).Contact your local dealer in time.

It's normal for adaptor getting hot when long time using AC adaptor, not indicate Malfunction

Please Power off and restart the electronic keyboard when sometime function problem,

3 Install the battery

- 1). Exit the screw and remove the battery cover
- 2). Put the battery with correct positive+ and negative- direction into the battery slot with 4*“AA” 1.5V
- 3). Put the battery cover and Lock the screws

This product contains electronic components and should not allow liquids to enter or be used in damp environments.

Daily dust-proof cleaning should be done well, and surface stains can be wiped with a soft and clean cloth.

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support