



 
NIMO N153 series colors

 
Blue Grey Silver

User Manual




1.1 Product Schematic:

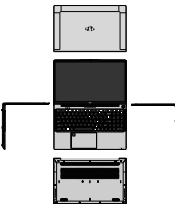

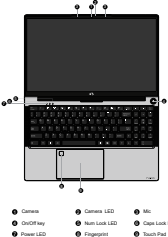

- Camera
- On/Off key
- Power LED
- Camera LED
- Nm Lock LED
- Fingerprint
- Micro SD
- USB 3.0
- USB 2.0
- Headphone connector
- Micro SD
- USB 3.0
- USB 2.0
- Headphone connector

 1.2 Product Schematic:

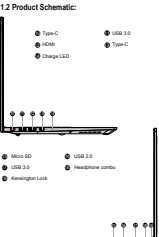

- Type-C
- ICM
- Charge LED
- Micro SD
- USB 3.0
- USB 2.0
- Headphone connector

2. Instructions For Use:

- To power on the computer, ensure it is connected to an AC power adapter or that the battery level is sufficient. Briefly press the power button to start the computer.
- During use, pressing the power button briefly will suspend, resume, or shut down the computer, according to the system settings.

2.1 Function Keys:

This product includes 12 function keys (F1-F12), each assigned to specific operations when used in combination with the "Fn" key. Below is a summary of their functions:

- F1: Clear Sleep Mode
- F2: Decrease Screen Brightness
- F3: Increase Screen Brightness
- F4: Toggle Screen Backlighting
- F5: Enable/Disable Touchpad
- F6: Maximize Audio
- F7: Decrease Volume
- F8: Increase Volume
- F9: Toggle Webcam Backlighting
- F10: Open Secondary Tool (Equivalent to Win + Shift + S)
- F11: Switch Between Native and External Monitor Display
- F12: Enable/Disable Airplane Mode
- Fn+Fn Lock: Function Lock Turn on or off
- Capitol: Control the network and press the capital key to turn on the Capitol APP

2.2 Power Supply and Charging:

This product can be powered using a lithium battery or an AC power adapter. Upon unpacking, connect the AC power adapter to charge the computer before first use.

- Lithium batteries do not have a "memory effect", so they can be recharged at any time without waiting for complete discharge.
- Charging times may be extended if the computer is in use while charging. For faster charging, when the computer is closed, power is shut off.
- To protect battery life, the battery will charge when the power level is below 10% and will not charge when the power level is 80% or above.
- When the battery is low, a warning prompt will appear on the screen. The computer will continue to operate until the battery is critically low, at which point it may shut down, potentially causing unsaved data loss. Please charge the battery promptly.
- Always use the original power adapter to avoid potential damage to the computer.
- Lithium batteries contain toxic and harmful substances. Please recycle the battery in accordance with environmental protection regulations and avoid disposing of it improperly to prevent environmental pollution.

2.3 Cleaning, Maintenance and Storage:

Before cleaning the product, turn off the computer and unplug the adapter.

- Clean the product's exterior with a damp cloth and dry it with a soft cloth.
- Do not use abrasive cleaning liquids.
- Avoid removing the product in water or other liquids.
- After cleaning, store it in a dry, flat environment.

3. Safety Guidelines

Please read and adhere to the following guidelines to enhance product longevity and ensure safe operation:

- Ensure that the computer's ventilation openings are unobstructed to prevent overheating.
- Avoid applying excessive pressure to the display.
- Place the notebook on a stable, level surface.
- Use a protective bag when transporting the laptop.
- Do not operate the laptop in harsh environmental conditions.
- Avoid placing or dropping objects on the laptop.
- Keep the laptop away from magnetic fields and direct sunlight.
- Avoid using the laptop's battery to extreme temperatures or exposing it to moisture.
- Keep the laptop away from heat sources.
- Do not tamper with the battery, and keep it out of reach of children.
- Avoid exposing the laptop to dust or corrosive chemicals.
- Do not force the laptop screen open or use the display to lift the device.
- Do not spray liquids directly onto the display.
- Use only original batteries, using non-original or incorrect battery types may cause a risk of explosion.

4. Troubleshooting:

If you encounter issues with the laptop, follow these steps:

- Turn off the laptop.
- Ensure that the AC power adapter is connected to the computer and the power outlet is functioning.
- Verify that all external devices are properly connected or disconnect them to eliminate potential sources of error.
- Before resetting the laptop, ensure it has been off for at least 10 seconds, and check if the boot sequence is normal.

5. Packing List:

Your package includes:

- User Manual (x1)
- Type-C PD Adapter (x1)
- Notebook Computer (x1)

6. Warranty Information

The N153 is covered for a period of 2 years from the date the product was sold to an end-user for the first time, confirmed by the proof of purchase issued by the first vendor.

During the warranty period, Nimo service center will repair or replace defective parts or products free of charge if the failure occurs under normal usage. Replacement products or parts may be substituted, and the remaining warranty of the original product will be carried out. The warranty is void if the product has been dismantled, modified, or repaired without Nimo's authorization. The warranty does not cover damage caused by misuse or accidental neglect, including but not limited to:

- Use outside operating specifications
- Cracked or broken screen
- Damage from flooding, water, battery, ports, or connectors
- Damage from power surges or incorrect power supply
- Water damage (as indicated by internal liquid contact indicators)

7. Safety Information

Please carefully review the safety information to ensure safe use of your device.

- Child Safety:** Exercise caution when children are near the device. The device contains small, detachable parts that could pose a choking hazard.
- Heating Precaution:** Avoid prolonged exposure to high radiation when using headphones, as this may lead to heating damage. It is recommended to use the lowest possible volume and limit extended listening sessions.
- Safe Driving:** For your safety, do not use the device while driving. Maintaining full attention on the road is crucial to minimize the risk of accidents.
- RF Trade Compliance:** Adhere to safety regulations regarding the use of electronic devices. Most devices require devices to be turned off during transit and testing.
- Fire Safety:** To reduce the risk of fire, keep the device away from heat sources and flammable materials, particularly during charging.
- Liquid Exposure:** Avoid contact between the device and liquids. Water damage can be permanent and may render the device inoperable.
- Approved Accessories:** Use only accessories approved by Nimo to avoid potential damage or safety hazards.
- Battery and Charge Care:** Do not attempt to dismantle or destroy batteries or chargers. Avoid using damaged components, and keep batteries away from magnetic objects to prevent short circuits. Do not expose batteries to extreme temperatures (over than 0 °C, above 40 °C).
- Shock and Impact Resistance:** Handle the device with care to prevent damage from shocks or impacts. Avoid dropping the device or applying excessive force to the screen.
- Electrical Safety:** Do not attempt to dismantle the device, as this could result in electric shock.
- Maintenance:** Clean the device using a dry cloth. Avoid using solvents, such as benzene or alcohol, as they may damage the device.

Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 10m between the radiator and your body.

说明书： 105*147MM 158G双铜纸