

ELECTRIC NAIL TRIMMER

Item No. 210473

User Guide

Thank you for purchasing the Electric Nail Trimmer. Please read this manual thoroughly before operating this device.

SPECIFICATIONS

Rated Input: 5V=0.3A

Charging Interface: Type-C


Battery Capacity: 300mAh

CAUTION

Please read this carefully before using it for the first time.

- The blade is sharp. Keep out of reach of children under 1 year old. Children between 1 and 12 years old should use this product only under adult supervision.
- Store the product safely and out of children's reach to avoid injury or misuse.
- Avoid contact with any body part other than nails to prevent injury.
- When the product is in operation, avoid touching the blades, accessories, or other tools to prevent malfunction or failure.
- Charge the product fully before first use to ensure the battery is adequately powered.
- This product is designed for nail trimming only; do not use it on other body parts.
- Do not use this product on wounds or broken skin.
- Do not wash or immerse the product in water. Keep it away from water and fire.
- Do not use the product while it is charging.
- The product contains a rechargeable battery. Do not expose it to fire or high temperatures.
- Handle the product carefully. Discontinue use if it is damaged due to impact or fall.
- Do not modify, disassemble, or attempt to repair the product yourself.


PARTS

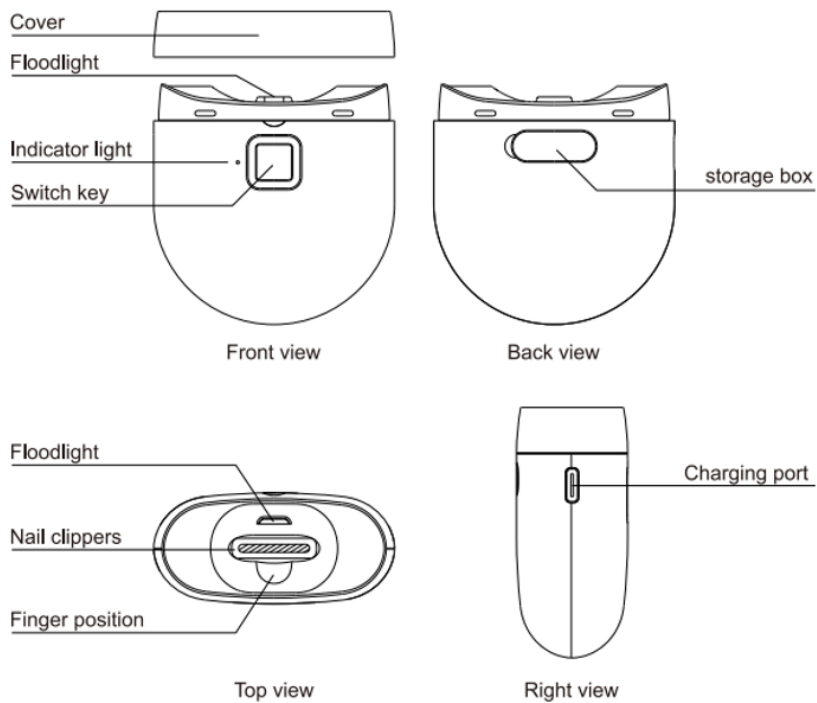


PACKAGE CONTENTS

- 1 x Nail Trimmer
- 1 x Type-C Charging Cable
- 1 x Cleaning Brush

INSTRUCTIONS

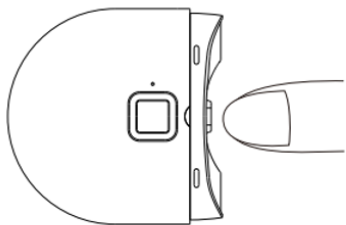


Place the product with the front facing up. Position your finger on the designated area, ensuring the nail extends to the hole.

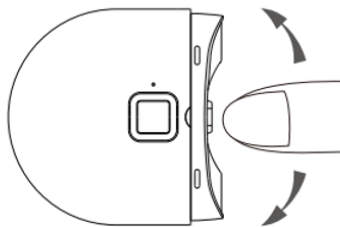

Gently turn your finger left and right to complete the cutting process.

Reminder

For proper use, ensure the product is facing up with the indicator light visible. Place your finger in the designated position. If the storage bin is facing up instead, the trimming will result in a rough and uneven finish.

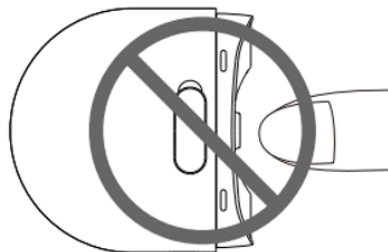

Using


1. Startup: Press the key for 1 second to start gear 1 [low-speed gear]. The work indicator lights up. Press the switch again to start gear 2 [high speed]. To shut down, press the switch again, and the work indicator light will go out.
2. Operation: Remove the protective cover before use. Ensure the product is positioned with the indicator light facing up [the storage bin facing down]. Place your finger on the designated area, align your nail with the hole, and gently press the nail into the hole. Move the nail or the product slowly [avoid moving too fast or applying too much pressure] to round the entire nail.

Tips

- Avoid trimming the same area for an extended period to prevent damage.
- This product integrates cutting and grinding. It is normal to produce fine dust similar to nail shavings during use.
- To protect the motor, the product will automatically shut down after 5 minutes of continuous operation.

Cleaning

Turn off the product. Slightly pull the left side of the storage bin cover to open it. Dispose of the nail shavings in the storage bin and clean the bin with a small brush [do not clean the storage bin while the machine is on].

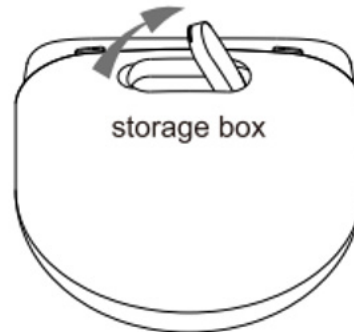

Charging:

Please charge this product under the following conditions:

- When using this product for the first time.
- If you press the switch and the product does not start, the work indicator light flashes and then goes out.
- Use the provided Type-C charging cable with the power adapter [5V output] to charge this product.
- During normal charging, the indicator light will flash slowly and remain on after charging is complete. It will take about 1-2 hours to fully charge.

WARRANTY / CUSTOMER SERVICE

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.