



Dual Alarm AM/FM Clock Radio
With SmartSet®
Automatic Time Setting System,

(U.S. Patent No. 6,567,344)

OWNER’S MANUAL
CKS1704BK / CKS1704SL

Visit our web site at www.emersonradio.com

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION: Use of controls or adjustments, performance of procedures other than those specified may result in hazardous radiation exposure.

The Caution Marking is located at the bottom of the apparatus.
Les précautions d'emploi sont inscrites en bas de l'appareil.

IMPORTANT SAFETY INSTRUCTIONS

- 1.) Read these instructions. Keep these instructions. Follow these instructions. Heed all warnings.
- 2.) Do not use this apparatus near water.
- 3.) Clean only with dry cloth.
- 4.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 5.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 6.) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug had two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 7.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 8.) Only use attachments/ accessories specified by manufacturer.
- 9.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 10.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus have been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 11.) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus combination to avoid injury from tip-over.
- 12.) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
L'appareil ne doit pas être exposé aux écoulements ou éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.



- 13.) Main plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the main outlet completely, the main plug should be disconnected from the main outlet completely.

La prise du secteur ne doit pas être obstruée ou doit être facilement accessible pendant son utilisation. Pour être complètement déconnecté de l'alimentation d'entrée, la prise doit être débranchée du secteur.
- 14.) Battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Les piles ne doivent pas être exposées à de forte chaleur, tel qu'à la lumière du soleil, au feu ou autres choses de semblable.
- 15.) The marking information is located at the bottom of apparatus.

Les marquages sont inscrits en bas de l'appareil.

- NOTE:**
- Minimum distance 10cm around the apparatus for sufficient ventilations.
10cm de distance minimale autour de l'appareil pour une ventilation suffisante.
 - The ventilation should not be impeded by covering the ventilation opening with items such as Newspaper, table-clothes, curtain etc.
Ne pas recouvrir les entrées d'aérations avec des objets tel qu'un journal, une nappe, un rideau etc.
 - No naked flame sources such as lighted candles should be placed on the apparatus.
Aucune source de flamme nue, tel qu'une bougie, ne doit être placée sur l'appareil.
 - Attention should be drawn to the environmental aspects of battery disposal.
Les piles usages doivent être jetées en respectant l'environnement.
 - The use of apparatus in moderate climates.
L'utilisation de l'appareil dans un climat tropical et/ou modéré.

Before We Begin

Thank you for purchasing this Emerson SmartSet®Dual Alarm Clock Radio.
This clock radio uses Emerson's patented SmartSet®Automatic Time Setting System. The first time you connect this clock radio to your AC outlet, and after every power interruption, within seconds the clock will automatically set itself to the correct Year, Month, Date, Day, and Time. In addition all changes from Standard Time to Daylight Saving Time, and back to Standard Time, are made automatically.
There are dual alarms that can be set and used independently, both of the alarms can be programmed for everyday operation, weekdays only, or weekends only.
There is a long life lithium battery installed in this clock radio when you buy it. This battery can maintain the time and alarm setting for 3 to 5 years, or even longer,
We have taken every precaution to make sure this radio was in perfect working order when it left our factory. If you encounter any problems with the set up or operation of this item, please call the Emerson Consumer Products Corp., Customer Service Hotline, toll free, at **1-800-898-9020**.

IMPORTANT NOTES

- Avoid installing this unit in places exposed to direct sunlight or close to heat radiating appliances such as electric heaters, on top of other stereo equipment that radiates too much heat, places lacking ventilation or dusty areas, places subject to constant vibration and/or humid or moist areas.
- Operate controls and switches as described in the manual.
- Before turning on the power, make certain that the AC power cord is properly installed.
- When moving the set, be sure to first disconnect the AC power cord.

FCC Information
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

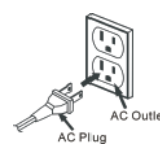 
1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

PREPARATION FOR USE

- Unpacking and set up**
- Remove the radio from the carton and remove all packing material from the radio. We suggest that you save the packing material, if possible, in the unlikely event that your radio ever needs to be returned for service. The original carton and packing material is the only safe way to pack your radio to protect it from damage in transit.
 - Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
 - Note the serial number on the bottom of your radio and write this number in the space provided on the Warranty page of this manual.
 - Place your radio on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
 - Unwind the AC power cord and extend it to its full length. The FM antenna is built in to this cord. It must be fully extended to provide the best FM reception.

Protect Your Furniture
This model is equipment with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware store and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

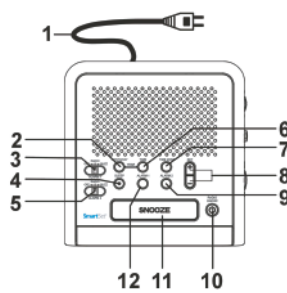 
Power Source
This radio designed to operate on normal 120V 60Hz AC power only. Do not attempt to operate the radio on any other power source. You could cause damage to the radio that is not covered by your warranty.
This radio should be connected to an AC outlet that is always 'live'. Do not connect it to an outlet that is controlled by a wall switch. When the power to the radio is interrupted, the built in lithium battery takes over to maintain the time and alarm settings. To maximize the life of the lithium battery keep the radio connected to a 'live' AC outlet at all times.

You will note that this system is equipped with a polarized AC power plug having one blade wider than the other. This is a safety feature. If this plug does not fit into your existing AC outlet, do not try to defeat this safety feature by filing the wide blade to make it fit into your outlet.
If this plug will not fit into your outlet, you probably have an out-dated non-polarized AC outlet. You should have your outlet changed by a qualified licensed electrician.

Sure Alarm battery Back-Up System
This SmartSet®Clock Radio includes a Sure Alarm battery back-up circuit that can wake you up even if the power is 'off' at the selected wake up time. If your power is 'off' at the selected wake up time the clock display will be off and the radio will not operate, but a separate mini-buzzer will turn 'on' automatically to wake you up, even if you had selected the "Wake to Radio" option.
The Sure Alarm will sound for 30 seconds and then shut off automatically.
To stop the Sure Alarm buzzer immediately, press the **RADIO ON/OFF** button.
Press the **SNOOZE** button has no effect during Sure Alarm operation.

NOTE: In order to maximize the life of the built in lithium battery, please be sure to set the ALARM 1 and ALARM 2 switches to the 'OFF' position if the radio will be disconnected from the AC outlet for more than a few hours. This will prevent the Sure Alarm from turning 'On' unnecessarily.

LOCATION OF CONTROLS AND INDICATORS

Top View



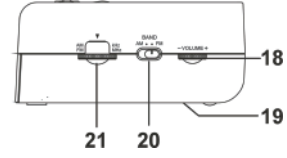 
- 1) AC Power Cord (Back Cabinet)
- 2) MONTH/DATE Button
- 3) ALARM 1 (OFF/RADIO/BUZZ) Selector Switch
- 4) Sleep Button
- 5) ALARM 2 (OFF/RADIO/BUZZ) Selector Switch
- 6)
- 7)
- 8)
- 9)
- 10) SNOOZE Button

Front View



- 13)
- 14)
- 15)
- 16)
- 17)

Right side View



- 18)
- 19)
- 20)
- 21)

- 11) SNOOZE Button
- 12) Alarm 1 Button
- 13) Time Display
- 14) AM Indicator
- 15) ALARM 1 Indicator
- 16) ALARM 2 Indicator
- 17) BATTERY LOW Indicator
- 18) VOLUME Control
- 19) The Lithium Battery Compartment
- 20) BAND (AM/FM) Selector Switch
- 21) TUNING CONTROL

OPERATING INSTRUCTIONS

Setting The Time, The First Time
IMPORTANT: The first time you connect your new SmartSet®clock radio to the AC outlet the internal computer will automatically set the time correctly for the **Eastern Time Zone**, which is the initial default setting. The display will scan for a few seconds and then show the correct Day and Time in the Eastern zone. If you live in the Eastern Time zone, there is nothing else to do. Your clock is set correctly and running.

 
If you do not live in the Eastern Time zone you must change the default zone display to your own zone. You only do this one time and the SmartSet®will remember the new default zone setting and will always return to that setting after a power interruption.
There are 7 time zones programmed into your SmartSet®clock radio as follows:

 
- | | |
|--|-------------------------|
| ZONE 1 -- Atlantic Time | ZONE 5 -- Pacific Time |
| ZONE 2 -- Eastern Time (Default setting) | ZONE 6 -- Yukon Time |
| ZONE 3 -- Central Time | ZONE 7 -- Hawaiian Time |
| ZONE 4 -- Mountain Time | |

 
To change the default time zone display, depress the **TIME ZONE** button. The number **"2"** will appear on the display indicating that the default zone is ZONE 2, Eastern Time.

Hold the TIME ZONE button and then press either the **SET +** or **-** button until your own time zone appears on the display, then release the buttons. The clock display will change to the correct time in the time zone you selected. The clock will always return to the correct time in the zone you selected after every power interruption.

If you move to a different time zone, simply change the default zone display to the new zone and the SmartSet® will remember that setting for you.

Date Display
To see the correct date at any time, depress the **MONTHE/DATE** button. The display changes from time to Month and Date (MM/DD).
For example, May 21st will appear "5.21".
When you release the **MONTH/DATE** button, the display will return to the correct time.


Year Display
To see the correct year, depress the **MONTH/DATE** and **TIME** buttons together.
The display changes from time to year.
When you release the **MONTH/DATE** and **TIME** buttons the display returns to the correct time.


 
Day Of Week Display
Press the SNOOZE button to show day of week, for example, today is Monday, the display will appear "d 1". ("d" instead of "day of week", "1" instead of Monday.)

6

Daylight Saving and Leap Year Adjustments
All Daylight Saving and Leap Year adjustments are made automatically by the SmartSet®internal computer as follows:

- **Start of Daylight Saving Time:**
At "2:00 AM" on the 2nd Sunday in March, the clock will automatically advance to "3:00 AM".
- **End of Daylight Saving Time:**
At "3:00AM" on the 1st Sunday in November, the clock will automatically reset to "2:00 AM".
- **Leap Year:**
At "12:00 Midnight" on February 28th, the calendar display will change to "2.29".

Manual Time Adjustments
Some people like to set their clocks 5 to 10 minutes fast to make sure that they will always be on time. Even though the SmartSet®sets the time by itself, you still have the option of adjusting the time manually if you wish.
To manually adjust the time display depress and hold the **TIME** button, and press either the **SET +** or **-** button to adjust the time display ahead or back as desired.
Each press of the **SET +** or **-** button will change the display by one minute. If you hold the **SET +** or **-** buttons the display will continue to change. The display will change slowly at first, one minute at a time. But if you continue holding the **SET +** or **-** buttons the display will change rapidly.
NOTE: If you manually adjust the time, your new setting is entered into the SmartSet®memory. If the power is interrupted, the display will return to your new setting, not the original setting, when the power is restored.

Adjusting The Wake Up Times
Your SmartSet®clock radio has two separate alarms that can be set and used independently. You may use the alarms to wake two people at different times, or you may use one alarm for weekdays and the other for weekend wake up times. The procedure for adjusting the wake up time is the same for both Alarm 1 and Alarm 2.

1. Press and hold either the **ALARM 1** or **ALARM 2** setting button.
The display will change from the correct time to the Alarm 1 or Alarm 2 wake up time.

2. While holding the **ALARM 1** or **ALARM 2** setting button, depress either the **SET +** or **-** button to move the display ahead or back to your desired wake up time.
3. When the desired wake up time appears on the display, release the **SET+** or **-** button.
NOTE: Be sure that you have set the wake up time correctly by observing the AM indicator. If the **AM** indicator is 'On', the wake up time is "AM". If the AM indicator is 'off', the wake up time is "PM".
4. When the desired wake up time (AM or PM) appears on the display, release the **ALARM 1** or **ALARM 2** setting buttons.

Selecting The Alarm Mode

Your SmartSet ®clock radio allows you to select from among three different alarm operation modes for either alarm. The alarm modes are:

- "1 - 7" – the alarm will turn on all 7 days.
- "1 - 5" – the alarm will only turn on Monday through Friday.
- "6 - 7" – the alarm will only turn on Saturday and Sunday.

Press and hold **ALARM 1** or **ALARM 2** button for approx. 3 seconds. The display will show the alarm mode status. Press **SET** + /- buttons to select the alarm mode.

Checking The Alarm Mode

To check the Alarm mode setting for Alarm 1 or Alarm 2, press the **ALARM 1** or **ALARM 2** setting button for approx. 3 seconds. The display will show the Alarm 1or Alarm 2 mode which is selected.

- If the display show "1 - 7", the Everyday mode is selected.
- If the display show "1 - 5", the Weekdays only mode is selected.
- If the display show "6 - 7", the Weekends only mode is selected.

Checking The Wake Up Times

Whenever you want to check the wake up time, simply press either the **ALARM 1** or **ALARM 2** setting button. The display will change from correct time to wake up time.

Release the **ALARM 1** or **ALARM 2** setting button to return to correct time.

Listening To The Radio

1. Set the **Band** selector to the desired band, **AM** (530-1710 kHz) or **FM** (88 – 108 MHz).
2. Set the **VOLUME** control to a low setting.
3. Press the **RADIO ON/OFF** button to turn the radio 'On'.
4. Select your desired station with the **TUNING** control.
5. Adjust the **VOLUME** control to the desired setting.
6. When you are finished listening, press the **RADIO ON/OFF** button to turn the radio " Off ".

Antenna Information

AM – The AM bar antenna is inside the cabinet. If AM reception is weak, change the position of cabinet until the internal antenna picks up the strongest signal.

FM – The FM antenna is built into the AC power cord. If FM reception is weak try varying the position and direction of the AC power cord until you find the strongest signal.



Wake To RADIO

1. Turn the radio 'On' and select the band station and volume level that you wish to hear when the alarm comes 'On', then turn the radio 'Off' again.
2. Reconfirm the wake up time for the alarm you are using, Alarm 1, Alarm 2, or both alarms.
3. Set the **ALARM** selector switch for one or both alarms to the "RADIO" position. The appropriate **AL1** and/or **AL 2** indicators will light up to confirm that the alarms are set.
4. At the selected wake up time the radio will turn 'On'. It will play for one hour and then shut off automatically.
5. To stop the radio sooner, press either the appropriate **ALARM 1** or **ALARM 2** button, or press the **RADIO ON/OFF** button. The radio will stop but the alarm remains set and will turn the radio on again at the same time on the following day.
6. If you do not want the alarm to turn the radio on the following day, set the appropriate **ALARM** selector switch to the "OFF" position.

Wake To Buzzer

NOTE: Alarm 1 and Alarm 2 have difference buzzer sounds.

- Alarm 1 is a "Single beep" sound.
- Alarm 2 is a "Double beep" sound.

You will be able to tell which alarm is going off by the sound that it makes.

- 1.) Reconfirm the wake up time the alarm you are using, Alarm 1, Alarm 2, or both alarms.
- 2.) Set the **ALARM** selector switch for one or both alarms to the **BUZZ** position. The appropriate **AL1** and/or **AL 2** indicator will light up to confirm that the alarms are set.
- 3.) At the selected wake up time the buzzer will sound. It will continue for one hour and then shut off automatically.
- 4.) To stop the buzzer sooner, press either the appropriate **ALARM 1** or **ALARM 2** button. The buzzer will stop but the alarm remains set and will turn the buzzer on again at the same time on the following day.

 
To stop the buzzer and turn on the radio immediately, press the **RADIO ON/OFF** button twice instead of the **ALARM 1** or **ALARM 2** button.
- 5.) If you do not want the alarm to turn the buzzer on the following day, set the appropriate **ALARM** selector to the "OFF" position.

Radio And Buzzer Operation

You may also set one alarm for wake to **Radio** and the other for wake to **BUZZER**. Just set the **ALARM 1** and **ALARM 2** selector switches to the desired position.

Snooze/Repeat Alarm

After the alarm turns 'On' in the morning you can press the **SNOOZE** button on the top cabinet for a few extra minutes sleep.



The corresponding **AL** indicator will flash.

The alarm will stop for approximately 9 minutes and then comes 'On' again.

The Snooze operation may be repeated several times if desired but after one hour the alarm will not come on again.

Sleep To Music Timer

You can program the sleep timer to play the radio for up to 90 minutes and then shut 'Off' automatically.

1. Press the **SLEEP** button.

The display will briefly show "10" and the Radio will begin to play.

After 10 minutes countdown the radio will shut off automatically.

Each time you press the **SLEEP** button the sleep timer will start at 10 minutes. This is the sleep timer default setting.

2. To increase to decrease the amount of the time that the radio will play before shutting off, hold the **SLEEP** button and press the **SET** + or - button to change the display to the desired sleep time, up to a maximum of "90" minutes or a minimum of "02" minutes.

NOTE: When you change the sleep time from the 10 minutes default setting to a different setting, the new setting becomes the default setting. Whenever you activate the sleep timer it will begin with your new default setting and count down to zero from that point.

3. To cancel the sleep timer before it count down to "00" and shut the radio "Off" immediately, press the **SNOOZE** or **SLEEP** button.

IMPORTANT: Remember that the station and volume settings you choose for the Sleep To Music operation are the same settings you will hear if you set the alarm for wake to radio the following morning.

Changing The Lithium Battery

Like all batteries, eventually the built in lithium battery will need to be replaced. A number of factors, such as, the length of time between the date the radio was manufactured and the date you plugged it in for the first time determine the amount of time before replacement. During this initial storage period, the lithium battery is supplying power to the SmartSet ®computer memory. Once you plug the radio in, your household outlet supplied the power, and the battery is not being used. A fresh lithium battery can supply power to the SmartSet ®computer for at least 2 years even if it is never connected to an AC power supply. If your clock radio was connected to your AC supply within a few months after it was manufactured, and you experience only the normal, nuisance type, short duration power interruptions, your battery may last for up to 5 years or even longer.

When the battery power drops below a certain level, the LED dot ● of BATTERY LOW indicator will 'flash'. When you see this indicator, you should change the battery as soon as it is convenient for you to do so. To change the battery proceed as follows:

1. Purchase a replacement 3V lithium battery wherever batteries are sold. The battery type is **CR2032** or equipment.
2. Remove the battery from its package so it is ready to install.
IMPORTANT: Leave the radio AC power cord connected to your AC outlet. This will provide power to the SmartSet ®computer memory while the original lithium battery is removed.
3. Turn the radio face up and use a small screwdriver to remove the screw securing the battery holder to the cabinet.

BE CAREFUL NOT TO LOSE THIS SMALL SCREW!



4. Remove the original battery from the holder and insert the new battery into the holder the same way, observing the positive (+) direction. Slide the holder with the new battery back into the slot in the cabinet.
5. Replace the screw that secures the battery holder in the cabinet.
6. Turn the radio right side up and confirm that the **BATTERY LOW** indicator is 'Off'.
7. Save these instructions.

WARNING: DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

Lithium Battery Precautions

- Dispose of the old battery properly. Do not leave it lying around where a young child or pet could play with or swallow it. If the battery is swallowed, contact a physician immediately.
- Battery may explode if mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire.

 
Resetting The Clock After A Total Memory Loss

If you do not change the built in lithium battery within a reasonable period of time after you see the **BATTERY LOW** warning indicator, the lithium battery may become exhausted and will no longer be able to supply back up power to the SmartSet ®internal computer. If the unit is disconnected from the AC outlet after the battery is exhausted, or if a power interruption occurs, the SmartSet ®memory will be lost and the clock will need to be reset the clock, otherwise the clock will need to be reset each time the power is interrupted.

If the lithium battery is exhausted and you experience an interruption in the AC power supply, the clock will reset itself to it initial default setting when the power is resorted.

The initial default setting is "**12:00AM, January 1st (1.1), 2008**".

If you notice that the time on your SmartSet ®clock radio is completely incorrect, press the **MONTH/DATE** button to see the date.



If the date display is showing "1.1" (January First), you probably experienced a total memory loss.

To reset the clock after a total memory loss, proceed as follows:

1. Follow the instructions on page 11 and install a new **CR2032** lithium battery in the battery compartment.
2. Connect the radio to your AC outlet and let the clock set itself.
3. Press the **MONTH/DATE** and **TIME** buttons together. The display will change from 'Time' to 'Year'.

While holding the **MONTH/DATE** and **TIME** buttons, press the **SET** + button to set the display to the correct year, then release these buttons.
4. Press the **MONTH/DATE** button. The display will change from 'Time' to 'Month/Date' (MM/DD).

While holding the **MONTH/DATE** button, press the **SET** + button to set the display to the correct Month and Date. When the correct Month and Date appear on the display, release these buttons.
5. While holding the **TIME** button, press the **SET** + button to set the display to the correct Time. Be sure to confirm that you have set the time correctly to 'AM' or 'PM' by observing the AM indicator.
6. After you set the Time, reconfirm that the **Day**, and **Month/Date** displays are still correct. Make final adjustments if necessary.

The SmartSet ® clock memory is now.

IMPORTANT NOTE:

After resetting the clock, don't forget to reset your wake up times, and sleep timer settings as well.

LIMITED WARRANTY

Emerson Radio Corp. warrants manufacturing defects in original material, including original parts and workmanship, under normal use and conditions, for a period of ninety (90) days from the date of original purchase in the U.S. With your dated proof of purchase, we will provide repair service at no charge for labor and parts or replace the product at our discretion. For repair or replacement, pack your unit in a padded box, enclose your check or money order payable to Emerson Radio Corp. in the amount of \$9.00 to cover shipping and handling costs, and enclose a copy of your proof of purchase.

Send your unit to:

Emerson Returns Facility
11500 Philadelphia St,
Mira Loma, CA 91752
ATTN: Returns Department.

This warranty does not cover damage from negligence, misuse, abuse, accident, failure to follow operating instructions, commercial use, rental, repairs by an unauthorized facility, or product purchased, used, serviced or damaged outside of the United States.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

AU898N

The Serial Number of this unit is located on a label on the bottom of the cabinet. Please take a moment now to write this Serial Number in the space provided below. You may be asked for this number when calling for service assistance.

Model No: CKS1704

Serial No: _____

CARE AND MAINTENANCE

Care Of Cabinets

If the cabinet becomes dusty, wipe it with a soft cloth. If the cabinet becomes smudged or dirty, clean it with a soft, slightly dampened cloth. Never allow water or any liquid to get inside the cabinet. Never use any abrasive cleaners or cleaning pads as these will damage the finish of your radio.

FOR ADDITIONAL SET-UP OR OPERATING ASSISTANCE

PLEASE CALL:
1-800-898-9020 OR
1-800-695-0098 OR

EMAIL TO: internet@emersonradio.com

