



(Figure 1)



Button

(Figure 2)

How to set a password

The factory opening password of the lock is 0-0-0-0, if the user needs to reset the password,

The steps are as follows:

1. Adjust the dials so that the number in the code window is displayed as the initial.
- 0-0-0-0-0; (Figure 1)
2. Press and hold the button (Figure 2) with your hand; Turn the dials to select the number in the code window, which is the code you need. (please remember)
3. Release the button, the new password is set successfully.