

Oversized Kids Recliner A Kids Place

Assembly Instructions 6160-7322



◇IMPORTANT◇

Take some time to read the contents of this instruction before using your Mcombo Kids Recliner. Keep this manual for future reference.

Stuffed toy is not included.

Newacme LLC, 3980 PREMIER AVE, MEMPHIS, TN, 38118

Mcombo.com Amazon.com / mcombo

Hello!


Thank you for choosing the Mcombo Oversized Kids Recliner! This chair is a perfect way to give kids a place of their own where independence develop.

Now Let's do some preparations!

Don't worry, assembling your new chair is simple, and we're here to help. Here are a few tips before you begin:

- Read through all the instructions first.
- Please do not throw away the box until you are satisfied with the product.
- Clear a flat, covered space (carpeted is best) to lay out all the materials so everything is close at hand.
- DO NOT use the chair if any parts are missing, damaged or broken. Contact Mcombo Family for replacement parts and instructional literature if needed.
- The instructions include lots of helpful pictures—we show you, step-by-step, exactly how to align pieces and parts for speedy and accurate assembly.


Parts - Sort Your Parts

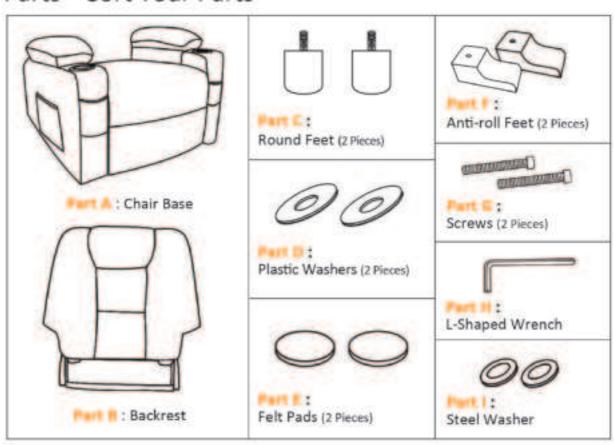

TIPS: 1 Normally the parts box is placed under the seat frame.

(2) Some small parts may have extra pieces.

Now It's time to put it together!

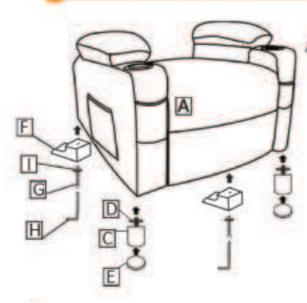



/ Step 2: Assemble backrest

- Align the sleeves of the backrest
 at the clips of the seat.
- Push firmly the sleeves onto the clips of the seat and locking clip position.

/ Step 1: Assemble four feet


- 1. Turn the chair bottom [A] faced to you.
- Screw the foot with a plastic washer into the hole in the front of the seat, then attach the felt pads into the foot.
- Screw the anti-backward feet | into the hole in the back of the seat with L- shaped wrench | | .

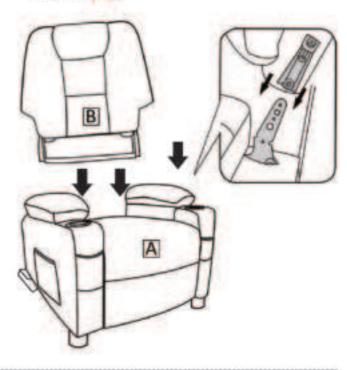

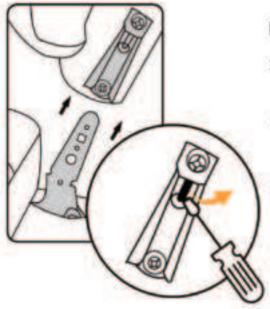

How to remove the backrest?

 - Open the flap on the backrest, use a screwdriver (Don't use your fingers pressing flap).
- Outward on the metal ear on the preattached metal bracket on one side of the chair base.
- Once the mechanism is unlocked you safely remove the backrest by pulling in a straight upward direction.




Now the real fun begins—it is time to sit back and relax in this kid-sized, classically styled, sturdy wooden chair!



To move the chair back into the upright position:

- 1. Tilt your body weight slightly forward and upwards.
- 2. The backrest will come up to an upright position.
- 3. Use your feet to push the footrest down.
- 4. The chair will lock when it is in the fully upright position.

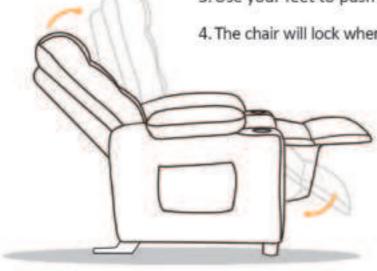





A Kids Place

- A special furniture for a child can make them feel important and appreciated, especially when they have own recliner in living room.
- It's not just a relaxing place for kids after a long day at school or after extensive outdoor activities, but also an exclusive space that kids take their first real steps toward independence.
- Growing up's a funny thing, we believe this recliner will be a good friend accompanied your kids.





Need Help?



| Upholstery Material | 1 Year |
|-------------------------|--------|
| Metal/ Wood Chair Frame | 1 Year |

Limitations Applicable to All Warranties

All warranties begin on the date of delivery.

All warranties are to the original purchaser from EXACME/MCOMBO® ONLY.

All warranties do not cover any loss or damage resulting from the followings.

- Contamination
- Abuse, misuse, accident, or negligence
- Commercial use, or use other than normal
- Improper operation, maintenance, or storage

Return/Replacement Policy

All of recliners come with a 30-day return/replace policy. During this time, we will cover the shipping cost of return and replacement for defective and damaged chair, through providing pre-paid return label or pick-up service for customer's convenience.

Note: Please disassemble the chair before you return it, otherwise there will be a huge cost as oversized and it could even exceed your order amount.

Please do not purchase return label for a damaged/defective chair by yourself.

DACME/MCDMBO* do not responsible for the returns that customer bought by mistake, changed their mind and other non-quality issues.

Note: The customer is responsible for freight costs unless the chair is defective. Chair returned due to being refused delivery by the customer or deemed undeliverable by freight carriers are subject to fees for a 20% restocking fee.

Mcombo Customer Support



Phone: 1-323-597-1109



E-mail: sales@mcombo.com

A WARNING

- To prevent suffocation, keep plastic bags and small parts away from children.
- The chair must be placed on a hard, flat, and level surface.
- Ensure the chair continue to function properly and safely by regularly checking all the sleeves are inserted into seat tightly.
- Do not allow the kids to stand or sit on the footrest, backrest and the arms of the recliner.
- Keep hands and feet clear of the footrest mechanism and any gaps.
- Avoid exposing upholstered chair to burning cigarettes or cigars, open flames, and high temperatures.
- Weight Capacity: 120 lbs (54.5 kg)

Operation Precautions

| | Do not put hot items directly on the surface of recliner. | × |
|---|--|---------|
| | Do not clean the recliner with harsh cleansers or polish, stains may removed with mild soap solution and damp cloth. | be × |
| W | 3. Do not place your recliner in direct sunlight, as sunlight causes fading. — | × |
| 0 | 4. Do not place the recliner near heating or cooling vents. | × |
| | 5. Do not write on the recliner without a padder barrier to protect the surface. | × |
| 0 | 6. Do not place the recliner outside. For indoor use only. | × |
| 3 | 7. Children should not climb or jump on the recliner. | × |
| | 8. Stay away the backrest from wall at least 9.8 inches before. | _! |

Mcombo[®]