



N300 Mini WiFi Repeater • A301

User Guide

Copyright Statement

© 2018 Shenzhen Tenda Technology Co., Ltd. All rights reserved.

Tenda is a registered trademark legally held by Shenzhen Tenda Technology Co., Ltd. Other brand and product names mentioned herein are trademarks or registered trademarks of their respective holders. Copyright of the whole product as integration, including its accessories and software, belongs to Shenzhen Tenda Technology Co., Ltd. No part of this publication can be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means without the prior written permission of Shenzhen Tenda Technology Co., Ltd.

Disclaimer

Pictures, images and product specifications herein are for references only. To improve internal design, operational function, and/or reliability, Tenda reserves the right to make changes to the products without obligation to notify any person or organization of such revisions or changes. Tenda does not assume any liability that may occur due to the use or application of the product described herein. Every effort has been made in the preparation of this document to ensure accuracy of the contents, but all statements, information and recommendations in this document do not constitute a warranty of any kind, express or implied.

Preface

Thank you for choosing Tenda! Please read this user guide before you start with A301.

Conventions

The typographical elements that may be found in this document are defined as follows.

Item	Presentation	Example
Cascading menus	>	System > Live Users
Parameter and value	Bold	Set User Name to Tom .
Variable	Italic	Format: <i>XX:XX:XX:XX:XX:XX</i>
UI control	Bold	On the Policy page, click the OK button.
Message	“ ”	The “Success” message appears.

The symbols that may be found in this document are defined as follows.

Symbol	Meaning
 NOTE	This format is used to highlight information of importance or special interest. Ignoring this type of note may result in ineffective configurations, loss of data or damage to device.
 TIP	This format is used to highlight a procedure that will save time or resources.

Acronyms and Abbreviations

Acronym or Abbreviation	Full Spelling
AP	Access Point
DHCP	Dynamic Host Configuration Protocol
DNS	Domain Name System

Acronym or Abbreviation	Full Spelling
WPS	WiFi Protected Setup

Additional Information

For more information, search this product model on our website at <http://www.tendacn.com>.

Technical Support

If you need more help, contact us by any of the following means. We will be glad to assist you as soon as possible.

 Hotline	Canada: 1-888-998-8966	 Email	support@tenda.cn
	Hong Kong: 00852-81931998		
 Website	http://www.tendacn.com	 Skype	tendasz

Contents

1	At a Glance.....	1
1.1	Overview	1
1.2	Features	1
1.3	Know your device.....	2
1.3.1	LED	2
1.3.2	Ports & Buttons.....	3
1.3.3	Labels	4
2	Quick Installation Guide.....	5
2.1	Extending the current WiFi coverage	5
2.2	Turn wired network to WiFi network	12
3	More Functions.....	16
3.1	Status	16
3.2	Re-extend.....	19
3.3	WiFi Settings	22
3.4	Operating Mode.....	23
3.5	Administration	26

1

At a Glance

1.1 Overview

As a high-performance WiFi repeater, Tenda A301 operates on 2.4 GHz band and provides large WiFi coverage and strong signal strength. It works well with any WiFi routers and WiFi DSL modems available on the market.

1.2 Features

- Operates on 2.4 GHz band.
- Auto channel detection for stable, reliable and fast internet connection.
- Supports to extend a WiFi network encrypted with None, WPA-PSK, WPA2-PSK and mixed WPA/WPA2-PSK.
- Mixed WPA/WPA2-PSK and AES encryption mechanism ensure higher network security.
- Supports extending using WPS.
- Supports quick setup using a mobile phone.
- Repeater mode and AP mode for various application scenarios.

1.3 Know your device

1.3.1 LED



LED	Status	Description
Signal	Solid blue	The repeater has connected to your existing WiFi router/modem, and its position is proper.
	Solid red	The repeater has connected to your existing WiFi router/modem, but its position is too far away from your router/modem.
	Off	The repeater does not connect to your WiFi router/modem.
WPS	Solid on	A WPS connection has been established.
	Blinking	A WPS connection is being established.
	Off	The WPS function is disabled.
PWR	Solid on	The system has started.
	Blinking	The system is starting.
	Off	The repeater is not powered on.

1.3.2 Ports & Buttons



■ WPS button

Press the WPS button down for 1 second to establish a WPS connection, the WPS LED blinks.

■ RESET button

With the PWR LED solid on, press the RESET button down using a paper clip. All LEDs blink once at the same time, and then light off. Wait about for 40 seconds until the PWR LED lights solid on again. The repeater is reset successfully.

■ LAN port

- In Repeater mode, this port allows a wired device, such as a desktop computer, to be connected to A301 to access the internet.
- In AP mode, connecting this port to a router or a modem turns A301 into an AP to share your wireless network.


1.3.3 Labels

The labels present SSID, login address and other information of the repeater.

- **Label on the top of A301:**



- **Label at the back of A301:**

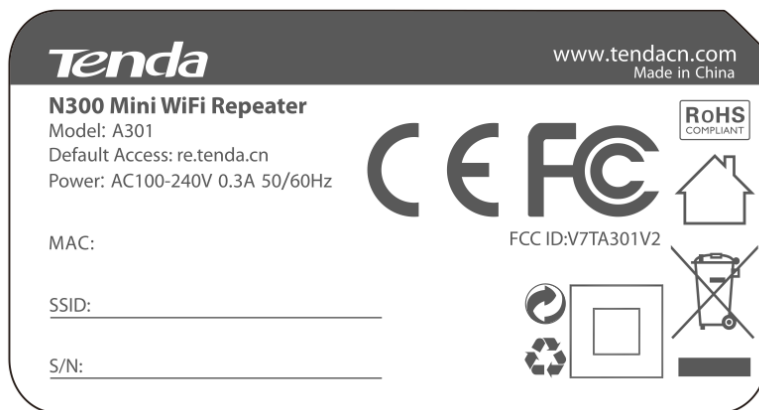


2 Quick Installation Guide

2.1 Extending the current WiFi coverage

Method 1: Extending your WiFi network using web UI (Recommend)


Step 1 Plug the repeater into a power outlet near the router in the same room. Wait until the PWR LED turns solid blue.

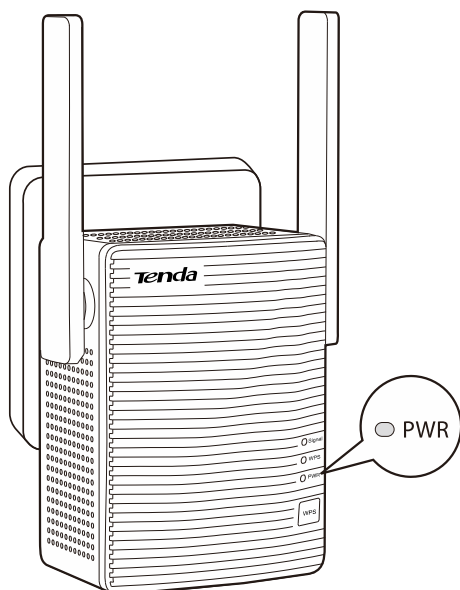

Step 2 Connect your WiFi device, such as a mobile phone or a laptop to the repeater's WiFi network named **Tenda_EXT**. By default, it has no password.

NOTE

- A desktop computer can connect to the WiFi network only when it is installed with a wireless adapter.
 - The following describes the configuration steps using a mobile phone.
-

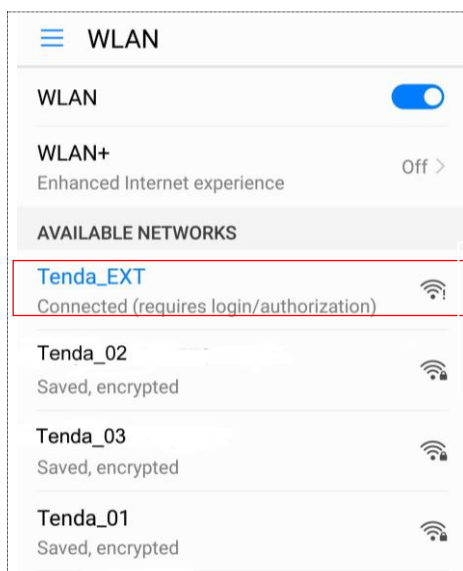


Example of configuration using a mobile phone


Step 3 Start a web browser, and enter **re.tenda.cn** to log in to the web UI of the repeater.




Step 4 Create a login password (recommend) and tap **Next**.

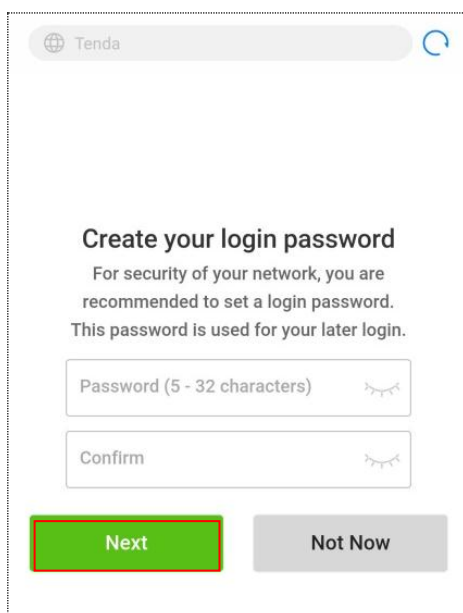

Step 5 Select the WiFi network you want to extend, which is **Tenda_01** in this example.

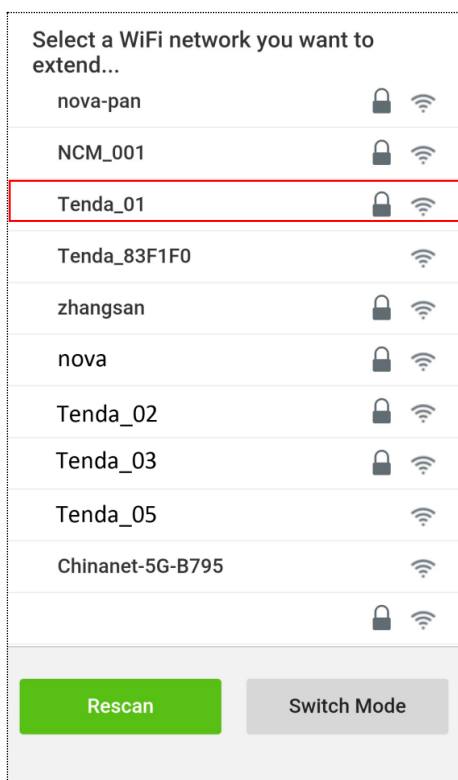

Step 6 Enter the password of the WiFi network you selected, change the SSID as needed, and tap **Extend**.

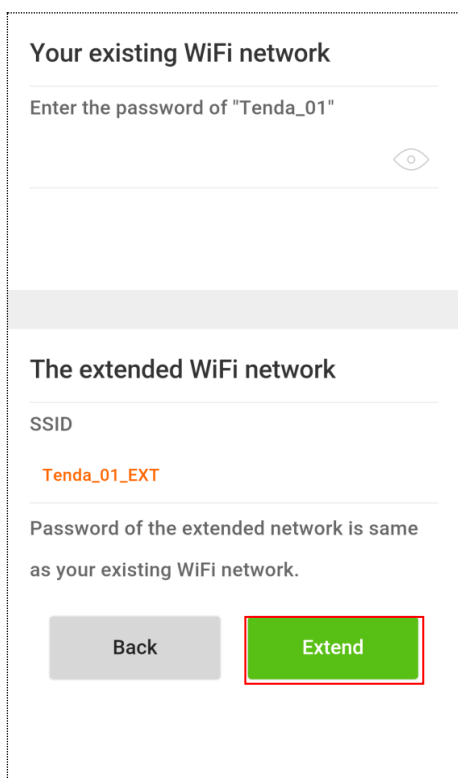

Step 7 Wait until the Signal LED turns blue or red. Then, relocate the repeater following the on-screen tips for optimal connection quality.

✔ Extended successfully!

Extended SSID:


Tenda_01_EXT

1. Move the repeater halfway between your WiFi router and WiFi dead zone. (The position must be within the range of your existing WiFi network.)

2. Use the Signal LED color to help you relocate the repeater.

- Blue: Proper position
- Red: Move the repeater closer to the WiFi router
- Off: Move the repeater closer to the WiFi router

Step 8 When the Signal LED turns solid blue, A301 is at a proper position.

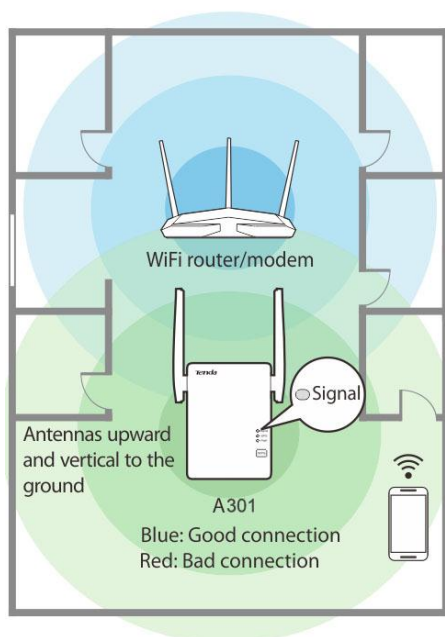

NOTE

- For better performance, keep the repeater away from products with strong interference, such as microwave, Bluetooth devices, and refrigerator.
- Place the repeater at a spacious position without obstacles.

---End

Connect your WiFi devices to the extended network to access the internet.

- SSID of the extended network: SSID you set, or your original SSID with a suffix **_EXT**.
- WiFi password of the extended network: same as that of the upstream router/modem.

WLAN		
nova_01	Encrypted	
SSID2	Encrypted (WPS available)	
Tenda_02	Encrypted	
Tenda_01_EXT	Encrypted	
Tenda_0310C8	Encrypted	
Tenda_456789	Encrypted	
Tenda_7DA090	Encrypted (WPS available)	

You can connect your wired devices to the LAN port of the repeater to access the internet as well.


Method 2: Extending your WiFi network using WPS



TIP

You can use this method if your router/modem has a WPS button, which may be indicated by , , or . Otherwise, use [Method 1: Extending your WiFi network using web UI](#).

- Step 1** Plug the repeater into a power outlet within 2 meters of your router/modem in the same room. Wait until the PWR LED turns solid blue.

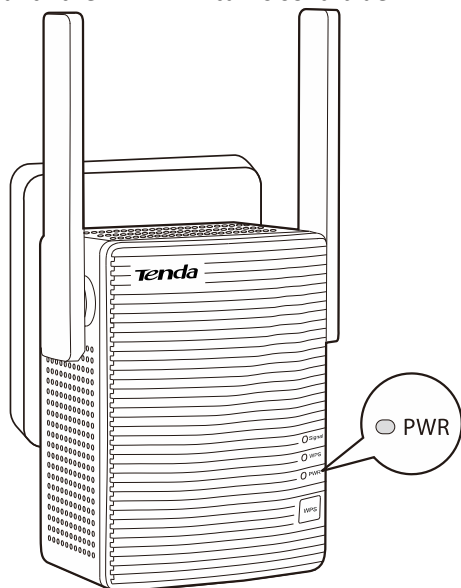

- Step 2** Press the WPS button on the router, and then press the WPS button on the repeater within 2 minutes.


- Step 3** Wait until the Signal LED on the repeater lights on. The repeater expands your existing WiFi network successfully.

If the Signal LED on the repeater does not light on, use [Method 1: Extending your WiFi network using web UI](#).

- Step 4** Plug the repeater into an outlet halfway between the router and the WiFi dead zone. The location you choose must be within the range of your existing WiFi network.

- Step 5** Wait about 1 minute. Use the following status of the Signal LED to see whether the repeater is at a proper position.

- Blue: proper position
- Red: move the repeater closer to the WiFi router/modem
- Off: move the repeater closer to the WiFi router/modem

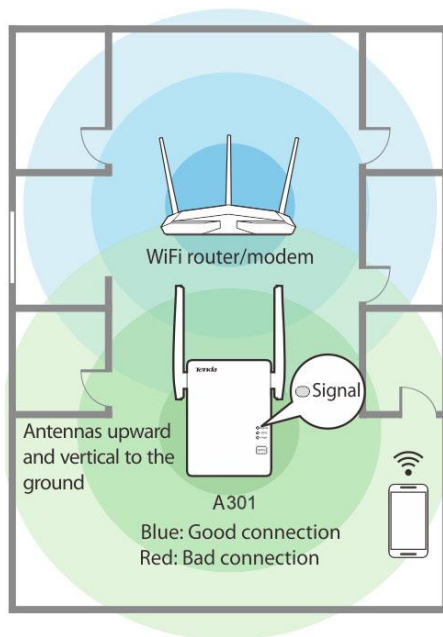


NOTE

- For better performance, keep the repeater away from products with strong interference, such as microwave, Bluetooth devices, and refrigerator.
- Place the repeater at a spacious position without obstacles.

---End

Connect your WiFi devices to the extended network to access the internet.

- SSID of the extended network: your existing WiFi network with a suffix **_EXT**.
- WiFi password of the extended network: same as the upstream router/modem.

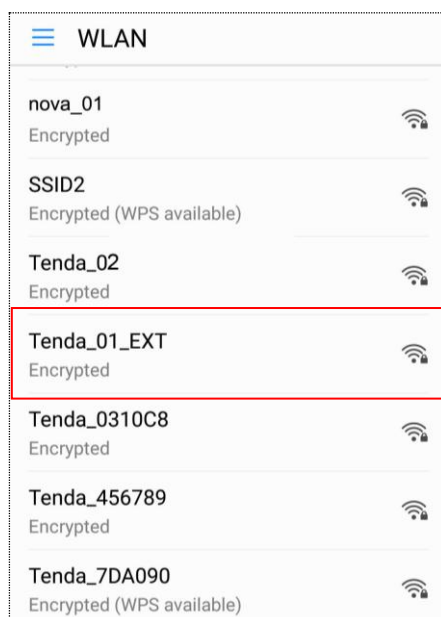


You can connect your wired devices to the LAN port of the repeater to access the internet as well.

2.2 Turn wired network to WiFi network



Before you start, ensure that your WiFi router/modem can access the internet.

Step 1 Plug your repeater to a power outlet. Wait until the PWR LED turns solid blue.

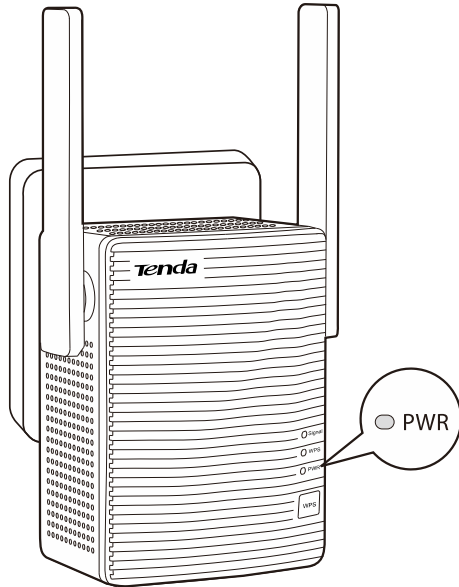

- For better performance, keep the repeater away from products with strong interference, such as microwave, Bluetooth devices, and refrigerator.
 - Place the repeater at a spacious position without obstacles.
-

Step 2 Connect the repeater to the LAN port of the router using an Ethernet cable.

Step 3 Connect your mobile phone or other WiFi device to the SSID of the repeater: **Tenda_EXT**. By default, it has no password.



- A desktop computer can connect to the WiFi network only when it is installed with a wireless adapter.
 - The following describes the configuration steps using a mobile phone.
-

Step 4 Start a web browser, access **re.tenda.cn**.

Step 5 Create a login password, and tap **Next**.

Tenda

Create your login password

For security of your network, you are recommended to set a login password. This password is used for your later login.

Password (5 - 32 characters)

Confirm

Next Not Now


Step 6 Tap **Switch Mode** at the lower-right corner.

Select a WiFi network you want to extend...


Tenda_test	Locked
Tenda_AC18	Locked
Tenda_01	Locked
Tenda_83F1F0	Unlocked
Tenda-AC9	Locked
nova	Locked
Tenda_02	Locked
Tenda_03	Locked
Tenda_05	Unlocked
Tenda_A18	Unlocked
Tenda-test2	Locked

Rescan **Switch Mode**


Step 7 Select **AP mode**, and tap **OK**.

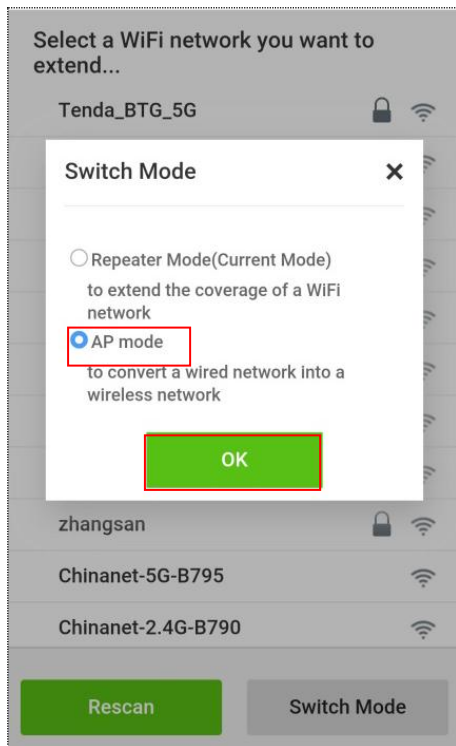

Step 8 Change SSID (optional), create your WiFi password (recommend), and tap **Done**.

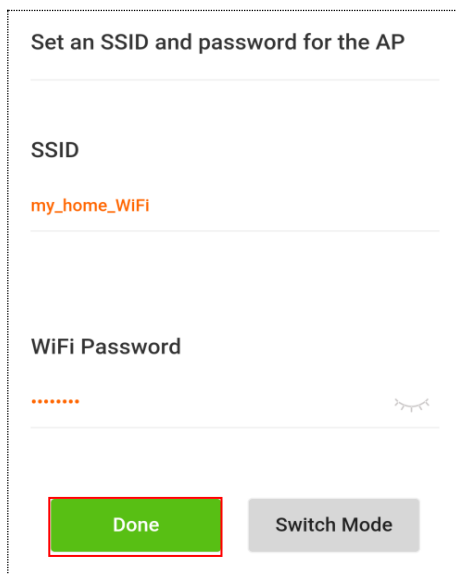


Wait a moment until the progress bar is complete.

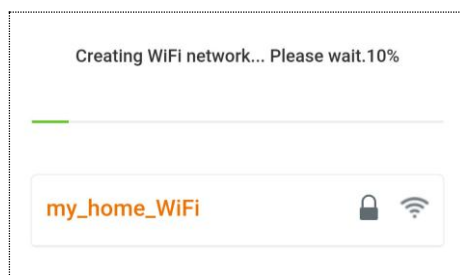

---End

The **Created Successfully!** page appears. Connect your WiFi devices to the internet using the SSIDs shown on the page and WiFi password you set.

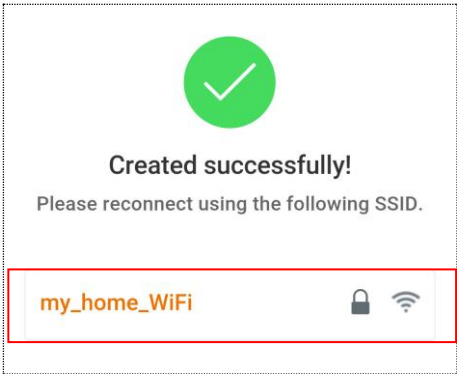

3 More Functions




For better experience, a computer is recommended to manage your repeater.

3.1 Status

This page allows you to view connection status, attached devices, and blacklist etc. To access the page, choose **Status**.

Internet connection status – Repeater Mode

The following figure shows the **wireless bridging status** between the repeater and your existing WiFi router/modem in Repeater mode.

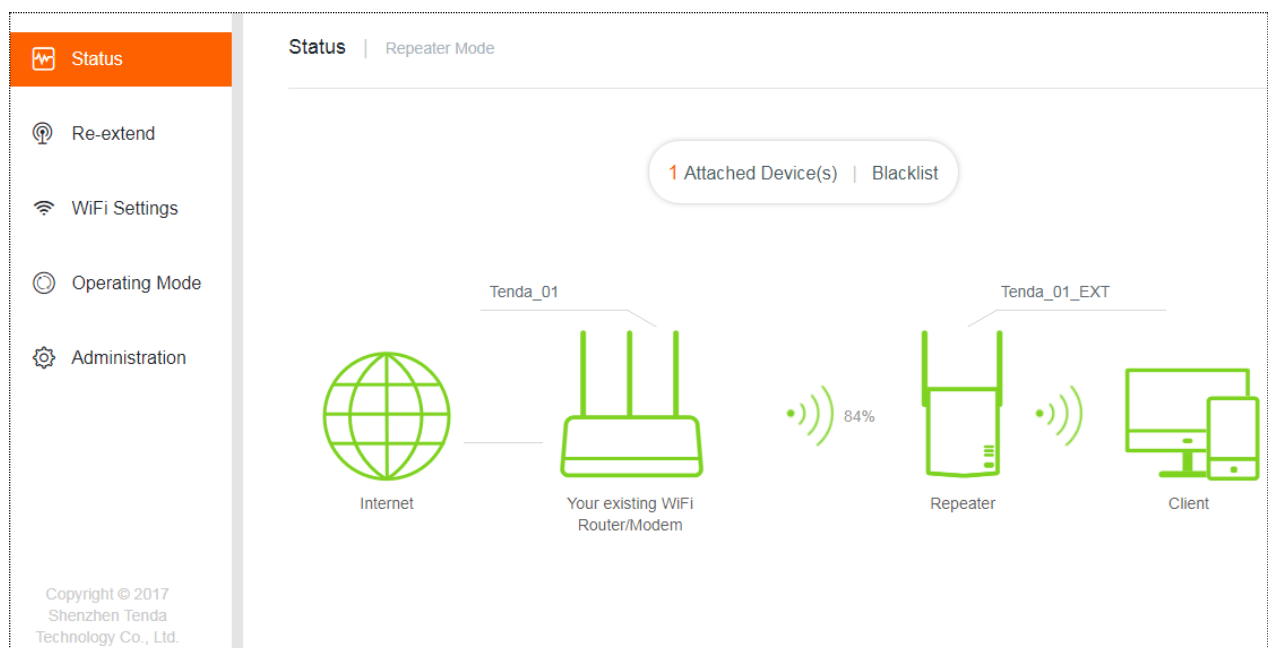

The internet connection status between the repeater and the upstream WiFi router/modem is shown using figures.




Extended successfully. The signal strength is indicated by percentage.




Extend failed.

Internet connection status – AP Mode

The following figure shows the **wired connection status** between the repeater and your existing WiFi router/modem in AP mode.

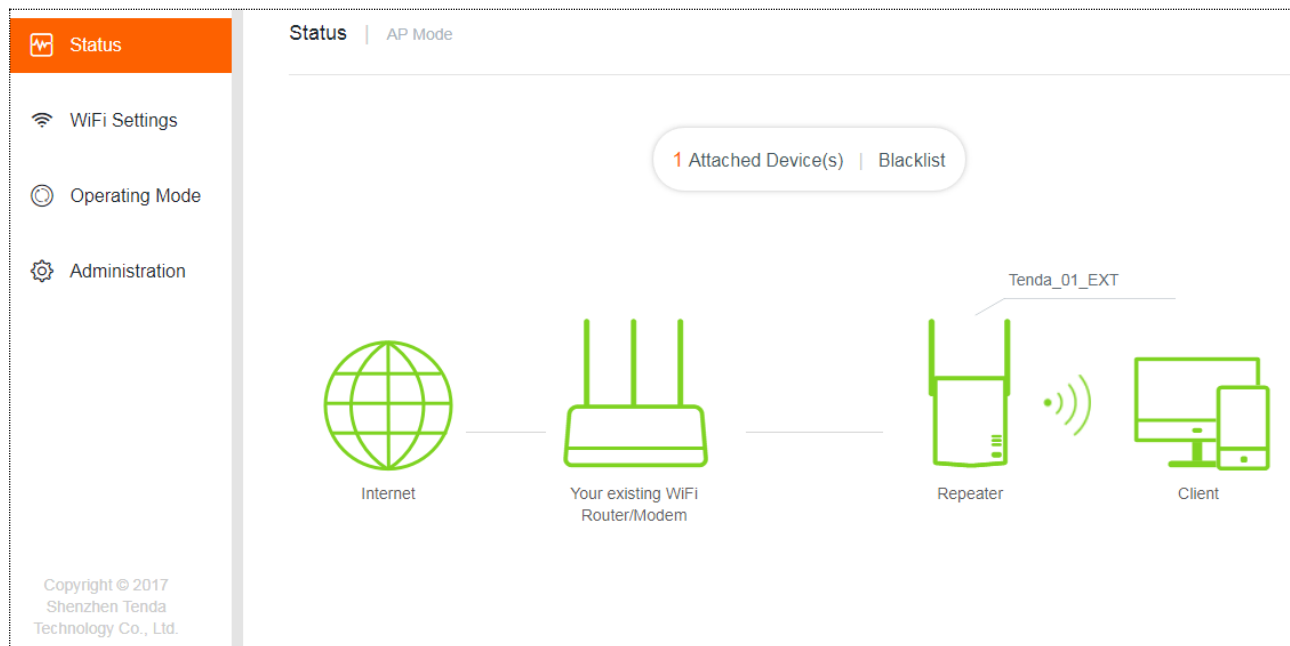

 Internet connection status between the repeater and the upstream WiFi router/modem is shown using the following figures.



Internet connection is normal between the repeater and your existing WiFi router/modem.



The repeater fails to expand the WiFi network of your existing WiFi router/modem.

Ensure that the repeater connects to your existing WiFi router/modem properly in wired manner, and DHCP of your existing WiFi router/modem is enabled.

Attached Device(s)

1 Attached Device(s): You can see the quantity of terminals connected to the repeater. Clicking **Attached Device(s)** enables you to view the detailed information about online devices, including **Device Name**, **Connection Type**, and **MAC Address** etc.

Attached Device (2) ✕			
Device Name	Connection Type	MAC Address	Add to Blacklist
Maximilian-PC 	2.4G	50:2B:73:D8:1C:A3	Local
Honor_9 	2.4G	54:B1:21:56:62:45	<button>Add</button>

Add to Blacklist allows you to block unauthorized or unknown devices. Devices in the blacklist cannot connect to the WiFi network of the repeater.

Blacklist

Blacklist (1) : Clicking **Blacklist** enables you to view blocked devices. To unblock a device, click **Remove**.

Devices removed from the **Blacklist** can connect to the repeater again.

Blacklist (1) ✕		
Device Name	MAC Address	Remove from Blacklist
Unknown	54:B1:21:56:62:45	<button>Remove</button>

3.2 Re-extend


This module allows you to extend other WiFi networks. To access the page, choose **Re-extend**.



This module is only available in Repeater mode.

Procedure

Step 1 Click **Re-extend** to enter the configuration page.

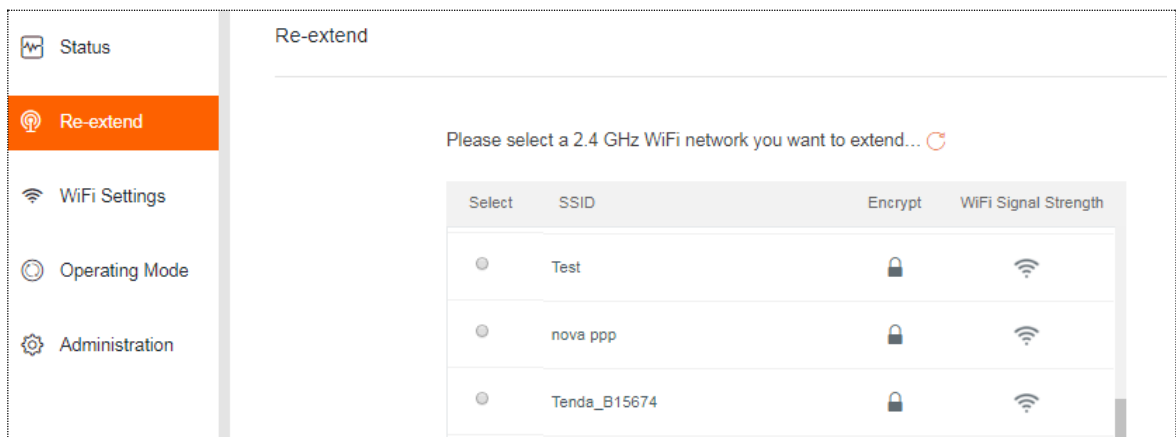

Step 2 Select the WiFi network you want to re-extend.

Step 3 Select the SSID from the list. If the WiFi network you want to extend is not on the list, click .

Step 4 Enter the WiFi password of the WiFi network.

Step 5 Change the SSID (optional).

The default SSID of the extended WiFi network is your existing WiFi network's SSID with a suffix **_EXT**.

For example:

Your existing WiFi network's SSID: Test

Default SSID of the extended WiFi network: Test_EXT.

Step 6 Click **Next**.

Re-extend

Your existing 2.4 GHz WiFi Network

Enter the password of 'Test'.


Extended 2.4 GHz WiFi Network

Extended 2.4GHz SSID:

Password of the extended network is same as your existing WiFi network.

Back Next


Step 7 Connect your WiFi devices to the re-extended WiFi network using the SSIDs shown on the page.

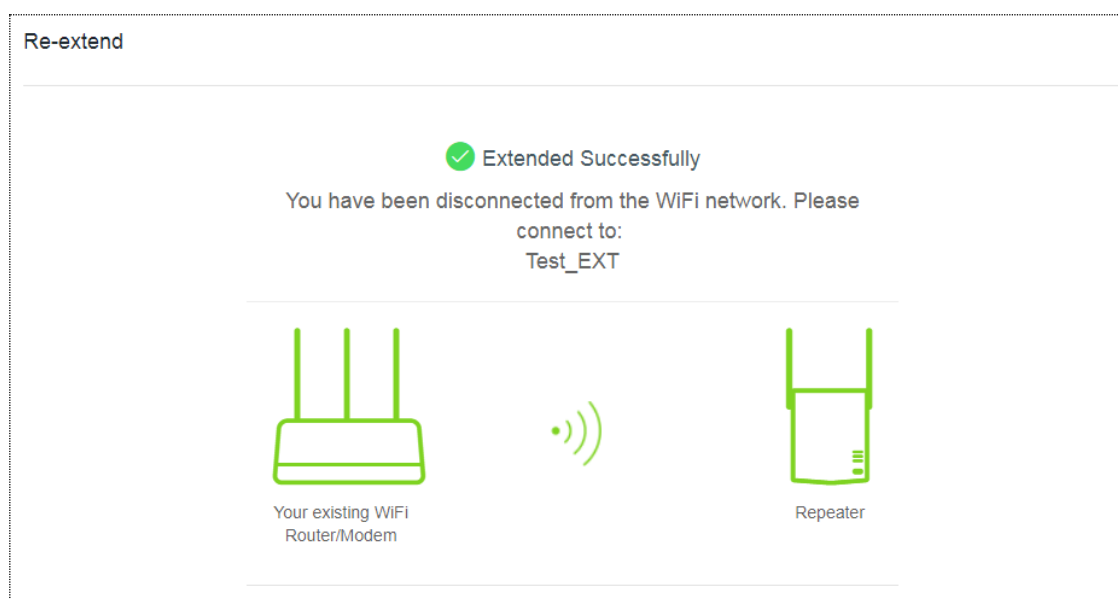

Step 8 Plug the repeater into an outlet halfway between the router and the WiFi dead zone. The location you choose must be within the range of your existing WiFi network.

Step 9 Wait about 1 minute. Use the following status of the Signal LED to see whether the repeater is at a proper position.

- Blue: Proper position
- Red: Move the repeater closer to the WiFi router/modem
- Off: Move the repeater closer to the WiFi router/modem

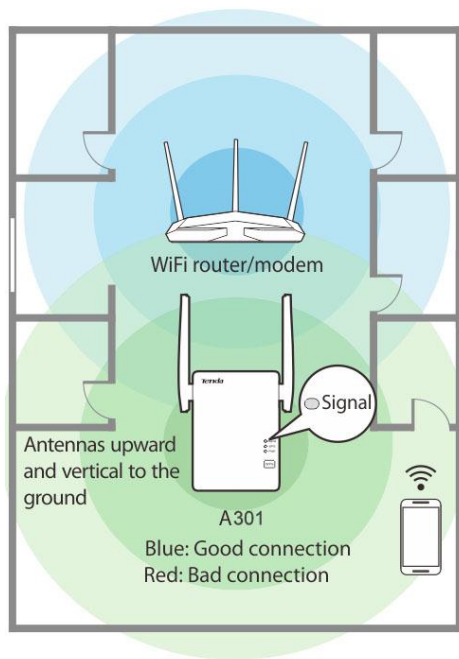

NOTE

- For better performance, keep the repeater away from products with strong interference, such as microwave, Bluetooth devices, and refrigerator.
 - Place the repeater at a spacious position without obstacles.
-

---End

Enjoy your broader WiFi coverage.

3.3 WiFi Settings

This module allows you to change the repeater's SSID and WiFi password, or to hide the repeater's SSID.

The screenshot shows the 'WiFi Settings' page of a Tenda repeater. On the left, a sidebar contains links: Status, Re-extend, WiFi Settings (highlighted), Operating Mode, and Administration. The main content area is titled 'WiFi Settings' and displays the '2.4 GHz Network' configuration. It includes two input fields: 'SSID' with the value 'Tenda_01_EXT' and a 'Hide' checkbox, and 'WiFi Password' with a masked password '*****' and a 'No Password' checkbox. At the bottom of the main area are two buttons: 'Save' (green) and 'Cancel' (white). The footer of the sidebar shows 'Copyright © 2017 Shenzhen Tenda Technology Co., Ltd.'

Change SSID & WiFi password

- Step 1** Choose **WiFi Settings**.
- Step 2** Change the **SSID** and **WiFi Password** as needed.
- Step 3** Click **Save**.

---End



To access the internet on a mobile device, you need to connect to the new SSID using the WiFi password you set.

Hide

Check the box and click **Save**. Then terminals cannot find the repeater's SSID. To connect to the repeater, you are required to manually enter the repeater's SSID, which can improve the WiFi network security.

No Password


Check the box and click **Save**, wireless network of the repeater is unencrypted. You can connect to the repeater without entering a password. This option is not recommended as it leads to low network security.

3.4 Operating Mode

This repeater can operate in the following two modes:

- Repeater Mode: to extend WiFi coverage of your existing WiFi network. By default, the repeater works in this mode.
- AP Mode: to convert a wired network to a WiFi network.

To change the repeater's operating mode, choose **Operating Mode**.

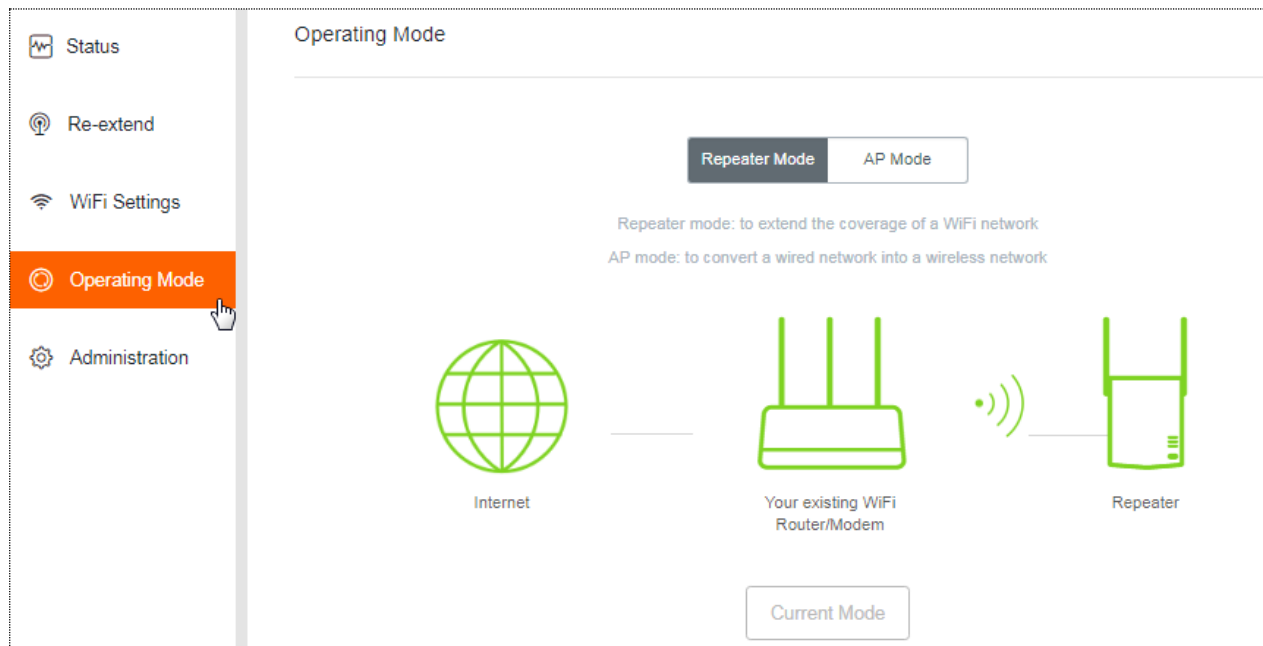

To switch the repeater's operating mode:

The following describes the procedure for switching from **Repeater Mode** to **AP Mode**.




NOTE

When switching from **AP Mode** to **Repeater Mode**, you are required to setup your repeater again, see steps 4-7 described in [Method 1: Extending your WiFi network using web UI](#).


Step 1 Choose **Operating Mode**.

Step 2 Click **AP Mode**.


Step 3 Click **Switch Mode**.

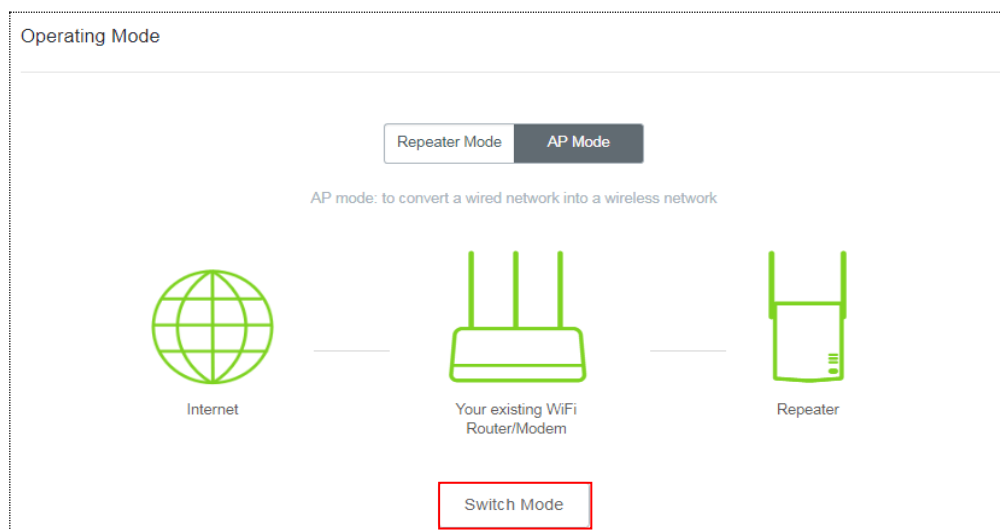

Step 4 Click **OK** on the page that appears.

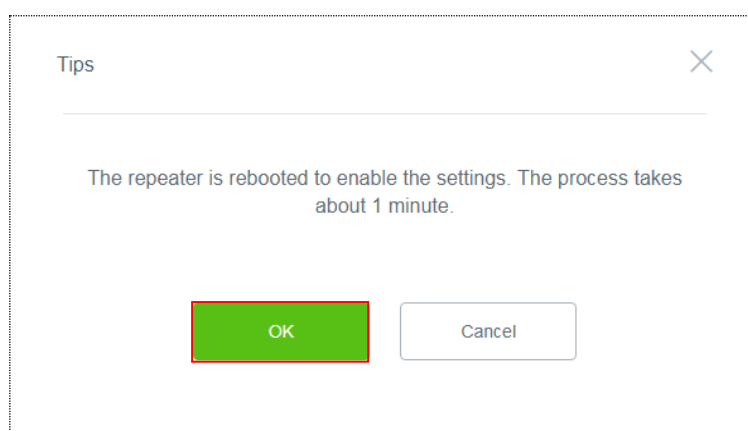


Step 5 Wait a moment until the progress bar is complete.

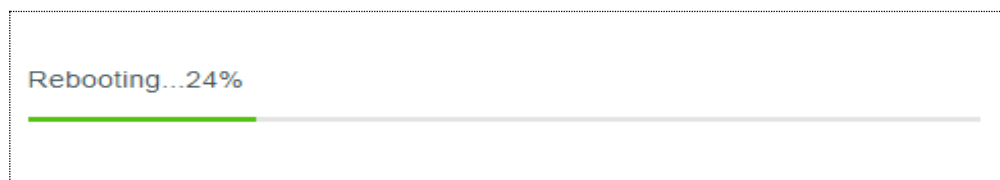


Step 6 Connect to the internet.

1. Log in to the web UI of the repeater and choose **Status**. See the following figure:

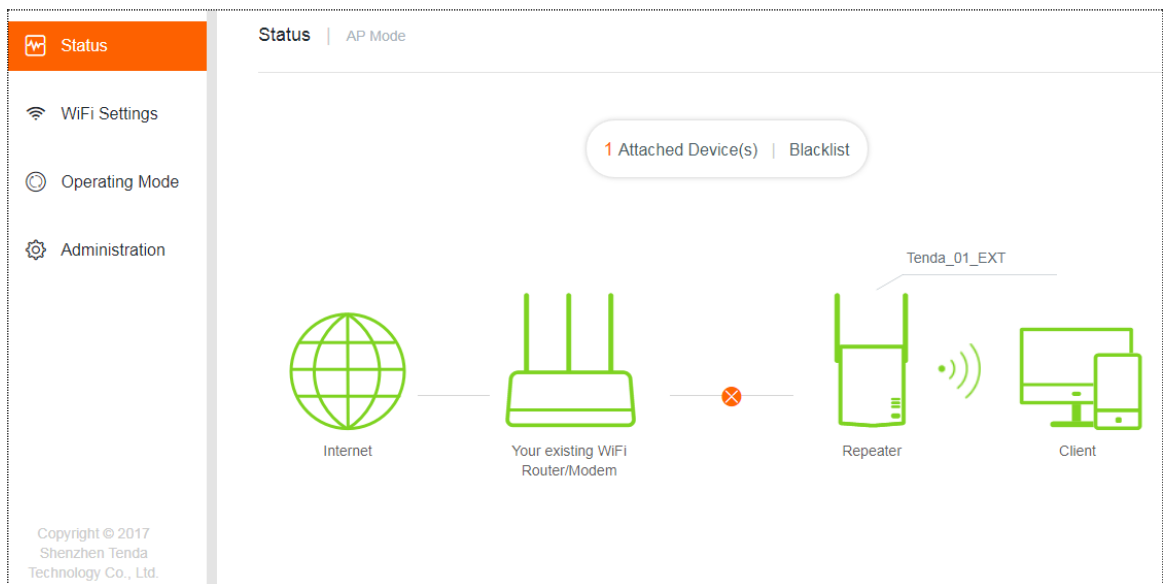

2. Use an Ethernet cable to connect the LAN port of your repeater to a LAN port of your existing WiFi router/modem. The following page appears.

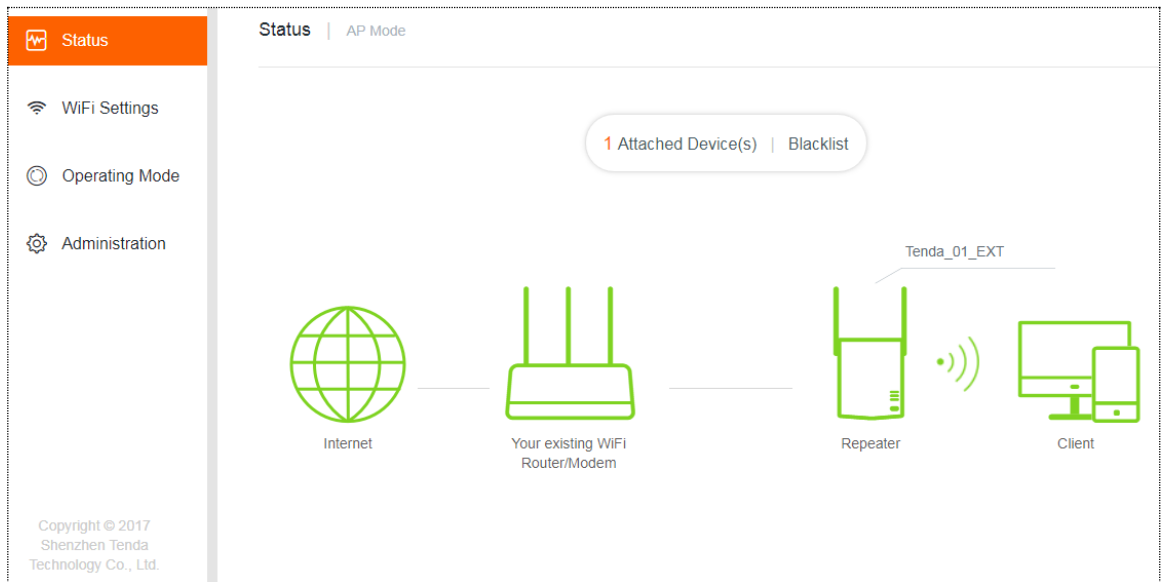

---End

Now, A301 works in AP mode.

3.5 Administration

This module allows you to set a login password, reboot or reset the repeater, export system logs, and upgrade the firmware.


The screenshot shows the 'Administration' page of a web interface. On the left is a sidebar with four menu items: 'Status', 'WiFi Settings', 'Operating Mode', and 'Administration' (which is highlighted with an orange background). The main content area is titled 'Administration' and contains a section for 'Set Login Password'. This section has three text input fields: 'Old Password', 'New Password' (with a placeholder hint 'Password (5 - 32 characters)'), and 'Confirm'. Each field has a small eye icon for toggling visibility. Below the password fields are four buttons: 'Reboot', 'Reset', 'Export Syslog', and 'Firmware Upgrade'. To the right of the 'Firmware Upgrade' button, the text 'Current Firmware Version: V15.13.07.09_multi' is displayed. At the bottom of the page are two buttons: a green 'Save' button and a white 'Cancel' button.

Set Login Password

- Step 1** Choose **Administration**.
- Step 2** In the **Old Password** text box, enter the current login password of the repeater.
- Step 3** In the **New Password** text box, set a new login password.
- Step 4** In the **Confirm** text box, enter the new login password again.
- Step 5** Click **Save** at the bottom of this page.

---End

The system will log you out automatically. You need to enter the new password to log in to the web UI of the repeater.

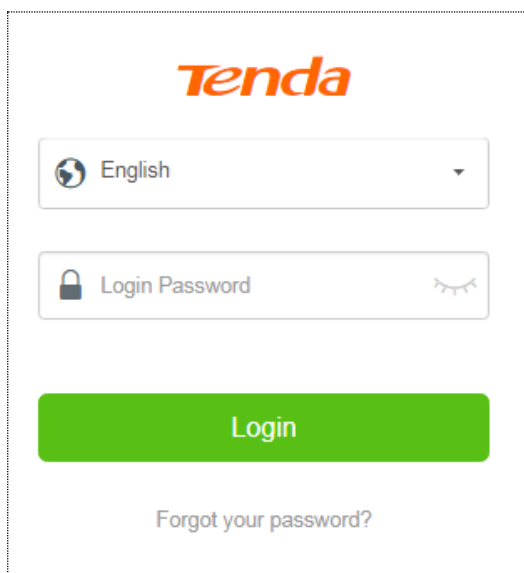The image shows the Tenda login page. At the top is the Tenda logo in orange. Below it is a language selection dropdown menu currently set to 'English'. Underneath is a login password field with a lock icon on the left and an eye icon on the right. A green 'Login' button is positioned below the password field. At the bottom, there is a link that says 'Forgot your password?'.

Reboot

You are recommended to reboot the repeater when the configured parameters do not take effect, or the repeater does not work properly.

To reboot A301, choose **Administration**, click **Reboot**, and then click **Reboot** on the dialogue box that appears.

The image shows a reboot confirmation dialog box. On the left, the word 'Reboot:' is displayed in orange. On the right, there is a large, light gray button with the word 'Reboot' in blue text.

Wait a moment until the progress bar is complete.

The image shows a progress bar indicating the reboot status. The text 'Rebooting...24%' is displayed in blue. Below the text is a horizontal progress bar with a green segment representing the 24% completion and a gray segment for the remaining 76%.

Reset

You are recommended to reset the repeater if you forget your login password, or you cannot find the problem that interrupts your repeater's WiFi network service.

To reset the repeater, use either of the following options:

Option 1:


With the PWR LED solid on, press the RESET button down using a paper clip. All LEDs blink once at the same time, and then light off. Wait about 40 seconds until the PWR LED lights solid on again. The repeater is reset successfully.

Option 2:

- Step 1** Log in to the web UI of the repeater, choose **Administration**.
- Step 2** Click **Reset** and follow the onscreen instructions to perform operations.

---End

Wait a moment until the progress bar is complete.

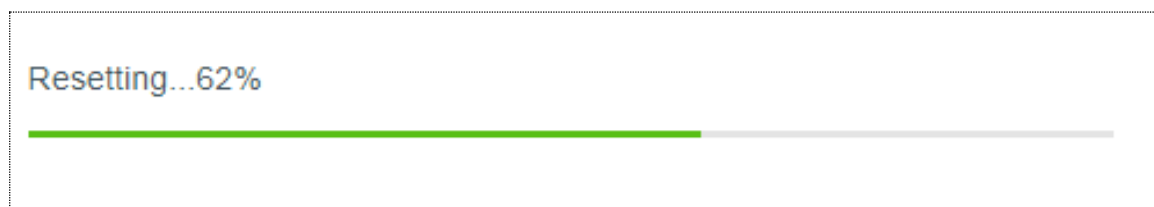

Export Syslog

System log records events happened since the repeater was started last time. You can export the system log if necessary.

How to export: Choose **Administration**, click **Export Syslog**.

A file named **syslog.tar** will be downloaded to your local computer.

Firmware Upgrade


You can go to www.tendacn.com to download the latest firmware for your repeater.




Do not power off the repeater during an upgrade. Otherwise, the repeater may be damaged. If a power failure occurs during an upgrade, perform the upgrade again. If you cannot access the web UI of the repeater after the power failure, contact the aftersales service for a repair.

Upgrade the repeater:

- Step 1** Go to www.tendacn.com, download the latest firmware package to your local computer, and decompress the package.
- Step 2** Log in to the web UI of the repeater and choose **Administration**.
- Step 3** Click **Firmware Upgrade** and choose the firmware file you have downloaded.

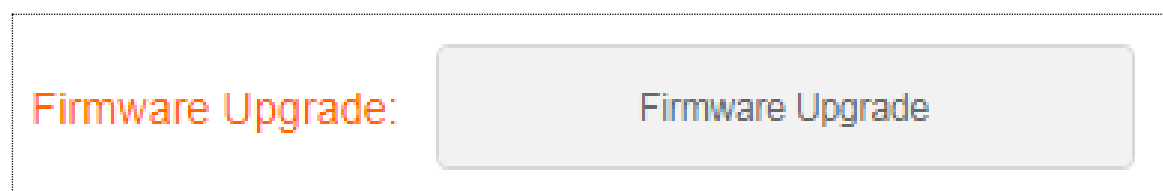


- Step 4** Click **OK** in the dialog box that appears.

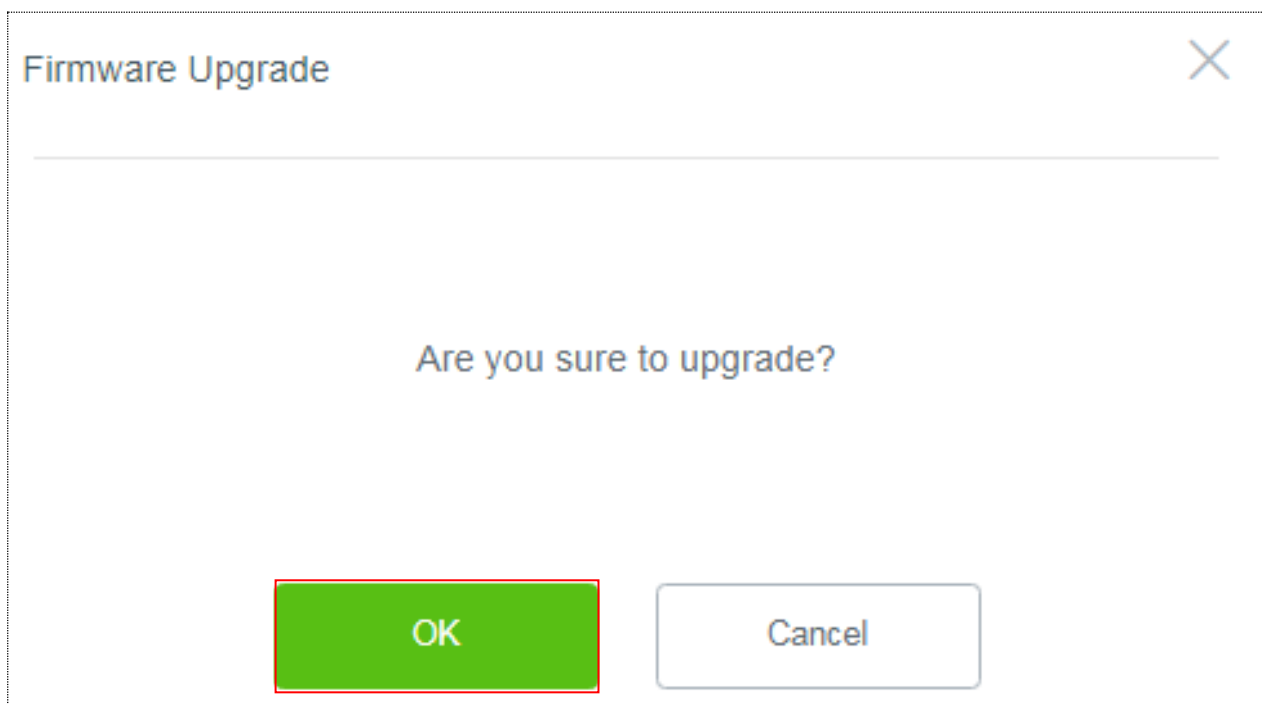

---End

Wait until the progress bar is complete. Log in to the web UI of the repeater, choose **Administration** and verify if the **Current Firmware Version** is the one you select to upgrade.

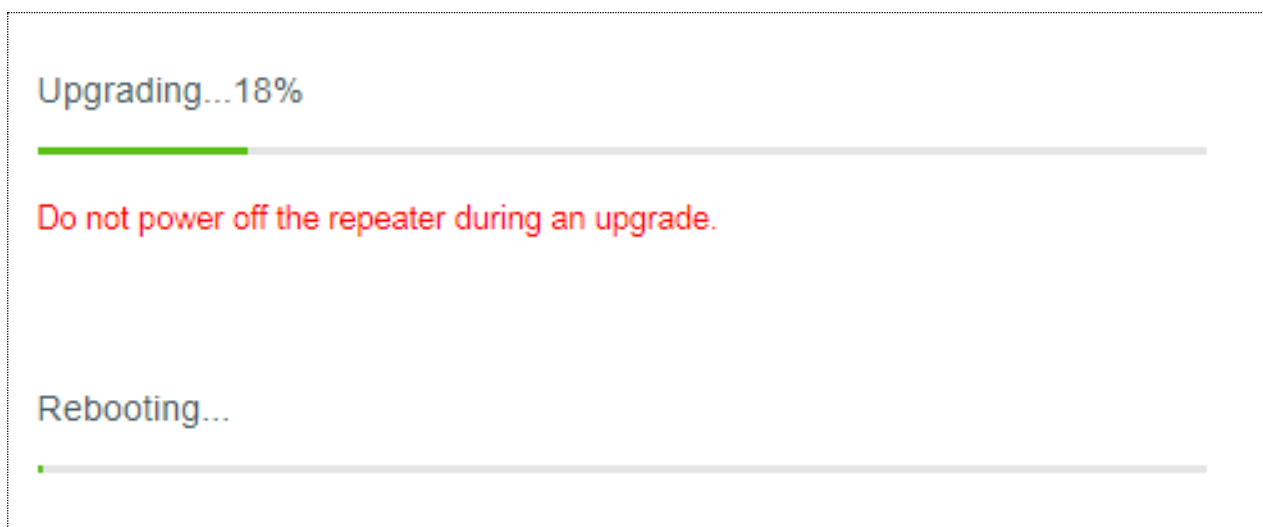

Appendixes

A.1 FAQ

Q1: I cannot log in to the web UI of the repeater. What should I do?

A1: Try the following solutions:

- If a mobile device is used, ensure that your mobile device has connected to the repeater's WiFi network **Tenda_EXT**, and the **Mobile Data** (if any) function is disabled.
- If a computer is used, ensure that your computer has connected to the repeater's WiFi network **Tenda_EXT**, and your computer has set to **Obtain an IP address automatically** and **Obtain DNS server address automatically**.
- Unplug the Ethernet cable connecting your computer to your existing router/modem.
- If **re.tenda.cn** does not work the first time you set up the repeater, try accessing **192.168.0.254**.
- Reset the repeater, and try again.

Q2: How to reset the repeater?

A2: With the PWR LED solid on, press the RESET button down using a paper clip. All LEDs blink once at the same time, and then light off. Wait about for 40 seconds until the PWR LED lights solid on again. The repeater is reset successfully.

Q3: The repeater cannot find the WiFi network of my router/modem. What should I do?

A3: Try the following solutions:

- Ensure that the WiFi network of your router/modem is enabled and can be detected by your WiFi device.
- Change the channel of your router/modem, and try again.
- Change the encryption type of the router/modem to WPA-PSK or WPA2-PSK, and try again.

A.2 Default Parameter Values

The following table lists the default parameter values of the repeater.


Parameter	Default Value
Login address	re.tenda.cn
Login password	None
Operating mode	Repeater mode
IP address	192.168.0.254 *After expanding the network of the WiFi router/modem successfully, the repeater obtains an IP address automatically from the DHCP server of the upstream device.
Subnet mask	255.255.255.0 *After expanding the network of the WiFi router/modem successfully, the repeater obtains an IP address automatically from the DHCP server of the upstream device.
DHCP server status	Enabled *It depends. If the repeater expands the network of the WiFi router/modem successfully, the DHCP server will be disabled. Otherwise, it will be enabled.
SSID	Tenda_EXT
WiFi Password	None
Blacklist	None

A.3 Configure Your Computer (Example: Windows 7)


Step 1 Click  in the lower-right corner of the desktop and choose **Open Network and Sharing Center**.




Step 2 Click **Change adapter settings**.

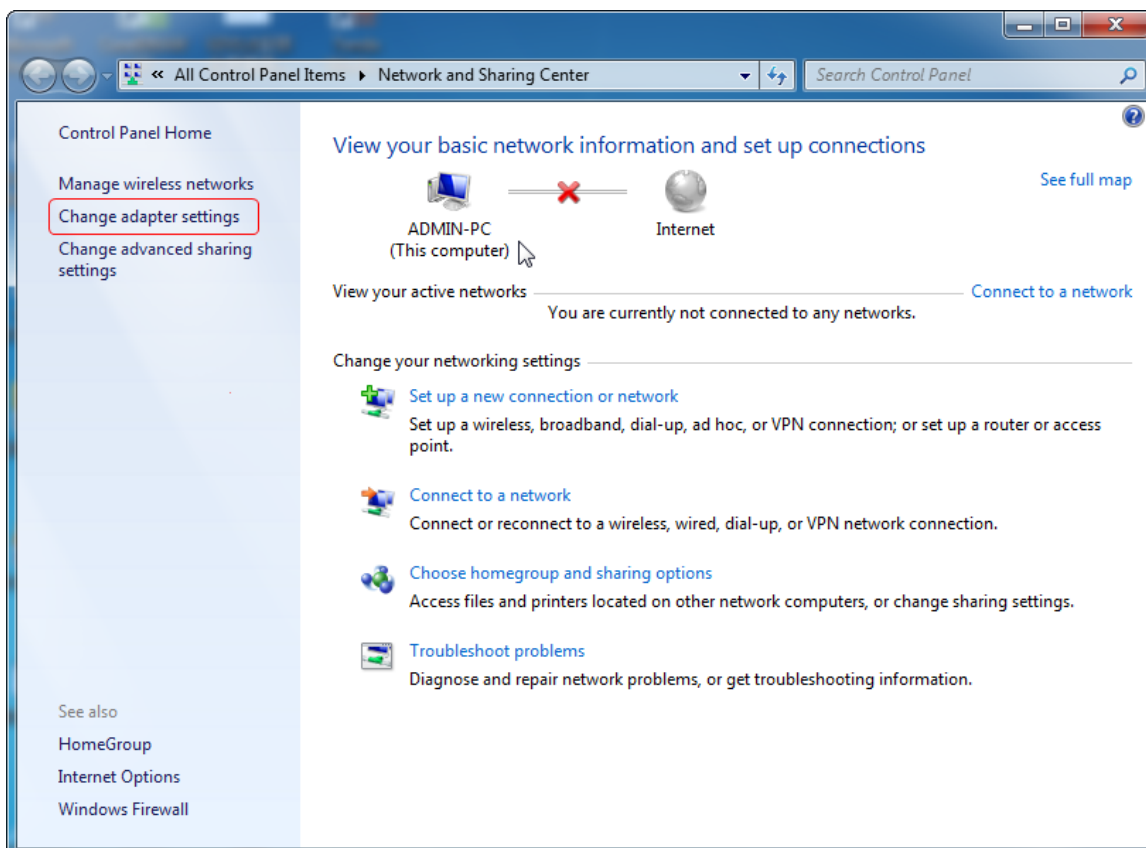


Step 3 Right-click **Wireless Network Connection**.

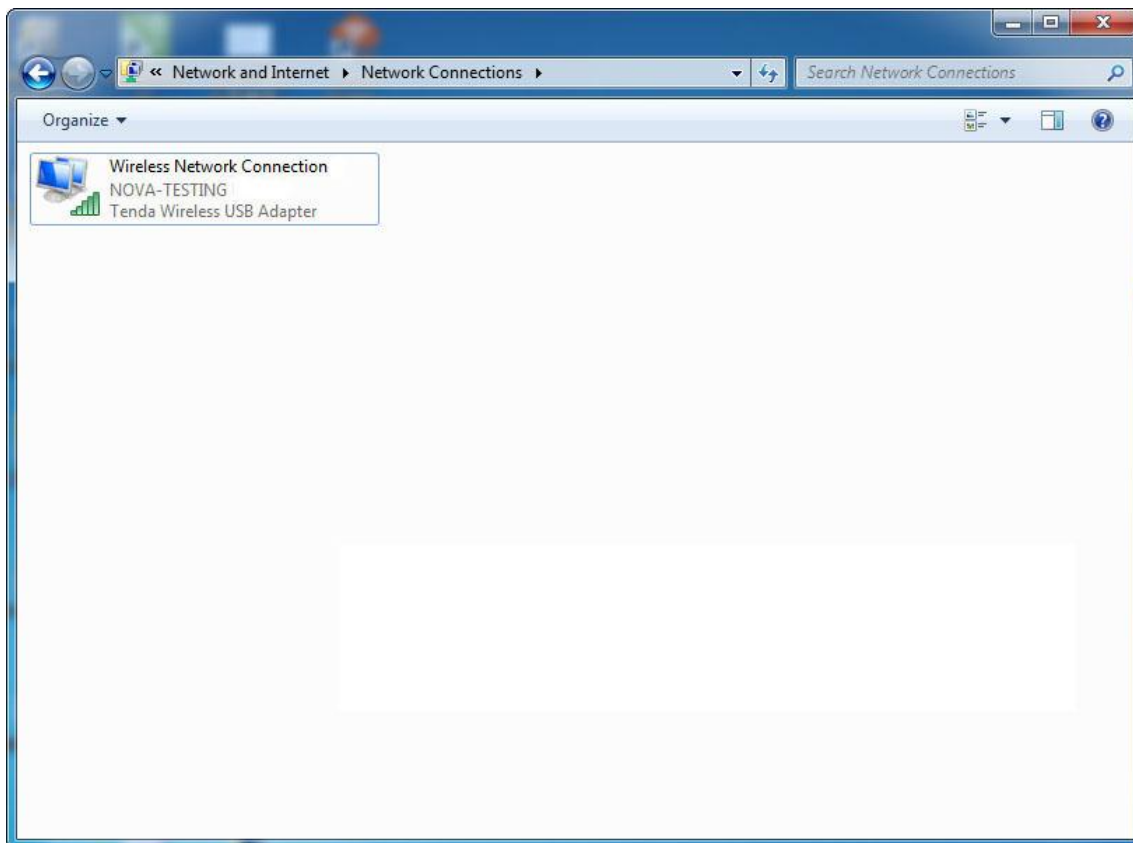


Step 4 Click **Property**.

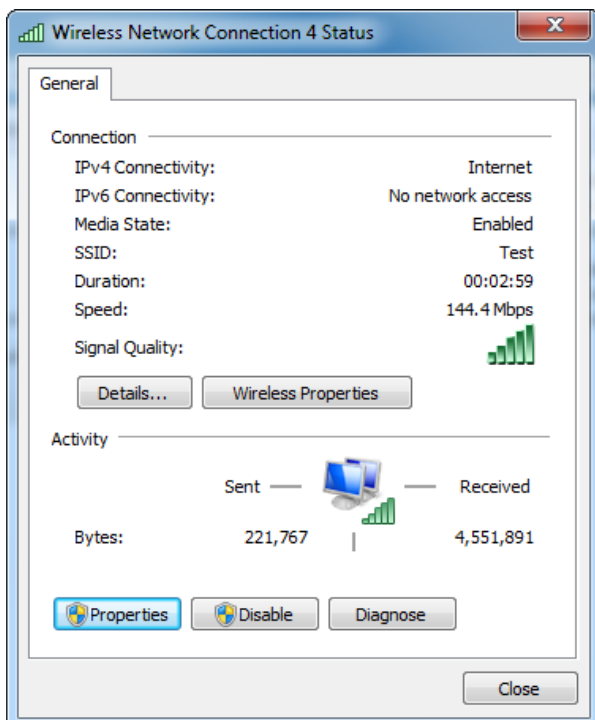

Step 5 Double-click **Internet Protocol Version 4 (TCP/IPv4)**.

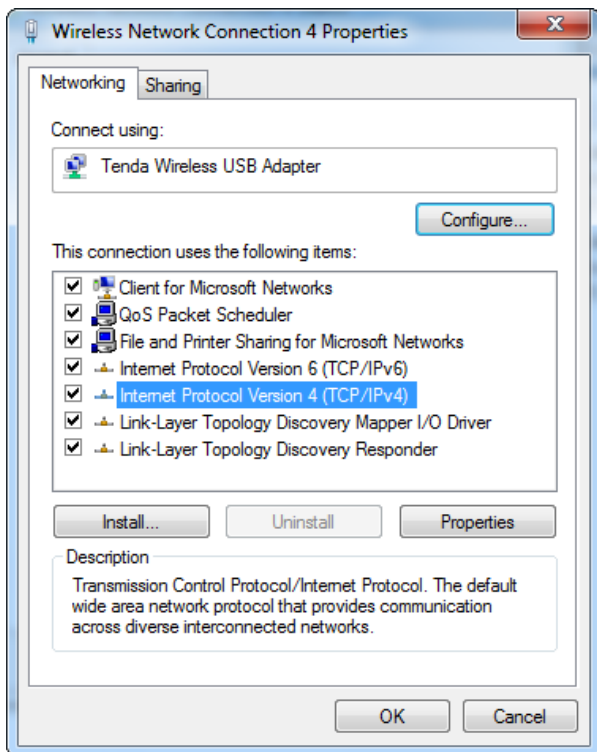

Step 6 Select **Obtain an IP address automatically** and **Obtain DNS server address automatically**, and click **OK**.

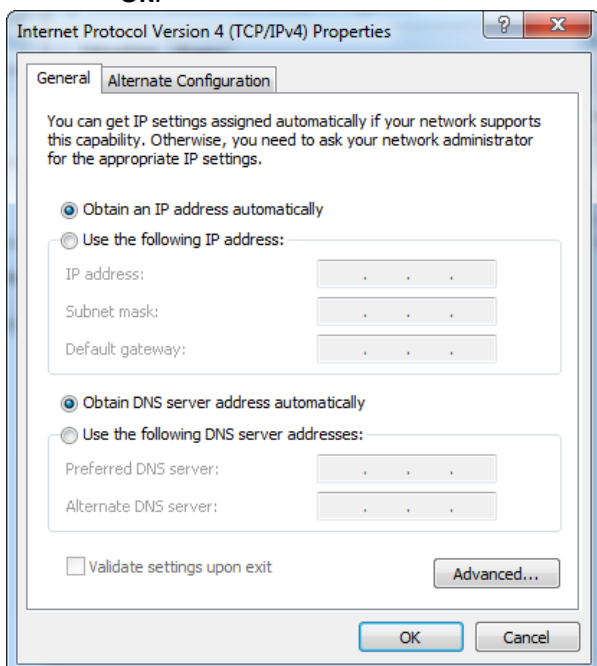

Step 7 Click **OK** in the **Internet Protocol Version 4(TCP/IPv4) Properties** window.

---End

Operating temperature: 0°C~40°C

Operating humidity: (10-90)% RH, non-condensing



RECYCLING

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.



CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

--for PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.

Declaration of Conformity

Hereby, SHENZHEN TENDA TECHNOLOGY CO., LTD. declares that the radio equipment type A301 is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:
<http://www.tendacn.com/en/service/download-cata-101.html>.

Operate Frequency:

2.4G: EU/2400-2483.5MHz (CH1-CH13)

EIRP Power (Max.):

2.4GHz: 19.5dBm

Software Version: V15.13.08.12



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

— Consult the dealer or an experienced radio/TV technician for help.

This device is restricted to be used in the indoor.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: (1) The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. (2) To avoid unnecessary radiation interference, it is recommended to use a shielded RJ45 cable.