

DVR 988HD

WiFi Action Camera

Dual Lens 360° View

User Manual



VIVITAR®

© 2016 Sakar International, Inc. All rights reserved.

Windows and the Windows logo are registered trademarks of Microsoft Corporation.

All other trademarks are the property of their respective companies.



CONTENTS

| | |
|--|----|
| Introduction | 2 |
| What's Included | 4 |
| Parts of the Camera | 5 |
| Initial Setup | 6 |
| CHARGING THE BATTERY | 6 |
| INSTALLING THE MICRO SD MEMORY CARD | 7 |
| POWERING ON – OFF / POWER SAVE | 8 |
| USING THE CAMERA | 8 |
| Main Camera Modes | 9 |
| Camera Mounts and Accessories | 10 |
| WIRELESS REMOTE | 10 |
| ASSEMBLING THE BICYCLE MOUNT | 11 |
| ASSEMBLING THE HELMET MOUNT | 11 |
| USING THE TRIPOD | 12 |
| Using Your Action Camera | 13 |
| POWERING ON YOUR CAMERA | 13 |
| CHANGING CAMERA MODE | 13 |
| Vivitar Experience Image Manager Software | 14 |
| COMPUTER SYSTEM REQUIREMENTS | 14 |
| INSTALLING THE SOFTWARE – USING THE CD ROM | 15 |
| INSTALLING THE SOFTWARE – USING THE ONLINE LINK | 16 |
| CONNECTING THE CAMERA TO THE COMPUTER | 17 |
| GETTING VIDEOS FROM THE CAMERA TO THE COMPUTER | 18 |
| GETTING STARTED! | 19 |
| TRANSFERRING IMAGES MANUALLY FROM THE CAMERA TO THE COMPUTER | 19 |
| Camera Maintenance | 21 |
| MEMORY CARD MAINTENANCE | 21 |
| DEVICE MAINTENANCE | 22 |
| Sakar Warranty Card | 23 |
| Technical Support | 24 |
| Troubleshooting | 24 |

Introduction

Thank you for purchasing the Vivitar DVR 988D HD Wi-Fi Action Cam with Dual Lens 360° View. Everything you need to take high definition digital videos and photos is included with your camera.

This unique, ultraportable camera design is adapted specifically for this camera and can be used to capture special moments in many different environments.

Vivitar makes capturing those special moments as easy as possible.

Please read this manual carefully first in order to get the most out of your digital camera.

NOTE:

- *Your digital action camera supports a Class 6 or higher Micro SD card with a capacity expansion up to 32GB.*

In order to use your digital action camera normally, please insert the Micro SD Memory card before use. Please format the Micro SD Memory Card before first use.

Micro SD Memory cards are not included and need to be purchased separately.

- *This camera is a plug and play device. You can download the pictures and videos without the software by directly accessing the camera's memory card from your computer. We would however recommend that you install the Vivitar Experience Image Manager software to enjoy the full Vivitar experience.*

What's Included




1. Wi-Fi Action Camera
2. USB Cable
3. Remote Control
4. Bicycle Mount
5. Helmet Mount with 3M Sticker
6. Tripod

NOTE:

Class 6- Class 10 Micro SD Memory Card (up to 32GB) needed for normal use.

Micro SD Memory Card not included.

Parts of the Camera

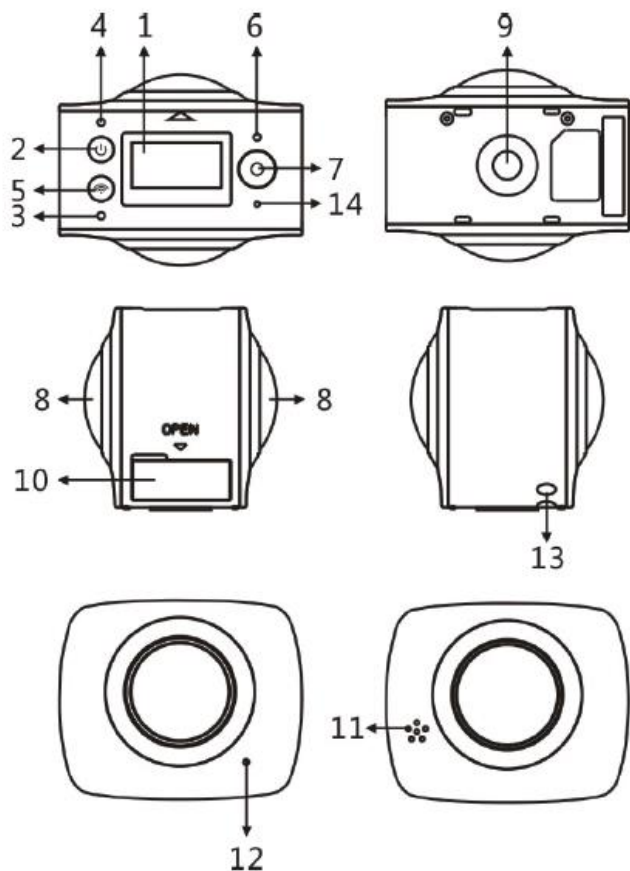

1. LCD Display
2. Power / Mode Button
3. Wi-Fi Indicator (red)
4. Power Indicator (red) /
Charging Indicator (blue)
5. Wi-Fi / Menu Button
6. Busy Indicator (red)
7. Shutter / OK Button
8. Lens X2
9. Tripod Socket
10. Interface Cover (USB/TF)
11. Speaker
12. Microphone
13. Hand Strap Connector Hole
14. Reset Hole

Initial Setup

CHARGING THE BATTERY

The camera includes a built-in lithium battery.

Use the supplied USB cable for camera charging.

Connect the USB cable from the camera to a power source, such as to the USB port of your computer.





While charging, the indicator light appears blue and remains on.

Once the camera is fully charged, the indicator light turns off.

NOTE:

- *If using an adapter for charging, check the output power before use to ensure it is within 5V/0.5A ~ 5V/2.0A.*
- *While the device is charging it cannot be used to capture images.*
- *Make sure the camera is powered off when recharging.*

BATTERY INDICATOR:


| Battery Indicator | Description |
|---|--|
|  | The battery level is full. |
|  | The battery level is half. |
|  | The battery level is low, indicating to prepare for recharging the built-in lithium battery. |
|  | The battery level is empty. Once the empty battery icon flashes on the LCD, this indicates that the battery level is completely exhausted and the camera automatically turns off after approximately 30 seconds. Please fully recharge the battery. |

INSTALLING THE MICRO SD MEMORY CARD

Make sure to install a **High Speed Class 6 or higher Micro SD Memory card**.

A Micro SD Card must be inserted into the camera as shown below before use.

Micro SD Memory card not included.

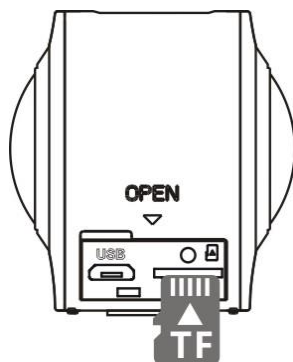

INSTALLING THE MEMORY CARD:

To properly insert the Micro SD Card, follow the instructions below:


1. Power off the camera.
2. Insert the Micro SD Card into the Micro SD Card slot in the direction as shown above.
3. Gently press the Micro SD Card until you hear a slight clicking sound. This indicates the memory card has been inserted correctly.
4. To remove the card, gently press on the edge of the card to release it and pull the card out.

IMPORTANT:

- *Please power the camera off before inserting or taking out the memory card.*
If the card is inserted or removed while the camera's power is on, it may damage the card and/or any recorded data. Always confirm that the power is off before inserting the card into the camera.
- *Make sure there is room on the Micro SD Memory Card for additional images. If the Micro SD Memory Card is full, additional images will not be added to the memory card.*


POWERING ON – OFF / POWER SAVE

TO POWER ON THE CAMERA:

Press and hold the  **Power** button for about 2 seconds and release when a beep is heard and the LCD screen turns on.



TO POWER OFF THE CAMERA:

1. Press and hold the  **Power** button for about 3 seconds and release.
2. The LCD displays “GOODBYE” and turns off.

POWER SAVE:

Your camera also has an auto power off feature that automatically turns off your camera after a specific period of time that your camera is left idle. The auto power off settings can be set from the ‘Power Save’ Camera Settings menu.

USING THE CAMERA


Short press the **POWER/MODE** button to select the mode.

Long press the **WiFi** button to open Settings.
Short press to activate WiFi.



Press the **Shutter** button to capture your videos and photos.

Main Camera Modes

Short press the  **Power/Mode** button to toggle between the camera modes.



Video Capture Mode

Use this mode to capture videos with your digital camera.



To record a video, please check that the camera is in Video Mode. If the  video icon is not displayed on the LCD screen, short press the **Power/Mode** button until it appears. To start recording, press the **Shutter/OK** button. Press the **Shutter/OK** button again to stop recording. The video is automatically saved to your camera's memory card.



Photo Capture Mode


Use this mode to capture pictures with your camera.

To take a photo, please check that the camera is in Photo Mode. If the  photo icon is not displayed on the LCD screen, short press the **Power/Mode** button until it appears. Press the **Shutter/OK** button to capture your photo. The picture is automatically saved to your camera's memory card.

Camera Mounts and Accessories

It is strongly recommended to use the supplied accessories. It helps to create a better product experience and better shooting/recording effect.

WIRELESS REMOTE

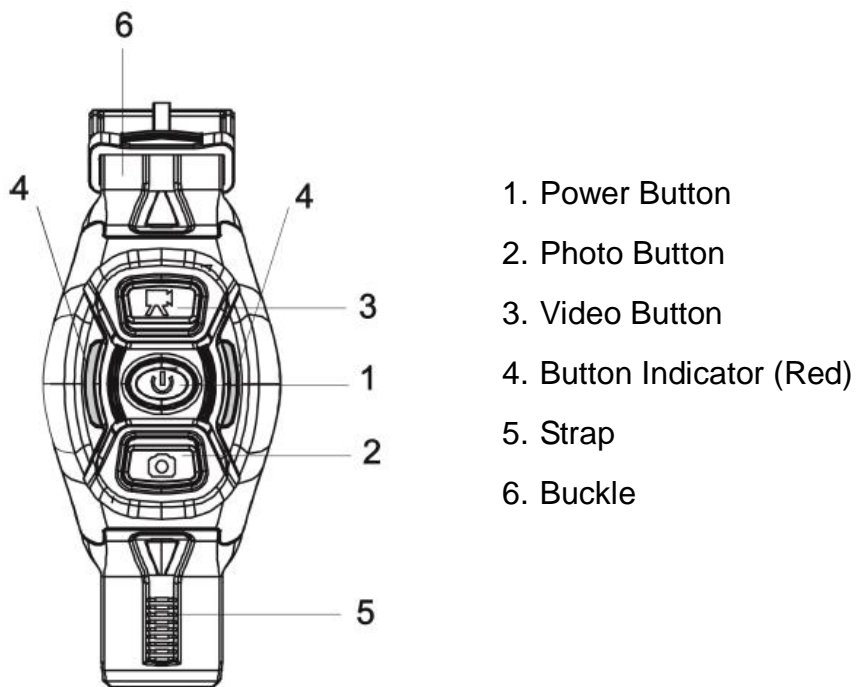


The remote control allows you to power on/off the DV and to take photos or videos from 30M away without operating on DV directly. Just press the button for the desired function.

Note: Press any button the indicator lamps at both sides will light in red at the same time.


Using the action camcorder by remote control:

1. Press and hold the **Power** Button until the indicator goes off, and the DV turns on.
2. Press the **Video** Button after the camcorder powers on. The recording starts automatically. To stop the recording, press the **Video** Button again.
The video will be saved to the memory card automatically.
3. To take photos by remote control, just press the **Photo** Button. The photo will be saved to the memory card automatically.
4. To turn off the camera, press the **Power** Button again.

ASSEMBLING THE BICYCLE MOUNT

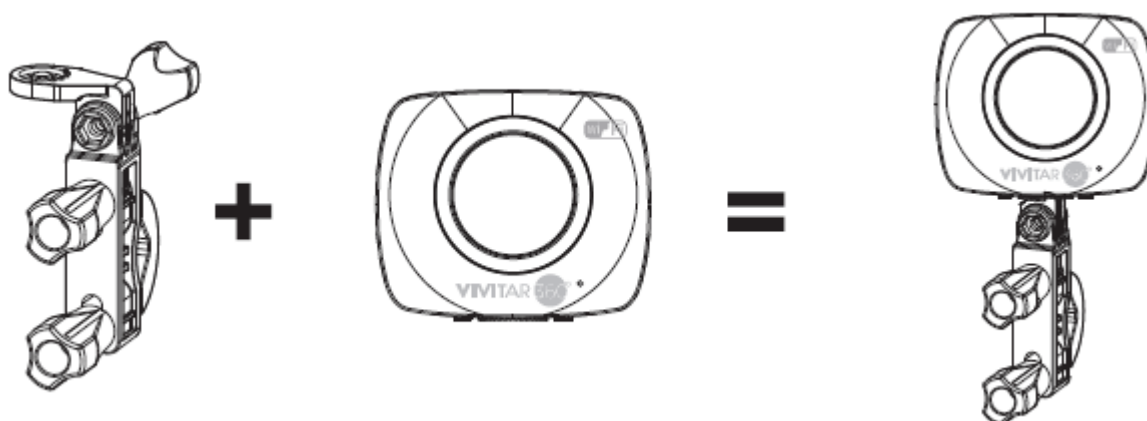

ASSEMBLING THE HELMET MOUNT

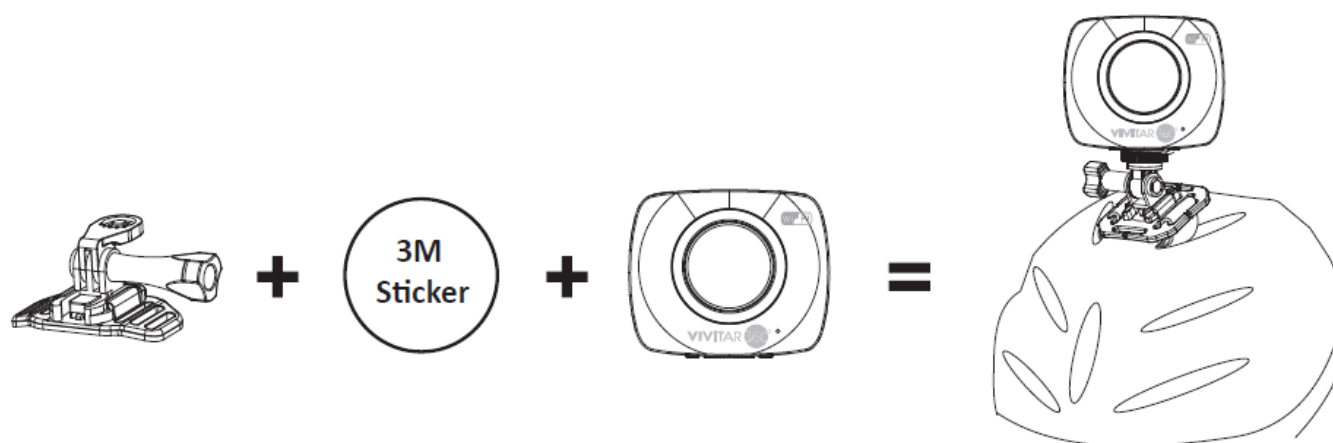


USING THE TRIPOD


Screw the tripod nut attached into the tripod socket on the bottom of the camera.

It serves both as a hand-held or fixed device.

Fix to use tripod

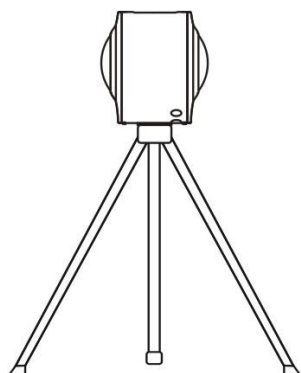


Hold to use tripod

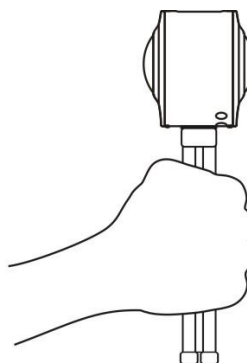


Using Your Action Camera

POWERING ON YOUR CAMERA

1. Press and hold the  **POWER** button for about 2 seconds and then release the button to turn on the camera.

The LCD screen briefly displays the 'VIVITAR' screen and opens to the Video Capture Mode.

2. Press and hold the  **POWER** button again for about 3 seconds to turn the power off.
The LCD screen briefly displays 'Goodbye' and then powers off.

CHANGING CAMERA MODE

CAMERA MODES

1. **Video Capture Mode** - Use this mode to capture videos with your camera.
2. **Photo Capture Mode** - Use this mode to capture photos with your camera.

SWITCHING MODES

After turning on the camera, short press the  **POWER/MODE** button to switch between the modes.



When in Video Capture Mode - This icon will display on the top-left corner of the LCD display.



When in Photo Capture Mode, this icon will display on the top-left corner of the LCD display.

- In Video Capture Mode, press the **SHUTTER** button to start recording and press it again to stop.
- In Photo Capture Mode, press the **SHUTTER** button to take photo.

Vivitar Experience Image Manager Software

COMPUTER SYSTEM REQUIREMENTS

To be able to download videos and photos to your computer using the 'Vivitar Experience Image Manager' Software, you will need the following minimum configuration:

WINDOWS OS

- MICROSOFT® Windows XP with Service Pack 3, Windows Vista with Service Pack 1 or Windows 7
- Pentium® 4 processor (or above)
- 1 GB RAM, 250 MB available hard disk space
- 16-bit Color monitor, 1024 X 768 recommended screen resolution
- CD-ROM Drive
- QuickTime® 6 or higher
- MICROSOFT® Internet Explorer 7 or higher
- Windows Media Player 10 or higher
- DirectX 9 or higher
- Internet connection required

MACINTOSH OS

- Intel processor running MACINTOSH OS X v10.5.x or later
- 1 GB RAM, 250 MB available hard disk space
- Display: 1024 x 768 or higher-resolution monitor
- QuickTime® 6 or higher
- CD-ROM Drive
- Internet connection required

NOTE: Make sure the latest compatible Adobe® Flash® Player is installed on your computer.

INSTALLING THE SOFTWARE – USING THE CD ROM

You must be connected to the Internet to install and run the Vivitar Experience Image Manager Software.

1. Insert the installation CD into your CD-ROM drive. The installation screen should automatically open.



2. On WINDOWS OS: The Vivitar Experience Image Manager Installer window appears. If the window does not appear, open the application's CD/DVD drive and click on "Setup.exe" to launch the installer.
3. On MACINTOSH OS: Click the icon that appears on the desktop to install the Vivitar Experience Image Manager.
4. If you do not have internet access at the time of inserting the CD-ROM, connect to the internet and then click the "Install Vivitar Experience Image Manager" button to begin the installation.



NOTE: If you do not have internet access, you can still download media from the camera. Click the "How to transfer photos and videos from my camera to my computer" button for instructions.

5. If you have internet access, the “Choose your language” window opens, choose your language and click “Next” to open the next window.
6. Select your camera model from the list and click “Next” to open the next window.
7. Click “Next” to confirm your camera model selection and to install the application.
8. Please wait while the application is being installed on your computer.
9. Please review the license terms.

On WINDOWS OS and Macintosh: Click the “I accept the terms of this license agreement” and then click “Next” to continue.

10. On WINDOWS OS only: Let the “Vivitar Experience Image Manager” installer create the folder to where the program will be installed, and then click “Install”.

11. Please wait while the application continues the installation process on your computer.

On MACINTOSH OS: If needed, please follow instructions to install the Adobe® Flash® Player. This requires Internet connection.

12. On WINDOWS OS: Click the “Close” button when the installation is complete.

Click the “Launch Vivitar Experience Image Manager” to open the application.

13. On MACINTOSH OS: Click the “Quit” button when the installation is complete.

Click the “Launch Vivitar Experience Image Manager” to open the application.

14. If you close the application you can run the Vivitar Experience Image Manager from the Programs (PC) or Applications (Mac) menu on your computer.



INSTALLING THE SOFTWARE – USING THE ONLINE LINK

The Vivitar Experience Image Manager Software can also be downloaded and installed via the following online links:

WINDOWS OS: <http://tinyurl.com/viviwin>

MAC OS: <http://tinyurl.com/vivimac>

1. Enter the appropriate URL (shown above) into a web browser on your computer.
2. The file for installing the software automatically begins to download to your computer.

Please note that the web page appears empty, however the download automatically begins.

3. Locate the downloaded application files on your computer's 'Downloads' folder once the download is complete:

On WINDOWS OS the file name is: **vivitargeneric_win.exe**

ON MAC OS in file name is: **vivitargeneric_mac.pkg**

4. Double click on the downloaded application file to install the Vivitar Experience Image Manager Software.
5. Follow all instructions
6. Once installation is complete, the Vivitar Experience Image Manager opens automatically.

CONNECTING THE CAMERA TO THE COMPUTER

1. Use the supplied USB cable to connect your camera to your computer.
2. Power the camera ON.
3. The first time you connect the device to the computer you may have to wait a few seconds until the computer recognizes the device.

GETTING VIDEOS FROM THE CAMERA TO THE COMPUTER

The Micro SD Memory card needs to be inserted. Do not disconnect the cable during transfer. Doing so will cancel the transfer of any files on their way to your computer.

1. Select the “Get Images” button from the Main menu.



2. The “Get media from device” window opens.
3. You can select to download videos.
4. Select your camera (removable disk) from the device window. If your camera is the only USB device connected then it will be selected automatically.
5. Select a location on the computer where to place the new video files.
6. Add the new video files to albums if desired.
7. Select to remove the media files from the selected device (removable disk) after the import.
8. Click the “Get Media” button to transfer the videos from your camera to your computer.
9. A media download progress bar appears on the bottom left showing the number of media files downloading to your computer. A message appears when the download is complete.
10. The video files that you selected are now downloaded to your computer to the selected folder ready for your use.

GETTING STARTED!

Using the Vivitar Experience Image Manager you can:

- Upload and manage videos to and from the most popular photo sharing and social networking sites - Facebook, Flickr, Picasa, MySpace, Photobucket, Twitpic, Twitgoo and YouTube
- Seamlessly transfer videos from one social network to another
- Organize your images by creating offline and online albums
- Edit images using automatic and manual tools
- Use automatic “Geotagging” with built in Google Maps

For more details on how to use the Vivitar Experience Image Manager open the Help file or click the “Take a Tour” button on the application’s Home screen.

TRANSFERRING IMAGES MANUALLY FROM THE CAMERA TO THE COMPUTER

WINDOWS OS

1. Use the supplied USB cable to connect your camera to your computer’s USB port.
2. Power on the camera.
3. A window appears on your computer with a list of options, select “Open folder to view files” and click ‘OK’.
4. Open the DCIM folder and the folder inside to view the media files.
5. Select the media and copy the files from this folder into your computer. Optionally, select the files and choose ‘Copy’ from the Edit menu. Then select a folder and choose ‘Paste’ from the Edit menu.
6. We recommend that you copy the photos into the Pictures/My Pictures folder and the videos into the Videos/My Videos folder.
7. Do not disconnect the cable during transfer. Doing so will cancel the transfer of any files on their way to your computer.

MACINTOSH OS

1. Use the supplied USB cable to connect your camera to your computer's USB port.
2. Power on the camera.
3. The camera's device icon appears on the desktop.
4. Click on the device icon and open the DCIM folder and the folder inside to view the media files.
5. Select the files and drag them into your computer. Optionally, select the files and choose 'Copy' from the Finder's Edit menu. Then select a folder and choose 'Paste' from the Edit menu.
6. We recommend that you copy the photos into the Pictures folder and the videos into the Movies folder.
7. Do not disconnect the cable during transfer. Doing so will cancel the transfer of any files on their way to your computer.

TRANSFERRING PHOTOS AND VIDEOS: APPLE IPAD

NOTE: Please check your device packaging for compatibility with the iPad.

Apple iPad Camera Connection:

For models that are compatible with the iPad, photos and videos can be imported from your digital camera to your iPad by following either one of the options below:

1. Connecting your digital camera to your iPad using an iPad Camera Connector:
2. Plug the Camera Connector into the dock connector port on your iPad, then attach your digital camera using a USB cable (included) to the Camera Connector.
3. **NOTE:** iPad Camera Connector not included. This may be purchased separately.
4. Using an iPad SD Card Reader:

Connect the SD Card Reader to your iPad, then insert your digital camera's Micro SD Memory card into the slot to import photos and videos directly from your camera's SD card.

NOTE: iPad SD Card Reader not included. This may be purchased separately.

After you make the connection, your iPad automatically opens the Photos application. This allows you choose which photos and videos to import, then organizes them into albums.

Camera Maintenance

Please read the information below carefully before using your camera for proper and safe operation, so as to use the camera to its fullest and maintain its performance.

MEMORY CARD MAINTENANCE

- For the first time of using a new memory card, or when there is unrecognized data for the camera or images with other cameras in the memory card, please make sure to firstly format the memory card.
- Note: Please back up the data if the memory card inside has been previously used. After that, format the memory card of this video camera.
- Please power the camera off before plugging in or taking out the memory card.
- Keep the memory card clean and prevent it from contacting liquid. In case of liquid contacted, clean and dry it with a piece of soft cloth.
- In case of idle use, please keep the memory card in a guard staple.
- Please note that the memory card will get hot after long-term use. This is normal.
- It is recommended to backup the important data from your memory card to other media such as soft disk, hard disk or CD.
- To ensure image quality, minimum **Class 4 High-Speed card** is needed.
- The following situations may cause loss or damage of the data on your memory card:
 1. Improper use of the memory card.
 2. The memory card has been bent, dropped or collided.
 3. The memory card has been placed under high temperature or moist environment or expose to sunshine directly.
 4. Electrostatic or electromagnetic field exists around the memory card.
 5. The memory card has been taken out or the power supply interrupted while the camera or computer is connected to the memory card (i.e. during reading, writing and formatting).
 6. Taking out the memory card while powering off, while recording, deleting (formatting) or reading.
 7. Do not touch the metal contact surface of the memory card with fingers or metal materials.
 8. The service life of the memory card has expired (please replace the memory card regularly).

DEVICE MAINTENANCE

- Take good care of the video camera and prevent water or sand particles from entering the video camera when it is used on the beach or near water. Please note that water, sand particles, dust or component containing salt may damage the video camera.
- Keep the video camera free of dust and chemical materials. Place it in a cool, dry and well ventilated place. Do not place the video camera in a high temperature, moist or dusty place.
- If dirt or stains accumulate on the video camera or on its lens, use a soft, clean and dry rag to wipe it away gently. If the video camera or its lens is stained with sand particles, blow them away gently. Do not use cloth to wipe arbitrarily. Otherwise, it may scratch the surface of video camera or its lens.
- Do not touch the lens surface with fingers.
- If it is required to clean the camera surface, first blow away the sand dust accumulated on the surface, and then wipe the camera gently with a rag or tissue appropriate for optical equipment. Please use a cleaning agent specifically for a video camera when wiping if necessary. Do not use organic solvent to clean the video camera.
- The digital camera is a delicate device:
 1. Please handle your camera with care to avoid damaging it.
 2. Do not expose your camera to heat sources.
 3. Do not use you camera in wet or moist conditions without the waterproof casing.
 4. Use proper protective cover to avoid lens and display from being scratched.

Sakar Warranty Card

This warranty covers for the original consumer purchaser only and is not transferable. Products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship will be repaired at no charge for parts or labor for a period of one year from the time of purchase.

What Is Not Covered By Warranty:

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

What to Do When Service Is Required:

When returning your defective product (postage pre-paid) for service, your package should include:

1. Copy of **original** bill of sale.
2. A detailed written description of the problem.
3. Your return address and telephone number (Daytime).

MAIL TO ADDRESS BELOW:

| | | |
|---|--|---|
| Sakar US Sakar International Attention: Service Department 195 Carter Drive Edison, NJ 08817 | Sakar UK/Europe Attention: Service Department 2D, Siskin Parkway East 4020 Middlemarch Business Park Coventry, CV3 4SU | Sakar Australia Return faulty camera to the Refund Counter at the store where purchased |
|---|--|---|

Technical Support

For technical support issues please visit our website at **www.vivitar.com**. You can find manuals, software and FAQ's at the website. Can't find what you are looking for? E-mail us at **support@vivitar.com** and one of our technical support team members will answer your questions. For phone support in the US please call 1-800-592-9541, in the UK call 0800 917 4831, in Australia call 1800-006-614. If you would like to call from anywhere else, please visit **www.vivitar.com** for your local toll free number.

Troubleshooting

Q: I have taken photos and selected the "Get Images" button. I get a message that the images were successfully transferred but the photos do not appear on my computer. What do I do?

First ensure that you have in fact taken photos. Press the Shutter button to take some sample photos or videos and then try downloading them again.

If the photos are saved to the SD memory card then all the photos should appear.

Q: How do I make sure I don't lose important pictures?

This camera requires a Micro SD card for normal use. If the camera powers off nothing will happen to the images stored on the memory card. We recommend always downloading your photos and videos to your computer as soon as possible to prevent unintentional data loss.

Q: I deleted images using the Vivitar Experience Image Manager. The images were also deleted from my computer. How do I recover images that I accidentally deleted?

All images deleted using the Vivitar Experience Image Manager are sent to your computer's Recycle or Trash Bin and can be retrieved from there.

DVR794SHD_1.0_111115-TA_FW1.00