



True Wireless Earbuds with Charging Battery Case

NE-977



Instruction Manual
Please read before operating product

Table of Contents

Introduction.....	3
Package Contents.....	3
Safety Instructions.....	4
How to Use.....	6
Specifications.....	11
Support.....	13

Introduction

Congratulations, and thank you for choosing Naxa's True Wireless Bluetooth® Earbuds & Charging Case. This manual will help you operate your new device, but first you should familiarize yourself with the Bluetooth functionality of your mobile phone or other external devices before using the Naxa True Wireless Bluetooth® Earbuds & Charging Case.

Package Contents

- NE-977
- USB Charging Cable
- Instruction Manual


Safety Instructions

Before using the device, read the operating instructions very carefully. Keep this operation manual for later reference.

1. Do not use an appliance for any purpose other than its intended use.
2. Warning: Do not expose the appliance to extreme temperatures, to strong temperature fluctuations, direct sunlight or humidity.
3. To prevent any potential auditory damage, do not listen to music at high volumes for long periods.
4. No naked flame sources, such as lit candles, should be placed on the appliance.
5. This appliance should be used in temperate climate only.
6. Electric and electronic equipment should be disposed of separately. Do not discard used electric and electronic equipment with unsorted municipal waste but have them collected separately.
7. Attention should be drawn to the environmental aspects of battery disposal.
8. The appliance contains a battery or batteries that are non-replaceable.

9. Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
10. The battery must be removed from the appliance before it being disposed of properly.
11. Only remove the rechargeable battery when you intend to dispose of the appliance. Have the rechargeable battery removed by trained professionals.
12. **CAUTION!** Risk of explosion if battery is replaced by an incorrect type of battery.
13. Dispose of used batteries according to the instructions

How to Use

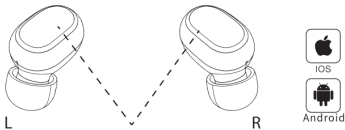

Function button

TWS headphones

No fixed master-slave, master-slave automatic switch, any connection phone mainly headsets.

Bluetooth music

Support connected bluetooth devices and supports the double channel stereo hi-fi music playing.

Ear phone

Support the TWS ears

Power indicator

Support iOS and part of the android mobile phone battery indicator

TWS Operation

1. Remove the earphones from the charging case
2. Press and hold the Multifunction button on both earbuds for 3 seconds until you hear the beep prompt and the blue and red LEDs start to blink alternately on both earbuds (Pairing Mode)
3. The TWS earbuds will pair with each other automatically after powering on, the blue and red LEDs keep blink alternately on one side, and another side will become blue LED blink slowly (Paired between TWS earbuds).

Bluetooth® Operation

To use your Bluetooth ® headset, you must first pair the TWS with a mobile phone. Once your Bluetooth® headset is paired with a mobile phone, they will remain paired and automatically recognize each other whenever they are within range.

1. Turn on your phone and ensure the Bluetooth function is activated.

2. Turn on the earbuds, they will flash red and blue to signify discovery mode, and initiate a device search on your phone via the Bluetooth settings menu.
3. Search the Bluetooth® devices on your phone by following the phone's instructions. Refer to your phone's user manual for more information.
4. After a few seconds the phone will list the "NAXA NE-977" as a discovered device. Select it and follow your phone's instructions to establish a connecton.
5. After a successful connection, the blue light will blink slowly and a beep prompt will notify you that a connection has been established.

Playback

1. To play a song through your bluetooth earbuds from your mobile phone, press the multi-function button once.
2. To pause playback, press the multi-function button once again.

Answering Calls

1. To answer incoming calls, briefly press the multi-function button.
2. To end a call, briefly press the multi-function button again.
3. To reject an incoming call, press and hold the multi-function button for 2 seconds.
4. To redial a number, press the multi-function button twice.

Earbud Settings

1. In order to restore the earbuds back to factory settings, rapidly press the multi-function button 6 times.

Charging Earbuds

1. Place earbuds into charging case and press the power button inside the case to begin charging.
2. The LEDs will show the charging status of the earphones: Red – charging, Blue – fully charged.

Charging Case

When fully charged, the case provides 2.5 full charge to the earphones.

1. Insert the micro-USB connector into the micro-USB charging port on the back of the case.
2. Connect the USB-A plug on the cable into your computer or a USB power adapter plugged into a wall socket.
3. The LED on the charging case will show the charging status of the case:
White and blinking – charging
White steady – fully charged
4. Disconnect the USB cable when charging is complete.

Specifications

Bluetooth® Version: 5.0

Charging Interface: Micro-USB

Power Input: DC/5V, 0.5A

Working Distance: Up to 33 Ft.

Earbuds Battery Capacity: 40mAh/3.7V

Support: A2DP/AVCTP/AVDTP/AVRCP/HFP

Music Time: Up to 3 Hours

Charging Time: 1-2 Hours (Case), 1-1.5 Hours (Earbuds)

FCC Notice

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment

generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications.However, there is on guarantee that interference, will not occur in a particular installation.if this equipment does cause harmful interference to radio or television reception reception,which can be-terminated by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS

Any changes or modications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

Support

If you have problems with your device, please consult the instructions in this manual. Please also visit us on the web at www.naxa.com to get up to the minute news, alerts, and documentation for your device. For additional assistance, please contact Naxa Technical Support.

NAXA Technical Support

2320 East 49th St.

Vernon, CA 90058

http://www.naxa.com/naxa_support/

MADE IN CHINA