



# Smart Current Transformer

Featuring LoRaWAN®

**CT3xx**

User Guide



## Safety Precautions

Milesight will not shoulder responsibility for any losses or damages resulting from not following the instructions of this operating guide.

- ❖ The device must not be modified in any way.
- ❖ The installation and maintenance must be conducted by a qualified service person and should strictly comply with the electrical safety regulations of the local region.
- ❖ Do not overload the maximum capacity to avoid damage to the device.
- ❖ The device is intended only for indoor use. Do not place the device where the temperature is below/above the operating range.
- ❖ Do not place the device close to objects with naked flames, heat source (oven or sunlight), cold source, liquid and extreme temperature changes.
- ❖ Keep the device away from water to prevent electric shock.
- ❖ Use the device opening clean and free of dust before installation. Dusty or dirty environments may prevent the proper operation of this device.
- ❖ Do not drop the device or subject it to physical shocks and strong vibration.

## Declaration of Conformity

CT3xx is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.



**Copyright © 2011-2024 Milesight. All rights reserved.**

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Xiamen Milesight IoT Co., Ltd.



For assistance, please contact  
Milesight technical support:  
Email: [iot.support@milesight.com](mailto:iot.support@milesight.com)  
Tel: 86-592-5085280

Fax: 86-592-5023065  
Address: Building C09, Software Park III,  
Xiamen 361024, China

Revision History

| Date        | Doc Version | Description     |
|-------------|-------------|-----------------|
| Jun 6, 2024 | V1.0        | Initial version |

# Contents

|                                                               |    |
|---------------------------------------------------------------|----|
| 1. Product Introduction .....                                 | 5  |
| 1.1 Overview .....                                            | 5  |
| 1.2 Features .....                                            | 5  |
| 2. Hardware Introduction .....                                | 5  |
| 2.1 Packing List .....                                        | 5  |
| 2.2 Hardware Overview .....                                   | 6  |
| 2.3 Button and LED Indicator .....                            | 6  |
| 2.4 Dimensions (mm) .....                                     | 6  |
| 3. Operation Guide .....                                      | 7  |
| 3.1 USB Configuration .....                                   | 7  |
| 3.2 LoRaWAN Settings .....                                    | 8  |
| 3.3 General & Alarm Settings .....                            | 11 |
| 3.4 Maintenance .....                                         | 12 |
| 3.4.1 Upgrade .....                                           | 12 |
| 3.4.2 Backup .....                                            | 13 |
| 3.4.3 Reset and Reboot .....                                  | 13 |
| 4. Installation .....                                         | 14 |
| 4.1 Device Assembly .....                                     | 14 |
| 4.2 Antenna Installation .....                                | 14 |
| 4.3 Transformer Installation .....                            | 15 |
| 4.4 Transceiver Installation .....                            | 16 |
| 4.5 Cable Temperature Sensor Installation (Alternative) ..... | 16 |
| 5. Communication Protocol .....                               | 17 |
| 5.1 Basic Information .....                                   | 17 |
| 5.2 Sensor Data .....                                         | 18 |
| 5.3 Downlink Commands .....                                   | 19 |

## 1. Product Introduction

### 1.1 Overview

CT3xx is a LoRaWAN® Smart Current Transformer for monitoring energy consumption and analyzing usage remotely. CT3xx provides multiple current options to suit energy monitoring and supports sending threshold alarms. Its compact size enables quick and safe installation in any indoor space without de-energizing facilities, thereby simplifying the installation and saving costs. Compliant with Milesight LoRaWAN® gateway and Milesight Development Platform solution, CT3xx can be conveniently monitored via webpage remotely.

CT3xx is widely used for energy motoring of smart buildings, machine failure detection and prevention, etc.

### 1.2 Features

- Report the RMS current and accumulated current data by minutes
- High measuring accuracy with a sampling frequency of up to 3.3 kHz
- Self-powered, free from batteries or external wires
- Utilize a sampling rate of up to 1s for real-time monitoring and quick alarm response
- Non-invasive clamp design ensures easy and safe installation without the need for power de-energizing
- Equipped with LED indicator to indicate working status and alarms
- Support external wire temperature sensor for cable temperature measurement
- Enable simultaneous detection of three phases with a significantly wide optional detection range of either 500A or 1000A
- Compliant with standard LoRaWAN® gateways and network servers
- Compliant with Milesight Development Platform

## 2. Hardware Introduction

### 2.1 Packing List



1 × CT3xx Current  
Transformer



1 × LoRaWAN® Stubby  
Antenna



1 x Cable Temperature  
Sensor (1m)



1 × LoRaWAN® Magnetic  
Antenna (Optional)



1 × Warranty Card



1 × Quick Guide



If any of the above items is missing or damaged, please contact your sales representative.


## 2.2 Hardware Overview




## 2.3 Button and LED Indicator

| Function         | Action                                                                                          | LED Indicator      |
|------------------|-------------------------------------------------------------------------------------------------|--------------------|
| Normal Work      | The device is functioning properly.                                                             | Blinking every 2s  |
| Low Power Mode   | The device measures and reports at reduced rate.                                                | Blinking every 5s  |
| Low Voltage Mode | The device only measures at reduced rate.                                                       | Blinking every 10s |
| Alarm            | The current is over the threshold or measuring range, or the temperature is over the threshold. | Fast Blinking      |
| Reboot           | Quick press the RST button once.                                                                | Blinking Once      |


## 2.4 Dimensions (mm)

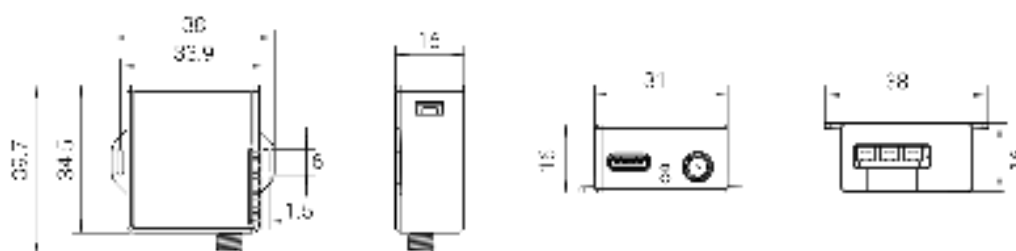

## CT305

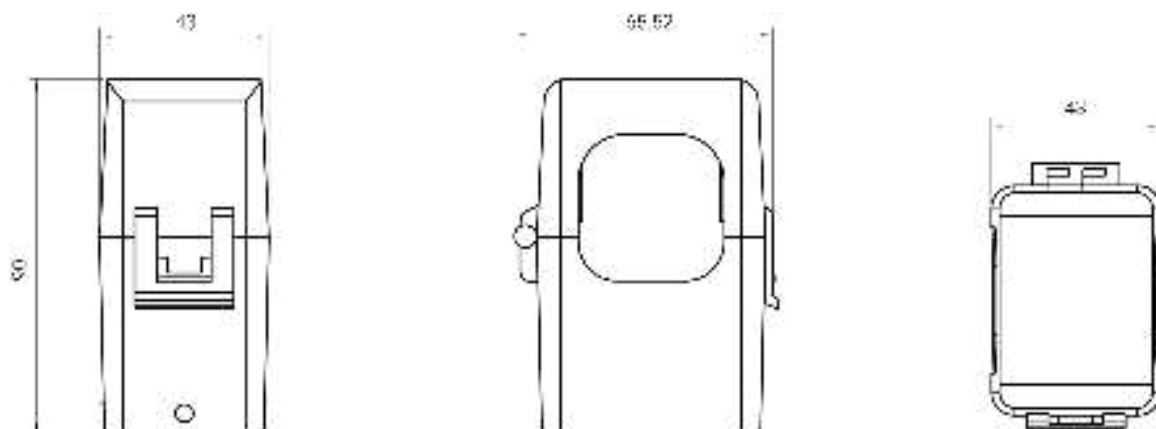

## CT310

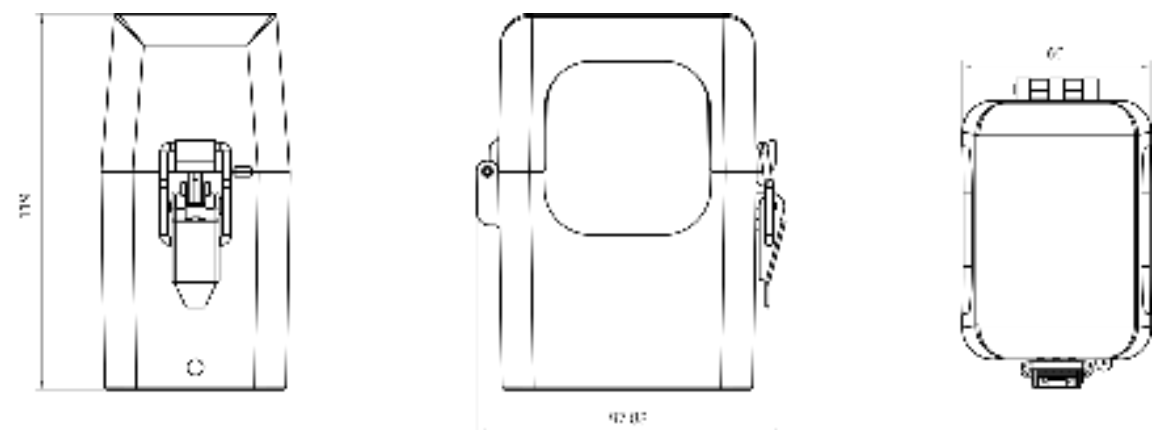


## 3. Operation Guide

### 3.1 USB Configuration

CT3xx can be powered and configured via a Type-C port for configuration and debug.

1. Download ToolBox software from Milesight website.
2. Connect the device to a computer via the Type-C port.

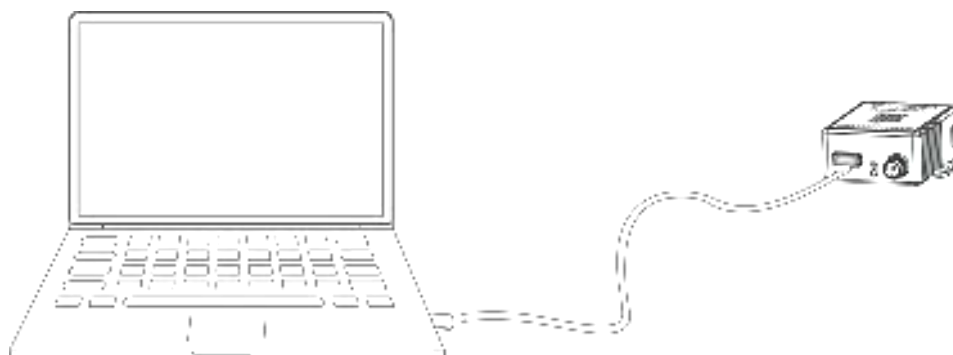

- Open the ToolBox and select type as **General**, then click password to log into the ToolBox.  
(Default password: **123456**)



|                |         |
|----------------|---------|
| Type           | General |
| Serial port    | COM3    |
| Login password |         |
| Baud rate      | 115200  |
| Data bits      | 8       |
| Parity bits    | None    |
| Stop bits      | 1       |

Save Cancel

- After logging into the ToolBox, you can check device status and change device settings.



| Status >                      |                  |
|-------------------------------|------------------|
| Model                         | CT305-470M       |
| Serial Number                 | 6748D48E7A173024 |
| Device EUI                    | 24e3247464483747 |
| Firmware Version              | 01.02.v1         |
| Hardware Version              | 1.1              |
| Device Status                 | On               |
| Join Status                   | Activated        |
| RSSI(SNR)                     | 0/0              |
| Temperature                   | 35.51.5°C        |
| Current(Phase A)              | 0.00 A           |
| Current(Phase B)              | 0.00 A           |
| Current(Phase C)              | 0.00 A           |
| Kilowatt Hour (Phase A Total) | 0.00 kWh         |
| Kilowatt Hour (Phase B Total) | 0.00 kWh         |
| Kilowatt Hour (Phase C Total) | 0.00 kWh         |
| Channel Mask                  | 00000000         |
| Uplink Frame-counter          | 135              |

Close Close Close

## 3.2 LoRaWAN Settings

LoRaWAN settings are used to configure the data transmission parameters in the LoRaWAN® network.

### Basic LoRaWAN Settings:

CT3xx supports basic configurations like join type, App EUI, App Key, and other information. You can also keep all settings by default.



|                  |                                               |
|------------------|-----------------------------------------------|
| Device EUI       | <input type="text" value="24E124756C221863"/> |
| App EUI          | <input type="text" value="24E124C0002A0001"/> |
| Application Port | <input type="text" value="85"/>               |
| Join Type        | <input type="text" value="OTAA"/>             |
| Application Key  | <input type="text" value="*****"/>            |
| RX2 Data Rate    | <input type="text" value="DR8 (SF12, 500k)"/> |
| RX2 Frequency    | <input type="text" value="923300000"/>        |

|                                |                                              |
|--------------------------------|----------------------------------------------|
| Spread Factor                  | <input type="text" value="SF8-DR2"/>         |
| Confirmed Mode                 | <input type="checkbox"/>                     |
| Rejoin Mode                    | <input checked="" type="checkbox"/>          |
| Set the number of packets sent | <input type="text" value="32"/> packets      |
| ADR Mode                       | <input checked="" type="checkbox"/>          |
| TXPower                        | <input type="text" value="TXPower0-22 dBm"/> |

| Parameters              | Description                                                                                  |
|-------------------------|----------------------------------------------------------------------------------------------|
| Device EUI              | Unique ID of the device which can also be found on the label.                                |
| App EUI                 | Default App EUI is 24E124C0002A0001.                                                         |
| Application Port        | The port used for sending and receiving data, default port is 85.                            |
| Join Type               | OTAA and ABP modes are available.                                                            |
| Application Key         | Appkey for OTAA mode, default is 5572404C696E6B4C6F52613230313823.                           |
| Device Address          | DevAddr for ABP mode, default is the 5 <sup>th</sup> to 12 <sup>th</sup> digits of SN.       |
| Network Session Key     | Nwkskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.                           |
| Application Session Key | Appskey for ABP mode, default is 5572404C696E6B4C6F52613230313823.                           |
| RX2 Data Rate           | RX2 data rate to receive downlinks.                                                          |
| RX2 Frequency/MHz       | RX2 frequency to receive downlinks.                                                          |
| Spread Factor           | If ADR is disabled, the device will send data via this spread factor.                        |
| Confirmed Mode          | If the device does not receive the ACK packet from network server, it will resend data once. |

|                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Rejoin Mode                    | <p>Reporting interval <math>\leq</math> 35 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval or every double reporting interval to validate connectivity; If there is no response, the device will re-join the network.</p> <p>Reporting interval <math>&gt;</math> 35 mins: the device will send a specific number of LinkCheckReq MAC packets to the network server every reporting interval to validate connectivity; If there is no response, the device will re-join the network.</p> <p><b>Note:</b> Only OTAA mode supports rejoin mode.</p> |
| Set the number of packets sent | <p>When rejoin mode is enabled, set the number of LinkCheckReq packets sent.</p> <p><b>Note:</b> the actual sending number is <b>Set the number of packets sent + 1</b>.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| ADR Mode                       | Allow the network server to adjust the data rate of the device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| Tx Power                       | Transmit power of the device.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

**Note:**

- 1) Please contact your sales representative for the device EUI list if there are many units.
- 2) Please contact your sales representative if you need random App keys before purchase.
- 3) Select OTAA mode if you use Milesight IoT Cloud to manage devices.

**LoRaWAN Frequency Settings:**

Select supported frequency and channels to send uplinks. Make sure the channels match the LoRaWAN® gateway.

Supported Frequency: EU868

| <input type="checkbox"/>            | Index | Frequency/MHz | Min Datarate | Max Datarate |
|-------------------------------------|-------|---------------|--------------|--------------|
| <input checked="" type="checkbox"/> | 0     | 868.1         | S-SF7BW125   | S-SF12BW125  |
| <input checked="" type="checkbox"/> | 1     | 868.3         | S-SF7BW125   | S-SF12BW125  |
| <input checked="" type="checkbox"/> | 2     | 868.5         | S-SF7BW125   | S-SF12BW125  |
| <input type="checkbox"/>            | 3     | 0             | S-SF7BW125   | S-SF12BW125  |
| <input type="checkbox"/>            | 4     | 0             | S-SF7BW125   | S-SF12BW125  |
| <input type="checkbox"/>            | 5     | 0             | S-SF7BW125   | S-SF12BW125  |
| <input type="checkbox"/>            | 6     | 0             | S-SF12BW125  | S-SF7BW125   |
| <input type="checkbox"/>            | 7     | 0             | S-SF12BW125  | S-SF7BW125   |

If the device frequency is one of CN470/AU915/US915, you can enter the index of the channel that you want to enable in the input box, making them separated by commas.

**Examples:**

1, 40: Enabling Channel 1 and Channel 40

1-40: Enabling Channel 1 to Channel 40

1-40, 60: Enabling Channel 1 to Channel 40 and Channel 60

All: Enabling all channels

Null: Indicates that all channels are disabled

| Channel Index | Frequency/MHz | Channel Spacing/MHz | Bandwidth/MHz |
|---------------|---------------|---------------------|---------------|
| 0 - 15        | 902.3 - 905.3 | 0.2                 | 125           |
| 16 - 31       | 905.5 - 908.5 | 0.2                 | 125           |
| 32 - 47       | 908.7 - 911.7 | 0.2                 | 125           |
| 48 - 63       | 911.9 - 914.9 | 0.2                 | 125           |
| 64 - 71       | 903.0 - 914.2 | 1.6                 | 500           |

**Note:**  
 64 channels numbered 0 to 63 utilizing LoRa 125 kHz BW starting at 902.3 MHz and incrementing linearly by 0.2 MHz to 914.9  
 8 channels numbered 64 to 71 utilizing LoRa 500 kHz BW starting at 903.0 MHz and incrementing linearly by 1.6 MHz to 914.2

### 3.3 General & Alarm Settings

**Basic Settings**

Device Type: CT305-470M

Reporting Interval (min): 10

Change Password: ☐

| Parameters         | Description                                                                                                                                                                                                                                                                                                                |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Reporting Interval | <p>The interval of reporting current data.</p> <p>Default: 10 mins, Range: 1 - 1440 mins</p> <p><b>Note:</b> when the device is under low power mode, the interval is fixed as 30 minutes; when the device is under low voltage mode, the device will stop reporting. The working mode can be judged by LED indicator.</p> |
| Change Password    | Change the password of the device for ToolBox configuration.                                                                                                                                                                                                                                                               |

**Alarm Settings**

Current Threshold(Phase A) ☒

Excessive Current Threshold

Insufficient Current Threshold

Current Threshold(Phase B) ☐

Current Threshold(Phase C) ☐

Temperature ☒

Over  °C

Below  °C

Alarm Reporting Interval(min)

Alarm Reporting Times

| Parameters                         | Description                                                                                                     |
|------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Alarm Reporting Interval (min)     | The interval to report alarm packet after alarm triggers. This interval should be less than reporting interval. |
| Alarm Reporting Times              | Alarm packet report times after alarm triggers.                                                                 |
| <b>Current Threshold (Phase x)</b> |                                                                                                                 |
| Excessive Current Threshold        | The maximum current threshold value.                                                                            |
| Insufficient Current Threshold     | The minimum current threshold value.                                                                            |
| <b>Temperature</b>                 |                                                                                                                 |
| Over                               | The maximum temperature threshold value.                                                                        |
| Below                              | The maximum temperature threshold value.                                                                        |

**Note:** Current overrange alarm is fixed as enabled, the alarm reporting interval is fixed as 5 minutes and the alarm reporting time is fixed as 3.

## 3.4 Maintenance

### 3.4.1 Upgrade

1. Download firmware from Milesight website to your PC.
2. Go to **Maintenance > Upgrade**, click **Browse** to import firmware and click **Upgrade** to upgrade the device.

**Maintenance >**

**Upgrade** **Backup and Reset**

|                   |                                                                                                   |
|-------------------|---------------------------------------------------------------------------------------------------|
| Model:            | CT305-B15M                                                                                        |
| Firmware Version: | 01.02-a1                                                                                          |
| Hardware Version: | 1.1                                                                                               |
| Domain:           | Beijing Server                                                                                    |
| FOTA:             | <input type="button" value="Up to date"/>                                                         |
| Local Upgrade:    | <input type="text"/> <input type="button" value="Browse"/> <input type="button" value="Upgrade"/> |

### 3.4.2 Backup

CT3xx supports configuration backup for easy and quick device configuration in bulk. Backup is allowed only for devices with the same model and LoRaWAN® frequency band.

1. Go to **Maintenance > Backup and Reset**, and click **Export** to backup the device configuration.
2. Click **Browse** to import the backup file, then click **Import** to load the configuration.

**Maintenance >**

**Upgrade** **Backup and Reset**

|                          |                                                                                                  |
|--------------------------|--------------------------------------------------------------------------------------------------|
| Config Backup            | <input type="button" value="Export"/>                                                            |
| Config File              | <input type="text"/> <input type="button" value="Browse"/> <input type="button" value="Import"/> |
| Restore Factory Defaults | <input type="button" value="Reset"/>                                                             |

### 3.4.3 Reset and Reboot

**Reset to Factory Default:** Go to **Maintenance > Backup and Reset** of ToolBox, and click **Reset** to complete.


**Maintenance >**

**Reboot:** Quick press the RST button once or send downlink command to reboot.

## 4. Installation

### 4.1 Device Assembly


The CTs can be connected to the connectors of transceiver without any specific order matching requirement.

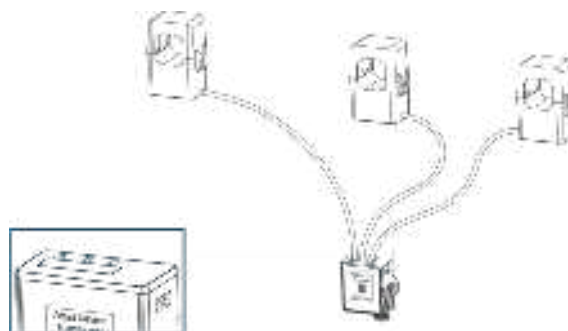

### 4.2 Antenna Installation


Rotate the antenna into the antenna connector. The antenna should be installed vertically and kept away from metal objects and obstacles.

**Note:** Keep the device away from metal objects, obstacles, or the environment surrounded by other electrical equipment that may cause interference. If necessary, please select a magnetic antenna.

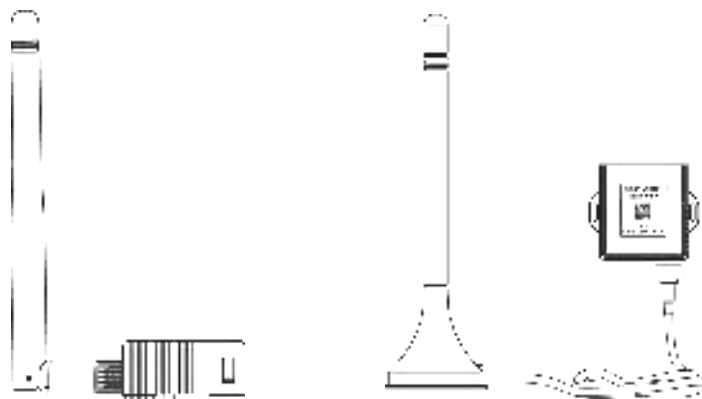


### 4.3 Transformer Installation

Open the current transformer to clip it around a single-phase wire. Then close the clip with a slight “click” sound to make sure the clip firmly grips the wire.

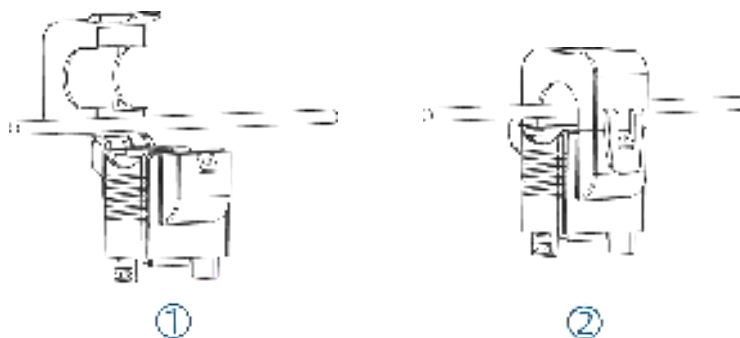


**Note:**

- 1) Do not place Phase wire and Neutral wire within a single current transformer.

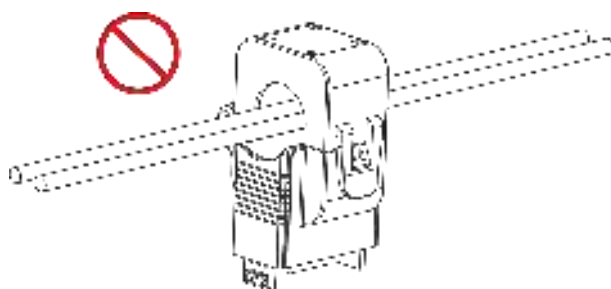

- 2) Please make sure at least connect a phase A CT to phase A wire, otherwise the device will be powered off.

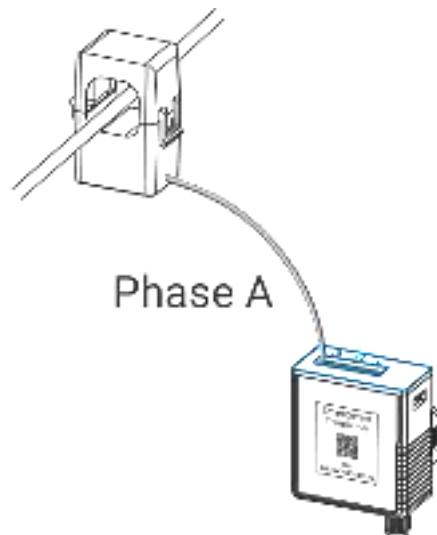

#### 4.4 Transceiver Installation

The transceiver can be put or hang in any suitable position or to be fixed via cable-ties.




#### 4.5 Cable Temperature Sensor Installation (Alternative)

CT3xx can monitor the temperature of one wire through the Cable Temperature Sensor, it will alarm when the temperature exceeds the threshold.

Pass the Cable Temperature Sensor around the tested wire, and then tighten the buckle. The other end is connected to the CT3xx device via the USB Type-C .



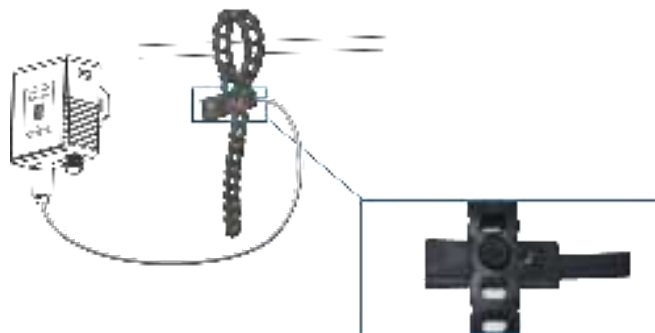

**Note:** Keep the Cable Temperature Sensor as close to the wire connector as possible to better detect the temperature.

## 5. Communication Protocol

All data are based on the following format (HEX), the Data field should follow little endian:

| Channel1 | Type1  | Data1   | Channel2 | Type2  | Data2   | Channel 3 | ... |
|----------|--------|---------|----------|--------|---------|-----------|-----|
| 1 Byte   | 1 Byte | N Bytes | 1 Byte   | 1 Byte | M Bytes | 1 Byte    | ... |

For decoder examples you can find at <https://github.com/Milesight-IoT/SensorDecoders>.

### 5.1 Basic Information

CT3xx reports basic information of the device whenever it joins the network.

| Channel | Type                  | Byte | Description                              |
|---------|-----------------------|------|------------------------------------------|
| ff      | 01 (Protocol Version) | 1    | 01=>V1                                   |
|         | 09 (Hardware Version) | 2    | 02 10=>V2.1                              |
|         | 0a (Software Version) | 2    | 01 01=>V1.1                              |
|         | ff (TSL Version)      | 2    | 01 01=>V1.1                              |
|         | 0b (Power On)         | 1    | Device is on                             |
|         | 0f (Device Type)      | 1    | 00 = Class A, 01 = Class B, 02 = Class C |
|         | 16 (Device SN)        | 8    | 16 digits                                |

**Example:**

| ff0bff ff0101 ffff0101 ff166746d48016300014 ff090110 ff0a0101 ff0f00 |                     |                  |         |                          |                          |
|----------------------------------------------------------------------|---------------------|------------------|---------|--------------------------|--------------------------|
| Channel                                                              | Type                | Value            | Channel | Type                     | Value                    |
| ff                                                                   | 0b<br>(Power On)    | ff<br>(Reserved) | ff      | 01<br>(Protocol Version) | 01<br>(V1)               |
| Channel                                                              | Type                | Value            | Channel | Type                     | Value                    |
| ff                                                                   | ff<br>(TSL Version) | 0101<br>(V1.1)   | ff      | 16<br>(Device SN)        | 6746d48<br>0163000<br>14 |

| Channel | Type                     | Value           | Channel | Type                     | Value       |
|---------|--------------------------|-----------------|---------|--------------------------|-------------|
| ff      | 09<br>(Hardware Version) | 0110 (V1.1)     | ff      | 0a<br>(Software Version) | 0101 (V1.1) |
| Channel | Type                     | Value           |         |                          |             |
| ff      | 0f<br>(Device Type)      | 00<br>(Class A) |         |                          |             |

## 5.2 Sensor Data

| Item                  | Channel | Type | Byte | Description                                                                                                                                                                                                                                                                                                                      |
|-----------------------|---------|------|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Phase A Total Current | 03      | 97   | 4    | UINT32/100, Unit: Ah, Resolution: 0.01 Ah<br><b>Note:</b> when it reaches to max value FFFFFFFF (42949672.95), it will clear to 0 automatically.                                                                                                                                                                                 |
| Phase B Total Current | 05      |      |      |                                                                                                                                                                                                                                                                                                                                  |
| Phase C Total Current | 07      |      |      |                                                                                                                                                                                                                                                                                                                                  |
| Phase A Current       | 04      | 98   | 2    | UINT16/100, Unit: A, Resolution: 0.01 A<br><b>Note:</b> FFFF means collection failure.                                                                                                                                                                                                                                           |
| Phase B Current       | 06      |      |      |                                                                                                                                                                                                                                                                                                                                  |
| Phase C Current       | 08      |      |      |                                                                                                                                                                                                                                                                                                                                  |
| Phase A Current Alarm | 84      | 98   | 7    | Max. Current (2B) + Min. Current (2B) + Latest Current (2B) + Alarm Status (1B)<br><b>Alarm Status:</b><br>01: Threshold alarm<br>02: Threshold alarm dismiss<br>04: Overrange alarm<br>08: Overrange alarm dismiss<br><b>Note:</b> Max./Min. Current means the maximum or minimum value between last report and current report. |
| Phase B Current Alarm | 86      |      |      |                                                                                                                                                                                                                                                                                                                                  |
| Phase C Current Alarm | 88      |      |      |                                                                                                                                                                                                                                                                                                                                  |
| Temperature           | 09      | 67   | 2    | INT16/10, Unit: °C<br><b>Note:</b> FFFD means overrange temperature; FFFF means collection failure.                                                                                                                                                                                                                              |
| Temperature Alarm     | 89      | 67   | 3    | Temperature (2B) + Alarm Status (1B)<br><b>Temperature:</b> INT16/10, Unit: °C<br><b>Alarm Status:</b><br>01-Threshold alarm; 00-Threshold alarm                                                                                                                                                                                 |

|  |  |  |  |         |
|--|--|--|--|---------|
|  |  |  |  | dismiss |
|--|--|--|--|---------|

**Example:**

1. Periodic package: report as reporting interval (10 minutes by default).

| 039710270000 0498b80b 059710270000 0698b80b<br>079710270000 0898b80b 09673401 |                            |                                                  |         |                      |                                   |
|-------------------------------------------------------------------------------|----------------------------|--------------------------------------------------|---------|----------------------|-----------------------------------|
| Channel                                                                       | Type                       | Value                                            | Channel | Type                 | Value                             |
| 03                                                                            | 97 (Phase A Total Current) | 10 27 00 00=>00 00<br>27 10=10000/100<br>=100 Ah | 04      | 98 (Phase A Current) | b8 0b=>0b b8<br>=3000/100<br>=30A |
| 05                                                                            | 97 (Phase B Total Current) | 10 27 00 00=>00 00<br>27 10=10000/100<br>=100 Ah | 06      | 98 (Phase B Current) | b8 0b=>0b b8<br>=3000/100<br>=30A |
| 07                                                                            | 97 (Phase C Total Current) | 10 27 00 00=>00 00<br>27 10=10000/100<br>=100 Ah | 08      | 98 (Phase C Current) | b8 0b=>0b b8<br>=3000/100<br>=30A |
| 09                                                                            | 67(Temperature)            | 34 01=>01<br>34=308/10=30.8°C                    |         |                      |                                   |

2. Phase A current alarm or alarm dismiss packet:

| 8498 b80b d007 c409 01 |                     |                                                                                                                                                                       |
|------------------------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Channel                | Type                | Value                                                                                                                                                                 |
| 84                     | 98(Phase A Current) | Max. Current: b8 0b=>0b b8=3000/100=30A<br>Min. Current: d0 07=>07 d0=2000/100=20A<br>Latest Current: c4 09=>09 c4=2500/100=25A<br>Alarm Status: 01=> Threshold alarm |

## 5.3 Downlink Commands

CT3xx supports downlink commands to configure the device. The application port is 85 by default.

| Command            | Channel | Type | Description                                                                             |
|--------------------|---------|------|-----------------------------------------------------------------------------------------|
| Reboot             | ff      | 10   | ff                                                                                      |
| Reporting Interval | ff      | 8e   | 00 + Interval Time(2B), unit: min                                                       |
| Threshold Alarm    | ff      | 06   | 9 Bytes, CTRL (1B) + Min (2B) + Max (2B) + 00000000(4B)<br><b>CTRL:</b><br>● Bit2~Bit0: |

|                           |    |    |                                                                                                                                                                                                                                                      |
|---------------------------|----|----|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                           |    |    | 000 - disable; 001 - below; 010 - over;<br>011 - within; 100 - below or over<br>● Bit5~Bit3:<br>001 - Phase A current; 010 - Phase B current;<br>011 - Phase C current; 100 - Temperature<br>● Bit7~Bit6: 00<br>Max./Min. Threshold unit: A or 0.1°C |
| Clear Accumulated Current | ff | 27 | 01: Phase A; 02: Phase B; 03: Phase C<br><b>Note:</b> when it reaches to max value<br>FFFFFFFF (42949672.95Ah), it will clear to 0<br>automatically.                                                                                                 |
| Alarm Reporting Interval  | ff | 02 | 2 Bytes, unit: min, range: 1~1440                                                                                                                                                                                                                    |
| Alarm Reporting Times     | ff | f2 | 2 Bytes, range: 1~1000                                                                                                                                                                                                                               |

**Example:**

1. Set reporting interval as 20 minutes.

| ff8e 00 1400 |                         |                       |
|--------------|-------------------------|-----------------------|
| Channel      | Type                    | Value                 |
| ff           | 8e (Reporting Interval) | 14 00=>00 14= 20 mins |

2. Reboot the device.

| ff10ff  |             |       |
|---------|-------------|-------|
| Channel | Type        | Value |
| ff      | 10 (Reboot) | ff    |

3. Enable Phase A current threshold alarm and set maximum threshold as 60A.

| ff 06 0a00003c00 00000000 |      |                                                                                                     |
|---------------------------|------|-----------------------------------------------------------------------------------------------------|
| Channel                   | Type | Value                                                                                               |
| ff                        | 06   | CTRL:0a=00001010=>over Phase A current maximum threshold<br>Min: 00 00=0<br>Max: 3c 00=> 00 3c=60 A |

4. Set alarm reporting times as 10.

| fff2 0a00 |                            |                 |
|-----------|----------------------------|-----------------|
| Channel   | Type                       | Value           |
| ff        | f2 (Alarm Reporting Times) | 0a 00=>00 0a=10 |

**-END-**