


INSTRUCTION MANUAL

Rev01(A)

PIUC09B/PIUC09W

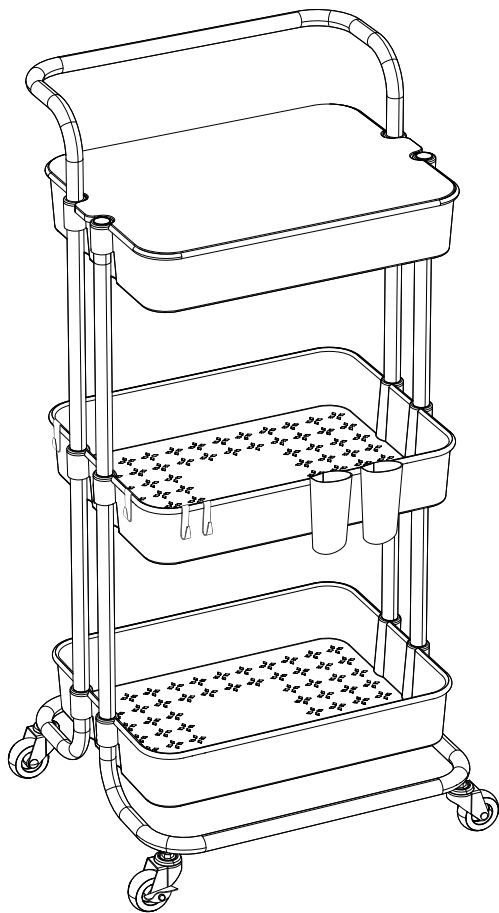

Utility Cart



(US/CA) 1-800-556-9829

(UK) 44-808-196-3885

 


www.pipishellav.com




support@pipishell.net


Contents




Basket
[A] x 3

 


Leg
[B1] x 2

 

Leg
[B2] x 2

 

Handle
[C] x 1

 

Side Pole
[D] x 8



Screw
[E] x 14



 
Cap
[F] x 2



Caster with Lock
[G1] x 2




Caster without Lock
[G2] x 2



Phillips Screwdriver
[H] x 1



 Wrench
[I] x 1



Cup
[J] x 2





Cover Board
[K] x 1



Hook
[L] x 4

Installation


①

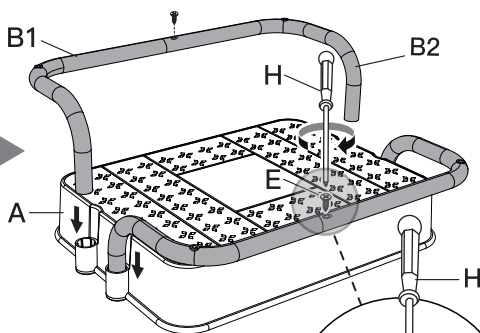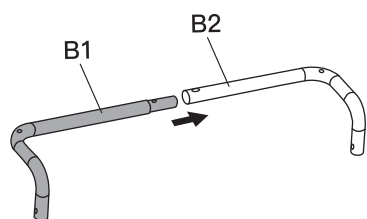

NOTE: Make sure the legs are installed as tightly as possible against the basket.

Connect the legs [B1] and [B2] together, but do not screw in screws. Insert the assembled legs [B1] and [B2] into the basket [A] from the bottom of the basket [A], then tighten the screws [E].


②

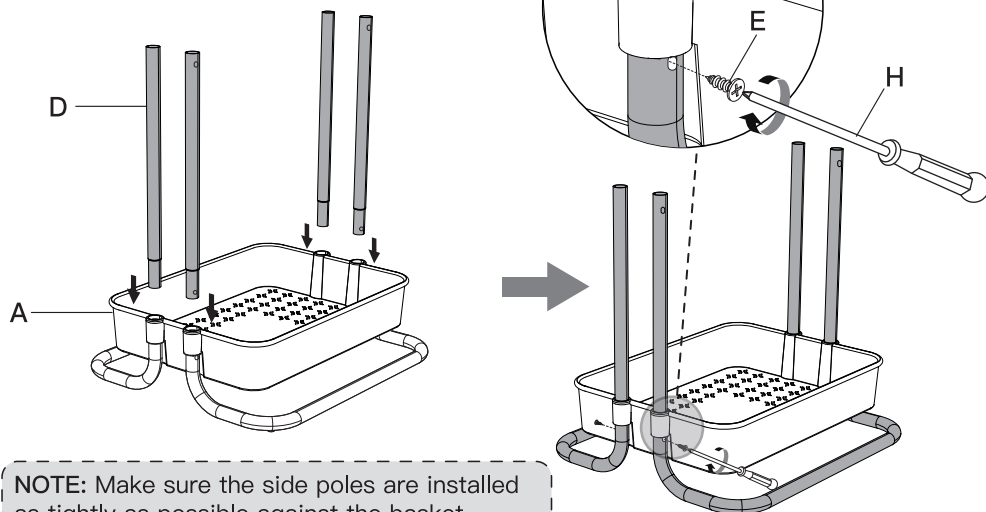

NOTE: Make sure the side poles are installed as tightly as possible against the basket.

Insert four side poles [D]. Align the holes of the side poles [D] with the holes on the legs [B1] and [B2], then secure them with the screws [E].

③

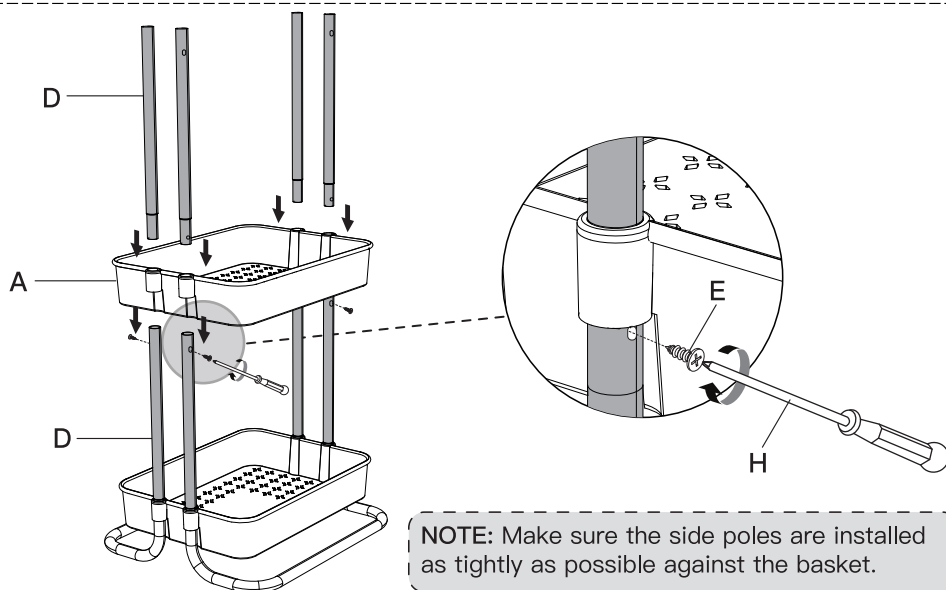

NOTE: Make sure the side poles are installed as tightly as possible against the basket.

Slide the basket [A] onto the poles already attached, then insert four more side poles [D]. Align the holes of the upper poles with the holes on lower poles, then secure them with the screws [E].

