



Customer Self Repair Instructions









Lubrication Felts Kit

HP Latex 700 & 800 Printer Series


HP Latex R530, 730 & 830 Printer Series




HP Latex 700 & 800 Printer Series Lubrication Felts Kit

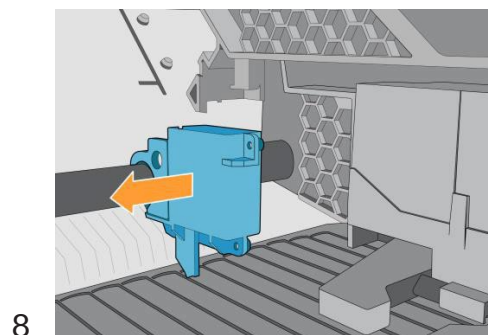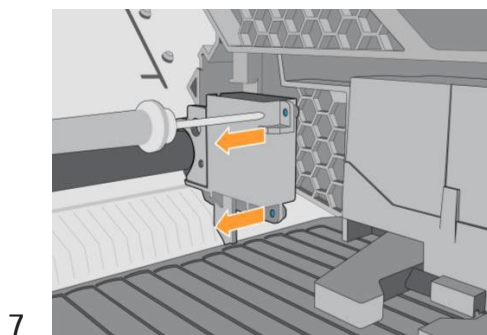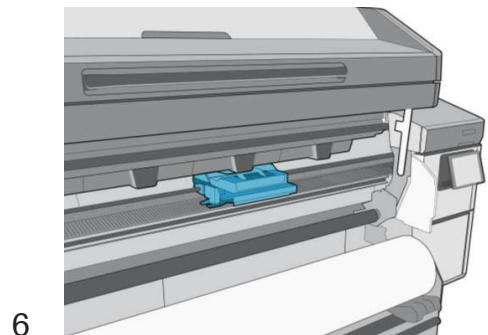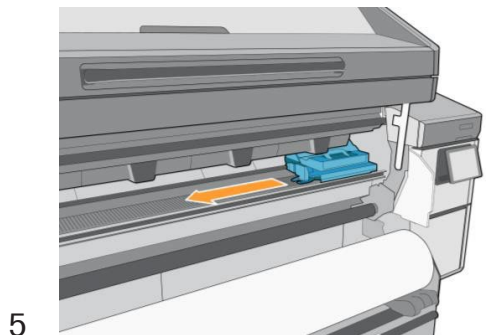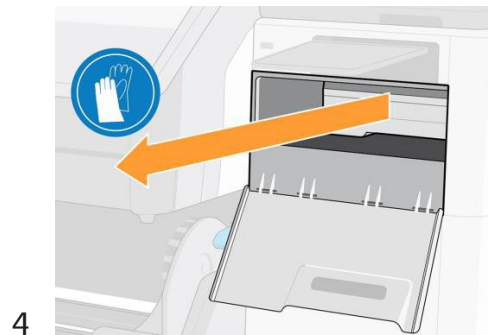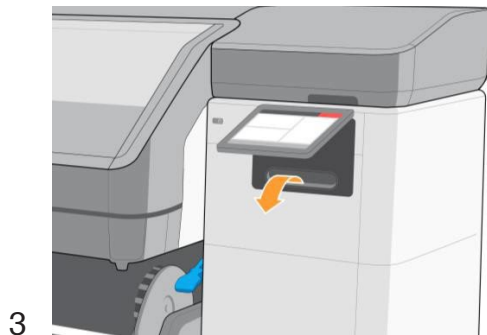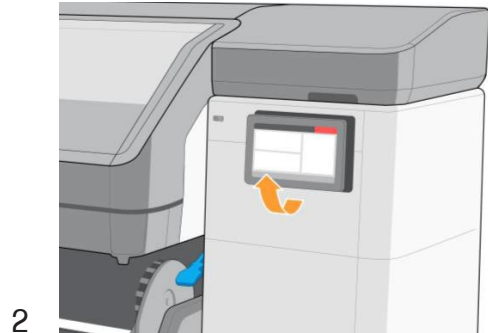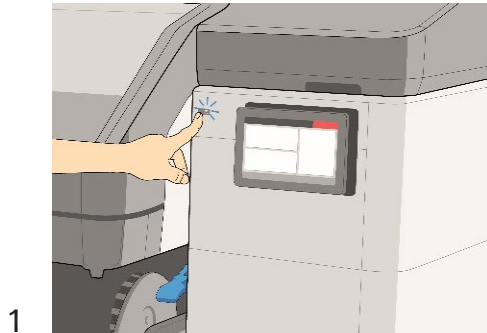


9

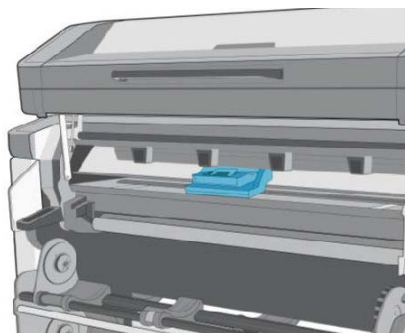


10

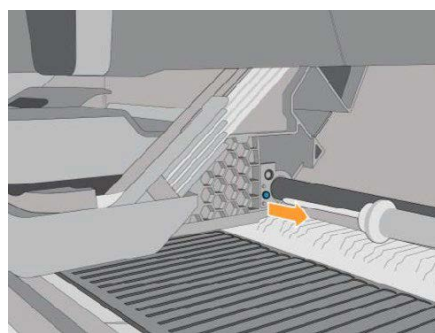


11

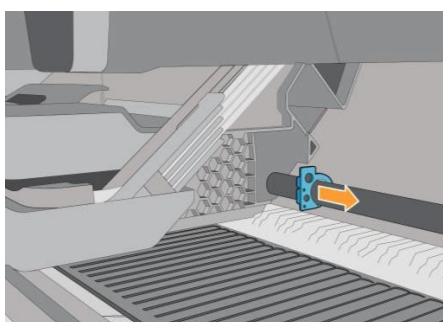


12

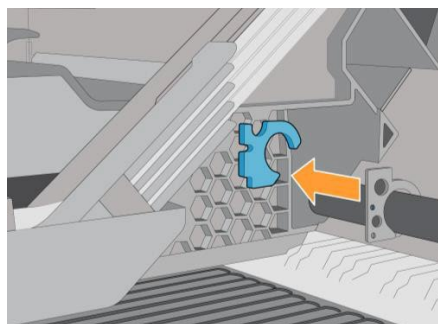


13

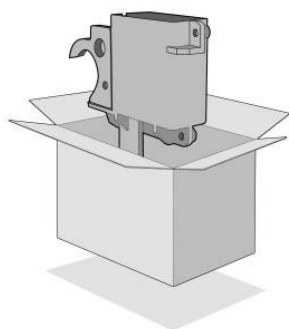


14

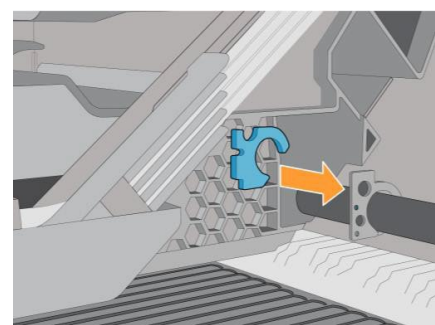


15

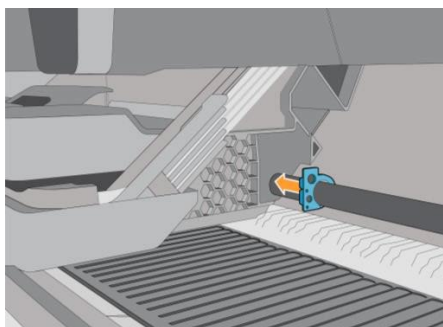


16

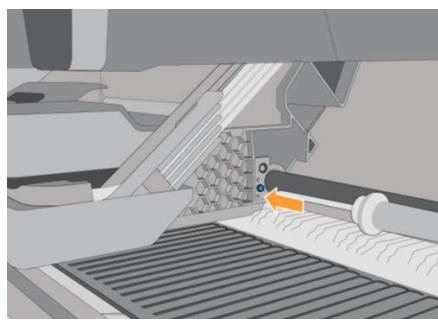


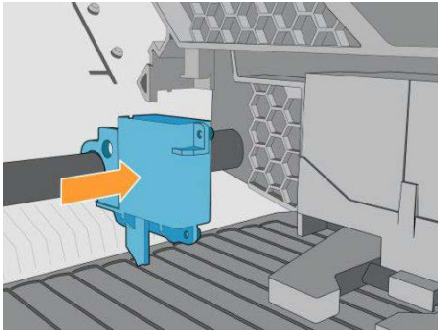


19

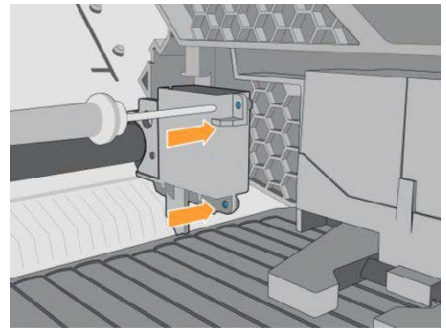

20

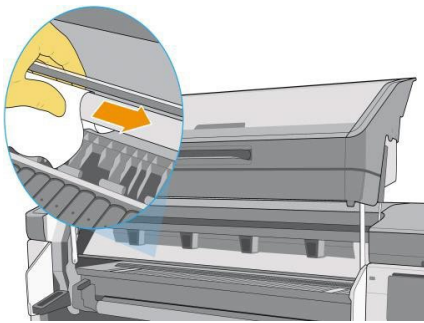






21

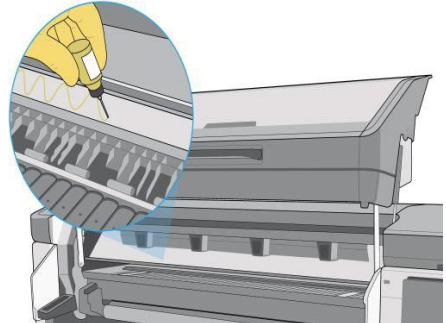


22




HP Latex R530, 730 & 830 Printer Series Lubrication Felts Kit

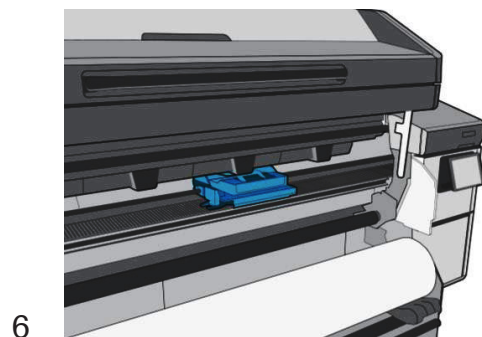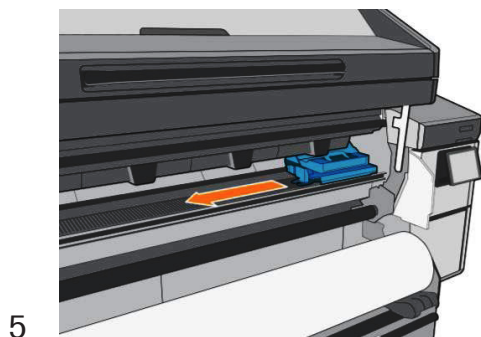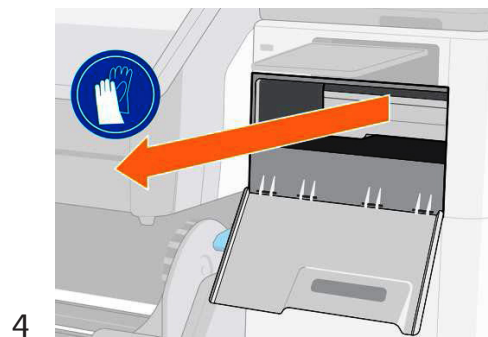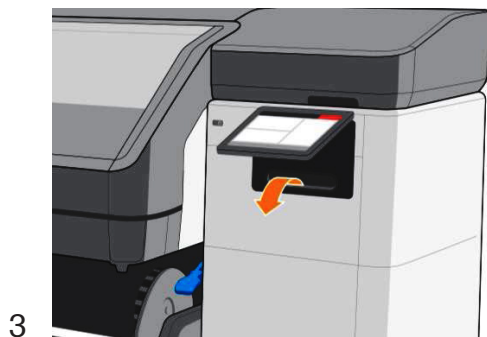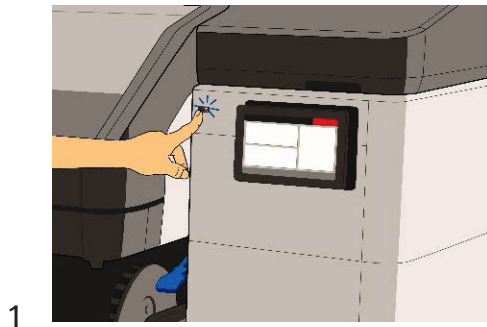

9

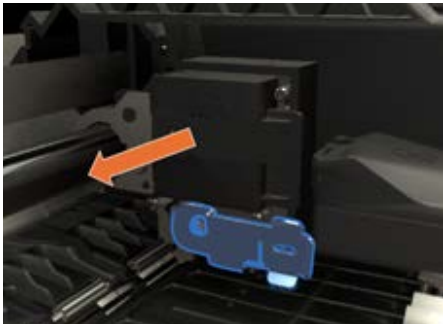

10

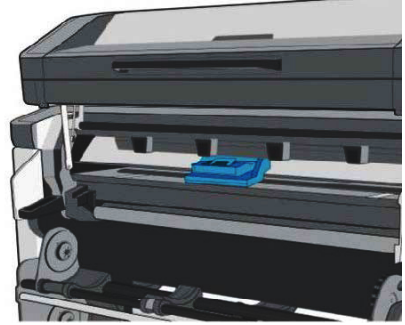


11




12




13

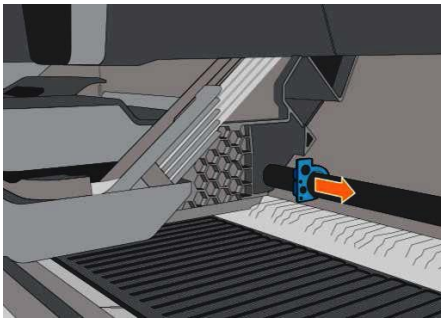


14

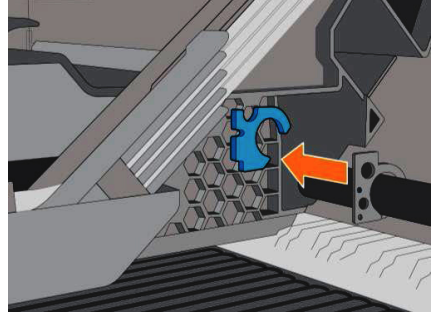


15

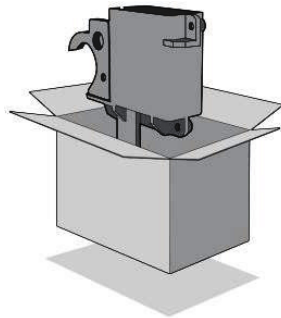


16

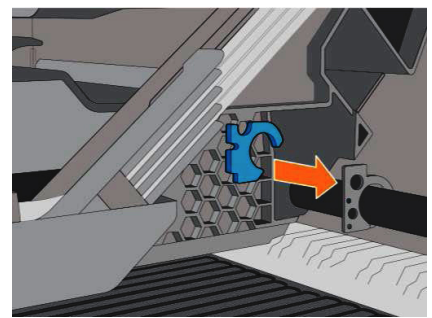


17

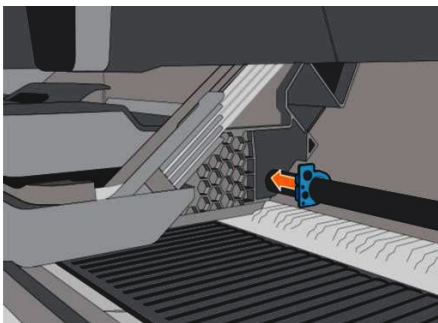


18

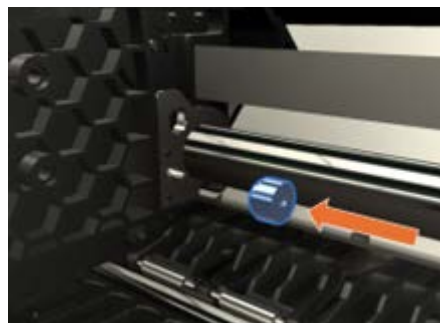


19

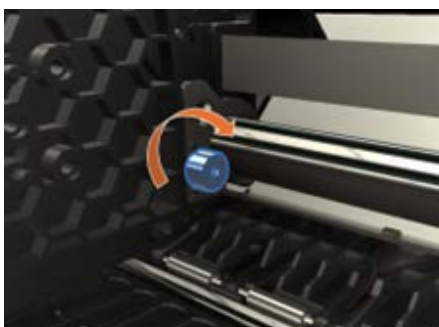

20

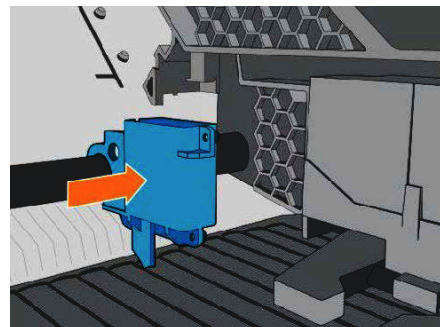


21

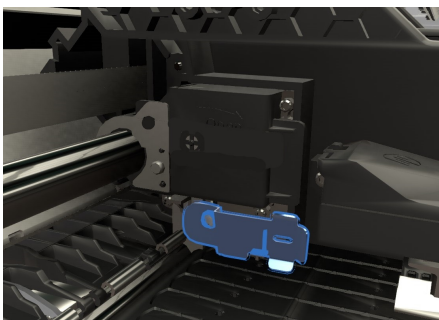

22



23

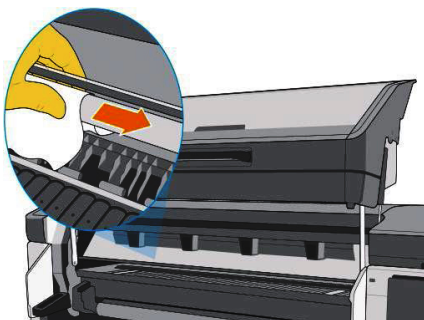

24

