

MEK5080A9700XBT5,MEK5080A9700XBLT5 For technical support 1-877-599-6822 PERIPHERAL SETUP GUIDE


1-877-599-6822 9:00am – 6:00pm PST Mon - Fri.



Congratulations on your new PC! Accessing the I/O panel and connecting your peripherals to the MEK5080A9700XBT5/BLT5 is easy! Follow along this guide to learn how:






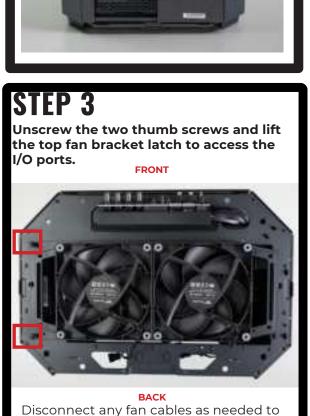

fully remove the top fan bracket.



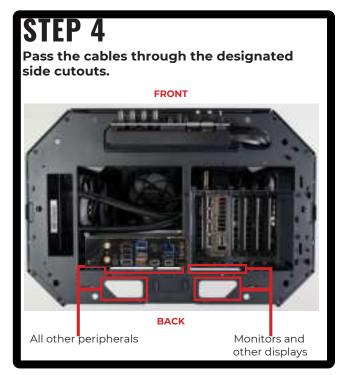





** Images for reference only. Port layouts may vary based on the included components.

For monitors and displays, connect directly to the appropriate port(s) on the graphics card/GPU.

Do NOT plug your monitor into the graphics port(s) on your motherboard, as it is disabled when a graphics card is installed in your system.

EXAMPLE OF FINAL CABLE WIRING ROUTE





