


User Manual

351WOKR13(L/N)

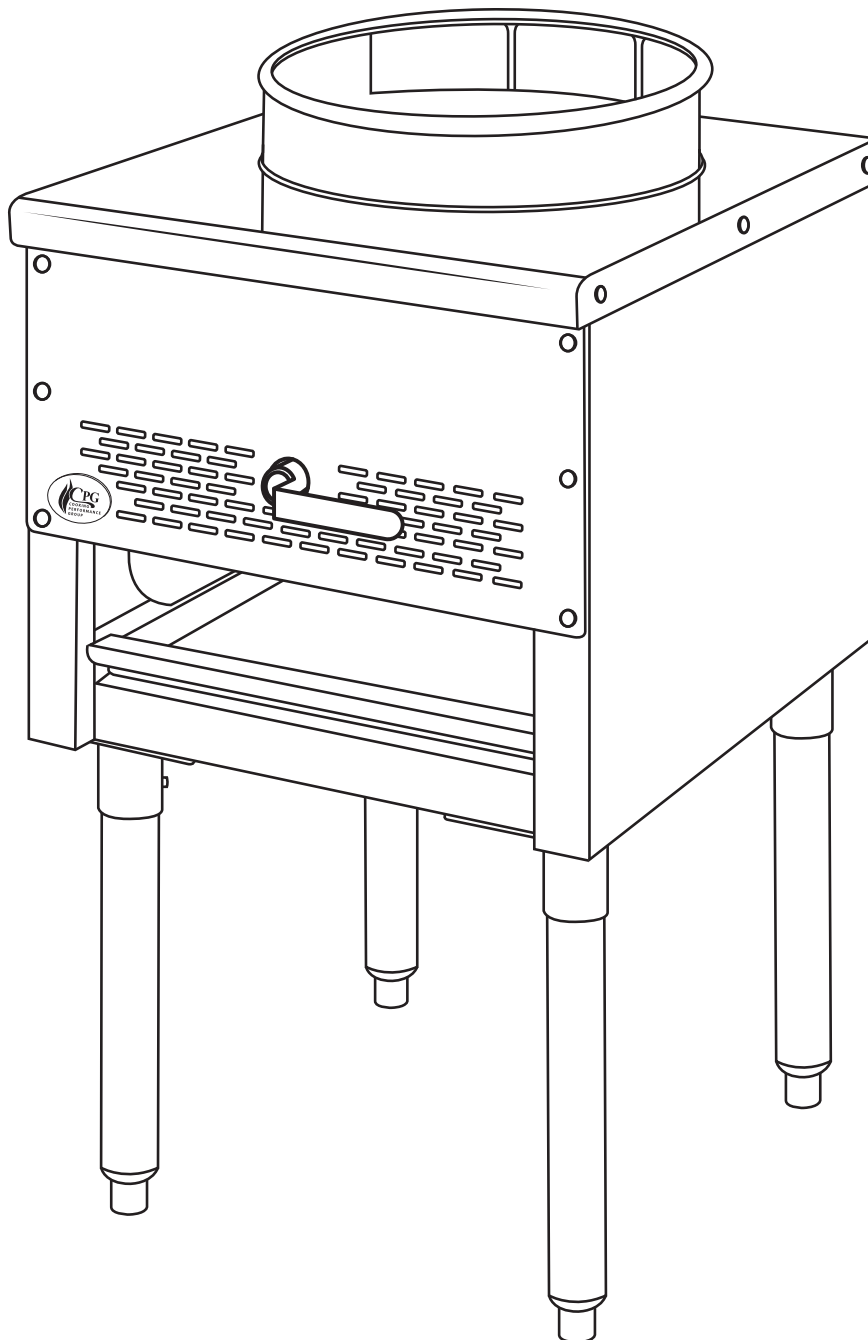

Gas Powered Wok Ranges



12/2021

User Manual

351WOKR13(L/N)



Congratulations on your purchase of Cooking Performance Group commercial cooking equipment! At Cooking Performance Group, we take pride in the design, innovation, and quality of our products. To ensure optimal performance, we have outlined the following instructions and guidelines in this manual carefully for your review. Cooking Performance Group declines any responsibility in the event users do not follow the instructions or guidelines stated here.

Contents

Product Overview.....	2
Safety Precautions.....	3
Gas Pressure.....	3
Assembly Instructions.....	4
Specifications.....	4
Startup.....	5-6
Operating Instructions.....	7-8
Cleaning & Maintenance.....	9
Troubleshooting.....	10

Product Overview

The 351WOKR13N/L features a durable stainless steel construction with 4 adjustable legs. It is equipped with a powerful 18 tip duck jet burner and 95,000 BTUs of cooking power. The 13" stainless steel wok attachment maximizes efficiency and sanitation with its rolled front edge and gradual slope design. This unit's convenient standing pilot light makes it ready for instant ignition.

User Manual

351WOKR13(L/N)



Safety Precautions

CAUTION:

- Failure to comply with the following operation instructions could lead to potential hazards and/or unsafe practice and could result in injury and damage to product and property.

NOTICE:

- Local codes regarding installation vary greatly from one area to another. The National Fire Protection Association, Inc., states in its NFPA96 latest edition that local codes are "Authority Having Jurisdiction" when it comes to requirement for installation of equipment. Therefore, installation should comply with all local codes.
- This product is intended for commercial use only. Not for residential use.

WARNING:

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other equipment.
- Improper installation, adjustment, alteration, service or maintenance could lead to property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing CPG equipment. This manual must be retained for future reference.
- A factory authorized agent must handle all maintenance and repair.

Gas Pressure

- The appliance and its individual shutoff valve (to be supplied by user) must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 PSI (3.45 kPa).
- The appliance must be isolated from the gas supply piping system by closing its individual manual shut-off valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1 / 2 PSI (3.45 kPa)



User Manual

351WOKR13(L/N)




Assembly Instructions

1. Attach all (4) legs to the unit using (4) of the provided screws in each. (Fig. 1)
2. Attach the control valve handle to the front of the unit with the provided screw. (Fig. 2)

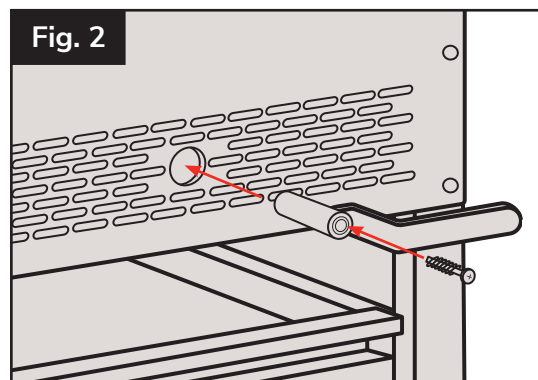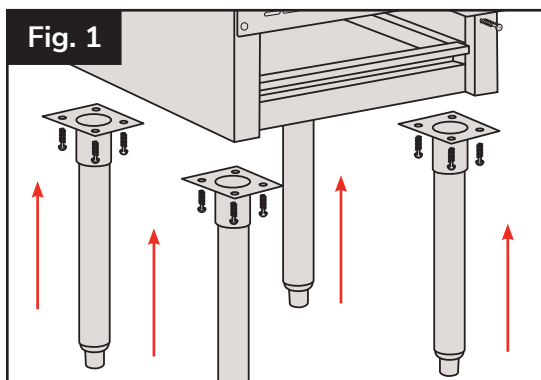

Specifications

	351WOKR13L	351WOKR13N
Exterior Dimensions	17½" x 24" x 34"	
Packing Dimensions	18" x 23" x 23"	
Net Weight	70 lb.	
Gross Weight	88 lb.	
# of Burners	1	
Gas Type	Liquid Propane	Natural Gas
Intake Tube Pressure	10" W.C.	5" W.C.
BTU per Burner	95,000 BTU	
BTU Total	95,000 BTU	
Orifice Nozzle #	#67	#56
Ignition Type	Manual	
Valve Types	Pilot Light	
Wok Attachment	13¾" x 3½"	
Non-Combustible Clearance	0" Rear, 0" Sides	
Combustible Clearance	10" Rear, 10" Sides	

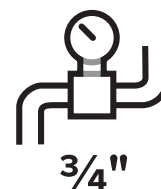

User Manual


351WOKR13(L/N)




Startup Installation

1. Installation of all equipment should be performed by qualified, certified, and authorized personnel.
2. Before installation, please read instructions completely and carefully.
3. Do not remove permanently affixed labels, warnings, or plates from the product.
4. Installation must conform with local codes, or in the absence of local codes, the National Fuel Gas Code, ANSI Z223.1 (latest edition). In Canada, installation should conform to installation codes for gas burning appliances and equipment standard CAN/CGA-B149.1 or the propane installation code, CAN/CGA-B149.2, as applicable.
5. A manual gas shut-off valve must be installed in the gas supply line ahead of the appliance and gas pressure regulator for safety and ease in servicing.
6. The gas pressure regulator supplied must be installed on the appliance prior to connecting the equipment to the gas line. Failure to install a regulator could be potentially hazardous and will void the appliance warranty. (See "Pressure Regulator" on pg. 6 for further instructions)
7. The appliance and its individual shut off valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of ½ psi (3.45kpa).
8. Check the serial plate located on the right side of the unit prior to installation to ensure the proper gas type is used.

Gas Wok Range



Item: 351WOKR13N
Gas Type: Natural Gas
BTU: 95,000
Orifice Size: #56
Manifold Pressure: 5" WC
Max Pressure: 14" WC
Serial #:
For commercial use only.



Complies to ANSI Z223.1-2015
Certified to CGA 1.6-2016
Gas Piping System Equipment
NACCS B-CR614

Gas Connection

- The gas supply (service) line must be the same size or greater than the inlet line of the appliance.
- Cooking Performance Group appliances use a ¾" NPT inlet.
- Sealant on all pipe joints must be resistive to liquid propane or natural gas.
- This range uses starting orifice elevation sizes of #56 for NG and #67 for LP.

Gas Elevation Guide

	Under 3,000 ft.	Under 6,000 ft.	Under 7,000 ft.	Under 9,000 ft.	Under 10,000 ft.
351WOKR13L	#67	#68	#69	#70	#71
	Under 2,000 ft.	Under 5,000 ft.	Under 8,000 ft.	Under 10,000 ft.	-
351WOKR13N	#56	#57	#58	#59	-

Startup

Manual Shut Off Valve

- The installer supplied valve must be installed in the gas service line ahead of the appliance regulator in the gas stream and in a position accessible in the event of an emergency.

Pressure Regulator

- Commercial cooking equipment must have a pressure regulator on the incoming service line for safe and efficient operation, since service pressures may fluctuate on local demand. A pressure regulator is packed inside every Cooking Performance Group appliance.

NOTICE: FAILURE TO INSTALL THE PRESSURE REGULATOR WILL VOID THE APPLIANCE WARRANTY.

- The regulators supplied along with Cooking Performance Group appliances, will have 3/4" inlet/outlet openings and are adjusted at the factory for 5" WC (natural gas) or 10" WC (liquid propane gas) depending on customer's ordering instructions.
- Prior to connecting the regulator, check the incoming line pressure, as these regulators can only withstand a maximum pressure of 1/2" psi (14" WC). If the line pressure is beyond this limit, a step down regulator will be required.
- The arrow shown on the bottom of the regulator body shows the gas flow direction, it should point downstream to the appliance.
- Any adjustments to the regulator should be made only by qualified service personnel with the proper equipment.

Check Connections

- Please check installer supplied intake pipes visually and / or blow them with compressed air to clear any dirt particles, threading chips or any other foreign matter before installing a service line. When gas pressure is applied, these particles could clog orifices.
- All connections must be sealed with a joint compound suitable for liquid propane and natural gas, and all connections must be tested with a soapy water solution before lighting any pilots.

Exhaust System

1. The area in front of, around and above the appliance must be kept clear to avoid any obstruction of the flow of combustion and ventilation air. (See the Spec Table on pg.4 for clearances)
2. Provisions should be made for any commercial, heavy duty cooking appliance to have its exhaust combustion waste products released to the outside of the building. The usual practice is to place the appliance under an exhaust hood, which should be constructed in accordance with local codes.
3. Strong exhaust fans in this hood or in the overall air conditioning system can produce a slight vacuum in the room and / or cause air drafts, either of which can interfere with the pilot or burner performance and could be difficult to diagnose. Air movement should be checked during installation. Air openings or baffles may have to be provided in the room, if pilot or burner outage problem persists.

Operating Instructions

Initial Pilot Lighting

- All Cooking Performance Group appliances are adjusted and tested before leaving the factory, effectively matching them to sea level conditions. Adjustments and calibrations to assure proper operation may be necessary on installation to meet local conditions or adapt to low gas characteristics; correct possible problems caused by rough handling or vibration during shipment and are to be performed only by qualified service personnel. These adjustments are the responsibility of the customer and / or dealer and are not covered by our warranty.
- Check all gas connections for leaks with a soapy water solution before lighting any pilots.

Lighting Instructions

- **CAUTION:** When lighting pilots and checking for leaks, do not stand with your face close to the combustion chamber.
1. Turn the control valve to position 0, or OFF.
 2. Make sure all knobs are in a closed state.
 3. Wait for 5 minutes.
 4. Turn pilot valve(s) by adjusting the screw counter clockwise, then light standing pilot and adjust flame 1/4" high.
NOTE: If not lit immediately, wait 1 minute for existing gas in pipe to disperse, and try again after 1 minute.
 5. Turn ON gas valve(s) to light the main burner.

Shutdown Instructions

- For complete shutdown, shut OFF gas valve(s) and turn pilot valve(s) by adjusting the screw clockwise to shut off gas to the pilot(s).
- Wait 5 minutes before next use.

Air Input Adjustment

- **NOTE:** When converting gas types the air input must be adjusted to ensure a clean burning flame.
1. Remove control panel and unscrew damper solid screw.
 2. Rotate damper to desired opening, observe flame, and adjust to appropriate degree.
 3. Tighten screw damper solid screw to ensure equipment will not get loose in transportation.
 4. Reinstall control panel.

Operating Instructions

Gas Type Conversion

- **NOTE: Maintenance must be performed by an authorized service technician**
- 1. Turn off range, remove all objects, and disconnect energy source.
- 2. Remove control panel, cooking grates, pilot light head, and burner.
- 3. Remove main energy nozzle and replacement with other gas source by screwing it in clockwise.
- 4. Reinstall burner, pilot light head, cooking grates, and control panel in proper order.
- 5. Have authorized technician adjust input appropriately.

Warnings

- Always ensure proper supervision while the equipment is in use.
- Simple adjustments to knobs, leg height, etc. do not require assistance from specialized personnel. For more technical adjustments, please consult a qualified technician.
- Use only parts and accessories recommended by Cooking Performance Group.
- Burnoff instructions if applicable
- The equipment will remain hot for a short time after use (residual heat). Avoid all physical contact with the unit during this time to prevent injury.
- This equipment is strictly for professional use and must be used by qualified personnel.
- The installation, startup, and maintenance of this equipment must be carried out by a qualified technician.
- All installation must be carried out according to the law. Cooking Performance Group is not responsible for damages due to an incorrect installation, improper maintenance, or incorrect use.
- These are very important regulations; if they are neglected, the equipment may not perform properly or the user may be placed at risk and void manufacturer warranty.

User Manual

351WOKR13(L/N)



Cleaning & Maintenance

Daily Maintenance

Stainless Steel

1. All stainless steel body parts should be wiped regularly with hot soapy water during the day, and with a liquid cleaner designed for this material at the end of each day. Recommended cleaning agents are Noble Chemicals Sunbright and Noble Chemical Blast.

NOTE: DO NOT USE steel wool, abrasive cloths, or powders to clean stainless surfaces.

2. If it is necessary to scrape stainless steel to remove encrusted materials, soak in hot water to loosen the material, then use a wood or nylon scraper.

NOTE: DO NOT USE a metal knife, spatula, or any other metal tool to scrape stainless steel. Scratches are nearly impossible to remove.

Burners

1. Turn off the unit and allow it at least 15 minutes to cool before proceeding
2. Disconnect the range from the gas line
3. Remove the top attachment
4. Lift off the burner heads by raising the head slightly, sliding to the rear or the range, and lifting upwards.
5. Wash off the above in hot soapy water.
6. Re-install burner parts in reverse order.
7. Wipe body, panel, and control knobs with mild detergent. We recommend using Noble Chemical Blast.
8. Pull catch tray from front body, wipe away residue, and clean with mild detergent.

Yearly Maintenance

- Ensure your Cooking Performance Group range is checked by a qualified technician once a year for efficient operation of the appliance.

Recommended Cleaning Agents		
		
#999SUNBRIGHT Sunbright Lemon Dish Soap	#999KNOCKOUT Knockout Heavy Duty Oven/Grill Degreaser & Carbon Remover	#147BLASTQT Blast Liquid Oven & Grill Cleaner

Troubleshooting

Issue	Possible Causes	Remedies
Pilot not lighting	Insufficient gas pressure in pipe	Contact local gas supply department
	Nozzle occlusion	Dredge nozzle
Pilot ignited, but not the main burner	Insufficient gas pressure in pipe	Contact local gas supply department
	Nozzle occlusion	Dredge nozzle
	Gas control valves broken	Replace control valves
	low flame distance	Adjust distance
	low flame distance	Adjust height of pilot
Inconsistent burning	Insufficient gas pressure in pipe	Contact local gas supply department
	Nozzle occlusion	Adjust nozzle diameter
	Flow of connection pipe is not adequate	Increase pipe's allowable flow
	Damper opening degree is too large	Adjust damper
Yellow flame and/or black smoke	Incorrect gas	Change gas type
	Nozzle does not match gas requirements	Adjust nozzle diameter
	Not enough air to ignite	Increase damper opening degree
	Gas spikes and floats	Turn down valve flow

- **NOTE:** The problems mentioned above are for reference only. If any fault occurs, stop using the machine immediately and contact an authorized technician to check and make repairs