

# Microwave Oven

---

## User manual

MS40DG5504A\*\*\*, MS40DG5504A\*

---



**SAMSUNG**

## Preparation

### Wi-Fi MODEL

#### Connecting SmartThings

1. Launch the QR Code Reader app to scan the QR image attached to the product.
2. When the SmartThings app is running, tap 'Add' to connect the SmartThings app to the product.

#### Registering the product / Reading the manual / Customer support

1. Launch the QR Code Reader app to scan the QR image attached to the product.
2. When the SmartThings app is running, press 'Product support'.
3. Select 'Product registration', 'Manual' or 'Customer support'.

\*Product registration may not be available in all countries.

### NON Wi-Fi MODEL

#### Registering the product / Reading the manual / Customer support

1. Launch the QR Code Reader app to scan the QR image attached to the product.
2. Select 'Product registration', 'Manual' or 'Customer support'.

\*Product registration may not be available in all countries.

## Contents

### Safety instructions **3**

Important safety instructions	3
General safety	5
Microwave operation precautions	6
Limited warranty	7

### Installation **7**

Accessories	7
Installation site	8
Turntable	8

### Maintenance **8**

Cleaning	8
Replacement (repair)	9
Care against an extended period of disuse	9

### Oven features **9**

Oven	9
Control panel	10

### Oven use **10**

How a microwave oven works	10
Checking that your oven is operating correctly	11
Setting the time	11
Cooking/Reheating	12
Power levels and time variations	12
Adjusting the cooking time	13
Stopping the cooking	13
Setting the energy save mode	13
Using the Home Dessert features	14
Using the Auto Cook features	17
Using the Power Defrost features	20

Using the Keep Warm features	22
Using the Deodorization features	22
Using the Lock (3 sec) features	22
Using the Favorite features	23
To use the Favorite setting	23
Switching the beeper off	23
<b>Cookware guide</b>	<b>24</b>
<b>Cooking guide</b>	<b>25</b>
<b>Troubleshooting and information code</b>	<b>29</b>
Troubleshooting	29
Information code	32
<b>Technical specifications</b>	<b>32</b>

## Safety instructions

### IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

**WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

**WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

**WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

**WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

This appliance is intended to be used in household only and it is not intended to be used such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential environments;
- bed and breakfast type environments.

## Safety instructions

Only use utensils that are suitable for use in microwave ovens. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

Metallic containers for food and beverages are not allowed during microwave cooking.

Do not use this appliance for other purposes than cooking. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire. Use this appliance only for its intended use as described in the manual. Do not put corrosive chemicals or vapors in or on this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.

If smoke is observed (emitted), switch off or unplug the appliance and keep the door closed in order to stifle any flames.

Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

The oven should be cleaned regularly and any food deposits removed.

Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation. The microwave oven is intended to be used on the counter top (freestanding) use only, the microwave oven shall not be placed in a cabinet.

The appliance should not be cleaned with a water jet.

The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and

above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This oven should be positioned proper direction and height permitting easy access to cavity and control area.

Before using the your oven first time, oven should be operated with the water during 10 minute and then used.

If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.

The microwave oven has to be positioned so that plug is accessible.

## General safety

Any modifications or repairs must be performed by qualified personnel only.

Do not heat food or liquids sealed in containers for the microwave function.

Do not use benzene, thinner, alcohol, or steam or high-pressure cleaners to clean the oven.

Do not install the oven: near a heater or flammable material; locations that are humid, oily, dusty or exposed to direct sunlight or water; or where gas may leak; or an uneven surface.

This oven must be properly grounded in accordance with local and national codes. Regularly use a dry cloth to remove foreign substances from the power plug terminals and contacts.

Do not pull, excessively bend, or place heavy objects on the power cord.

If there is a gas leak (propane, LP, etc) ventilate immediately. Do not touch the power cord.

Do not touch the power cord with wet hands.

While the oven is operating, do not turn it off by unplugging the power cord.

Do not insert fingers or foreign substances. If foreign substances enter the oven, unplug the power cord and contact a local Samsung service centre.

Do not apply excessive pressure or impact to the oven.

Do not place the oven over fragile objects.

Ensure the power voltage, frequency, and current matches the product specifications.

Firmly plug the power plug into the wall socket. Do not use multiple plug adapters, extension cords, or electric transformers.

Do not hook the power cord on metal objects. Make sure the cord is between objects or behind the oven.

Do not use a damaged power plug, power cord, or loose wall socket. For damaged power plugs or cords, contact a local Samsung service centre.

Do not pour or directly spray water onto the oven.

Do not place objects on the oven, inside, or on the oven door.

Do not spray volatile materials such as insecticide on the oven.

## Safety instructions

Do not store flammable materials in the oven. Because alcohol vapours can contact hot parts of the oven, use caution when heating food or drinks containing alcohol. Children may bump themselves or catch their fingers on the door. When opening/closing the door, keep children away.

### Microwave warning

Microwave heating of beverages may result in delayed eruptive boiling; always use caution when handling the container. Always allow beverages to stand at least 20 seconds before handling. If necessary, stir during heating. Always stir after heating.

In the event of scalding, follow these First Aid instructions:

1. Immerse the scalded area in cold water for at least 10 minutes.
2. Cover with a clean, dry dressing.
3. Do not apply any creams, oils, or lotions.

To avoid damaging the tray or rack, do not put the tray or rack in water shortly after cooking.

Do not use the oven for deep fat frying because the oil temperature cannot be controlled. This could result in a sudden boil over of hot oils.

### Microwave oven precautions

Only use microwave-safe utensils. Do not use metallic containers, gold or silver trimmed dinnerware, skewers, etc.

Remove wire twist ties. Electric arcing may occur.

Do not use the oven to dry papers or clothes.

Use shorter times for small amounts of food to prevent overheating or burning.

Keep the power cord and power plug away from water and heat sources.

To avoid the risk of explosion, do not heat eggs with shells or hard-boiled eggs. Do not heat airtight or vacuum-sealed containers, nuts, tomatoes, etc.

Do not cover the ventilation slots with cloth or paper. This is a fire hazard. The oven may overheat and turn off automatically and will remain off until it cools sufficiently.

Always use oven mitts when removing a dish.

Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.

Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.

Do not operate the oven when it is empty. The oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the oven is started accidentally.

Install the oven in compliance with the clearances in this manual. (See Installing your microwave oven.)

Use caution when connecting other electrical appliances to sockets near the oven.

### Microwave operation precautions

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Do not operate the oven with the door open. Do not tamper with the safety interlocks (door latches). Do not insert anything into the safety interlock holes.
  - Do not place any object between the oven door and front face or allow food or cleaner residue to accumulate on sealing surfaces. Keep the door and door sealing surfaces clean by wiping with a damp cloth and then with a soft, dry cloth after each use.
  - Do not operate the oven if it is damaged. Only operate after it has been repaired by a qualified technician.
- Important:** the oven door must close properly. The door must not be bent; the door hinges must not be broken or loose; the door seals and sealing surfaces must not be damaged.
- All adjustments or repairs must be done by a qualified technician.

## Limited warranty

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit or accessory was caused by the customer. Items this stipulation covers include:

- Door, handles, out-panel, or control panel that are dented, scratched, or broken.
- A broken or missing tray, guide roller, coupler, or wire rack.

Use this oven only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your oven.

Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact a local Samsung service centre or find help and information online at [www.samsung.com](http://www.samsung.com).

 
Use this oven for heating food only. It is intended for domestic use only. Do not heat any type of textiles or cushions filled with grains. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the oven.

To avoid deterioration of the oven surface and hazardous situations, always keep the oven clean and well maintained.

## Installation


### Accessories

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.



**01 Roller ring**, to be placed in the centre of the oven.

 **Purpose:** The roller ring supports the turntable.



**02 Turntable**, to be placed on the roller ring with the centre fitting to the coupler.


**Purpose:** The turntable serves as the main cooking surface; it can be easily removed for cleaning.

### ⚠ CAUTION

**DO NOT** operate the microwave oven without the roller ring and turntable.




## Installation site

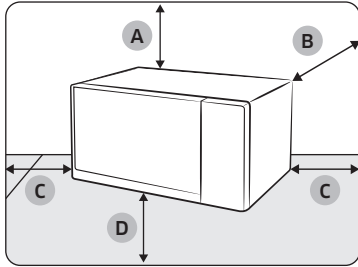

- A.** 85 cm from the floor
- B.** 10 cm from the rear wall
- C.** 10 cm from the side
- D.** 20 cm from above

- Select a flat, level surface approx. 85 cm above the floor. The surface must support the weight of the oven.
- Secure room for ventilation, at least 10 cm from the rear wall and both sides, and 20 cm from above.
- Do not install the oven in hot or damp surroundings, such as next to other microwave ovens or radiators.
- Conform to the power supply specifications of this oven. Use only approved extension cables if you need to use.
- Wipe the interior and the door seal with a damp cloth before using your oven for the first time.

## Turntable

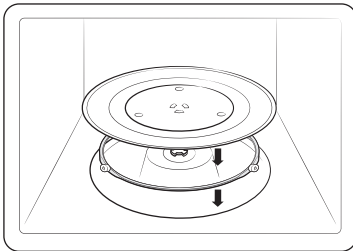

Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.

## Maintenance

### Cleaning

Clean the oven regularly to prevent impurities from building up on or inside the oven. Also pay special attention to the door, door sealing, and turntable and roller ring (applicable models only).

If the door won't open or close smoothly, first check if the door seals have built up impurities. Use a soft cloth in soapy water to clean both the inner and outer sides of the oven. Rinse and dry well.

#### To remove stubborn impurities with bad smells from inside the oven

1. With an empty oven, put a cup of diluted lemon juice on the centre of the turntable.
2. Heat the oven for 10 minutes at max power.
3. When the cycle is complete, wait until the oven cools down. Then, open the door and clean the cooking chamber.

#### ⚠ CAUTION

- Keep the door and door sealing clean and ensure the door opens and closes smoothly. Otherwise, the oven's lifecycle may be shortened.
- Take caution not to spill water into the oven vents.
- Do not use any abrasive or chemical substances for cleaning.
- After each use of the oven, use a mild detergent to clean the cooking chamber after waiting for the oven to cool down.



### Replacement (repair)

**⚠ WARNING**

This oven has no user-removable parts inside. Do not try to replace or repair the oven yourself.


- If you encounter a problem with hinges, sealing, and/or the door, contact a qualified technician or a local Samsung service centre for technical assistance.
- If you want to replace the light bulb, contact a local Samsung service centre. Do not replace it yourself.
- If you encounter a problem with the outer housing of the oven, first unplug the power cord from the power source, and then contact a local Samsung service centre.

### Care against an extended period of disuse

- If you don't use the oven for an extended period of time, unplug the power cord and move the oven to a dry, dust-free location. Dust and moisture that builds up inside the oven may affect the performance of the oven.


## Oven features

### Oven

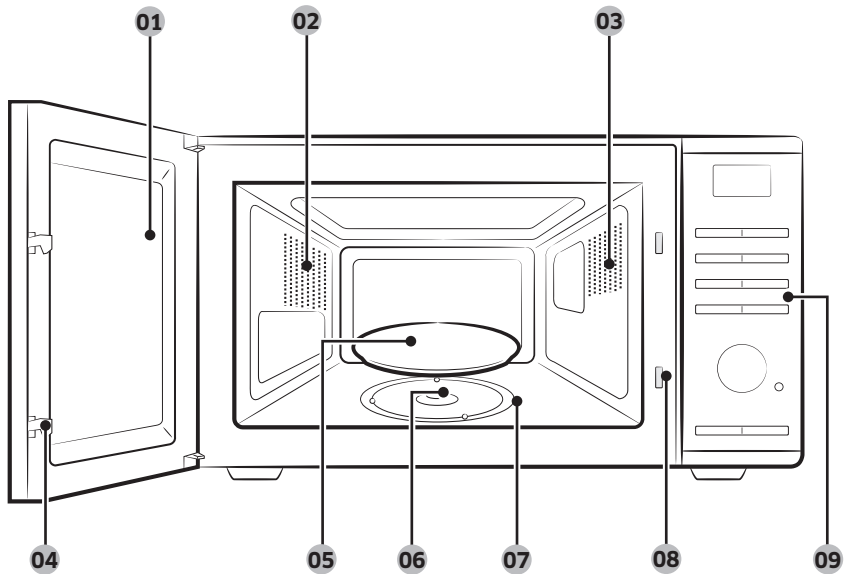

- |                        |                                  |                         |
|------------------------|----------------------------------|-------------------------|
| <b>01</b> Door         | <b>02</b> Ventilation holes      | <b>03</b> Light         |
| <b>04</b> Door latches | <b>05</b> Turntable              | <b>06</b> Coupler       |
| <b>07</b> Roller ring  | <b>08</b> Safety interlock holes | <b>09</b> Control panel |

## Control panel

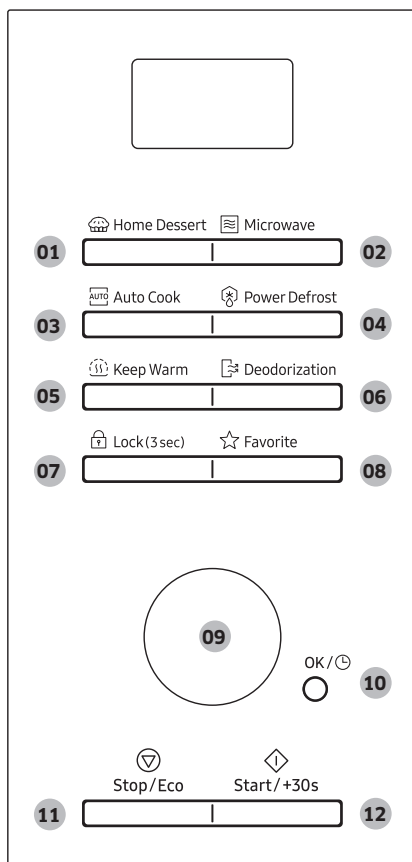

- 01 Home Dessert
- 02 Microwave
- 03 Auto Cook
- 04 Power Defrost
- 05 Keep Warm
- 06 Deodorization
- 07 Lock(3sec)
- 08 Favorite
- 09 Dial Knob (Weight/Serving/Time)
- 10 OK/Clock
- 11 Stop/Eco
- 12 Start/+30s

## Oven use


### How a microwave oven works

Microwaves are high-frequency electromagnetic waves; the energy released enables food to be cooked or reheated without changing either the form or the colour.

You can use your microwave oven to:

- Defrost
- Reheat
- Cook

Cooking principle.

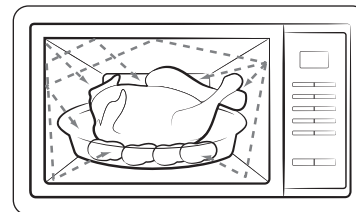

1. The microwaves generated by the magnetron reflected at cavity and are distributed uniformly as the food rotates on the turntable. The food is thus cooked evenly.
2. The microwaves are absorbed by the food up to a depth of about 1 inch (2.5 cm). Cooking then continues as the heat is dissipated within the food.
3. Cooking times vary according to the container used and the properties of the food:
  - Quantity and density
  - Water content
  - Initial temperature (refrigerated or not)

### NOTE

As the centre of the food is cooked by heat dissipation, cooking continues even when you have taken the food out of the oven. Standing times specified in recipes and in this booklet must therefore be respected to ensure:

- Even cooking of the food right to the centre.
- The same temperature throughout the food.

## Checking that your oven is operating correctly

The following simple procedure enables you to check that your oven is working correctly at all times. If you are in doubt, refer to the section entitled "Troubleshooting" on the page 29 to 31.

### NOTE

The oven must be plugged into an appropriate wall socket. The turntable must be in position in the oven. If a power level other than the maximum (100 % - 1000 W) is used, the water takes longer to boil.

Open the oven door by pulling the handle on the upper side of the door. Place a glass of water on the turntable. Close the door.




Press the **START/+30s** button and set the time to 4 or 5 minutes, by pressing the **START/+30s** button the appropriate number of times.

**Result:** The oven heats the water for 4 or 5 minutes.  
The water should then be boiling.


## Setting the time

There is some basic information that you should know before going directly to a cooking recipe. Before or during any cooking mode, you can set/change the clock or the kitchen timer to your needs.

It is important to set the correct clock time to ensure correct automatic operations. The time can be displayed in either the 24- hour (default) or 12-hour notation. You must set the clock.

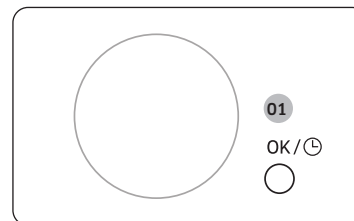


1. Press the **OK/Clock** button.

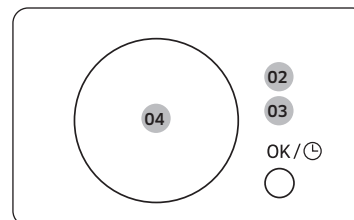

2. Set the 24-hour or 12-hour notation by turning the **Dial Knob**. And then press the **OK/Clock** button.

3. Turn the **Dial Knob** to set the hour. And then press the **OK/Clock** button.

4. Turn the **Dial Knob** to set the minute.

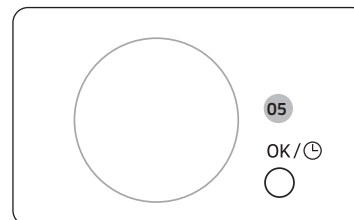

5. When the right time is displayed, press the **OK/Clock** button to start the clock.

**Result:** The time is displayed whenever you are not using the microwave oven.

# Oven use

## Cooking/Reheating

The following procedure explains how to cook or reheat food.


**NOTE**

ALWAYS check your cooking settings before leaving the oven unattended.


Open the door. Place the food in the centre of the turntable. Close the door. Never switch the microwave oven on when it is empty.



1. Press the **Microwave** button.  
**Result:** The 1000 W (Maximum cooking power) indications are displayed:  
⏻ (microwave mode)

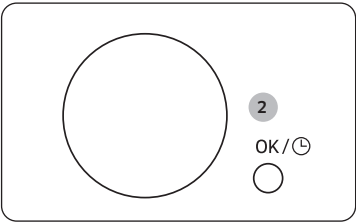

2. Select the appropriate power level by turning the **Dial Knob**. (Refer to the power level table.) And then press the **OK/Clock** button.

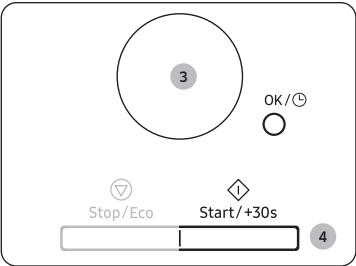

3. Set the cooking time by turning the **Dial Knob**.  
**Result:** The cooking time is displayed.
4. Press the **Start/+30s** button.  
**Result:** The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished.
- 1) The oven beeps 4 times.
  - 2) The end reminder signal will beep 3 times (once every minute).
  - 3) The current time is displayed again.

## Power levels and time variations

The power level function enables you to adapt the amount of energy dissipated and thus the time required to cook or reheat your food, according to its type and quantity. You can choose between seven power levels.

Power level	Percentage (%)	Output (W)
FULL	100	1000
HIGH	70	700
MEDIUM HIGH	60	600
MEDIUM	45	450
MEDIUM LOW	30	300
LOW	18	180
DEFROST	10	100

The cooking times given in recipes and in this booklet correspond to the specific power level indicated.

If you select a...	Then the cooking time must be...
Higher power level	Decreased
Lower power level	Increased


## Adjusting the cooking time

### Adjusting the Cooking time

You can increase the cooking time by pressing the **Start/+30s** button once for each 30 seconds to be added.

In Microwave mode, pressing **Start/+30s** button increases cooking time.

- Check how cooking is progressing at any time simply by opening the door
- Increase the remaining cooking time

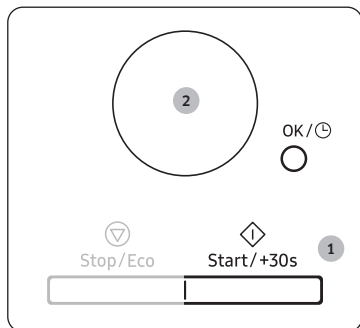

#### Method 1

To increase the cooking time of your food during cooking, press the **Start/+30s** button once for each 30 seconds that you wish to add.

- Example: To add three minutes, press the **Start/+30s** button six times.

#### Method 2

Just turning **Dial Knob** to adjust cooking time.

- To increase cooking time, turn to right and to decrease cooking time, turn to left.

## Stopping the cooking

You can stop cooking at any time so that you can:

- Check the food
- Turn the food over or stir it
- Leave it to stand

To stop the cooking...	Then...
Temporarily	Open the door or press the <b>Stop/Eco</b> button once. <b>Result:</b> Cooking stops. To resume cooking, close the door again and press the <b>Start/+30s</b> button.
Completely	Press the <b>Stop/Eco</b> button once. <b>Result:</b> Cooking stops. If you wish to cancel the cooking settings, press the <b>Stop/Eco</b> button again.

## Setting the energy save mode

To reduce power consumption when not using the oven, use the power saving function of the oven.



- Press the **Stop/Eco** button.  
**Result:** Display off.
- To remove energy save mode, open the door or press the **Stop/Eco** button and then display shows current time. The oven is ready for use.

### Auto power saving

- After 25 minutes of user inactivity, the oven automatically enters power saving mode. Any previous function will be cancelled, and the current time will be displayed.
- After 5 minutes of the door being open, the oven lamp will turn off.

# Oven use

## Using the Home Dessert features

The **Home Dessert** feature has pre-programmed cooking times. You do not need to set either the cooking times or the power level.


### NOTE

Use only recipients that are microwave-safe.


First, place the food in the centre of the turntable and close the door.



1. Press the **Home Dessert** button.

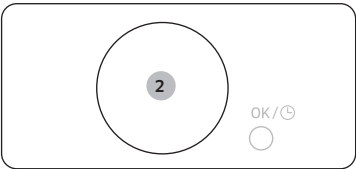

2. Select the type of food that you are cooking by turning the **Dial Knob**.

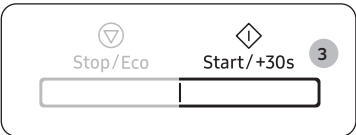

3. Press the **Start/+30s** button.

**Result:** The food is cooked according to the pre-programmed setting selected.

- 1) The oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

The following table presents auto programme for **Home Dessert** food. The table contains food quantities, weight ranges, and appropriate recommendations.

Code	Food	Serving Size	Instructions
1	Walnut Pound Cake	1 serving	<b>Ingredients</b> Flour 120 g, Butter 140 g, Black sugar 100 g, Egg 2 pcs., Walnut (Chopped) 50 g, Baking powder 4 g  <b>1.</b> Combine a butter and black sugar in bowl. <b>2.</b> Add egg and mix well. <b>3.</b> Add a flour, baking powder and keep stirring. <b>4.</b> Add a walnut and mix well. <b>5.</b> Pour a mixture in greased glass pyrex(rectangle type - 22x12x7(WxDxH, cm). <b>6.</b> Put the bowl in the microwave oven and select the <b>Home Dessert</b> [1]. <b>7.</b> After cooking, stand for 2-3 minutes.
2	Banana Bread	1 serving (6 pcs.)	<b>Ingredients</b> Banana 3 pcs., Pancake mix 120 g, Milk 120 g, Egg 1 pc., Malt syrup 2 tbsp.  <b>1.</b> Chop the banana. <b>2.</b> Combine a pancake mix, milk, egg, malt syrup in bowl. <b>3.</b> Add banana and mix well. <b>4.</b> Pour a mixture in 6 paper cups. <b>5.</b> Put paper cups in the microwave oven and select the <b>Home Dessert</b> [2]. <b>6.</b> After cooking, stand for 2-3 minutes.

Code	Food	Serving Size	Instructions
3	Sponge Cake	1 serving	<b>Ingredients</b> Flour 170 g, Butter 50 g, Sugar 150 g, Egg 3 pcs., Baking powder 10 g
			<ol style="list-style-type: none"> <li>1. Combine a butter and sugar in bowl.</li> <li>2. Add egg and mix well.</li> <li>3. Add a flour, baking powder and keep stirring.</li> <li>4. Pour a mixture in greased glass(Circle type).</li> <li>5. Put the bowl in the microwave oven and select the <b>Home Dessert</b> [3].</li> <li>6. After cooking, stand for 2-3 minutes.</li> </ol>
4	Brownie	1 serving	<b>Ingredients</b> Flour 90 g, Butter(Melted) 100 g, Sugar 230 g, Egg 2 pcs., Cocoa power 40 g
			<ol style="list-style-type: none"> <li>1. Combine a butter, beaten eggs, sugar in bowl.</li> <li>2. Add a flour, cocoa powder and keep stirring.</li> <li>3. Pour a mixture in greased glass pyrex(rectangle type - 22x12x7(WxDxH, cm).</li> <li>4. Put the bowl in the microwave oven and select the <b>Home Dessert</b> [4].</li> <li>5. After cooking, stand for 20-30 minutes.</li> </ol>

Code	Food	Serving Size	Instructions
5	Egg Pudding	1 serving (3 pcs.)	<b>Ingredients</b> Milk 250 g, Sugar 40 g, Egg 2 pcs.
			<ol style="list-style-type: none"> <li>1. Crack the two eggs into a bowl. Lightly beat the egg with a balloon whisk. Don't let the tip of the whisk leave the bottom of the bowl to avoid creating too much foam.</li> <li>2. Combine milk, sugar in other bowl.</li> <li>3. Add the milk to the beaten egg while whisking the mixture.</li> <li>4. Sieve the egg mixture with a fine mesh strainer. Scrape off the bottom of the strainer with a spatula. Remove any foam on the surface with a spoon.</li> <li>5. Pour the mixture into custard cups.</li> <li>6. Put the cups in the microwave oven and select the <b>Home Dessert</b> [5].</li> <li>7. After cooking, refrigerate and serve.</li> </ol>
6	Chocolate Mug Cake	1 serving	<b>Ingredients</b> Butter 30 g, Sugar 60 g, Egg 1 pc., Heavy cream 40 g, Flour 25 g, Cocoa powder 15 g, Vanilla 1.5 g, Semi-sweet chocolate chips 50 g
			<ol style="list-style-type: none"> <li>1. Combine the butter, egg and cream together in a mug until well combined.</li> <li>2. Add the flour, sugar and keep stirring.</li> <li>3. Add the cocoa, vanilla and stir until just combined.</li> <li>4. Stir in the chocolate chips.</li> <li>5. Put the mug(pyrex 500ml) in the microwave oven and select the <b>Home Dessert</b> [6].</li> <li>6. After cooking, stand for 2-3 minutes.</li> </ol>



## Oven use

Code	Food	Serving Size	Instructions
7	Mug Cake	1 serving	<b>Ingredients</b> Butter 30 g, Sugar 60 g, Egg 1 pc., Flour 50 g, Milk 30 g, Vanilla 6 g, Almond powder 3 g, Baking powder 1.5 g
			<ol style="list-style-type: none"> <li>1. Combine the butter, egg and milk together in a mug(pyrex 500ml) until well combined.</li> <li>2. Add the flour, sugar, baking powder and keep stirring.</li> <li>3. Add the almond powder, vanilla and stir until just combined.</li> <li>4. Put the mug(pyrex 500ml) in the microwave oven and select the <b>Home Dessert</b> [7].</li> <li>5. After cooking, stand for 2-3 minutes.</li> </ol>
8	Café Latte	1 serving	<b>Ingredients</b> Instant coffee powder 2 g, Water 50 g, Milk 125 g
			<ol style="list-style-type: none"> <li>1. Mix the coffee powder and water in mug.</li> <li>2. Pour milk in other mug.</li> <li>3. Put the coffee mixture in the microwave oven and select the <b>Home Dessert</b> [8].</li> <li>4. When the beeps, take mug out.</li> <li>5. Put the milk in the microwave oven and press the <b>Start/+30s</b> button.</li> <li>6. After cooking, mix all well and serve.</li> </ol>

Code	Food	Serving Size	Instructions
9	Green Tea Latte	1 serving	<b>Ingredients</b> Green tea powder 6 g, Sugar 15 g, Milk 250 g
			<ol style="list-style-type: none"> <li>1. Mix all ingredients in mug.</li> <li>2. Put the mug in the microwave oven and select the <b>Home Dessert</b> [9].</li> <li>3. After cooking, mix well and serve.</li> </ol>
10	Milk Tea	1 serving	<b>Ingredients</b> Black tea bag 2 pcs., Water 60 g, Milk 125 g
			<ol style="list-style-type: none"> <li>1. Mix the black tea bag and water in mug.</li> <li>2. Pour milk in other mug.</li> <li>3. Put the tea mixture in the microwave oven and select the <b>Home Dessert</b> [10].</li> <li>4. When the beeps, take mug out.</li> <li>5. Put the milk in the microwave oven and press the <b>Start/+30s</b> button.</li> <li>6. After cooking, mix all well and serve.</li> </ol>

## Using the Auto Cook features

The **Auto Cook** features has 30 pre-programmed cooking times. You do not need to set either the cooking times or the power level.

You can adjust the type of the serving by turning the **Dial Knob**.


### NOTE

Use only recipients that are microwave-safe.

First, place the food in the centre of the turntable and close the door.



1. Press the **Auto Cook** button.

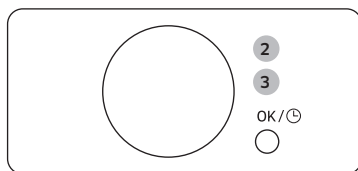

2. Turning the **Dial Knob** button to select the desired category. And then press **OK/Clock** button.

- For more information, see the "Auto Cook programme description" on page 17 to 20.

3. Select the type of food that you are cooking by turning the **Dial Knob**. And then press **OK/Clock** button.


4. Select the size of the serving by turning the **Dial Knob**.

- Depending on the selected menu, you may have only one weight option available to select.

5. Press the **Start/+30s** button.

**Result:** The oven light comes on and the turntable starts rotating. Cooking starts and when it has finished.

- 1) The oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

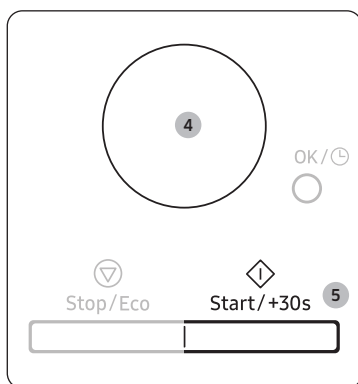

The following table presents **Auto Cook** programmes for cooking, roasting, and baking. The table contains food quantities, weight ranges, and appropriate recommendations. Cooking modes and times have been pre-programmed for your convenience.

### CAUTION

Use oven gloves when taking out food.

### Auto Cook programme description

#### 1. Auto Reheat

Code	Food	Serving Size	Instructions
1-1	Chilled Ready Meal	300-350 g	Put meal on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta). Stand for 2-3 minutes.
		400-450 g	
1-2	Frozen Ready Meal	300-350 g	Put meal on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 2 components (e.g. spaghetti with sauce or rice with vegetables). Stand for 2-3 minutes.
		400-450 g	
1-3	Stew	200-250 g	Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Stand for 2-3 minutes.
		400-450 g	
		600-650 g	
		800-850 g	

## Oven use

Code	Food	Serving Size	Instructions
1-4	Pasta/Soup	200-250 g	Pour into a deep ceramic soup plate or bowl and cover during heating and standing. Stir carefully before and after standing time. Stand for 2-3 minutes.
		400-450 g	
		600-650 g	
		800-850 g	
1-5	Pizza Reheat	1 slice	Place pizza slices on a microwave-safe plate with the wide ends of the slices towards the outside edge of the plate. Do not let the slices overlap. Do not cover.
		2 slices	
		3 slices	
		4 slices	

### 2. Healthy Cooking

Code	Food	Serving Size	Instructions
2-1	Broccoli Florets	250 g	Rinse and clean fresh broccoli and prepare florets. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
2-2	Carrots	250 g	Rinse and clean carrots and prepare even slices. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.
2-3	Green Beans	250 g	Rinse and clean green beans. Put them evenly into a glass bowl with lid. Add 30 ml (2 tbsp) water. Put bowl in the centre of turntable. Cook covered. Stir after cooking. Stand for 1-2 minutes.

Code	Food	Serving Size	Instructions
2-4	Peeled Potatoes	250 g	Wash and peel the potatoes and cut into a similar size. Put them into a glass bowl with lid. Add 45-60 ml (3-4 tbsp) water. Put bowl in the centre of turntable. Cook covered. Stand for 2-3 minutes.
2-5	Brown Rice	250 g	Use a large glass ovenware dish with lid. Add double quantity of cold water (500 ml). Cook covered. Stir before standing time and add salt and herbs. Stand for 5-10 minutes.
2-6	Wholemeal Macaroni	250 g	Use a large glass ovenware dish with lid. Add 1 L hot boiling water, a pinch of salt and stir well. Cook covered. Stir before standing time and drain thoroughly afterwards. Stand for 1 minutes.
2-7	Fresh Fish Fillets	300 g	Rinse fish fillets and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce the film. Put dish on turntable. Stand for 1-2 minutes.
2-8	Fresh Salmon Fillets	300 g	Rinse fish fillets and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce the film. Put dish on turntable. Stand for 1-2 minutes.
2-9	Fresh Prawns	250 g	Rinse prawns fillets and put on a ceramic plate, add 1 tbsp lemon juice. Cover with microwave cling film. Pierce the film. Put dish on turntable. Stand for 1-2 minutes.
2-10	Chicken Breasts	300 g	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce the film. Put dish on turntable. Stand for 2 minutes.

Code	Food	Serving Size	Instructions
2-11	Turkey Breasts	300 g	Rinse pieces and put on a ceramic plate. Cover with microwave cling film. Pierce the film. Put dish on turntable. Stand for 2 minutes.
2-12	Meatball	1 serving	Ingredients For Meat Balls. 450 g ground beef, ¼ cup chopped onion, 1 egg beaten, 1 teaspoon salt, ¼ teaspoon pepper and 2 tablespoons water. Combine all ingredients and mix well. Shape into 20 meat balls(each Ø25 mm). Place meat balls in utensil. Cover with microwave cling wrap turning back one corner of the wrap by about 50 mm to vent. Cook. After cooking, stand meat balls for 5 minutes. Serve.
2-13	Ham Omelet	1 serving	Ingredients for omelette. 3 med. sized eggs, 1 tomato, 30 g chopped ham, 2 tablespoons milk, herbs & Spices. Beat eggs, add ham, 2 tablespoons milk, herbs and spices. Cut tomato in cubes add to mix plus 50 g grated cheese. After oven beeps, stir well and press start to continue. After cooking stand for 2min. Serve.

### 3. Snack

Code	Food	Serving Size	Ingredients and Instructions
3-1	Frozen Chicken wings	150-200 g	Use precooked, frozen chicken wings. Place the chicken wings around the plate in a spoke-like fashion and cover with wax paper. Let stand for 1 to 2 minutes.
		200-250 g	

Code	Food	Serving Size	Ingredients and Instructions
3-2	Frozen Chicken nuggets	100-150 g	Place a paper towel on a plate and arrange the nuggets in a spoke-like fashion on the paper towel. Do not cover. Let stand for 1 minute after heating.
		150-200 g	
3-3	Frozen French Fries	100-150 g	Place two paper towels on a microwavesafe plate and arrange the French fries on the towels without letting them overlap. Blot the fries with additional paper towels after removing from the oven. Let stand for 1 minute.
		150-200 g	
3-4	Frozen Cheese sticks	5-6 ea	Place the cheese sticks on a plate in a spokelike fashion. Do not cover. Let stand for 1 to 2 minutes after heating.
		7-10 ea	
3-5	Nacho	1 serving	Place the nachos on a plate without letting them overlap. Sprinkle cheese evenly over them. Contents: 2 cups tortilla chips ½ cup grated cheese.
3-6	Quiche (Chilled)	600 g	This program is suitable for refrigerated quiche. Remove a package and put on the dish. Place on turntable in oven. After cooking, stand for 1-2 minutes.
3-7	Porridge	1 serving	Place dry porridge oats and water or milk in a microwave safe bowl. Add 150 ml water or milk for 35 g and 300 ml water or milk for 70 g. Cook uncovered. After oven beeps, stir the oats well and press start to continue. After cooking, stir well and top with brown sugar or honey.
		2 serving	

# Oven use

Code	Food	Serving Size	Ingredients and Instructions
3-8	Potato wedges	300-350 g	Wash normal sized potatoes and cut them into wedges. Brush with olive oil and spices. Place them with the cut side on the microwave safe plate. Stand for 1-2 minutes.
		400-450 g	

## 4. Soften / Melt

Code	Food	Serving Size	Instructions
4-1	Melt Butter	50 g	Cut butter into 3 or 4 pieces and Put them on small glass bowl. Melt uncovered. Stir after cooking. Stand for 1-2 minutes.
		100 g	
4-2	Melt Chocolate	50 g	Grate dark chocolate and put in small glass bowl. Melt uncovered. Stir after melting. Stand for 1-2 minutes.
		100 g	
4-3	Melt Sugar	25 g	Put sugar on small glass bowl. Add 10 ml water for 25 g and add 20 ml water for 50 g. Melt uncovered. Take out carefully, use oven gloves! Use spoon or fork and pour caramel decorations on baking paper. Let stand for 10 minutes until dry and remove from paper.
		50 g	
4-4	Soften Butter	50 g	Cut butter into 3 or 4 pieces and Put them in small glass bowl. Soften uncovered. Stand for 1-2 minutes.
		100 g	

 
## Using the Power Defrost features

The **Power Defrost** features enable you to defrost meat, poultry, fish, bread and cake. The defrost time and power level are set automatically. You simply select the programme and the weight.


### NOTE

Use only containers that are microwave-safe.


Open the door. Place the frozen food on a ceramic in the centre of the turntable. Close the door.



1. Press the **Power Defrost** button.

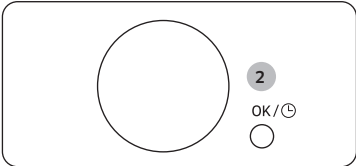

2. Select the type of food that you are cooking by turning the **Dial Knob**. And then press the **OK/Clock** button.

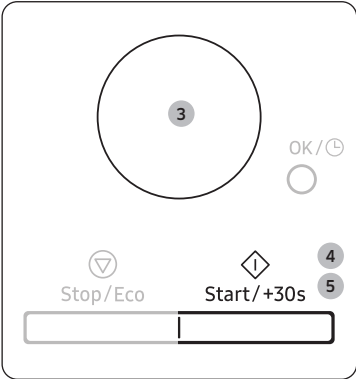

3. Select the size of the serving by turning the **Dial Knob**. (Refer to the table on the side.)

4. Press the **Start/+30s** button.

### Result:

- Defrosting begins.
- The oven beeps through defrosting to remind you to turn the food over.

5. Press the **Start/+30s** button again to finish defrosting.

### Result:

- 1) The oven beeps 4 times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

The following table presents the various **Power Defrost** programmes, serving size, standing times and appropriate instructions. Remove all kind of package material before defrosting. Place meat, poultry, fish, bread and cake on a flat glass dish or ceramic plate.

Code	Food	Serving Size	Instructions
1	Meat	100-1500 g	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat. Stand for 10-30 minutes.
2	Poultry	100-1500 g	This program is suitable for whole chicken as well as for chicken pieces. Before defrosting, if a lot of ice crystals are present on poultry surface, it should be rinsed under cold water until all the ice crystals are removed. The poultry should then be left to stand for 5 to 10 min. at room temperature. Shield the leg and wing tips with aluminum foil. Place chicken pieces skin-side down, and whole chicken breast-side down on the middle of a flat microwave-safe plate. Turn the poultry over when the oven beeps.
3	Fish	100-1500 g	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets. Stand for 10-30 minutes.

Code	Food	Serving Size	Instructions
4	Bread/Cake	100-1000 g	Put bread on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door). This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle. This programme is suitable for all kinds of yeast cake, biscuit, cheese cake and puff pastry. It is not suitable for short/crust pastry, fruit and cream cakes as well as for cake with chocolate topping. Stand for 5-30 minutes.

## Oven use

### Using the Keep Warm features

The **Keep Warm** feature keeps food hot until it's served. Use this function to keep food warm until ready to serve. You can select warming temperature either hot or mild by turning the **Dial Knob**.

#### NOTE

- The **Keep Warm** time has been specified as 99 minutes.
- The maximum **Keep Warm** time is 99 minutes.



1. Press the **Keep Warm** button.



2. Press the **Start/+30s** button.

**Result:** The 99 minutes is displayed.

- To stop warming the food, open the door or press **Stop/Eco** button.

 
#### CAUTION

- Do not use this function to reheat cold foods. Use this only for keeping food warm that has just been cooked.
- Do not keep food for more than 1 hour. The food surface may be dried.
- Do not put food covered with lids or plastic wrap in the oven.
- Use oven gloves when taking out food.

### Using the Deodorization features

Use this features after cooking odorous food or when there is a lot of smoke in the oven interior.

First clean the oven interior.



Press the **Deodorization** button after you have finished cleaning. As soon as you press the **Deodorization** button, the operation will start automatically. when it has finished, the oven beeps four times.

#### NOTE

- The deodorization time has been specified as 5 minutes. It increases by 30 seconds whenever the **Start/+30s** button is pressed.
- The maximum deodorization time is 15 minutes.

### Using the Lock (3 sec) features

Your microwave oven is fitted with a special child lock programme, which enables the oven to be "locked" so that children or anyone unfamiliar with it cannot operate it accidentally.



1. Press the **Lock (3 sec)** button for 3 seconds.
  - The oven is locked (no functions can be selected).
  - The display shows "L".



2. To unlock the oven, press the **Lock (3 sec)** button for 3 seconds. The oven can be used normally.




## Using the Favorite features

If you often cook or reheat the same types of dishes, you can store the cooking times and power levels in the oven's memory, so that you do not have to reset them each order.


You can store two different setting.



1. Set your cooking programme as usual (cooking time and power level) see Cooking/Reheating page again if necessary.

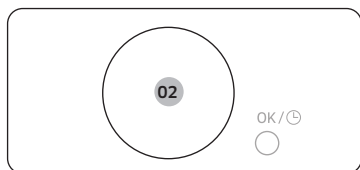

2. Press **Favorite** button, then select the program that you want to save by turning the **Dial Knob**.  
P1 : First setting  
P2 : Second setting

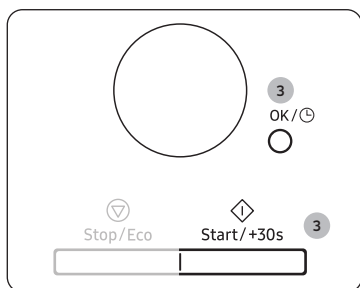

3. Press the **OK/Clock** button to finish the setting. Or, press the **Start/+30s** button to start the program immediately.  
**Result:** Your setting are now stored in the oven's memory.

### NOTE

Example : If you want to store Microwave mode, Power 600 W and 3 minutes on P1.


1. Press the **Microwave** button.
2. Set the power 600 W by turning the **Dial Knob**. And then press the **OK/Clock** button.
3. Set the cooking time 3 minutes by turning the **Dial Knob**.
4. Press **Favorite** button, then select the P1.
5. Press the **OK/Clock** or **Start/+30s** button to finish the setting.

## To use the Favorite setting

First, place the food in the centre of the turntable and close the door.




1. Press **Favorite** button, then select the program by turning the **Dial Knob**.  
P1 : First setting  
P2 : Second setting

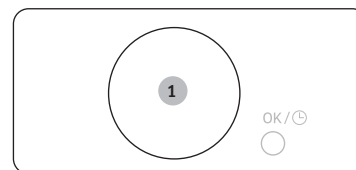

2. Press the **Start/+30s** button.  
**Result:** The food is cooked as requested.

## Switching the beeper off

You can switch the beeper off whenever you want.

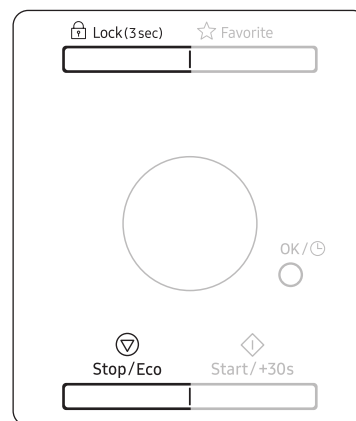

1. Press the **Lock (3 sec)** and **Stop/Eco** button at the same time. The oven does not beep to indicate the end of a function.
2. To switch the beeper back on, press the **Lock (3 sec)** and **Stop/Eco** button again at the same time. The oven operates normally.

# Cookware guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Crust plate	✓	Do not preheat for more than 8 minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	X	May catch fire.
• Recycled paper or metal trims	X	May cause arcing.
Glassware		
• Oven-to-tableware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.

Cookware	Microwave-safe	Comments
Metal		
• Dishes	X	May cause arcing or fire.
• Freezer bag twist ties	X	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	X	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓X	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ : Recommended      ✓X : Use caution      X : Unsafe

# Cooking guide

We provide these cooking guides to help you make the most out of this oven. Experience our cooking know-how to add convenience and richness to your life.

## Microwave cooking guide

- Cover the food throughout the entire cooking. The vaporised moisture from the food circles through inside and helps cook evenly.
- When cooking is complete, let stand for the specified time. This allows the food to even out inside.
- Use only microwave-safe cookware.

### Frozen vegetables

- Use a suitable glass Pyrex container with a lid.
- Stir twice during cooking and once after cooking, and then add seasoning to your preference.

Food	Serving Size (g)	Power (W)	Time (min.)
Spinach	150	600	5-6
	Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.		
Broccoli	300	600	8-9
	Add 30 ml (2 tbsp) cold water. Stand for 2-3 minutes.		
Peas	300	600	7-8
	Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.		
Green Beans	300	600	7½-8½
	Add 30 ml (2 tbsp) cold water. Stand for 2-3 minutes.		
Mixed Vegetables (Carrots/Peas/Corn)	300	600	7-8
	Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.		
Mixed Vegetables (Chinese style)	300	600	7½-8½
	Add 15 ml (1 tbsp) cold water. Stand for 2-3 minutes.		

## Fresh vegetables

- Use a suitable glass Pyrex container with a lid.
- Cut ingredients into as small pieces as possible to reduce the cooking time.
- Add 30-45 ml of cold water to every 250 g unless otherwise specified.
- Stir once during cooking and once after cooking, and then add seasoning to your preference.

Food	Serving Size (g)	Power (W)	Time (min.)
Broccoli	250 500	1000	4½-5 7-8
	Prepare even sized florets. Arrange the stems to the centre. Stand for 3 minutes.		
Brussels Sprouts	250	1000	6-6½
	Add 60-75 ml (4-5 tbsp) water. Stand for 3 minutes.		
Carrots	250	1000	4½-5
	Cut carrots into even sized slices. Stand for 3 minutes.		
Cauliflower	250 500	1000	5-5½ 7½-8½
	Prepare even sized florets. Cut big florets into halves. Arrange stems to the centre. Stand for 3 minutes.		
Courgettes	250	1000	4-4½
	Cut courgettes into slices. Add 30 ml (2 tbsp) water or a knob of butter. Cook until just tender. Stand for 3 minutes.		
Egg plants	250	1000	3½-4
	Cut egg plants into small slices and sprinkle with 1 tbsp lemon juice. Stand for 3 minutes.		
Leeks	250	1000	4-4½
	Cut leeks into thick slices. Stand for 3 minutes.		

## Cooking guide

Food	Serving Size (g)	Power (W)	Time (min.)
Mushrooms	125	1000	1½-2
	250		2½-3
	Prepare small whole or sliced mushrooms. Do not add any water. Sprinkle with lemon juice. Spice with salt and pepper. Drain before serving. Stand for 3 minutes.		
Onions	250	1000	5-5½
	Cut onions into slices or halves. Add only 15 ml (1 tbsp) water. Stand for 3 minutes.		
Pepper	250	1000	4½-5
	Cut pepper into small slices. Stand for 3 minutes.		
Potatoes	250	1000	4-5
	500		7-8
	Weigh the peeled potatoes and cut them into similar sized halves or quarters. Stand for 3 minutes.		
Turnip Cabbage	250	1000	5½-6
	Cut turnip cabbage into small cubes. Stand for 3 minutes.		

### Rice and pasta

#### Rice

- Use a large-sized glass Pyrex container with a lid. Note that rice doubles in volume during cooking.

#### Pasta

- Use a large-sized glass Pyrex container. Cook uncovered.
- Add boiling water and a little salt, and stir well. Stir several times during and after cooking.
- Cover with a lid while letting stand, and then drain well.

Food	Serving Size (g)	Power (W)	Time (min.)
White Rice (Parboiled)	250	1000	15-16
	375		17½-18½
	Add 500 ml cold water.(250 g), Add 750 ml cold water. (375 g) Stand for 5 minutes.		
Brown Rice (Parboiled)	250	1000	20-21
	375		22-23
	Add 500 ml cold water.(250 g), Add 750 ml cold water. (375 g) Stand for 5 minutes.		
Mixed Rice (Rice + Wild Rice)	250	1000	16-17
	Add 500 ml cold water. Stand for 5 minutes.		
Mixed Corn (Rice + Grain)	250	1000	17-18
	Add 400 ml cold water. Stand for 5 minutes.		
Pasta	250	1000	10-11
	Add 1000 ml hot water. Stand for 5 minutes.		

## Reheating guide

### General

This reheating guide is based on the condition that the room temperature is between 18 °C and 20 °C for liquid, and between 5 °C and 7 °C for chilled food. Follow the operating time, power level, and standing time specified in this table.

Food	Serving Size (g)	Power (W)	Time (min.)
Drinks (Coffee, Tea and Water)	150 ml (1 cup)	1000	1-1½
	300 ml (2 cups)		2-2½
	450 ml (3 cups)		3-3½
	600 ml (4 cups)		3½-4
	Pour into cups and reheat uncovered: 1 cup in the centre, 2 cups opposite of each other, 3 cups in a circle. Keep in microwave oven during standing time and stir well. Stand for 1-2 minutes.		

Food	Serving Size (g)	Power (W)	Time (min.)
Soup (Chilled)	250 g	1000	2½-3
	350 g		3-3½
	450 g		3½-4
	550 g		4½-5
	Pour into a deep ceramic plate or deep ceramic bowl. Cover with plastic lid. Stir well after reheating. Stir again before serving. Stand for 2-3 minutes.		
Stew (Chilled)	350	600	4½-5½
	Put stew in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Stand for 2-3 minutes.		
Pasta with Sauce (Chilled)	350	600	3½-4½
	Put pasta (e.g. spaghetti or egg noodles) on a flat ceramic plate. Cover with microwave cling film. Stir before serving. Stand for 3 minutes.		
Filled Pasta with Sauce (Chilled)	350	600	4-5
	Put filled pasta (e.g. ravioli, tortellini) in a deep ceramic plate. Cover with plastic lid. Stir occasionally during reheating and again before standing and serving. Stand for 3 minutes.		
Plated Meal (Chilled)	350	600	4½-5
	450		5½-6½
	Plate a meal of 2-3 chilled components on a ceramic dish. Cover with microwave cling-film. Stand for 3 minutes.		
Cheese Fondue Ready-to- Serve (Chilled)	400	600	6-7
	Put the ready-to-serve cheese fondue in a suitable sized glass pyrex bowl with lid. Stir occasionally during and after reheating. Stir well before serving. Stand for 1-2 minutes.		

### Special care for baby food

To prevent accidents such as burns, special care must be taken for baby food before serving. Make sure to strictly follow this reheating guide for baby food.

#### Baby food

- Use a deep ceramic plate and cover it with a plastic lid.
- Recommended serving temperature is 30-40 °C.

#### Baby milk

- Use a sterilised glass bottle and reheat it uncovered.
- Remove the teat before reheating. Otherwise, the milk in the bottle boils over.

Food	Serving Size	Power (W)	Time (sec.)
Baby Food (Vegetables + Meat)	190 g	600	30
	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Stand for 2-3 minutes.		
Baby Porridge (Grain + Milk + Fruit)	190 g	600	20
	Empty into ceramic deep plate. Cook covered. Stir after cooking time. Before serving, stir well and check the temperature carefully. Stand for 2-3 minutes.		
Baby Milk	100 ml	300	30-40
	200 ml		60-70
	Stir or shake well and pour into a sterilised glass bottle. Place into the centre of turn-table. Cook uncovered. Shake well and stand for at least 3 minutes. Before serving, shake well and check the temperature carefully.		

## Cooking guide

### Defrosting guide

This defrosting guide is based on the condition that frozen food is between -18 °C and -20 °C in internal temperatures. The standing time varies depending on the food type (meat or vegetables) and serving size (thinner or thicker pieces of food).

- Put frozen food in a microwave-safe container uncovered.
- Turn it over halfway through defrosting time and drain well when complete.

Food		Serving Size	Power (W)	Time (min.)
Meat	Minced Meat	250 g 500 g	180	6-7 8-13
	Pork Steaks	250 g		7-8
	Place the meat on turntable. Shield thinner edges with aluminium foil. Turn over after half of defrosting time! Stand for 15-30 minutes.			
Poultry	Chicken Pieces	500 g (2 pcs)	180	14-15
	Whole Chicken	1200 g		32-34
	First, put chicken pieces first skin-side down, whole chicken first breast-side-down on a flat ceramic plate. Shield the thinner parts like wings and ends with aluminium foil. Turn over after half of defrosting time! Stand for 15-60 minutes.			

Food		Serving Size	Power (W)	Time (min.)
Fish	Fish Fillets	200 g	180	6-7
	Whole Fish	400 g		11-13
	Put frozen fish in the middle of a flat ceramic plate. Arrange the thinner parts under the thicker parts. Shield narrow ends of fillets and tail of whole fish with aluminium foil. Turn over after half of defrosting time! Stand for 10-25 minutes.			
Fruits	Berries	300 g	180	6-7
	Spread fruit on a flat, round glass dish (with a large diameter). Stand for 5-10 minutes.			
Bread	Bread Rolls (Each ca. 50 g)	2 pcs 4 pcs	180	1-1½ 2½-3
	Toast/Sandwich	250 g		4-4½
	German Bread (Wheat + Rye Flour)	500 g		7 – 9
	Arrange rolls in a circle or bread horizontally on kitchen paper in the middle of turntable. Turn over after half of defrosting time! Stand for 5-20 minutes.			

## Quick & Easy

### Melting crystallized honey

Put 20 g crystallized honey into a small deep glass dish.  
Heat for 20-30 seconds using 300 W, until honey is melted.

### Melting gelatine

Lay dry gelatine sheets (10 g) for 5 minutes into cold water.  
Put drained gelatine into a small glass pyrex bowl.  
Heat for 1 minute using 300 W.  
Stir after melting.

### Cooking glaze/icing (for cake and gateaux)

Mix instant glaze (approximately 14 g) with 40 g sugar and 250 ml cold water.  
Cook uncovered in a glass pyrex bowl for 3½ to 4½ minutes using 1000 W, until glaze/icing is transparent. Stir twice during cooking.

### Cooking jam

Put 600 g fruits (for example mixed berries) in a suitable sized glass pyrex bowl with lid. Add 300 g preserving sugar and stir well.  
Cook covered for 10-12 minutes using 1000 W.  
Stir several times during cooking. Empty directly into small jam glasses with twist-off lids. Stand on lid for 5 minutes.

### Cooking pudding/ custard

Mix pudding powder with sugar and milk (500 ml) by following the manufacturers instructions and stir well. Use a suitable sized glass pyrex bowl with lid. Cook covered for 6½ to 7½ minutes using 1000 W.  
Stir several times well during cooking.

### Browning almond slices

Spread 30 g sliced almonds evenly on a medium sized ceramic plate.  
Stir several times during browning for 3½ to 4½ minutes using 600 W.  
Let it stand for 2-3 minutes in the oven. Use oven gloves while taking out!

## Troubleshooting and information code

### Troubleshooting

If you have any of the problems listed below try the solutions given.

Problem	Cause	Action
General		
The buttons cannot be pressed properly.	Foreign matter may be caught between the buttons.	Remove the foreign matter and try again.
	For touch models: Moisture is on the exterior.	Wipe the moisture from the exterior.
	Child lock is activated.	Deactivate Child lock.
The time is not displayed.	The Eco (power-saving) function is set.	Turn off the Eco function.
The oven does not work.	Power is not supplied.	Make sure power is supplied.
	The door is open.	Close the door and try again.
	The door open safety mechanisms are covered in foreign matter.	Remove the foreign matter and try again.
The oven stops while in operation.	The user has opened the door to turn food over.	After turning over the food, press the Start button again to start operation.



## Troubleshooting and information code

Problem	Cause	Action
The power turns off during operation.	The oven has been cooking for an extended period of time.	After cooking for an extended period of time, let the oven cool.
	The cooling fan is not working.	Listen for the sound of the cooling fan.
	Trying to operate the oven without food inside.	Put food in the oven.
	There is not sufficient ventilation space for the oven.	There are intake/exhaust outlets on the front and rear of the oven for ventilation. Keep the gaps specified in the product installation guide.
	Several power plugs are being used in the same socket.	Designate only one socket to be used for the oven.
There is a popping sound during operation, and the oven doesn't work.	Cooking sealed food or using a container with a lid may causes popping sounds.	Do not use sealed containers as they may burst during cooking due to expansion of the contents.
The oven exterior is too hot during operation.	There is not sufficient ventilation space for the oven.	There are intake/exhaust outlets on the front and rear of the oven for ventilation. Keep the gaps specified in the product installation guide.
	Objects are on top of the oven.	Remove all objects on the top of the oven.
The door cannot be opened properly.	Food residue is stuck between the door and oven interior.	Clean the oven and then open the door.

Problem	Cause	Action
Heating including the Warm function does not work properly.	The oven may not work, too much food is being cooked, or improper cookware is being used.	Put one cup of water in a microwave-safe container and run the microwave for 1-2 minutes to check whether the water is heated. Reduce the amount of food and start the function again. Use a cooking container with a flat bottom.
The thaw function does not work.	Too much food is being cooked.	Reduce the amount of food and start the function again.
The interior light is dim or does not turn on.	The door has been left open for a long time.	The interior light may automatically turn off when the Eco function operates. Close and reopen the door or press the Cancel button.
	The interior light is covered by foreign matter.	Clean the inside of the oven and check again.
A beeping sound occurs during cooking.	If the Auto Cook function is being used, this beeping sound means it's time to turn over the food during thawing.	After turning over the food, press the Start button again to restart operation.
The oven is not level.	The oven is installed on an uneven surface.	Make sure the oven is installed on flat, stable surface.
There are sparks during cooking.	Metal containers are used during the oven/thawing functions.	Do not use metal containers.

Problem	Cause	Action
When power is connected, the oven immediately starts to work.	The door is not properly closed.	Close the door and check again.
There is electricity coming from the oven.	The power or power socket is not properly grounded.	Make sure the power and power socket are properly grounded.
<b>1.</b> Water drips. <b>2.</b> Steam emits through a door crack. <b>3.</b> Water remains in the oven.	There may be water or steam in some cases depending on the food. This is not an oven malfunction.	Let the oven cool and then wipe with a dry dish towel.
The brightness inside the oven varies.	Brightness changes depending on power output changes according to function.	Power output changes during cooking are not malfunctions. This is not an oven malfunction.
Cooking is finished, but the cooling fan is still running.	To ventilate the oven, the cooling fan continues to run for about 3 minutes after cooking is complete.	This is not an oven malfunction.

Problem	Cause	Action
<b>Turntable</b>		
While turning, the turntable comes out of place or stops turning.	There is no roller ring, or the roller ring is not properly in place.	Install the roller ring and then try again.
The turn table drags while turning.	The roller ring is not properly in place, there is too much food, or the container is too large and touches the inside of the microwave.	Adjust the amount of food and do not use containers that are too large.
The turn table rattles while turning and is noisy.	Food residue is stuck to the bottom of the oven.	Remove any food residue stuck to the bottom of the oven.

#### NOTE

If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.

Please have the following information read;

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

## Information code

Information code	CAUSE	Action
C-d0	Control buttons are pressed over 10 seconds.	Clean the keys and check if there is water on the surface around key. If it occurs again, turn off the microwave oven over 30 seconds and try setting again. If it appears again, call your local SAMSUNG Customer Care Centre.

### NOTE

If the suggested solution does not solve the problem, contact your local SAMSUNG Customer Care Centre.

## Technical specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MS40DG5504A***, MS40DG5504A*
Power source	230 V ~ 50 Hz
Power consumption Microwave	1550 W
Output power	100 W / 1000 W (IEC - 705)
Operating frequency	2450 MHz
Dimensions (W x H x D) Outside (Include Handle) Oven cavity	555 x 313 x 473 mm 375 x 249 x 408 mm
Volume	40 liter
Weight Net	17.0 kg approx.

Memo

Memo

Memo

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

## QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
EGYPT	08000-7267864 16580 WhatsApp 010 000 16580	www.samsung.com/eg/support
IRAN	021-8255 [CE]	www.samsung.com/iran/support
Israel	*6963	www.samsung.com/il/support/
Palestine	1800-792447	www.samsung.com/ps/support/
SAUDI ARABIA	8002474357 (800 (08:00 ~ 20:00 HELP) From Inside Saudi Arabia +966112614718 From outside Saudi Arabia (Call charges may be applied ) Digital services (24/7 HELP)"	www.samsung.com/sa_en/support (English) www.samsung.com/sa/support (Arabic)
PAKISTAN	0800-Samsung (7267864)	www.samsung.com/pk/support
U.A.E	800-SAMSUNG (800 - 726 7864)	www.samsung.com/ae/support (English) www.samsung.com/ae_ar/support (Arabic)
OMAN	800-SAM CS (800-72627)	
KUWAIT	183-CALL (183-2255)	
BAHRAIN	8000-GSAM (8000-4726)	
QATAR	800-CALL (800-2255)	
Türkiye	444 77 11	www.samsung.com/tr/support
JORDAN	0800-22273 06-577-7444 WhatsApp +962-79-777-7421	www.samsung.com/levant/support
Lebanon	1598 WhatsApp +962-79-777-7421	
Iraq	80010080 WhatsApp +962-79-777-7421	

COUNTRY	CALL	OR VISIT US ONLINE AT
ALGERIA	0800 100 001	www.samsung.com/n_africa/support
TUNISIA	80 100 012	
MOROCCO	080 100 22 55	
SOUTH AFRICA	0860 SAMSUNG (726 7864)	www.samsung.com/za/support
NAMIBIA	08 197 267 864	www.samsung.com/africa_en/support
MAURITIUS	800 5050	www.samsung.com/africa_en/support
REUNION	0262 50 88 80	www.samsung.com/africa_fr/support
MOZAMBIQUE	84 726 7864	www.samsung.com/africa_pt/support
NIGERIA	0800 726 7864	www.samsung.com/africa_en/support
Ghana	0800 100 077	www.samsung.com/africa_en/support
Cote D'Ivoire	8000 0077	www.samsung.com/africa_fr/support
SENEGAL	200 077	www.samsung.com/africa_fr/support
CAMEROON	67095 0077	www.samsung.com/africa_fr/support
KENYA	0800 545 545	www.samsung.com/africa_en/support
UGANDA	0800 300 300	www.samsung.com/africa_en/support
TANZANIA	0800 780 089	
SUDAN	1969	www.samsung.com/eg/support



DE68-04754N-00