
User Guide



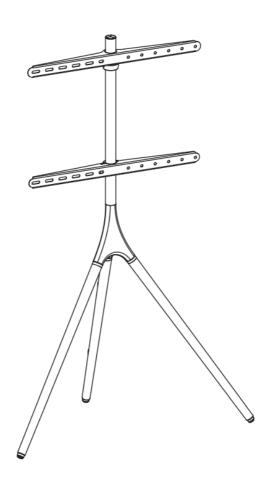

Larvik Studio Stand for 45-65 TVs

KALKTVSTNDA, KALKTVSTNBA & KALKTVSTNWA

Safety & Warnings

- Carefully read all instructions before beginning installation or use. Keep this user guide for future reference.
- Not following these instructions may lead to property damage, serious injury, or death.
- Do not exceed the rated weight limit, which includes the TV, screws, and any attached hardware or accessories. Doing so may result in instability and potential injury.
- This product is intended for installation on wood stud walls, solid concrete, or brick surfaces only.
- Indoor use only. Using the product outdoors may result in failure or injury.
- The product includes small parts that may pose a choking hazard if swallowed. Keep all small components and packaging materials out of reach of young children.
- This is not a toy. Ensure children do not play near the stand without direct adult supervision.
- If you are uncertain about any part of the installation, consult a licensed professional or visit help.kogan.com for assistance.
- The wall or surface used for mounting must be strong enough to support the combined weight of the mount and display. Reinforce the structure if necessary.
- It is strongly advised to use the provided wall anchoring kit during installation to prevent tipping, which could result in damage, injury, or death. Not securing the product to a wall is done at your own risk.
- Always use appropriate safety gear, safe work practices, and the correct tools. A
 minimum of 2 people is required for installation. Neglecting these safety measures may
 cause damage or serious harm.
- Inspect all joints every 3 months and tighten any loose screws before continued use.



Normal Floor



Glossy Floor

Preventing Furniture Tip-Over

- To ensure maximum stability and safety, it is highly recommended to secure this product to a wall using the included wall anchoring kit.
- Periodically inspect all wall anchors to ensure they remain firmly in place.
- The stability of tall furniture items may vary depending on the type and condition of the floor surface.
- Before drilling into any wall, check for electrical wiring or plumbing. If you are uncertain about what lies behind the wall, consult a qualified tradesperson for assistance.

DANGER


Children have died from furniture toppling over.

To help prevent tip over:


- NEVER allow children to stand, climb or hang on TV stands.
- Ensure the TV is properly anchored to the TV stand before use around children.




Components

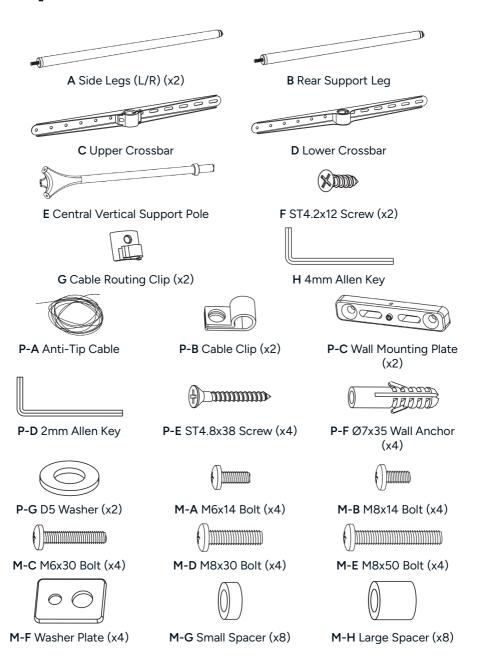


Assembly

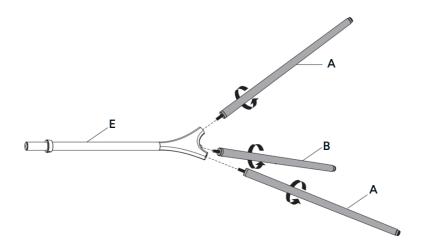



Step 2

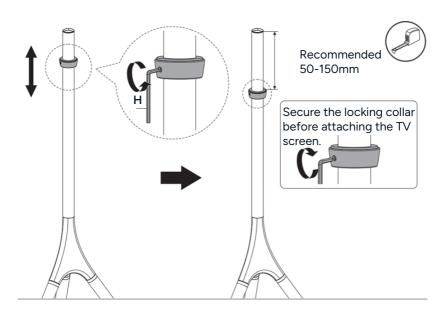

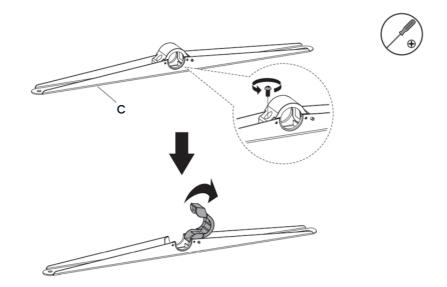


Step 4

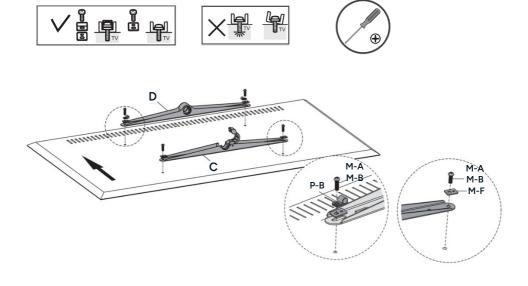

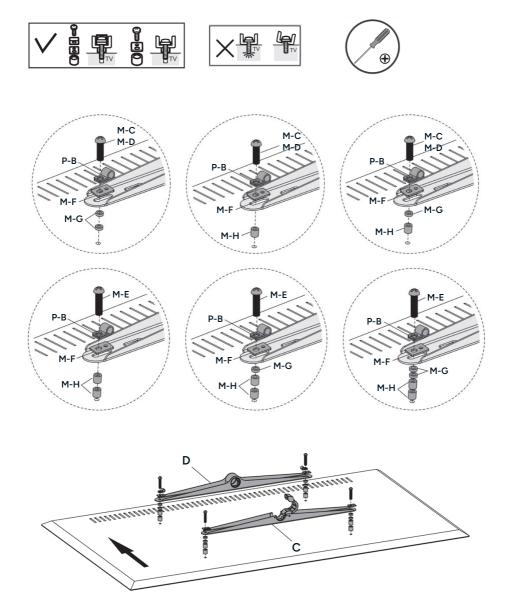


Note:

 Ensure the cable clips (P-B) are attached to the upper bracket throughout step 4.









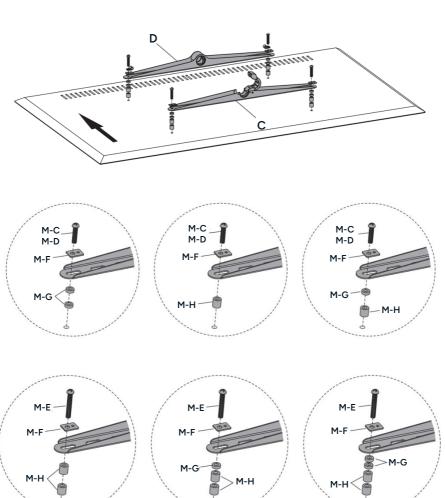






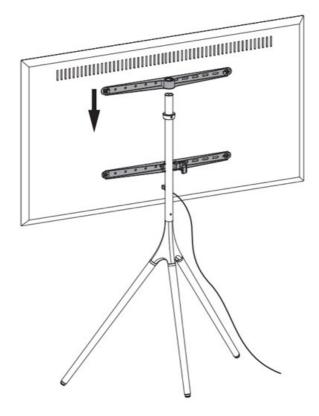


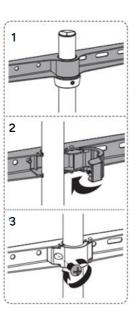

Step 6




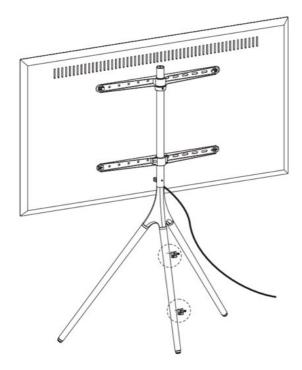


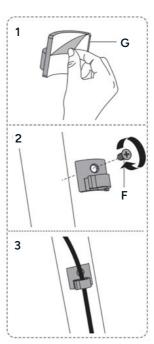


Step 7

Ensure the screen doesn't touch the aluminium plate.

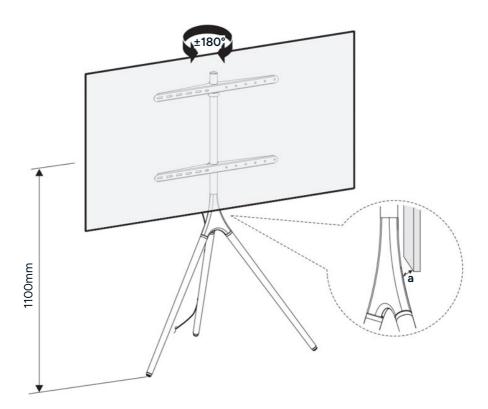

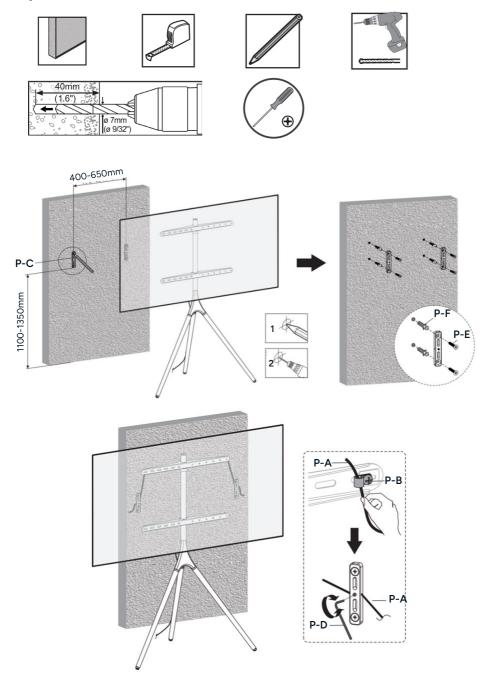

Dimensions

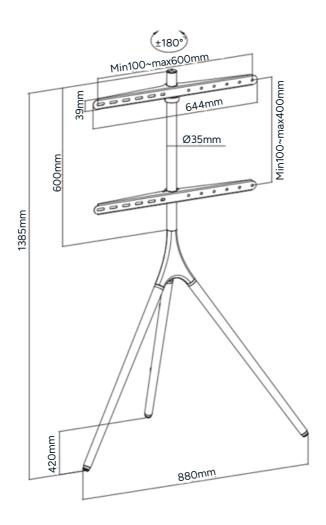

Note:

Design and specifications are subject to change without notice.

Notes

Need more information?

We hope that this user guide has given you the assistance needed for a simple set-up.

For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to help.Kogan.com.

