

Turbo Function

- ♦ Turbo-Mappable Buttons: A/B/X/Y/L1/L2/R1/R2.
- Manual Turbo: The LOGO light flashes when the turbo is triggered.
- Auto Turbo: The LOGO light continuously flashes automatically.

	Manual Turbo	+ Function Button	After the first setup, hold down the function button to activate turbo, release to stop.
	Auto Turbo	+ Function Button	After the second setup, short press the function button to initiate automatic turbo, short press the function button again to pause the turbo.
	Disable Single–Key Turbo	+ Function Button	After the third setup, the turbo function of the certain button will be disabled.
	Disable All Turbo	Long press for 3s	Disable turbo for <u>ALL</u> function buttons.

Turbo Modes: High, Medium, Low


Switch Modes	# downshift # upshift
Mode Indicators	For low gear, the current mode light blinks once. For medium gear, the current mode light blinks twice. For high gear, the current mode light blinks 3 times.

NFC Sense

How To Use:


After successfully connecting the controller to the Switch console, if the game supports Amiibo functionality, you can use the figurine on the M-shaped logo sensing area to activate in-game items.



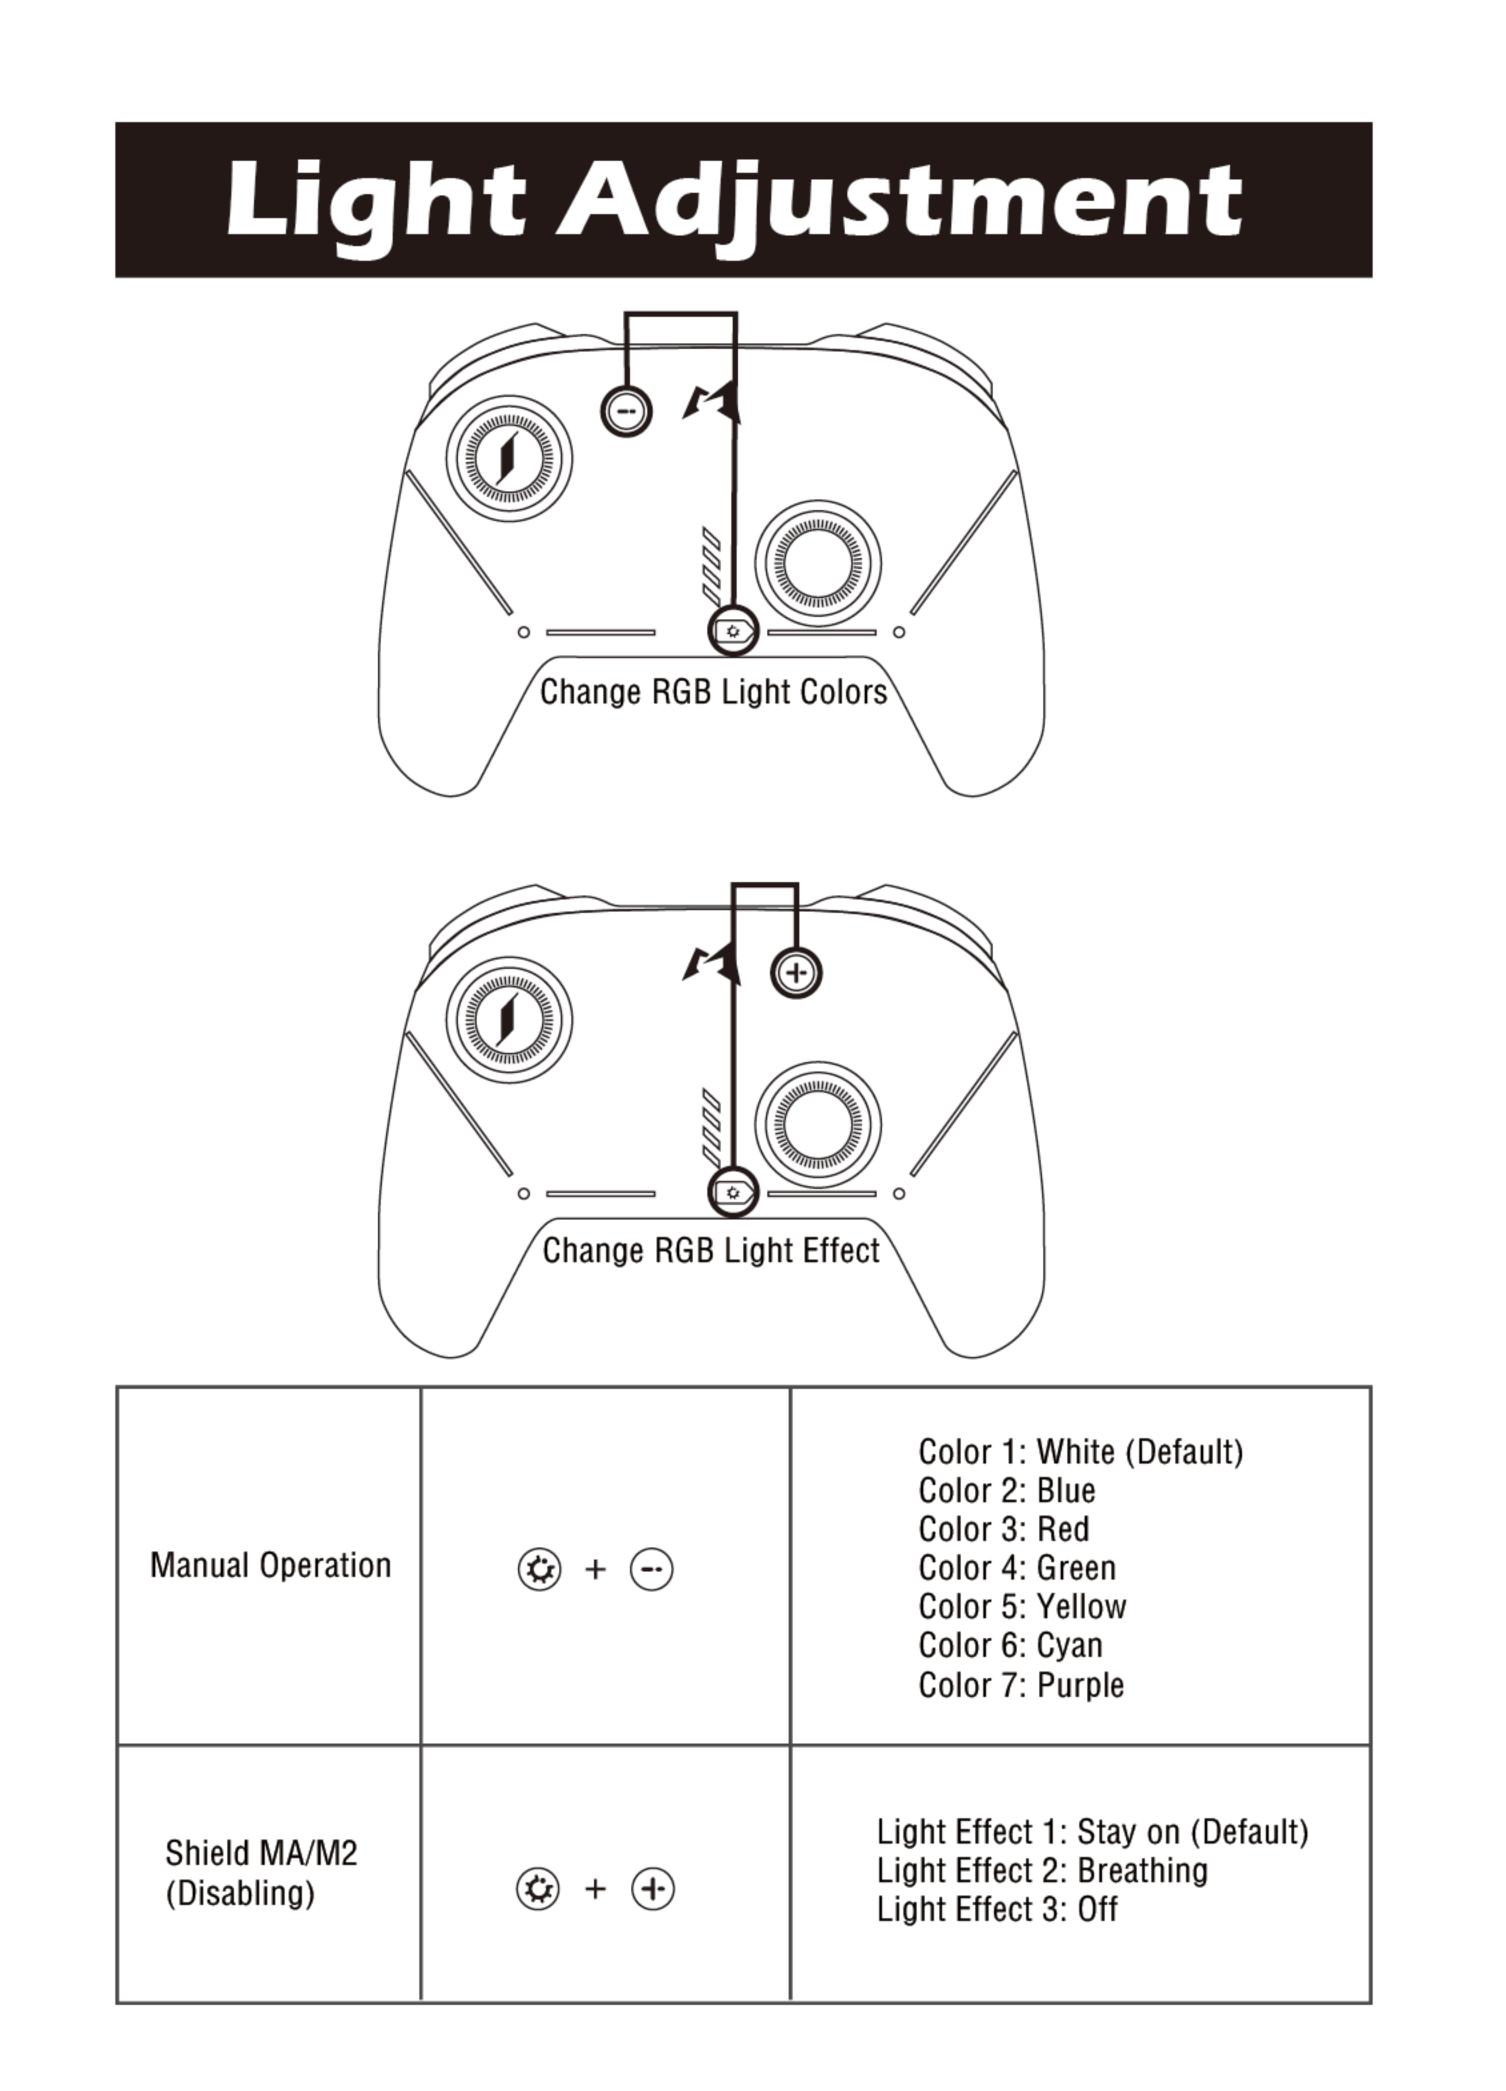

Battery Indicator

- Low battery warning: The middle mode channel light flashes rapidly.
- When charging the controller in the power-off state, the channel lights blink, and the LOGO light stays on. After the battery is fully charged, the lights will automatically turn off after 10 seconds.
- While playing games, if you charge the controller, the working channel light will flash twice as a reminder, and then return to the default lighting effect.

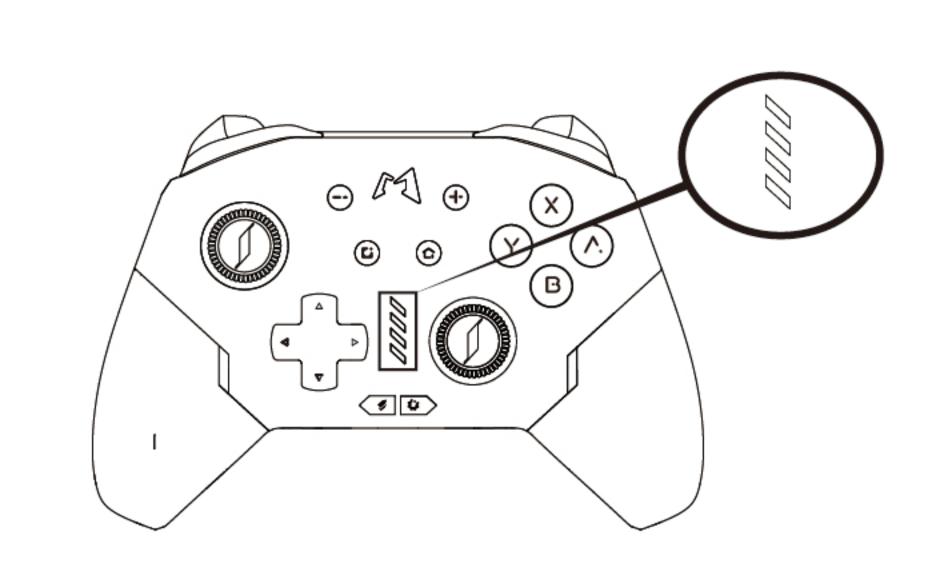

ON & OFF

- ♦ Long press (for 3 seconds to power off.)
- When the controller is connected, it will automatically power off if idle for more than 15 minutes.
- ♦ When the controller is in an unconnected state (waiting for connection), it will automatically power off if not connected after 2 minutes.


After-Sale Service

Feel free to reach out to us if you encounter any concerns or issues with Mobapad controller. We are committed to addressing your needs and ensuring your satisfaction within a year.

zhangzk@mopaigame.com

Macro (Local setup)

Assignable Buttons: A/B/X/Y/L1/L2/L3/R1/R2/R3/Plus/Minus/D-pad and joysticks (joysticks only support eight directions, no analog input).

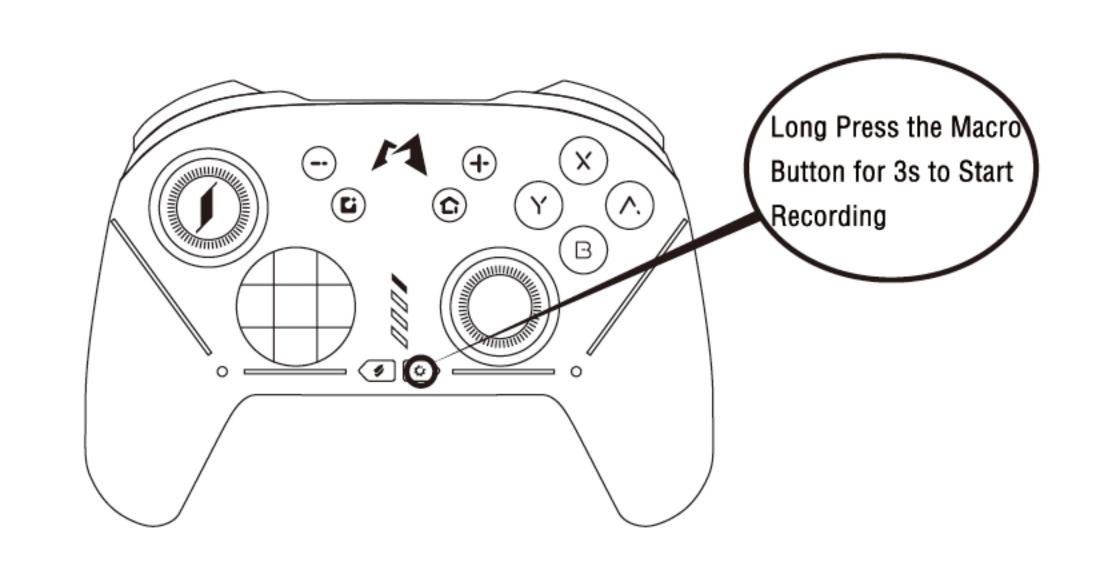

Press and hold the for 3s, the LOGO light will turn solid purple. Then start recording. At the end of the recording, press M1 to save recorded macros on the M1 button, or M2 to save macros on the M2 button. Press the M1/M2 key to trigger the recorded operation.

Clear the macros saved on the M1 button button.

Clear the macros saved on the M2 button

Long press the for 3s, the LOGO light will turn solid purple, then press M1 or M2 to clear the recorded macro

Double-press the to trigger a short vibration, meaning the macros for M1/M2 are blocked (not cleared).

Double-press the again to trigger two long vibrations,


Important Notes:
The default factory functions for M1/M2 are face buttons B/A. After setting them as macros, if you wish to remap them, please go to the APP.

meaning the macros for M1/M2 are restored.

Macro Auto-Loop

- Deactivate Macro Loop:
- During the macro loop, hold + M1 to disable the macro loop function for the M1 key.

(Enable M1 macro loop/ Disable M1 macro loop)

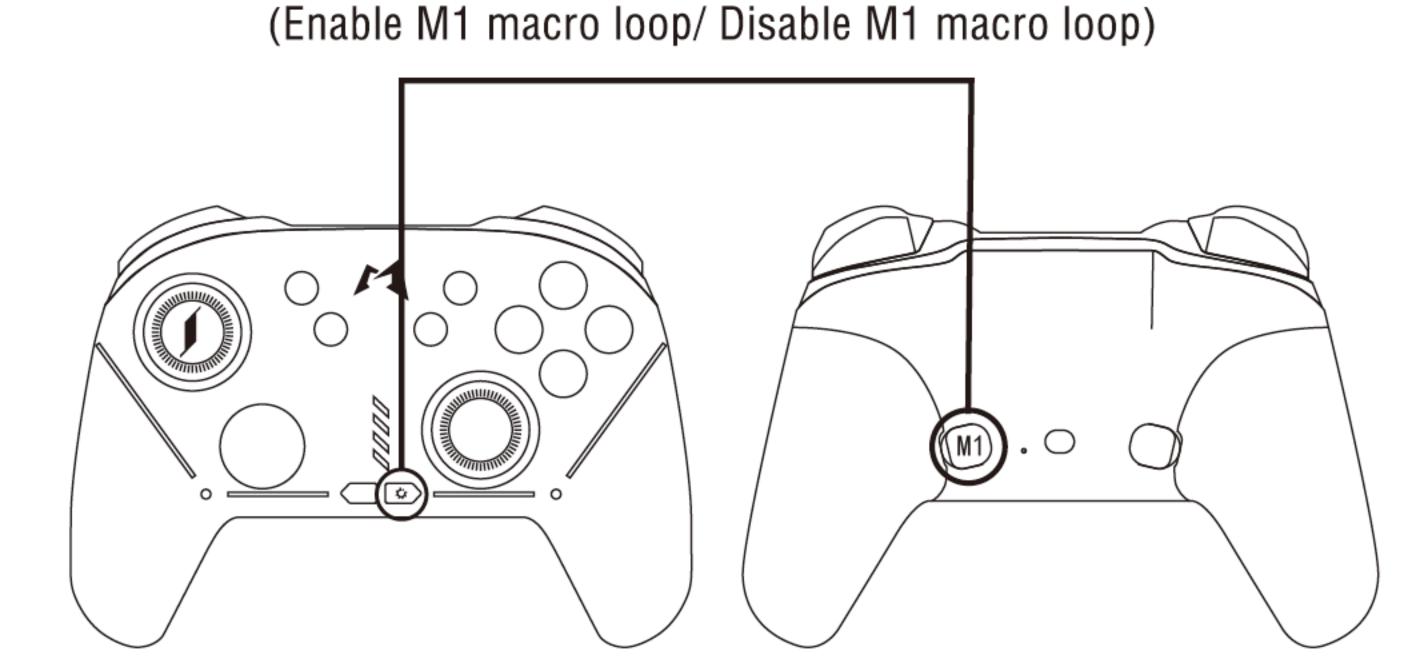

Note:

- Only M1/M2 can enable macro auto loop.
- The macro loop will not be interrupted by other button presses and can only be ended by pressing certain button combinations.