# HOMPANY

CORDLESS VACUUM CLEANER USER MANUAL




SmartVac 11



# **LANGUAGE**


English	01~15
Deutsch	16~31
Francais	32~47

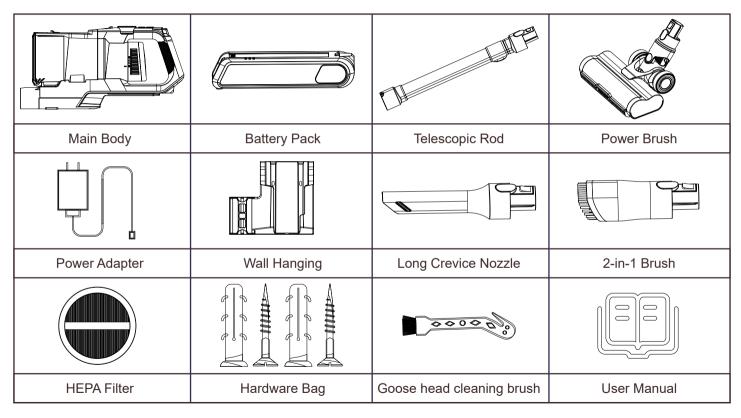




# **INTRODUCTION TO MAIN BODY**

- 1.One click Clear button (Handle end)
- 2.Switch
- 3.Speed control
- 4.LED digital display
- 5.Dust cup removal
- 6.One click Clear button (Dust cup end)
- 7.Dust cup
- 8. Outlet air filter
- 9.Battery pack release button
- 10.Battery Pack
- 11.Cyclone filter
- 12.Metal tube locker
- 13. Telescopic rod
- 14. Telescopic rod adjustment locker
- 15.Floor brush telescopic rod removal locker
- 16.Power brush
- 17. Power brush roller
- 18. Host machine

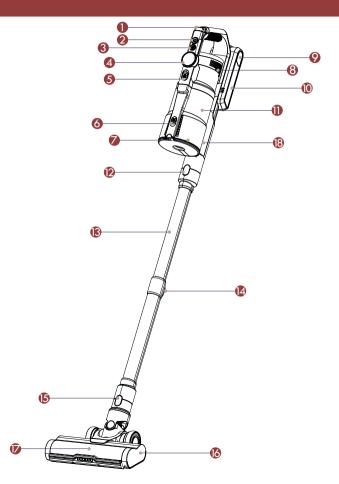



# **DISPLAY SCREEN INTRODUCTION**

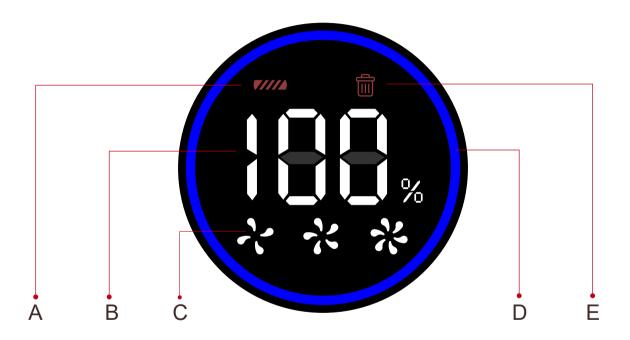

A.Floor brush blocked indicator

B.Electric quantity


C.Suction mode indicator (MID/MAX/MIN)

D.Charge and discharge colored lights


E.Full cup reminder




# **COMBINATION METHOD**

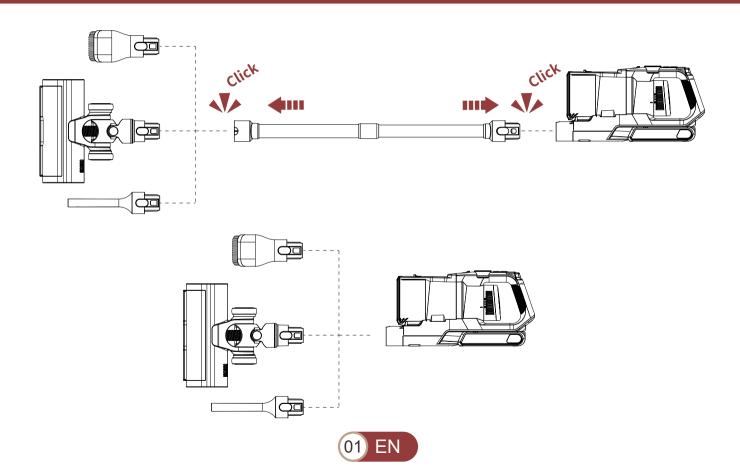

# **WALL MOUNTING**

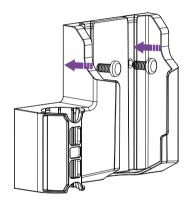

 




## **CHARGING METHODS**




- 1. Please use HOMPANY special adapter to charge the product
- 2. For first time use, it is recommended to fully charge the product before use.
- 3. Please charge it in time after each use. It is not recommended to completely drain the battery before charging.
 
#### Battery pack installation and removal






① Remove the Battery Pack and Charge it Separately

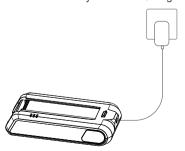

2 Connect the Main Body to Charge

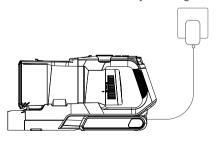




③ Hang on the Wall Mount to Charge



### INSTRUCTIONS FOR USE
 
#### 1. Start up

1.1 Press the power button to start working




1.2 Real-time display of remaining power and gear status, with the power display decreasing every 5%



The remaining power is for reference only. There may be a certain deviation from the actual time in different modes and environments.

#### 2. Suction power level adjustment

 2.1 Press to adjust the gear during work



2.1 Gear adjustment light display






2.2 Low battery light display When the battery power is lower than 15% during work, the display number starts to flash, and the power is about to be exhausted.



### INSTRUCTIONS FOR USE
 
#### 3. Shut down

3.1 Press the power button again during work to complete the shutdown.



1.2 When the power is turned off, the screen numbers will still flash for a certain period of time, indicating that the battery level is less than 30% at this time. To ensure sufficient time for next use and battery cycle life, please connect the adapter to charge as soon as possible.



#### 4. Fault light display - full of dust

When the trash can sign lights up, it means the product is blocked. Please remove the main unit, floor brush, and pipes for cleaning and inspection.



#### 5. Fault light shows - the floor brush is entangled

When the please wrap sign lights up, it means that the floor brush roller is stuck. Please pick up the floor brush, remove the roller, clean and check



### MAINTENANCE AND MAINTENANCE OF PRE-FILTER COMPONENTS

#### 1. Clean the Main Body


Please use a soft dry cloth to wipe the main unit, do not wash it with water




#### 2. Dust cup maintenance

Remind: If used for a long time, it is recommended to clean and maintain once a month.

#### 2.1 Dust cup is full

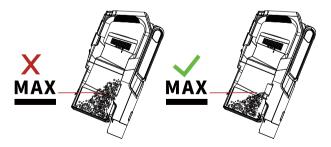

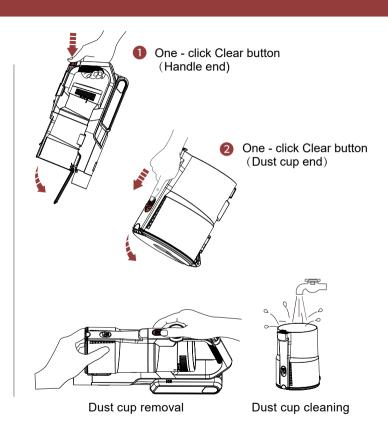




## MAINTENANCE AND MAINTENANCE OF PRE-FILTER COMPONENTS

#### 3. Inlet air filter HEPA maintenance

Remind: HEPA does not recommend cleaning. Just use a cleaning brush to clean it regularly.

If used for a long time, it is recommended to clean the HEPA air inlet filter every 2 weeks and replace it every 2 months to ensure long-term good suction.

#### 3.1 Inlet air filter HEPA take out

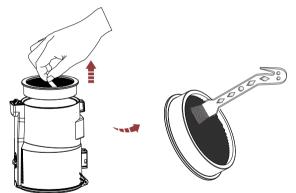

3.2 Inlet air filter HEPA cleaning

#### 4. Cyclone filter maintenance

Remind: If used for a long time, it is recommended to clean and maintain once a month.

4.1 Inlet air filter HEPA take out



4.2 Cyclone filter disassembly





 


# MAINTENANCE AND MAINTENANCE OF PRE-FILTER COMPONENTS

#### 4.3 Cyclone filter cleaning




#### 5. Filter component installation



#### 6. Replacing the dust cup filter assembly


 
#### 7. Dust cup installation





## POST FILTER COMPONENT CLEANING


#### 1. Post filter component cleaning

Remind: If used for a long time, it is recommended to clean it every six months and replace it every year.


1.1 Removing the air outlet cover




1.2 Air outlet HEPA disassembly

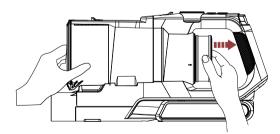

 1.3 Air outlet HEPA cleaning



1.4 Air outlet HEPA installation

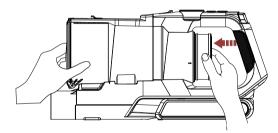

1.5 Installation of air outlet cover






## FLOOR BRUSH CLEANING

#### **Notes for the Vacuum**


Before cleaning the floor brush, be sure to remove the floor brush from the main unit and disconnect the power supply.

#### 1. Clean Host machine


Please use a soft dry cloth to wipe the main body, do not wash it with water

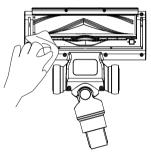

#### 2. Open the buckle

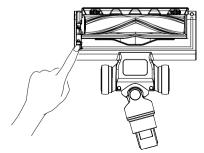


#### 3. Take out the roller

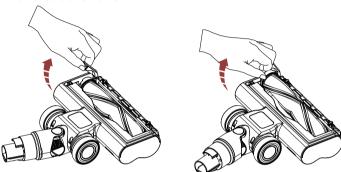

4. Clean wrap and Washable roller




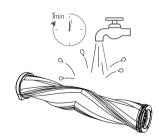




# **ACCESSORIES INSTRUCTIONS**

### 5. 24 hours to dry

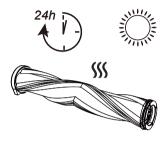


#### 6. Install rollers and Press the buckle

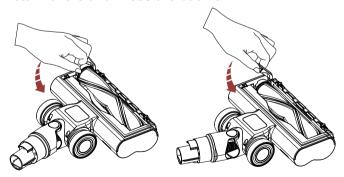


#### 1. Long Crevice Nozzle

Suitable for cleaning small gaps such as doors, windows, dead corners of stairs, etc.

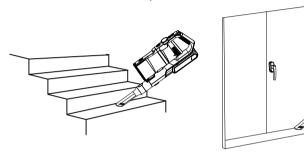

#### 2. 2-in-1 Brush

Suitable for cleaning sofas, furniture, keyboards, etc.

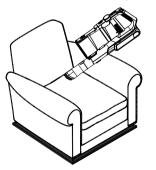






# **SPECIFICATION**

#### 3. Motorized Brush Head

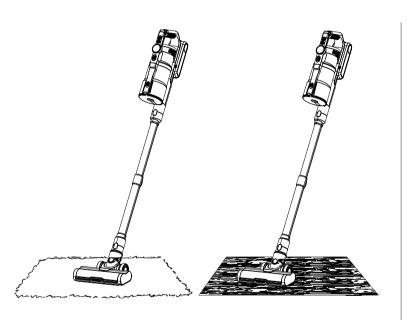

#### **SPECIFICATION**

Product	Cordless Vacuum Cleaner
Model	SmartVac 13
Rated Voltage	25.9V <del></del>
Cleaning Modes	MID/MAX/MIN

